


S E R V I C E P A R T S L I S T

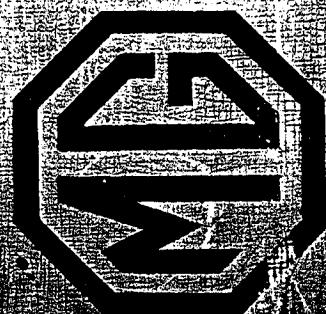



EXPLANATORY

- It will be noted that the items comprising an assembly (or sub-assembly) are offset for easy reference.

Example	12 Gear assembly—idler	2A6198
	13 Body	2A6199
	14 Seal	2A6201
	15 Washer for seal	2A6186
	16 Shaft	2A6187

- Where a modification to a part has taken place, or a new part issued replacing an original part, this is indicated by the inclusion of the new part number in the Modifications column.

- Abbreviations used:

A	Ambulance	U	Pick-up	OD	Outside diameter
C	Chassis	V	Van	ID	Inside diameter
D	Coupe	W	Dual-purpose (wood framing)	A/R	As required
E	G.P.O. Engineers	Ws	Dual-purpose (all-metal)	Commenced	Commenced
G	G.P.O. Mail	X	Taxi	Fin.	Finished
H	Hearse	UK	Gt. Britain and Northern Ireland	No.	Number
J	Convertible	Not UK	Not Gt. Britain and Northern Ireland	NSP	Non-serviceable part
K	Truck	RHD	Right-hand drive	(B)	Body number
L	Hire Car	LHD	Left-hand drive	(C)	Car number
M	Limousine	RH	Right-hand	(D)	De-luxe
N	2-seater Tourer	LH	Left-hand	(E)	Engine number
P	Hard Top	HC	High compression	(G)	Gearbox number
Q	Chassis and Cab	LC	Low compression	(S)	Super de-luxe
R	Chassis and Scuttle	RHT	Right-hand thread	(GB)	Cab number
S	4-door Saloon	LHT	Left-hand thread	(OD)	Overdrive number
28	2-door Saloon	O/S	Oversize	(RA)	Rear axle number
T	4-seater Tourer	U/S	Undersize		

IMPORTANT TO OWNERS

B.M.C. SERVICE PARTS

All Authorized B.M.C. Distributors and Dealers are under contract to supply only genuine B.M.C. Parts.



Replacement parts that are not of genuine B.M.C. manufacture cannot be relied upon to be of B.M.C. specification, material, and workmanship, and therefore B.M.C. cannot be expected to extend their Warranty to vehicles which have been fitted with parts not of their manufacture.

A comprehensive range of EXCHANGE UNITS is available. Ask your Distributor or Dealer for full details.

In order to ensure prompt and correct execution of your orders it is essential to:

STATE THE CAR, BODY, ENGINE NUMBERS, ETC., COMPLETE WITH PREFIXES AND SUFFIXES.

GIVE THE PART NUMBER AND DESCRIPTION (PREFIX LETTERS TO PART NUMBERS MUST ALWAYS BE QUOTED).

THE MGB

INDEX TO GROUPS, PAGES, AND ILLUSTRATIONS

Description	Page	Date	Description	Page	Plate	
Cylinder block—engine mounting plate	A.1, A.2	A	Brake master cylinder	M.2
Connecting rods—camshaft—crankshaft—flywheel	A.3, A.4	AA	Hydraulic pipes and fittings	M.3
Cylinder head—valves—rocker cover—water outlet elbow—thermostat	A.5, A.6	AB	Hand brake details	M.4, M.5
Cylinder covers—tachometer drive—gearbox mounting plate ..	A.7	AC	Battery—dynamo	N.1	
Oil pump—strainer—filter—oil reservoir	A.8, A.9	Starter	N.2	
Water pump—pulley—dynamo and distributor mounting—fan and fan belt	A.10, A.11	AD	Switches—control box—fusebox	N.3
Oil cooler	AE	Headlamps	N.4	
Engine service kits	AF	Headlamps	N.5	
Inlet and exhaust manifolds	A.12	Sidelamp	N.6	
Engine mountings	A.13	Rear lamp—number-plate lamp	N.7	
Exhaust system	A.14	Flasher—horn and controls	N.8	
Engine controls	AG	Windscreen wipers	N.9	
Distributor—vacuum control—ignition coil—H.T. cables	AH	Wiring cables and connections	N.10, N.11	
Cooling system	AJ	Instruments	O	
Fuel tank—pipes—pump mounting	AK	Road wheels	P.1	
Fuel pump	B.1, B.2	Body shell	P.1, R.2	
Carburettor	B	Body underframe	RA	
Heat shield—air cleaner	C	Bonnet fittings	RB	
Clutch	D.1, D.2	Wings	RC	
Clutch pedal—pipes—cylinders	D	Boot lid fittings	RD	
Gearbox—standard	D.3	Door fittings	RE	
Gearbox—standard	DA	Windows and window mechanism	RF	
Propeller shaft	D.4	Windscreen and windscreen washer	R.10, R.11	
Rear axle	DB	Hood	R.12	
Rear brakes	D.5	Hood (folding)—tonneau cover	R.13, R.14	
Rear spring	E.1	Bumpers and number-plates	R.15, R.16	
Steering details	E.2, E.3	G	Fascia	R.17, R.18
Front suspension	EA	Trim—liners	R.19-R.22	
Front brakes	F.1-F.5	Trim—carpets	R.23, R.24	
Anti-roll bar	G.1	Seats and seat fittings	R.25, R.26	
Shock absorbers	G	Heater and ventilating equipment	R.27, R.28	
Brake pedal and linkage	H.1, H.2	Sundries	R.29, R.30	
		H.3			RQ	



THE MGB

ALPHABETICAL INDEX

A	Page	
Absorber—front	K.1	
Absorber—rear	L.1	
Accelerator cable	A.17	
Accelerator pedal	A.17	
Adaptor—oil filter	A.9	
Adjuster assembly—rear brakes	H.8	
Adjuster nut—brake cable	M.4	
Air cleaner	D.5	
Anti-roll bar	K.5	
Arm and blade assembly—wiper	N.9	
Armature—dynamo	N.1	
Armature—starter	N.2	
Ashtray	R.30	
Axle—rear	H.1	
Axle—swivel	K.2	

B	Page	
Badge—radiator grille	C.1	
Bar—anti-roll	K.5	
Bar—bumper	R.15	
Bearing—clutch	E.1	
Bearing—connecting rod	A.3	
Bearing—differential	H.1	
Bearing—front hub	K.3	
Bearing—gearbox	F.1, F.2	
Bearing—main—engine	A.3	
Bearing—needle—propeller shaft	G.1	
Bearing—rear axle	H.1, H.2	
Bearing—rear hub	H.2	
Bearing—steering pinion	J.1	
Belt—fan	A.11	
Bezel—radio aperture	R.18	
Blade—windscreen wiper	N.9	
Block—cylinder	A.1	
Body shell	R.1	
Body underframe	R.3	
Bonnet lid	R.1	
Boot lid	R.2	
Boot—master cylinder push-rod	M.2	
Boot—rear wheel cylinder	H.3	
Boot—steering ball socket	J.1	
Box—glove—fascia	R.17	
Bracket—dynamo mounting	A.10	
Bracket—engine mounting	A.15	
Bracket—fuel pump	D.2	
Bracket—rear shock absorber	H.4	

B	Page	
Badge—radiator grille	C.1	
Bar—anti-roll	K.5	
Bar—bumper	R.15	
Bearing—clutch	E.1	
Bearing—connecting rod	A.3	
Bearing—differential	H.1	
Bearing—front hub	K.3	
Bearing—gearbox	F.1, F.2	
Bearing—main—engine	A.3	
Bearing—needle—propeller shaft	G.1	
Bearing—rear axle	H.1, H.2	
Bearing—rear hub	H.2	
Bearing—steering pinion	J.1	
Belt—fan	A.11	
Bezel—radio aperture	R.18	
Blade—windscreen wiper	N.9	
Block—cylinder	A.1	
Body shell	R.1	
Body underframe	R.3	
Bonnet lid	R.1	
Boot lid	R.2	
Boot—master cylinder push-rod	M.2	
Boot—rear wheel cylinder	H.3	
Boot—steering ball socket	J.1	
Box—glove—fascia	R.17	
Bracket—dynamo mounting	A.10	
Bracket—engine mounting	A.15	
Bracket—fuel pump	D.2	
Bracket—rear shock absorber	H.4	

C	Page	
Cable—accelerator	A.17	
Cable—bonnet release	R.4	
Cable—choke	A.17	
Cable—hand brake	H.1	
Cable—harness	K.3	
Cable—heat and air controls	F.1, F.2	
Cable—revolution counter	A.3	
Cable—speedometer	G.1	
Cage—differential	H.1	
Calliper unit—front brakes	K.4	
Camshaft—engine	A.3	
Cap—brake master cylinder	M.2	
Cap—clutch master cylinder	E.2	
Cap—fuel filler	D.1	
Cap—oil filler tube	A.6	
Cap—radiator	C.1	
Cap—wheel	P.1	
Carburettor	D.4	
Carpets	R.28, R.24	
Carrier—differential	M.2	
Case—axle	H.1	
Case—gearbox	F.1	
Casing—windscreen wiper	N.9	
Catch—bonnet safety	R.1	
Chain—camshaft timing	A.4	
Chain tensioner	A.4	
Change speed lever	F.4, F.9	

D	Page	
Demister fittings	R.27	
Dipper rod—engine	A.8	
Dipper switch	N.3	
Driftstick—gearbox	F.4	
Distributor	B.1	
Door assembly	R.2	
Door fittings	R.7	
Door seals	R.22	
Draught excluder—gear lever	F.5	
Drum—rear brake	H.3	

		Page
Dynamo	N.1	N.1
Elbow—water outlet	A.6	A.6
Electrical equipment	N.1	N.1
Element—oil filter	A.9	A.9
Engine service kits	A.13	A.13
Exhaust manifold	A.14	A.14
Exhaust system	F.1	F.1
Extension—gearbox	A.17	A.17
Fascia panel	R.17	R.17
Fan—dynamo	A.10	A.10
Fan—water pump	A.10	A.10
Filter cap—radiator	C.1	C.1
Filter—oil	A.9	A.9
Finishers—door seals	R.8	R.8
Flange—yoke—propeller shaft	G.1	G.1
Flasher unit	N.8	N.8
Float—carburetter	D.4	D.4
Flywheel	A.4	A.4
Forks—gearbox	F.2	F.2
Frame—hood	R.12	R.12
Front brake	K.4	K.4
Front cover—gearbox	F.1	F.1
Front suspension	K.1	K.1
Fusebox	N.8	N.8
G		
'G'—trunk lid	R.6	R.6
Gaskets—engine	A.13	A.13
Gauge—fuel	O.2	O.2
Gauge—oil and temperature	O.2	O.2
Gauge unit—fuel tank	D.1	D.1
Gear—camshaft	A.3	A.3
Gear—crankshaft	A.3	A.3
Gear—speedometer drive	F.4	F.4
Gear—tachometer drive	A.3	A.3
Gearbox	F.1	F.1
Glass—door	R.9	R.9
Glass—windscreens	R.10	R.10
Glovebox—fascia	R.17	R.17
J		
Jet assembly—carburetter	D.4	D.4
K		
Key—boot lid lock	C.1	C.1
Key—door lock	R.18	R.18
Joint washer sets—engine	R.29	R.29
Journal assembly—propeller shaft	R.30	R.30
Gudgeon pin	A.2	A.2
Guide—accelerator cable	A.5	A.5
Guide—exhaust valve	A.17	A.17
H		
Hammer—copper	S.1	S.1
Hand brake assembly	M.4	M.4
Handle—door	R.7	R.7
Handle—remote control—door	R.7	R.7
Handle—windscreen regulator	R.9	R.9
Harness cables	N.10	N.10
Head—cylinder	A.5	A.5
Headlamps	N.4	N.4
Heat shield—carburetter	D.5	D.5
Heater and ventilating equipment	R.27, R.28	R.27, R.28
Hinges—bonnet lid	R.1	R.1
Hinges—boot lid	R.2	R.2
Hinges—door	R.12, R.18	R.12, R.18
Hood assembly	N.8	N.8
Horn	N.8	N.8
Horn bracket	N.8	N.8
Horn push	N.8	N.8
Hose—air—demister	R.27	R.27
Hose—brake	M.3	M.3
Hose—clutch	E.2	E.2
Hose—fuel tank	D.1	D.1
Hose—radiator	C.1	C.1
Housing—distributor	A.10	A.10
Housing—tachometer pinion	A.7	A.7
Hub assembly—front	K.3	K.3
Hub assembly—rear	H.2	H.2
Hub caps	P.1	P.1
Hub extension—rear	H.2	H.2
I		
Ignition coil	B.2	B.2
Induction heater—carburetter	D.5	D.5
Induction manifold	A.14	A.14
Instruments	O.1, O.2	O.1, O.2
M		
'M'—boot lid	R.6	R.6
Manifolds—inlet and exhaust	A.14	A.14

THE MGB

ALPHABETICAL INDEX

	<i>Page</i>
Master cylinder box	..
Master cylinder—brake	..
Master cylinder—clutch	..
Mats—floor	..
‘MGB’ motif—boot lid	..
‘MG’ motif—fascia panel	..
Mirror—rear view
Moulding—door
Moulding—front wing
Moulding—rear wing
Mounting—distributor
Mounting—dynamo
Mounting—engine
Mounting—exhaust
Mounting—gearbox
Motor—heater unit
Motor—windscreen wiper
Needle—carburettor
Nozzle assembly—demister
Nut—cylinder head
Nut—steering wheel
Nut—wheel studs
Number-plate and fittings
Oil cooler
Oil drain plug
Oil filter
Oil pump
Oil reservoir
Oil seal—hub
Over-rider
O	
Oil cooler
Oil drain plug
Oil filter
Oil pump
Oil reservoir
Oil seal—hub
Over-rider
P	
Pad—rubber—accelerator pedal
Pad—rubber—brake pedal
Pad—rubber—clutch pedal
Paint
Panel assembly—fascia
Pedal—accelerator
Pedal—brake
Pedal—clutch
Rack assembly—steering
Radiator—cooling
Radiator—heater
Rail—tonneau cover support
Rear axle
Rear spring
Rebound strap
Regulator—door glass
J.17	
M.1	
E.2	
S.1	
R.J7	
A.17	
M.1	
E.2	
A.17	
C.1	
R.27	
R.14	
H.1	
H.4	
H.4	
H.4	
R.6	
A.15	
J.2	

	<i>Page</i>
Pillar—windscreen
Pinion—speedometer drive
Pinion—steering
Pipe assembly—oil filter
Pipe assembly—oil gauge
Pipe assembly—vacuum ignition
Pipe—brake
Pipe—clutch
Pipe—radiator
Pipes—fuel
Piping—fascia panel crash roll
Piston assembly—engine
Piston—brake master cylinder
Piston—clutch master cylinder
Piston—clutch slave cylinder
Piston—rear wheel cylinder
Plate—clutch driven
Plate—clutch pressure
Plate—engine mounting—front
Plate—gearbox mounting
Plate—rear brakes
Plug—oil reservoir drain
Plug—rear axle oil
Plug—sparking
Propeller shaft
Pulley—crankshaft
Pulley—dynamo
Pulley—water pump
Pump—fuel
Pump—oil
Pump—water
Pump—windscreens washer
Push-rod—brake master cylinder
Push-rod—clutch master cylinder
Push-rod—engine tappet
D.3	
A.8	
A.10	
R.11	
M.2	
E.2	
A.4	
A.10	
A.10	
D.3	
A.8	
A.10	
R.11	
M.2	
E.2	
A.4	
J.1	
C.1	
R.27	
R.14	
H.1	
H.4	
F.4	
E.2	
K.1	
A.14	
G.1	
R.26	
A.6	
O.1	
A.17	
M.1	
H.1	
L.1	
H.3	
A.14	
G.1	
R.26	
A.6	
Speedometer
Spring—accelerator pedal return
Spring—brake pedal return
Spring—change speed lever
Spring—clutch pedal return
Spring—coil—front suspension
Spring—engine valve
Spring—hand brake cable
Spring—road
Starter
Starter solenoid
Starting handle
Stay—bonnet lid
Stay—boot lid
Stay—engine steady
Steering column

	<i>Page</i>
Reservoir—engine oil
Reverse fork
Reverse gear
Revolution counter
Ring—engine piston
Ring—starter—flywheel
Rocker cover
Rocker shaft
Rod—oil level indicator—engine
Rod—oil level indicator—gearbox
Rubber—engine mounting
S	
Seal—oil—engine front cover
Seal—oil—front hub
Seal—oil—gearbox
Seal—oil—rear axle
Seal—oil—rear hub
Seal—steering rack
Seats and fittings
Shackle—rear spring
Shaft—propeller
Shaft—rear axle
Shock absorber—front
Shock absorber—rear
Shoe—rear brake
Silencer—exhaust
Sleeve—yoke—propeller shaft
Slide—seat catch
Sparkling plugs
Speedometer
Spring—accelerator pedal return
Spring—brake pedal return
Spring—change speed lever
Spring—clutch pedal return
Spring—coil—front suspension
Spring—engine valve
Spring—hand brake cable
Spring—road
Starter
Starter solenoid
Starting handle
Stay—bonnet lid
Stay—boot lid
Stay—engine steady
Steering column

		Page
Steering details	J.1, J.2
Steering lever	K.3
Steering wheel	J.2
Stowage bag—hood cover	R.12, R.13
Stowage bag—hood frame	R.12
Stowage bag—tonneau cover	R.14
Stowage bag—tonneau rail	A.8
Strainer—oil	D.1
Strap—fuel tank	H.4
Strap—rebound	R.2
Striker—boot lid lock	R.7
Striker—door lock	A.5
Stud—manifold	R.29, R.30
Sundries	B.2
Suppressor—ignition	N.3
Switch—dipper	N.8
Switch—direction indicator	N.3
Switch—headlamp flasher	N.8
Switch—heater	N.3
Switch—map light	N.3
Switch—panel light	N.8
Switch—road lights	N.3
Switch—starter and ignition	N.3
Switch—stop lamp	M.3
Swivel pin	K.1
T		
Tachometer drive	A.7
Tank—fuel	D.1
Tank unit—fuel gauge	D.1
Tap—radiator drain	C.1
Tap—water drain—cylinder block	A.1
Tappet—engine	A.4
Thermostat	A.6
Tie-rod—steering	J.1
Tonneau cover	R.14
Tools	S.1
Trim—body	R.19-R.24
U		
'U' clip—rear spring	H.4
Underframe—body	R.3
Unit—fuel tank gauge	D.1
Universal joint—steering column	J.2
V		
Vacuum control pipe	R.1
Valve—engine	A.5
W		
Washer—windscreen	R.11
Water outlet elbow	A.6
Water pump	A.10
Water valve—heater	R.27
Weight—wheel balance	P.1
Wheel box—windscreen wiper	N.9
Wheel brace	S.1
Wheel—road	P.1
Wheel—steering	J.2
Wheel—wire	P.1
Windscreen wiper details	N.9
Wings	R.1, R.2
Wishbone assembly—front suspension	K.1
Y		
Yoke—engine manifold	A.14
Yoke—propeller shaft	G.1

THE MGB

PART NUMBER INDEX

The following is a complete index of parts in this List, giving the page reference of each part number

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page
1A1964	F.3		ACA5453	A.17		AEC340	A.4		AHH5100	M.1									
1A2028	A.3		ACA9685	N.8		AEC2076	A.17		AHH5143	C.1									
1A2139	A.5		ACB5255	K.2		AEC2083	D.6		AHH5169	N.1									
1A2156	A.4		ACB8474	O.1		AEG3101	F.4		AHH5171	A.14									
1A2206	A.8		ACB8715	M.4		AEG3108	F.1		AHH5203	M.4									
1A3073	I.1		ACB8754	E.2		AEH3242	F.2		AHH5224	M.4									
1A3717	F.2		ACB9425	J.2					AHH5225	M.4									
1A4742	K.3		ACC5062	A.17		AEK113	A.5		AHH5228	M.4									
2A128	A.10		ACC8856	O.1		AEK122	C.1		AHH5255	R.18									
2A139	A.10		ACG5001	H.4		AEK123	C.1		AHH5256	R.18									
2A150	A.6		ACG5002	H.4		AFH1684	R.7		AHH5261	R.6									
2A258	A.5		ACG5184	D.6		AFH1837	R.22		AHH5295	M.5									
2A259	A.5		ACG6005	K.2		AFH1840	R.22		AHH5301	A.17									
2A329	A.6		ACH5031	C.1		AFH2546	R.1		AHH5308	A.17									
2A459	B.1		ACH5082	C.1		AFH2627	R.1		AHH5322	M.4									
2A758	A.10		ACH5101	M.4		AFH4825	R.22		AHH5403	A.16									
			ACH5104	M.4		AFH4838	R.22		AHH5404	A.16									
			ACH5854	D.1		AFH4839	R.22		AHH5433	R.17									
			ACH6001	J.2		AFH6965	R.22		AHH5435	R.27									
			ACH8508	M.4		AFH6967	R.22		AHH5448	N.11									
			ACH8529	M.4		AHA5211	R.16		AHH5449	N.11									
			ACH8650	M.3		AHA5435	J.2		AHH5452	N.11									
			ACH9041	B.1		AHA5437	R.29		AHH5460	R.4									
			ADA803	C.2		AHA5543	R.1		AHH5467	H.4									
			ADA2889	R.23		AHA5617	R.1		AHH5470	R.22									
			ADA5667	R.9		AHA5791	R.16		AHH5510	R.26									
			ADA5668	R.7		AHA5804	R.16		AHH5511	R.26									
			ADA5669	R.9		AHA5897	R.22		AHH5512	R.26									
			ADA5698	R.6		AHA5939	R.22		AHH5539	R.30									
			ADA5784	R.8		AHA5940	R.22		AHH5712	R.16									
						AHA6280	N.11		AHH5839	S.1									
						AHA6314	R.2		AHH5897	K.1									
						AHA6315	R.2		AHH5925	K.1									
						AHA6367	A.17		AHH5927	K.5									
									AHH5930	K.5									
									AHH5941	K.5									
									AHH6000	J.2									
									AHH6005	J.2									
									AHH6006	J.2									
									AHH6047	L.1									
									AHH6048	L.1									
									AHH6053	H.4									
									AHH6056	A.15									
									AHH6063	M.1									
									AHH6065	C.1									
									AHH6076	R.6									
									AHH6079	R.6									
									AHH6080	A.16									
									AHH6081	A.16									
									AHH6089	R.1									

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number
AHH6091	J.1		AHH6233	M.4		AHH6322	R.10		AHH6403	R.10	
AHH6096	R.10		AHH6234	M.4		AHH6323	R.10		AHH6404	R.10	
AHH6102	R.4		AHH6235	M.4		AHH6324	R.8		AHH6407	R.10	
AHH6103	R.5		AHH6236	M.4		AHH6325	R.4		AHH6408	R.10	
AHH6104	R.5		AHH6237	M.5		AHH6326	R.6		AHH6409	R.10	
AHH6105	R.8		AHH6241	R.5		AHH6329	R.13		AHH6411	R.10	
AHH6106	R.8		AHH6242	R.5		AHH6330	R.13		AHH6412	R.10	
AHH6107	R.5		AHH6245	R.5		AHH6331	R.13		AHH6413	R.10	
AHH6108	R.5		AHH6246	M.3		AHH6332	AHH6414		AHH6423	R.10	
AHH6109	R.12		AHH6247	O.2		AHH6333	AHH6416		AHH6424	R.22	
AHH6110	R.12		AHH6249	R.7		AHH6334	AHH6417		AHH6425	R.19	
AHH6110	R.12		AHH6250	R.15		AHH6335	AHH6418		AHH6426	R.22	
AHH6121	J.1		AHH6250	R.15		AHH6336	R.9		AHH6422	R.19	
AHH6124	P.1		AHH6252	D.1		AHH6337	R.9		AHH6423	R.19	
AHH6132	A.15		AHH6253	D.1		AHH6338	R.8		AHH6416	R.22	
AHH6134	R.18		AHH6257	D.1		AHH6339	N.8		AHH6417	R.22	
AHH6142	R.18		AHH6260	R.30		AHH6341	R.16		AHH6425	R.19	
AHH6147	H.4		AHH6261	R.15		AHH6342	AHH6426		AHH6426	R.4	
AHH6153	M.1		AHH6262	R.12		AHH6343	AHH6427		AHH6434	R.9	
AHH6154	E.2		AHH6262	R.13		AHH6344	AHH6428		AHH6438	R.12	
AHH6155	M.1		AHH6268	D.1		AHH6345	AHH6429		AHH6438	R.13	
AHH6156	M.1		AHH6270	R.8		AHH6346	AHH6437		AHH6440	R.12	
AHH6160	R.26		AHH6271	N.3		AHH6347	AHH6438		AHH6440	R.13	
AHH6162	H.4		AHH6272	R.7		AHH6348	AHH6439		AHH6440	R.13	
AHH6163	M.1		AHH6273	R.8		AHH6349	AHH6440		AHH6443	R.13	
AHH6164	R.28		AHH6275	N.8		AHH6350	AHH6441		AHH6443	R.12	
AHH6165	R.28		AHH6276	R.28		AHH6351	AHH6442		AHH6446	R.4	
AHH6166	R.28		AHH6280	D.1		AHH6352	AHH6443		AHH6448	R.13	
AHH6169	R.18		AHH6281	D.1		AHH6353	AHH6444		AHH6451	R.12	
AHH6176	R.28		AHH6282	R.16		AHH6354	AHH6445		AHH6452	R.13	
AHH6179	R.6		AHH6283	R.16		AHH6355	AHH6446		AHH6453	R.13	
AHH6180	R.6		AHH6284	R.29		AHH6356	AHH6447		AHH6454	R.12	
AHH6181	R.6		AHH6285	R.29		AHH6358	AHH6448		AHH6455	R.12	
AHH6182	R.18		AHH6286	R.29		AHH6359	AHH6449		AHH6456	R.12	
AHH6186	R.27		AHH6287	R.29		AHH6360	AHH6450		AHH6457	R.12	
AHH6190	R.28		AHH6289	R.9		AHH6360	AHH6451		AHH6458	R.12	
AHH6192	K.1		AHH6290	R.30		AHH6361	AHH6452		AHH6459	R.12	
AHH6195	K.1		AHH6291	R.18		AHH6361	AHH6453		AHH6460	R.12	
AHH6204	K.1		AHH6292	R.18		AHH6361	AHH6454		AHH6461	R.12	
AHH6205	K.1		AHH6293	R.17		AHH6362	AHH6455		AHH6462	R.12	
AHH6206	K.1		AHH6294	R.30		AHH6364	AHH6456		AHH6463	R.12	
AHH6207	K.1		AHH6295	R.30		AHH6365	AHH6457		AHH6464	R.12	
AHH6208	R.15		AHH6297	P.1		AHH6366	M.3		AHH6465	R.6	
AHH6209	R.15		AHH6298	A.15		AHH6367	M.3		AHH6466	R.4	
AHH6210	R.15		AHH6303	R.9		AHH6368	M.3		AHH6467	R.4	
AHH6215	R.15		AHH6304	R.9		AHH6370	M.3		AHH6468	R.4	
AHH6216	R.15		AHH6310	R.9		AHH6380	M.3		AHH6469	R.4	
AHH6217	R.16		AHH6311	J.2		AHH6381	R.10		AHH6470	R.15	
AHH6218	R.15		AHH6312	J.2		AHH6385	R.10		AHH6471	R.17	
AHH6219	R.15		AHH6314	N.8		AHH6388	R.10		AHH6472	R.17	
AHH6220	M.4		AHH6315	N.8		AHH6392	R.10		AHH6473	R.17	
AHH6221	M.4		AHH6316	N.8		AHH6393	R.10		AHH6474	R.10	
AHH6228	M.4		AHH6317	N.8		AHH6394	R.10		AHH6475	M.1	
AHH6229	M.4		AHH6318	N.8		AHH6395	N.7		AHH6476	R.29	
AHH6230	M.4		AHH6319	C.1		AHH6398	R.7		AHH6477	R.19	
AHH6231	M.4		AHH6320	C.1		AHH6402	R.10		AHH6478	M.1	

THE MGB

PART NUMBER INDEX

Part Number	Page	Amtdt. Number									
AHH6511	M.1		AHH6732	D.5		AHH6899	R.23		AKE4492	R.25	
AHH6513	R.7		AHH6734	A.17		AHH6900	R.23		AKE4493	R.26	
AHH6514	K.2		AHH6742	R.18		AHH6901	R.23		AKE4494	R.26	
AHH6516	R.10		AHH6745	R.7		AHH6902	R.23		AKE4495	R.26	
AHH6517	R.10		AHH6750	N.1		AHH6903	R.23		AKE4496	R.26	
AHH6523	R.4		AHH6752	M.3		AHH6904	R.23		AKE4497	R.26	
AHH6524	R.12		AHH6753	R.18		AHH6905	R.23		AKE4498	R.26	
AHH6527	R.27		AHH6754	R.12		AHH6906	R.23		AKE4499	R.25	
AHH6528	R.27		AHH6755	R.12		AHH6907	R.23		AKE4500	R.25	
AHH6529	R.14		AHH6757	R.14		AHH6908	R.23		AKE4501	R.25	
AHH6530	R.14		AHH6760	R.13		AHH6909	R.23		AKE4502	R.25	
AHH6535	R.6		AHH6760	R.14		AHH6910	R.14		AKE4503	R.25	
AHH6536	R.10		AHH6761	R.4		AHH6911	R.14		AKE4504	R.25	
AHH6538	S.1		AHH6762	R.4		AHH6912	R.14		AKE4505	R.26	
AHH6539	S.1		AHH6823	R.14		AHH6913	R.14		AKE4506	R.26	
AHH6540	S.1		AHH6824	R.14		AHH6914	R.14		AKE4507	R.26	
AHH6541	K.5		AHH6825	R.14		AHH6915	R.14		AKE4508	R.26	
AHH6542	K.5		AHH6826	R.14		AHH6916	R.15		AKE4509	R.26	
AHH6543	R.4		AHH6827	R.14		AHH6917	M.1		AKE4510	R.26	
AHH6544	R.9		AHH6828	R.14		AHH6921	R.13		AKE4511	R.25	
AHH6546	K.5		AHH6835	R.12		AHH6922	R.23		AKE4511	R.26	
AHH6547	R.7		AHH6836	R.12		AHH6923	R.23		AKE4512	R.25	
AHH6548	R.4		AHH6837	R.12		AHH6924	R.13		AKE4512	R.26	
AHH6550	R.9		AHH6838	R.13		AHH6925	R.13		AKE4513	R.25	
AHH6551	A.12		AHH6839	R.13		AHH6926	R.13		AKE4513	R.26	
AHH6553	E.2		AHH6840	R.13		AHH6939	R.26		AKE4514	R.25	
AHH6554	O.2		AHH6842	R.24		AHH6943	R.20		AKE4514	R.26	
AHH6661	R.7		AHH6843	R.24		AHH6945	R.10		AKE4515	R.25	
AHH6662	R.7		AHH6844	R.24		AHH8003	P.1		AKE4515	R.26	
AHH6666	R.7		AHH6845	R.3		AHH8009	P.1		AKE4516	R.25	
AHH6667	R.7		AHH6847	B.2					AKE4516	R.26	
AHH6668	R.7		AHH6851	A.12		AIDY7042	A.17		AKE4517	R.18	
AHH6669	R.7		AHH6853	A.12		AJD7162	R.15		AKE4518	R.18	
AHH6670	R.7		AHH6865	A.12		AJD7712	A.17		AKE4519	R.18	
AHH6671	R.7		AHH6866	A.12		AJD7722	R.6		AKE4520	R.18	
AHH6672	R.7		AHH6881	R.13		AJD7732	R.4		AKE4521	R.20	
AHH6673	R.7		AHH6882	R.12		AJD8012Z	D.4		AKE4522	R.20	
AHH6674	R.7		AHH6882	R.13		AJH5079	N.9		AKE4523	R.20	
AHH6675	R.7		AHH6882	R.14		AJH5176	O.1		AKE4524	R.20	
AHH6676	R.7		AHH6883	R.12		AJH5178	O.1		AKE4525	R.20	
AHH6677	O.2		AHH6884	R.12		AJH5185	O.2		AKE4526	R.20	
AHH6678	N.10		AHH6884	R.13		AJH5186	O.2		AKE4527	R.20	
AHH6679	D.1		AHH6884	R.14					AKE4528	R.20	
AHH6679	D.1		AHH6885	R.13					AKE4529	R.20	
AHH6679	D.1		AHH6886	R.23		AKE4479	R.19		AKE4530	R.20	
AHH6679	D.2		AHH6887	R.23		AKE4480	R.19		AKE4531	R.20	
AHH6708	D.2		AHH6888	R.23		AKE4481	R.19		AKE4532	R.20	
AHH6709	R.17		AHH6889	R.23		AKE4482	R.19		AKE4533	R.20	
AHH6713	A.12		AHH6890	R.23		AKE4483	R.19		AKE4534	R.20	
AHH6715	R.3		AHH6891	R.23		AKE4484	R.19		AKE4535	R.20	
AHH6716	R.5		AHH6892	R.23		AKE4485	R.19		AKE4536	R.20	
AHH6719	R.5		AHH6893	R.23		AKE4486	R.19		AKE4537	R.20	
AHH6725	A.17		AHH6894	R.23		AKE4487	R.25		AKE4538	R.20	
AHH6726	A.17		AHH6895	R.23		AKE4488	R.25		AKE4539	R.20	
AHH6727	A.17		AHH6896	R.23		AKE4489	R.25		AKE4540	R.20	
AHH6728	R.29		AHH6897	R.23		AKE4490	R.25		AKE4541	R.20	
AHH6731	A.17		AHH6898	R.23		AKE4491	R.25		AKE4542	R.20	

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number
AKE4543	R.20		ARRH1050	C.1		ATC4265	K.3		AUC1818	D.4	
AKE4544	R.20		ARRH1541	C.1		ATC7084	H.1		AUC1819	D.4	
AKE4545	R.20		ARRH1790	C.1		AUA150	D.3		AUC1829	D.4	
AKE4546	R.20		ARRH1795	C.1		AUA504	D.3		AUC1358	D.4	
AKE4547	R.20		ARRH1797	C.1		AUA565	D.3		AUC1366	D.4	
AKE4548	R.20		ARRH1800	C.1		AUA585	D.3		AUC1374	D.5	
AKE4549	R.20		ARRH1801	C.1		AUA692	D.3		AUC1375	D.5	
AKE4550	R.20		ARRH1809	A.16		AUA699	D.3		AUC1400	D.5	
AKE4551	R.20		ARRH1810	A.16		AUA839	D.3		AUC1424	D.5	
AKE4552	R.20		ARRH1811	A.16		AUA840	D.3		AUC1426	D.5	
AKE4553	R.20		ARRH1813	R.21		AUA878	D.3		AUC2002	D.4	
AKE4554	R.21		ARO4566	D.1		AUA887	D.3		AUC2057	D.4	
AKE4556	R.21		ARO9399	C.1		AUA1405	D.3		AUC2114	D.4	
AKE4557	R.21		ATA7043	H.1		AUA1421	D.3		AUC2175	D.4	
AKE4558	R.21		ATA7047	H.2		AUA1422	D.3		AUC2246	D.4	
AKE4559	R.21		ATA7047	R.21		AUA1463	D.3		AUC2451	D.5	
AKE4560	R.21		ATA7047	R.21		AUA1485	D.3		AUC2625	D.5	
AKE4561	R.21		ATB4074	K.4		AUA1492	D.3		AUC2694	D.5	
AKE4562	R.21		ATB4131	K.3		AUA1447	D.3		AUC3116	D.4	
AKE4563	R.21		ATB4238	K.3		AUA1468	D.3		AUC4387	D.4	
AKE4564	R.21		ATB4239	K.3		AUA1455	D.3		AUC4900	D.4	
AKE4565	R.21		ATB4240	K.3		AUA1459	D.3		AUC5002	D.5	
AKE4566	R.21		ATB4241	K.3		AUA1464	D.3		AUC5032	D.5	
AKE4567	R.21		ATB4242	K.3		AUA1469	D.3		AUC8070	D.4	
AKE4568	R.21		ATB4242	R.19		AUA1470	D.3		AUC8114	D.4	
AKE4569	R.21		ATB4509	R.19		AUA1661	D.3		AUC8170	D.4	
AKE4570	R.12		ATB7065	H.2		AUA1662	D.3		AUC8396	D.5	
AKE4601	R.12		ATB7066	H.2		AUA1822	D.3		AUC8457	D.5	
AKE4602	R.12		ATB7067	H.2		AUA1868	D.3		AUC8459	D.4	
AKE4603	R.12		ATB7067	H.2		AUA4080	D.3		AUC8460	D.4	
AKE4607	R.13		ATB7069	H.2		AUA4081	D.3		AUC8461	D.4	
AKE4608	R.13		ATB7070	H.2		AUA4082	D.3		AUC8462	D.5	
AKE4609	R.13		ATB7071	H.2		AUA4083	D.3		AUC8473	D.5	
AMK8847	R.27		ATB7072	H.1		AUA4643	D.3		AUC8478	D.4	
ANK3458	N.9		ATB7102	H.2		AUA5059	D.3		AUC8483	D.5	
ANK4646	N.3		ATB7103	H.2		AUA5060	D.3		AUC8667	AUD2173	
ANK4646	R.6		ATB7104	H.2		AUA5078	D.3		AUC8728	AUD2174	
ANK4646	R.7		ATB7105	H.2		AUA6021	D.3		AUC8734	AUD2175	
ANK4646	R.18		ATB7106	H.2		AUA6034	D.3		AUC8905	AUD2176	
ANK4646	R.18		ATB7107	H.2		AUA6086	D.3		AUC9186	AUD2177	
ARA922	C.1		ATB7108	H.1		AUB521	D.3		AUC9187	AUD2178	
ARA1211	C.1		ATB7128	H.1		AUB6004	D.3		AUD52	D.4	
ARA1238	C.1		ATB7181	H.1		AUB6007	D.3		AUD1005	D.4	
ARRH59	R.18		ATB7289	H.2		AUB6015	D.3		AUD2040	D.5	
ARRH143	C.1		AIB7354				D.4		AUD2050	D.5	
ARRH155	C.1		ATC4240			AUC1145	D.4		AUD2076	D.5	
ARRH155	D.1		ATC4246			AUC1151	D.4		AUD2101	D.4	
ARRH176	A.16		ATC4247			AUC1152	D.4		AUD2163	D.5	
ARRH179	A.16		ATC4248			AUC1206	D.5		AUD2164	D.5	
ARRH181	A.12		ATC4249			AUC1249	D.4		AUD2173	D.5	
ARRH17	C.1		ATC4261			AUC1250	D.4		AUD2176	D.5	
ARRH649	C.1		ATC4262			AUC1302	D.4		AUD2177	D.5	
ARRH673	D.1		ATC4263			AUC1310	D.4		AUD9002	D.5	
ARRH952	A.16		ATC4264			AUC1317	D.4		AUD9072	D.4	

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number									
AUD9073	D.4		BFS410	N.5		BHA4348	N.11		BTC114	K.4	
AUD9085	D.4		BFS411	N.5		BHA4349	N.11		BTC280	K.3	
AUD9086	D.4		BFS987	N.10		BHA4355	R.23		CCN212	J.2	
AUD9140	D.6		BFS987	N.11		BHA4356	N.11		CCN240	F.1	
IB1063	A.8		BHA4082	R.4		BL5109	F.3		CFP375	R.29	
IB1785	A.8		BHA4082	R.6		BL5109	F.4		CFP625	R.29	
IB2363	F.3		BHA4116	N.3		BL5110	F.2		CFP750	R.29	
IB3664	A.6		BHA4130	N.10		BL5110	F.4		CFP1000	R.29	
IB3664	F.5		BHA4132	R.27		BMK735	N.3				
IB7240	H.2		BHA4175	N.7		BNN105	A.14		CHS2513	A.14	
IB7356	K.5		BHA4176	N.7		BNN105	A.14		CHS2513	F.1	
IB8036	P.1		BHA4212	O.1		BRP906	R.5		CHS2522	A.14	
IB8037	P.1		BHA4214	O.2		BRP1104	R.9		CLZ0427	D.1	
IB8038	P.1		BHA4235	N.4		BRT2404	D.1		CLZ0514	E.2	
IB8039	P.1		BHA4235	N.5					CLZ0514	M.1	
IB8077	P.1		BHA4237	N.3							
IB8078	P.1		BHA4238	N.6		BTB150	H.1		CMP0308	R.10	
IB8347	A.15		BHA4239	N.6		BTB163	H.2		CMP0310	R.10	
IB8859	M.4		BHA4242	N.7		BTB157	H.3		CMZ0307	R.10	
IB8995	S.1		BHA4251	R.29		BTB183	K.3		CMZ0310	R.19	
11B2011	D.1		BHA4261	N.2		BTB187	K.3		CMZ0318	N.3	
11B2037	O.2		BHA4278	N.3		BTB198	K.4		CMZ0410	H.2	
11B5074	A.15		BHA4280	N.3		BTB207	H.2		CMZ0410	H.3	
11B5166	S.1		BHA4283	N.7		BTB253	H.2		CMZ0412	R.7	
12B120	A.3		BHA4286	O.1		BTB314	H.1		CMZ0412	R.26	
12B121	A.3		BHA4287	O.1		BTB328	H.1		CMZ0512	R.2	
12B173	A.10		BHA4291	O.1		BTB352	H.2		CMZ0516	A.15	
12B174	A.10		BHA4292	D.1		BTB353	H.2		CMZ0520	R.2	
12B207	A.1		BHA4295	O.2		BTB354	H.2				
12B012997	A.3		BHA4296	O.2		BTB355	H.2				
12B012997	A.3		BHA4297	M.3		BTB356	H.2				
12B012998	A.3		BHA4310	E.3		BTB386	H.2		CNZ102	B.1	
12B012998	A.3		BHA4314	O.1		BTB397	H.2		CNZ102	R.7	
14B630	R.29		BHA4320	N.9		BTB388	H.3		CNZ102	R.18	
14B934	R.18		BHA4321	N.9		BTB3446	K.3				
14B1730	R.12		BHA4322	N.9		BTB347	K.3		CTP604	R.8	
14B2685	R.29		BHA4323	N.9		BTB350	K.2				
22B56	F.4		BHA4324	N.9		BTB354	H.2		CTZ604	R.12	
22B66	E.1		BHA4325	R.27		BTB354	K.3		CTZ604	R.13	
			BHA4326	R.28		BTB361	K.3		CTZ604	R.19	
			BHA4327	R.28		BTB366	H.3				
			BHA4328	R.28		BTB367	H.3		ILD5264	E.3	
			BHA4329	R.28		BTB370	K.4		ILD5264	M.2	
			BHA4329	R.28		BTB371	K.4				
			BHA4329	R.28		BTB387	K.4				
			BHA4331	R.1		BTB387	K.4		17D11	A.10	
			BHA4332	R.28		BTB392	K.2				
			BHA4333	R.28		BTB393	K.2		DAP0820	R.8	
			BHA4334	R.28		BTB396	K.3				
			BHA4335	R.28		BTB410	K.3		DMP0721	R.5	
			BHA4336	R.28		BTB411	K.2		DMP0721	R.8	
			BHA4337	R.28		BTB412	K.4		DMP0819	R.8	
			BHA4338	R.1		BTB413	K.4		DMP0824	R.12	
			BHA4344	N.10		BTB414	H.1		DMP0829	R.12	
			BHA4345	N.10		BTB333	H.1		DMP0829	R.13	
			BHA4347	N.11		BTB334	H.1		DMP0829	R.14	

THE MGB

PART NUMBER INDEX

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number									
11G3128	F.3		1H840	A.7		3H1422	B.2		7H6099	J.2	
11G3129	F.3		1H841	B.1		3H2006	A.6		7H6970	J.2	
11G3131	F.2		1H871	A.7		3H2287	E.3		7H6971	J.2	
11G3132	F.2		1H898	A.9		3H2287	M.2		7H6972	J.2	
11G3133	F.2		1H922	A.9		3H2287	M.3		7H7003	E.3	
11G3134	F.2		1H1001	A.11		3H2424	M.3		7H7004	E.3	
11G3135	F.2		1H1051	A.9		3H2428	K.4		7H7398	H.3	
11G3136	F.2		1H1052	A.9		3H2695	B.2		7H7504	H.3	
11G3140	F.2		1H1056	A.9		3H2696	B.2		7H7553	E.1	
11G3144	F.4		1H1067	A.9		3H2865	F.3		7H7560	E.3	
11G3187	F.2		1H1068	A.9					7H7851	M.2	
11G3195	F.4		1H1153	A.10		7H1709	P.1		7H7857	E.2	
11G3196	F.4		1H1154	A.10		7H1764	A.9		7H7954	E.3	
11G3199	F.4		1H1191	A.8		7H1790	A.8		7H7956	E.3	
11G3223	F.4		1H1198	A.8		7H1792	A.8		7H7957	E.3	
11G3228	F.3		1H1257	D.6		7H1793	A.8		7H7958	E.3	
11G3264	F.3		1H1319	A.5		7H1948	A.9		7H7959	E.3	
12G114	A.6		1H1320	A.5		7H1952	A.9		7H7983	E.3	
14G2444	R.1		1H1321	A.5		7H1965	A.9		7H8319	N.2	
14G3499	R.27		1H1435	A.3		7H1968	A.9		7H8335	N.4	
14G3722	N.9		1H3026	F.5		7H1969	A.9		7H8338	N.4	
14G3736	R.28		1H3087	F.4		7H1993	R.27		7H8338	N.5	
21G6050	N.8		1H3095	F.4		7H3078	E.1		7H8352	O.1	
21G9057	N.7		1H3101	F.4		7H3858	G.1		7H8353	O.1	
24C629	R.15		1H3130	F.4		7H3863	G.1		7H9864	R.14	
24G1482	R.28		1H3131	F.5		7H3865	G.1		7H9866	R.14	
48G206	F.3		1H3138	F.1		7H3877	G.1		7H9867	R.14	
48G207	A.5		1H3257	F.2		7H3878	G.1		7H9868	R.14	
48G208	A.5		1H3258	F.2		7H3879	G.1		7H9878	R.10	
48G264	A.5		1H3275	F.1		7H3880	G.1				
48G266	F.1		1H3277	F.3		7H5001	N.2		12H37	A.6	
48G275	A.1		1H3304	F.2		7H5002	N.2		12H67	A.10	
48G276	A.1		1H3305	F.3		7H5004	N.2		12H71	A.10	
48G277	A.1		1H3364	F.1		7H5005	N.2		12H74	A.8	
48G278	A.1		1H3364	H.1		7H5010	N.2		12H90	B.1	
48G279	A.1		1H3368	F.4		7H5011	N.2		12H152	A.7	
48G280	A.1		1H3369	F.4		7H5013	N.2		12H156	A.7	
48G281	A.18		2H3266	A.3		7H5067	N.3		12H384	A.8	
48G282	A.18		2H2617	N.10		7H5130	N.9		12H390	A.5	
48G283	F.1		2H2704	N.10		7H5156	N.2		12H395	A.8	
1H353	A.1		2H2704	N.11		7H5339	N.2		12H397	A.8	
1H591	A.7		2H3406	N.10		7H5390	N.1		12H398	A.8	
1H605	A.3		2H4185	N.3		7H5493	N.2		12H424	A.3	
1H721	A.7		2H4243	B.2		7H5536	N.6		12H426	A.3	
1H723	A.5		2H4244	B.2		7H5582	N.4		12H434	A.5	
1H729	A.3		2H4245	B.2		7H5582	N.5		12H435	A.5	
1H730	A.8		2H4246	B.2		7H5582	N.7		12H436	A.5	
1H756	A.8		2H4905	A.4		7H6902	N.8		12H579	E.1	
1H765	A.4		2H4932	N.10		7H6903	N.8		12H596	A.6	
1H818	A.1		2H8445	R.28		7H6904	N.8		12H708	A.14	
1H822	A.4		3H5550	E.2		7H6928	R.27		12H709	A.14	
			3H5550	E.3		7H6938	N.2		12H712	D.6	
			3H5550	M.2		7H6939	N.2		12H713	A.4	
			3H5554	E.8		7H6940	N.2		12H715	A.17	
			3H576	A.1		7H6941	N.2		12H719	D.6	
						7H6942	N.2		12H722	D.1	

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number									
12H723	D.1		13H425	N.1		17H3875	J.2		17H7408	E.2	
12H725	D.2		13H469	N.9		17H3925	J.2		17H7408	E.2	
12H727	D.2		13H472	N.8		17H3955	G.1		17H7411	E.2	
12H733	B.1		13H473	N.8		17H5145	N.4		17H7411	E.2	
12H742	A.6		13H484	E.1		17H5205	N.4		17H7511	H.3	
12H751	A.7		13H496	N.4		17H5205	N.5		17H7554	E.2	
12H752	A.7		13H505	N.4		17H5216	N.7		17H7554	M.2	
12H753	A.3		13H568	J.2		17H5217	N.1		17H7560	E.2	
12H755	A.2		13H569	A.6		17H5281	N.4		17H7560	M.2	
12H757	A.2		13H590	A.6		17H5281	N.5		17H7623	H.3	
12H758	A.2		13H591	A.10		17H5301	N.7		17H7629	M.2	
12H760	A.2		13H628	N.2		17H5301	R.13		17H7729	K.4	
12H762	A.7					17H5302	R.13		17H7836	E.2	
12H765	A.2		17H381	A.4		17H5306	N.4		17H7860	M.2	
12H768	A.7		17H341	A.18		17H5375	N.4		17H7878	E.3	
12H769	A.2		17H348	A.4		17H5390	N.9		17H7917	K.4	
12H770	A.7		17H846	A.9		17H5394	N.4		17H7926	K.4	
12H771	A.7		17H982	O.2		17H5394	N.5		17H7933	J.1	
12H773	A.4		17H961	O.1		17H5396	N.9		17H7949	H.3	
12H775	A.3		17H962	O.1		17H5425	N.7		17H7969	H.3	
12H782	B.1		17H1304	O.1		17H5431	N.7		17H7971	H.3	
12H797	A.6		17H1446	A.9		17H5441	N.9		17H7972	H.3	
12H799	A.10		17H1447	A.9		17H6290	J.1		17H7973	H.3	
12H802	D.2		17H1448	A.9		17H6560	J.1		17H7974	H.3	
12H813	A.8		17H1449	A.9		17H6561	J.1		17H7981	E.2	
12H814	A.10		17H1556	A.9		17H6562	J.1		17H7981	M.2	
12H836	A.11		17H1558	A.9		17H6563	J.1		17H7984	E.2	
12H888	A.11		17H1559	R.27		17H6564	J.1		17H7984	M.2	
12H075510	A.2		17H1601	R.28		17H6565	J.2		17H7985	E.2	
12H075520	A.2		17H1608	R.28		17H6566	J.1		17H7985	M.2	
12H075530	A.2		17H1642	O.2		17H6572	J.1		17H7986	H.3	
12H075540	A.2		17H1642	O.2		17H6567	J.1		17H7986	E.2	
12H075570	A.2		17H1658	O.1		17H6568	J.1		17H7987	H.3	
12H075720	A.2		17H1712	R.8		17H6569	J.1		17H7987	K.4	
12H075730	A.2		17H1801	R.27		17H6570	J.1		17H7988	K.4	
12H075740	A.2		17H2018	N.9		17H6571	J.1		17H7988	K.4	
12H075810	A.2		17H2077	P.1		17H6572	J.1		17H7990	K.4	
12H075820	A.2		17H2078	P.1		17H6573	J.1		17H7991	H.3	
12H075830	A.2		17H2088	N.4		17H6574	J.1		17H7992	H.3	
12H075840	A.2		17H2132	N.11		17H6575	J.1		17H7992	H.3	
12H075910	A.2		17H2284	R.27		17H6577	J.2		17H7994	H.3	
12H075920	A.2		17H2285	R.27		17H6578	J.2		17H7995	H.3	
12H075930	A.2		17H2286	R.27		17H6579	J.1		17H7996	H.3	
12H075940	A.2		17H2287	R.27		17H6580	J.1		17H7997	H.3	
12H076010	A.2		17H2288	R.27		17H6582	J.1		17H7998	H.3	
12H076020	A.2		17H3308	N.6		17H6583	J.1		17H7998	H.3	
12H076030	A.2		17H3310	N.6		17H6584	J.1		17H7998	H.3	
12H076040	A.2		17H3319	N.6		17H6588	J.1		17H7998	H.3	
18H59	R.27		17H3500	J.1		17H6589	J.1		17H7998	H.3	
18H106	K.3		17H3502	J.1		17H6589	J.1		17H7998	H.3	
18H110	N.8		17H3503	J.1		17H6584	J.1		17H7998	H.3	
18H176	N.3		17H3513	J.1		17H6584	J.1		17H7998	H.3	
18H219	N.1		17H3818	G.1		17H6589	J.1		17H7998	H.3	
18H226	N.3		17H3819	G.1		17H7141	J.2		17H7407	E.2	
18H252	N.3		17H3873	J.2		17H7407	J.2		17H7407	M.2	
18H3874	N.3		17H3874	J.2		17H7407	J.2		17H7407	F.1	

THE MGB

PART NUMBER INDEX

Part Number	Page	Amndt. Number												
27H387	O.2		47H5390	N.1		HBZ0422	A.16		HZA350	R.2				
27H602	R.27		47H5391	N.1		HBZ0510	F.5		HZA356	R.2				
27H972	O.2		47H5393	N.1		HBZ0511			HZA360	R.9				
27H1187	R.28		47H5394	N.1		HBZ0512	K.2		HZA361	R.9				
27H1193	R.27		47H5395	N.1		HBZ0513	A.7		HZA364	R.1				
27H1198	R.28		47H5408	N.8		HBZ0513	A.10		HZA366	R.2				
27H1240	R.28		47H5417	N.10		HBZ0513	J.2		HZA367	R.2				
27H1874	R.27		47H5417	N.11		HBZ0514	A.10		HZA368	R.2				
27H3280	E.1		47H5418	N.10		HBZ0514	H.4		HZA368	R.7				
27H3281	E.1		47H5419	N.10		HBZ0515	F.5		HZA383	R.7				
27H3282	E.1		47H5469	N.8		HBZ1516	J.2		HZA388	R.3				
27H3283	E.1		47H5486	N.10		HBZ0518	J.2		HZA401	R.1				
27H3284	E.1		47H5496	N.11		HBZ0520	F.5		HZA403	R.3				
27H3285	E.1		47H5528	N.5		HBZ0612	R.15		HZA404	R.4				
27H3286	E.1		57H5084	N.1		HBZ0616	R.15		HZA407	R.2				
27H5253	N.4		57H5085	N.1		HBZ0632	M.1		HZA408	R.2				
27H5258	N.5		57H5202	N.4		HBZ0724	H.4		HZA409	R.1				
27H5374	N.9		57H5206	N.4		HBZ0726	L.1		HZA410	R.1				
27H5401	N.8		57H5206	N.5		HBZ0728	R.15		HZA411	R.2				
			57H5309	N.8		HBZ0730	R.16		HZA412	R.2				
			57H5310	N.8					HZA419	R.2				
			57H5311	N.9					HZA420	R.3				
			57H5312	N.9					HZA421	R.3				
			57H5354	N.7					HZA433	R.28				
			57H5355	N.7					HZA442	R.3				
			57H5356	N.7					HZA443	R.3				
			57H5357	N.7					HZA452	R.17				
			57H5358	N.7					HZA453	R.17				
			57H5359	N.3					HZA454	R.17				
			57H5395	N.3					HZA455	R.17				
			57H5396	N.3					HZA457	C.1				
			57H5398	N.3					HZA461	R.3				
			57H5465	N.6					HZA465	R.3				
			57H5558	N.9					HZA480	R.2				
			57H5559	N.9					HZA482	R.3				
			57H5568	N.6					HZA483	R.3				
			57H5569	N.6					HZA489	C.2				
			57H5571	N.6					HZA490	C.2				
			57H5572	N.6					HZA491	R.3				
			57H5579	N.7					HZA496	R.3				
			57H5594	N.8					HZA497	R.3				
			57H5595	N.8					HZA542	R.17				
			67H5021	N.8					HZA543	R.17				
			67H5025	N.4					HZA544	R.17				
			67H5026	N.4					HZA545	R.17				
			67H5035	N.5					HZA546	R.27				
			67H5035	R.22					HZA547	R.27				
			97H626	N.1					HZA548	R.2				
			97H2031	L.1										
			97H2797	J.2										
			A.4											
			HBN0412											
			HBZ0408	M.3										
			HBZ0418	D.1										
			N.1											
			N.1											

THE MGB

PART NUMBER INDEX

THE MGB

PART NUMBER INDEX

Part Number	Page	Amndt. Number	Part Number	Page	Amndt. Number	Part Number	Page	Amndt. Number	Part Number	Page	Amndt. Number
LWN306	N.2		LWZ204	R.2		LWZ303	R.27		PMZ0208	R.7	
LWN307	H.1		LWZ204	R.5		LWZ304	F.1		PMZ0216	B.1	
LWN404	A.3		LWZ204	R.7		LWZ304	F.4		PMZ0304	R.12	
LWN404	F.2		LWZ204	R.9		LWZ304	R.16		PMZ0305	R.17	
LWN404	F.4		LWZ204	R.10		LWZ305	A.7		PMZ0306	M.5	
LWN404			LWZ204	R.12		LWZ305	A.15		PMZ0306	N.8	
LWZ202	R.7		LWZ204	R.16		LWZ305	D.2		PMZ0306	N.10	
L.WZ202	R.18		LWZ204	R.17		LWZ305	F.1		PMZ0306	R.4	
L.WZ203	A.12		LWZ204	R.26		LWZ305	F.5		PMZ0306	R.7	
L.WZ203	A.17		LWZ204	R.27		LWZ305	A.7		PMZ0306	R.12	
L.WZ203	C.2		LWZ204	R.28		LWZ306	A.10		PMZ0307	A.17	
L.WZ203	K.5		LWZ204	R.29		LWZ306	A.15		PMZ0308	A.12	
L.WZ203	M.1		LWZ205	A.7		LWZ306	K.1		PMZ0308	C.2	
L.WZ203	M.3		LWZ205	A.14		LWZ307	R.15		PMZ0308	K.5	
L.WZ203	M.5		LWZ205	A.15		LWZ307	R.16		PMZ0308	M.1	
L.WZ203	N.3		LWZ205	A.16		LWZ403	R.27		PMZ0308	N.10	
L.WZ203	N.4		LWZ205	A.17		LWZ403	R.7		PMZ0308	R.1	
L.WZ203	N.10		LWZ205	C.1		LWZ403	R.27		PMZ0308	R.6	
L.WZ203	R.1		LWZ205	E.2		LWZ403	R.28		PMZ0308	R.7	
L.WZ203	R.4		LWZ205	G.1		LWZ404	F.3		PMZ0308	R.12	
L.WZ203	R.5		LWZ205	H.1		LWZ506	M.4		PMZ0308	R.13	
L.WZ203	R.6		LWZ205	J.1		LWZ510	F.2		PMZ0308	R.17	
L.WZ203	R.7		LWZ205	J.2		LWZ510	R.12		PMZ0308	R.30	
L.WZ203	R.8		LWZ205	K.1		MB19956	M.3		PMZ0310	N.8	
L.WZ203	R.9		LWZ205	K.2		PCR0307	PCR0311		PMZ0310	N.4	
L.WZ203	R.10		LWZ205	K.4		PCR0307	M.3		PMZ0310	R.27	
L.WZ203	R.12		LWZ205	K.5		PCR0407	N.10		PMZ0312	M.1	
L.WZ203	R.13		LWZ205	M.1		PCR0411	E.3		PMZ0408	A.12	
L.WZ203	R.14		LWZ205	M.2		PCR0407	M.1		PMZ0408	N.8	
L.WZ203	R.17		LWZ205	M.3		PCR0507	N.10		PMZ0410	R.9	
L.WZ203	R.18		LWZ205	M.4		PCR0507	D.1		PMZ0410	R.5	
L.WZ203	R.19		LWZ205	R.1		PCR0509	N.10		PMZ0410	R.16	
L.WZ203	R.22		LWZ205	R.9		PCR0509	N.10		PMZ0410	R.27	
L.WZ203	R.27		LWZ205	R.17		PCR0607	N.10		PMZ0412	R.16	
L.WZ203	R.30		LWZ205	R.29		PCR0611	C.1		PMZ0412	R.16	
L.WZ204	A.12		LWZ206	A.15		PCR0811	R.27		PPZ0316	R.10	
L.WZ204	A.15		LWZ206	E.3		PCR1007	N.10		PPZ0410	N.3	
L.WZ204	A.16		LWZ206	F.4		PCR1009	N.10		PTP606	R.30	
L.WZ204	A.17		LWZ206	H.3							
L.WZ204	B.2		LWZ206	H.4		PFR108	R.30		PTZ602	R.17	
L.WZ204	C.2		LWZ206	K.2					PTZ602	R.19	
L.WZ204	D.1		LWZ206	K.4		PFS103	R.6		PTZ602	R.27	
L.WZ204	D.2		LWZ206	M.1		PRS106	C.1		PTZ602	R.6	
L.WZ204	E.5		LWZ206	R.10		PFS206	R.16		PTZ603	R.27	
L.WZ204	F.11		LWZ206	R.15		PFS308	R.17		PTZ603	R.28	
L.WZ204	H.3		LWZ207	H.4		PFS308	R.18		PTZ603	D.4	
L.WZ204	K.1		LWZ207	L.1		PFS326	R.17		PTZ605	R.19	
L.WZ204	M.1		LWZ207	N.1		PFS410	R.2		PTZ803	R.22	
L.WZ204	M.3		LWZ207	R.2					PTZ805	R.19	
L.WZ204	M.4		LWZ208	K.1		PJZ603	R.16		PTZ810	N.3	
L.WZ204	M.5		LWZ208	K.5					PTZ1003	R.30	
L.WZ204	N.3		LWZ208	L.1		PMP0306	R.7		PTZ1004	R.2	
L.WZ204	N.8		LWZ208	R.16		PMP0412	R.12		PTZ1004	R.4	
L.WZ204	N.9		LWZ210	J.1							
L.WZ204	N.11		LWZ212	F.2							
L.WZ204	O.2		LWZ212	B.1							
L.WZ204	R.1		LWZ302								

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number
PWN106 PWN106	A.6 A.10		PWZ203 PWZ203	R.12 R.13		RTZ804 RTZ1004	R.13 M.3				
PWP104 PWP203	R.10 R.10		PWZ203 PWZ203	R.19 R.22		TFP116	R.14				
PWZ102 PWZ102	B.1 B.18		PWZ204 PWZ204	R.27 A.17		TFS100	R.14				
PWZ103 PWZ103	C.2 N.3		PWZ204 PWZ204	B.2 M.4		UHN805 UHN400	J.1 G.1				
PWZ103 PWZ103	N.10 N.10		PWZ204 PWZ204	R.2 R.5		UHN400 UHN445	K.2 K.3				
PWZ103 PWZ103	R.17 R.18		PWZ205 PWZ205	M.4 M.4		WKN804 WKN304	A.3 F.4				
PWZ103 PWZ103	D.1 D.2		PWZ205 PWZ205	R.1 R.9		WKN404 WKN404	F.4 N.1				
PWZ104 PWZ104	A.12 A.16		PWZ205 PWZ205	R.17 H.4		ZCS0505 ZCS0505	A.10 A.15				
PWZ104 PWZ104	C.2 D.1		PWZ206 PWZ206	M.1 M.1		ZCS0507 ZCS0610	J.1 R.10				
PWZ104 PWZ104	D.2 M.1		PWZ207 PWZ208	R.2 R.16							
PWZ104 PWZ104	M.4 M.5		RFN104 RFN104	R.28 R.5		2715	D.2				
PWZ104 PWZ104	N.3 N.8		RFN204 RFN204	R.29		2718	D.2				
PWZ104 PWZ104	R.2 R.6		RFN206 RFN210	R.29 R.30		45223	B.2				
PWZ104 PWZ104	R.7 R.7		RFN210 RFN224	R.29 N.10		83875	O.2				
PWZ104 PWZ104	R.9 R.16		RFN303 RFN303	N.10		84188	K.1				
PWZ104 PWZ104	R.17 R.17		RFN503 RFN503	N.10		126900	K.2				
PWZ104 PWZ104	R.27 R.27		RFR103 RFR207	R.29		126902	K.1				
PWZ105 PWZ105	A.6 A.7		RFR216 RFR503	R.30 R.28		126903	K.1				
PWZ105 PWZ105	A.14 A.15		RFR103 RFR207	A.17 R.29		126908	K.1				
PWZ105 PWZ105	A.15 A.16		RFR216 RFR503	R.30 R.28		126914	K.2				
PWZ105 PWZ105	C.1 E.2		RFR503 RFR503	R.18		126915	K.2				
PWZ105 PWZ105	F.1 J.2		RTP0212 RMP0214	R.7 N.8		127464	D.2				
PWZ105 PWZ105	M.1 M.1		RMP0306 RMP0310	C.2 R.18		127657	K.1				
PWZ105 PWZ105	R.4 R.17		RMP0314 RMP0316	N.7 N.7		128978	R.6				
PWZ107 PWZ107	R.17 R.20		RMZ0808 RMZ0808	R.7 R.8		130154	E.2				
PWZ107 PWZ107	R.1 M.4		RTP0205 RTP0205	R.18		130154	M.1				
PWZ108 PWZ108	K.1 A.14		RTP603 RTP604	R.14		135933	G.1				
PWZ110 PWZ110	A.14 A.18		RTP604 RTP605	R.14		135794	E.2				
PWZ202 PWZ202	PWZ203 PWZ203		RTP605 RTP804	R.20 R.21		135794	M.1				
PWZ203 PWZ203	R.1 R.7		RTP804 RTP804	R.19 F.5		135795	E.2				
PWZ203 PWZ203	R.10		RTP804 RTP804	R.17		135795	M.1				
						135525	N.9				
						300398	R.27				
						500823	K.2				

THE MGB

PART NUMBER INDEX

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Page	Amdt. Number
PWZ105	A.16		RFR503	R.28		126908	K.1			
PWZ105	C.1		RJPS05	R.18		126914	K.2			
PWZ105	E.2		RMP0212	R.7		126915	K.2			
PWZ105	F.1		RMP0214	N.8		127464	D.2			
PWZ105	F.6		RMP0214	C.2		127657	K.1			
PWZ105	J.2		RMP0306	R.18		130154	E.2			
PWZ105	M.1		RMP0310	N.7		130154	M.1			
PWZ105	R.4		RMP0314	N.7		185393	G.1			
PWZ105	R.17		RMP0316	N.7		185794	E.2			
PWZ105	R.29		RMZ0308	R.7		185794	M.1			
PWZ107	K.5		RMZ0308	R.8		185795	E.2			
PWZ107	L.1		RTP003	R.14		185925	M.1			
PWZ108	M.4		RTP104	R.14		185925	N.9			
PWZ110	K.1		RTP104	R.20		300398	R.27			
PWZ202	A.14		RTP105	R.21		500823	K.2			
PWZ203	R.18		RTP105	R.19						
PWZ203	A.17		RTP104	R.5						
PWZ203	N.3		RTP104	R.11						
PWZ203	R.1		RTP104	R.11						
PWZ203	R.7		RTP104	R.17						
PWZ203	R.10		RTP2804	R.12						
PWZ203	R.13		RTP2804	R.13						
PWZ203	R.19		RTZ804	R.18						
PWZ203	R.22		RTZ1004	M.3						
PWZ203	R.27		TFP116	R.14						
PWZ204	A.17		TFS100	R.14						
PWZ204	B.2		UHN305	J.1						
PWZ204	M.4		UHN400	G.1						
PWZ204	N.9		UHN400	R.2						
PWZ204	R.1		UHN445	K.3						
PWZ204	R.2		WKN304	A.3						
PWZ204	R.5		WKN304	F.4						
PWZ204	R.9		WKN404	F.8						
PWZ204	A.14		WKN404	N.1						
PWZ205	M.4		WKN505	A.3						
PWZ205	H.1		ZCS0505	A.10						
PWZ205	R.9		ZCS0505	A.15						
PWZ205	R.17		ZCS0507	J.1						
PWZ206	H.4		ZCS0508	F.9						
PWZ206	M.1		ZCS0520	R.10						
PWZ207	R.2		ZCS0610							
PWZ208	R.16									
RFN104	R.28									
RFN204	R.5									
RFN204	R.29									
RFN206	N.10									
RFN210	R.30									
RFN224	N.10									
RFN303	N.10									
RFN306	N.10									
RFN503	N.10									
RFR103	A.17									
RFR207	R.29									
RFR216	R.30									






SERVICE PARTS LIST

PLATE A

THE MGB

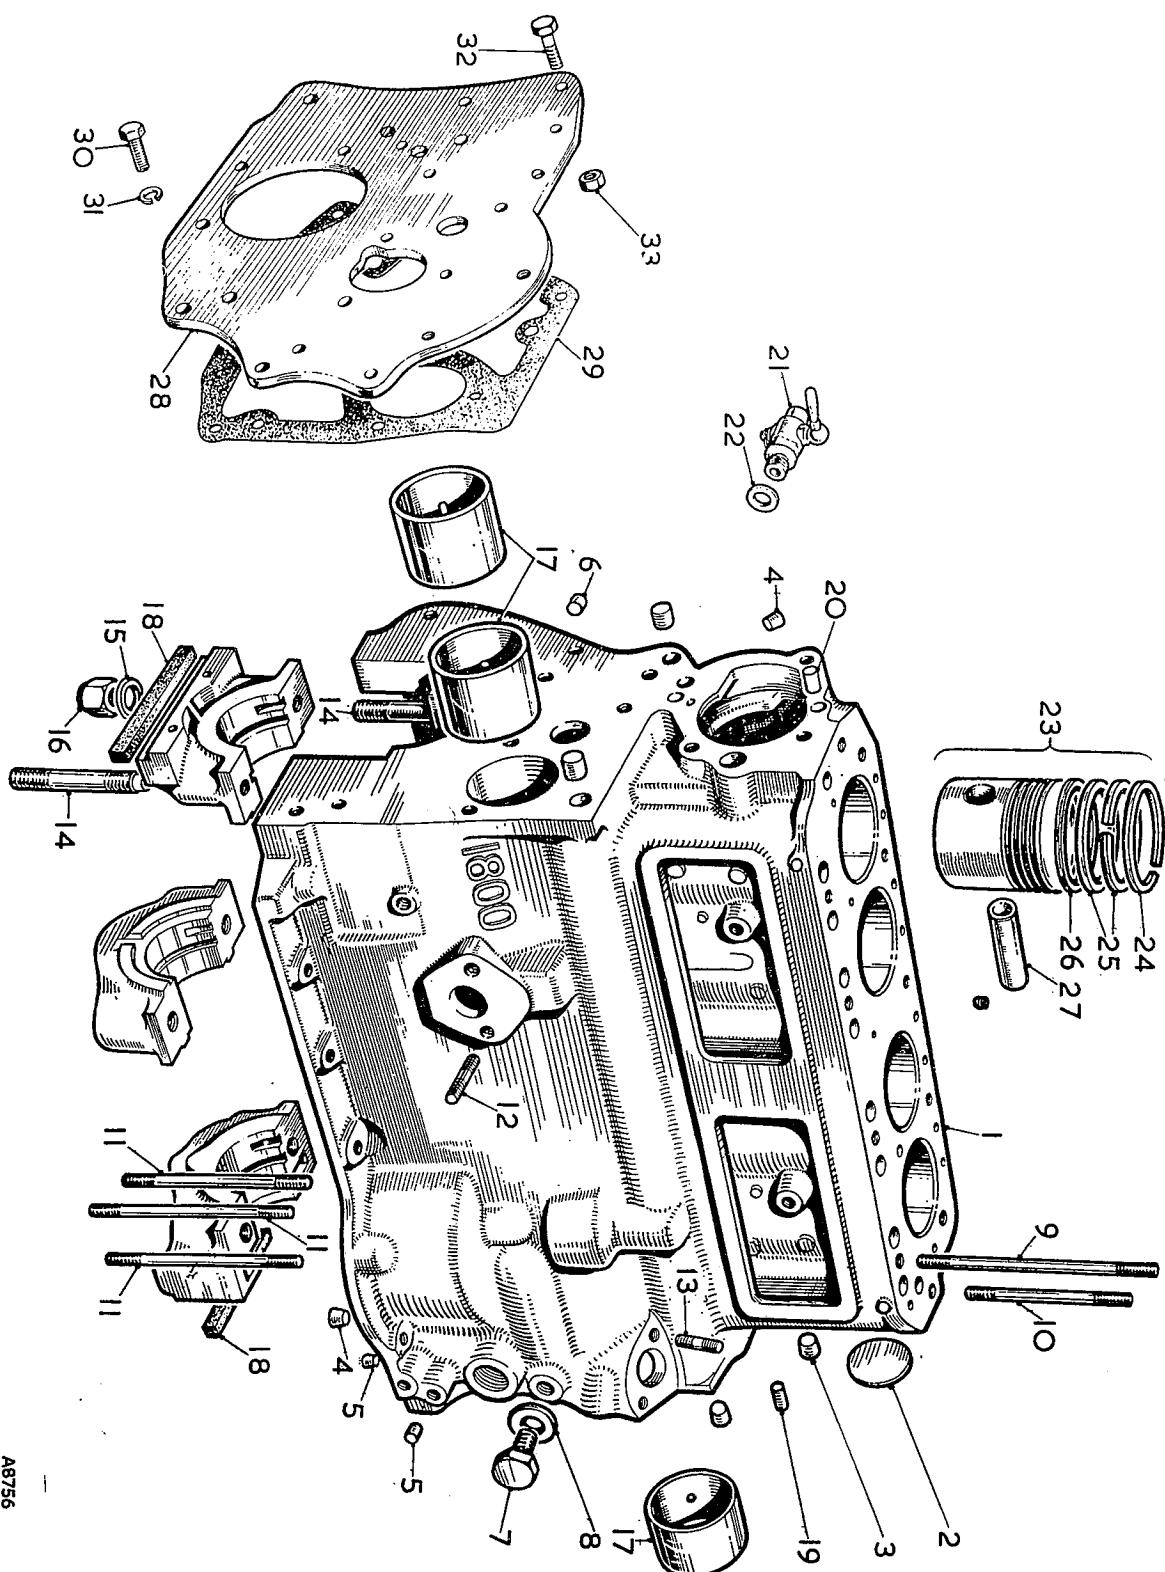

To face page A.1

A8756

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commenacing (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
ENGINE						
1	Stripped engine unit	HC	48G279	1		
2	Stripped engine unit	LC	48G280	1		
3	Short block assembly	HC	48G277	1		
4	Short block assembly	LC	48G278	1		
5	Cylinder block assembly	HC	48G275	1		
6	Cylinder block assembly	LC	48G276	1		
7	Plug—welch—large	2K8169		2	4	
8	Plug—crankcase oil gallery	1H813		3	4	
9	Plug—taper—crankcase oil hole	6K874		4	2	
10	Plug—oil relief valve vent hole	6K899		5	2	
11	Plug—chain tensioner oil feed	11G14		6	1	
12	Plug—oil hole—screwed	2K4938		7	1	
13	Washer—screwed plug	6K638		8	1	
14	Stud—cylinder head—long	51IK245		9	4	
15	Stud—cylinder head—short	51IK246		10	7	
16	Stud—oil pump—short	51IK267		11	3	
17	Stud—crankcase vent pipe clip	53IK257		12	2	
18	Stud—tachometer spindle housing	53IK271		13	2	
19	Stud—main bearing cap	51IK1476		14	6	
20	Cap—main bearing—front	NSP		1		
21	Cap—main bearing—centre	NSP		1		
22	Cap—main bearing—rear	12B307		15	6	
23	Washer—plain—main bearing stud	LNN208		16	6	
24	Nut—main bearing stud	8G2176		17	set	
25	Liner—camshaft bearing	1H353		18	2	
26	Joint—front and rear main bearing cap	1GT52		19	2	
27	Dowel—gearbox mounting plate	2K6124		20	2	
28	Dowel—water pump	3H576		21	1	
29	Tap—drain—cylinder block	2K4954		22	1	
30	Washer—drain tap	2K4975		1		
31	Washer—drain tap					
						Alternatives

SERVICE PARTS LIST

THE MGB


Item No.

DESCRIPTION	MODIFICATIONS			REMARKS
	Commencing (E) 18G/101	Part Number	Illus. No.	
Engine Unit—continued				
Piston assembly—standard				
2 Piston assembly (-010" [-25.4 mm.] O/S)	12H755	23	4	
3 Piston assembly (-020" [-50.8 mm.] O/S)	12H075510		4	
4 Piston assembly (-030" [-76.2 mm.] O/S)	12H075520		4	
5 Piston assembly (-040" [-101.6 mm.] O/S)	12H075530		4	
Piston assembly—standard				
6 Piston assembly (-010" [-25.4 mm.] O/S)	12H760	4	4	
7 Piston assembly (-020" [-50.8 mm.] O/S)	12H076010		4	
8 Piston assembly (-030" [-76.2 mm.] O/S)	12H076020		4	
9 Piston assembly (-040" [-101.6 mm.] O/S)	12H076030		4	
10 Piston assembly (-010" [-25.4 mm.] O/S)	12H076040		4	
11 Ring—compression—top—standard	12H757	24	4	
12 Ring—compression—top (-010" [-25.4 mm.] O/S)	12H075710		4	
13 Ring—compression—top (-020" [-50.8 mm.] O/S)	12H075720		4	
14 Ring—compression—top (-030" [-76.2 mm.] O/S)	12H075730		4	
15 Ring—compression—top (-040" [-101.6 mm.] O/S)	12H075740		4	
16 Ring—compression—2nd and 3rd—standard	12H758	25	8	
17 Ring—compression—2nd and 3rd (-010" [-25.4 mm.] O/S)	12H075810		8	
18 Ring—compression—2nd and 3rd (-020" [-50.8 mm.] O/S)	12H075820		8	
19 Ring—compression—2nd and 3rd (-030" [-76.2 mm.] O/S)	12H075830		8	
20 Ring—compression—2nd and 3rd (-040" [-101.6 mm.] O/S)	12H075840		8	
21 Ring—scraper—standard	12H759	26	4	
22 Ring—scraper (-010" [-25.4 mm.] O/S)	12H075910		4	
23 Ring—scraper (-020" [-50.8 mm.] O/S)	12H075920		4	
24 Ring—scraper (-030" [-76.2 mm.] O/S)	12H075930		4	
25 Ring—scraper (-040" [-101.6 mm.] O/S)	12H075940		4	
26 Pin—gudgeon	12H765	27	4	
ENGINE MOUNTING PLATE				
27 Plate—engine mounting	11G96	28	1	
28 Joint washer—mounting plate	12H769	29	1	
29 Screw—mounting plate to crankcase	HZS0506	30	3	
30 Washer—spring—screw	2K5319	31	3	
31 Bolt—engine mounting bracket to front plate R.H. top	HZS0508	32	1	
32 Nut—bolt	FNZ105	33	1	

SERVICE PARTS LIST

PLATE A

THE MGB

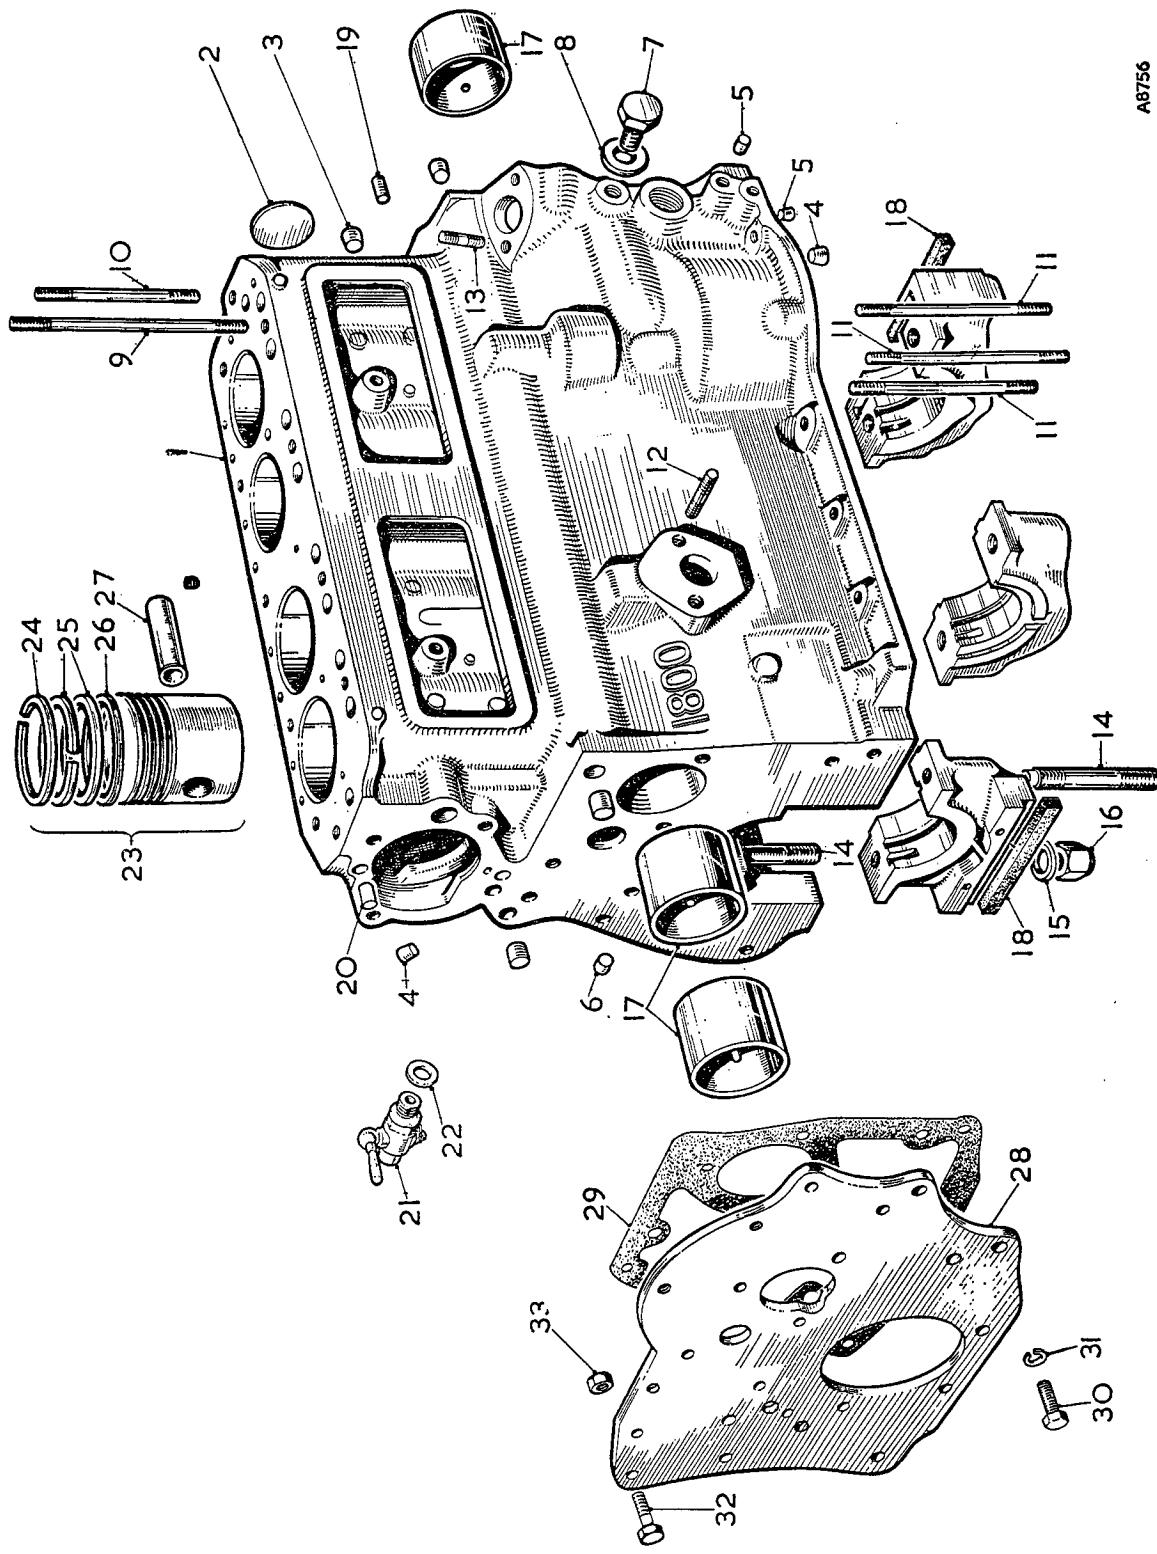


A8756

To face page A.2

SERVICE PARTS LIST

PLATE AA

THE MGB

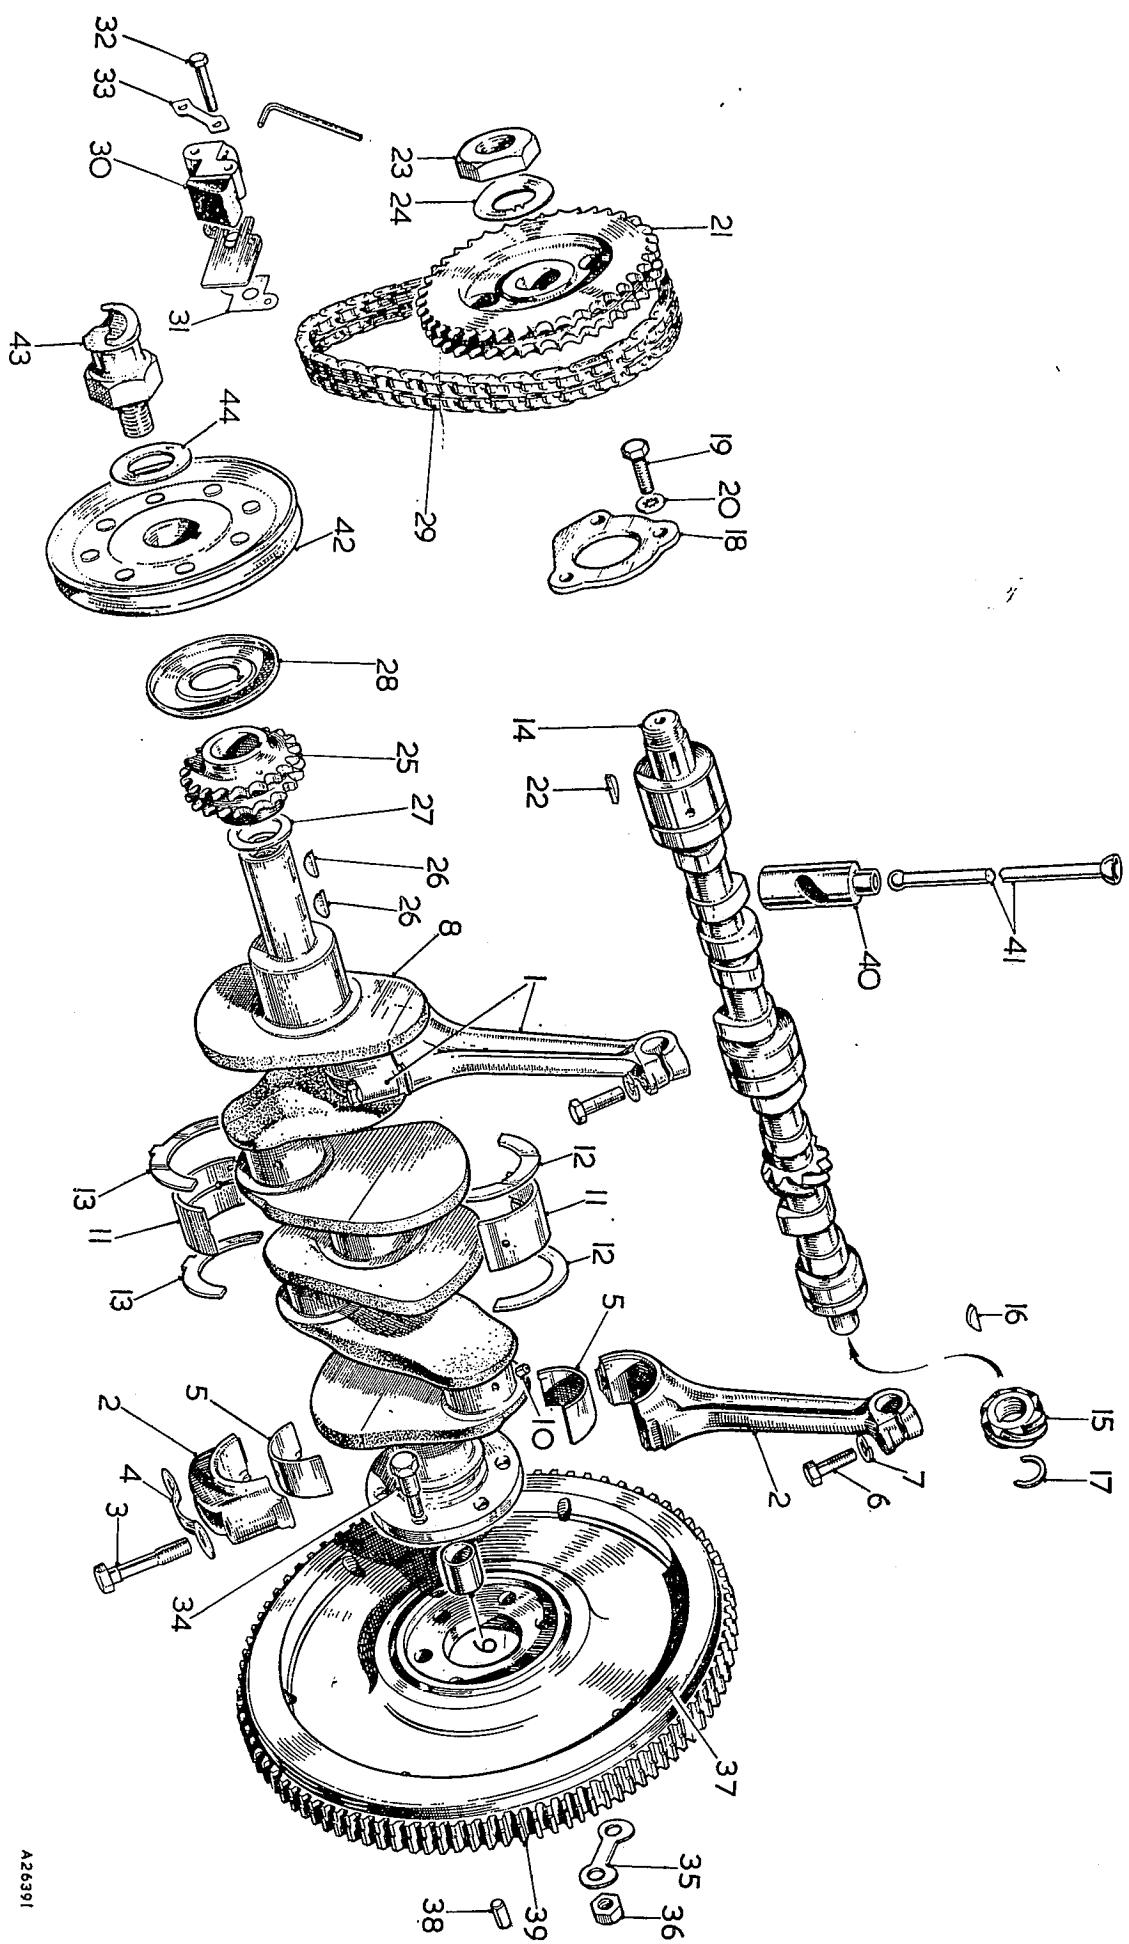

To face page A.3

SERVICE PARTS LIST


THE MGB

DESCRIPTION	Commencing (E) 18G/101		MODIFICATIONS		REMARKS
	Part Number	Illus. No.	Oty. per Veh.	New Part Number	
CONNECTING ROD AND BEARINGS					
1 Connecting rod and cap Nos. 1 and 3 cylinders	12H426	1	2	12H426	
2 Connecting rod and cap Nos. 2 and 4 cylinders	12H424	2	2	12H424	
3 Screw—cap	51K1388	3	8	51K1388	
4 Washer—lock—screw	6K881	4	4	6K881	
5 Bearing—connecting rod—standard	8G2285	5	set	8G2285	
6 Bearing—connecting rod (.010" [.254 mm.] U/S)	8G228510	set	set	8G228510	
7 Bearing—connecting rod (.020" [.508 mm.] U/S)	8G228520	set	set	8G228520	
8 Bearing—connecting rod (.030" [.762 mm.] U/S)	8G228530	set	set	8G228530	
9 Bearing—connecting rod (.040" [1.016 mm.] U/S)	8G228540	set	set	8G228540	
10 Screw—connecting rod clamping	51K1774	6	4	51K1774	
11 Washer—spring—screw	2K5319	7	4	2K5319	
CRANKSHAFT AND CAMSHAFT					
12 Crankshaft	12H753	8	1	12H753	
13 Bush—1st motion shaft	IG765	9	1	IG765	
14 Plug	IG1167	10	4	IG1167	
15 Bearing—main—standard	8C2343	11	set	8C2343	
16 Bearing—main (.010" [.254 mm.] U/S)	8G234310	set	set	8G234310	
17 Bearing—main (.020" [.508 mm.] U/S)	8G234320	set	set	8G234320	
18 Bearing—main (.030" [.762 mm.] U/S)	8G234330	set	set	8G234330	
19 Bearing—main (.040" [1.016 mm.] U/S)	8G234340	set	set	8G234340	
20 Washer—thrust—upper	12B120	12	2	12B120	
21 Washer—thrust—upper (.003" [.076 mm.] O/S)	12B012003	2	2	12B012003	
22 Washer—thrust—lower	12B121	13	2	12B121	
23 Washer—thrust—lower (.003" [.076 mm.] O/S)	12B012100	2	2	12B012100	
24 Camshaft	1H729	14	1	1H729	
25 Camshaft	1H1435	1	1	1H1435	
26 Gear—tachometer driving	1H730	15	1	1H730	
27 Key—tachometer gear	WKN304	16	1	WKN304	
28 Ring—spring—tachometer gear	1H605	17	1	1H605	
29 Plate—camshaft locating	HNS0406	18	1	HNS0406	
30 Screw—locating plate to crankcase	LWN404	19	3	LWN404	
31 Washer—lock—screw	1IG203	20	3	1IG203	
32 Gear—camshaft	WKN505	21	1	WKN505	
33 Key—camshaft gear	6K629	22	1	6K629	
34 Nut—camshaft gear	2AT759	23	1	2AT759	
35 Washer—lock—nut	1A2028	24	1	1A2028	
36 Gear—crankshaft	2H326	25	1	2H326	
37 Key—crankshaft gear and pulley	2K6633	26	2	2K6633	
38 Washer—packing—crankshaft gear	12H775	27	A/R	12H775	
39 Thrower—oil—front—crankshaft		28	1		
40					
41					
42					
43					
44					
45					
46					
47					
48					
49					
50					
51					
52					
53					
54					
55					
56					
57					
58					
59					
60					
61					
62					
63					
64					
65					
66					
67					
68					
69					
70					
71					
72					
73					
74					
75					
76					
77					
78					
79					
80					
81					
82					
83					
84					
85					
86					
87					
88					
89					
90					
91					
92					
93					
94					
95					
96					
97					
98					
99					
100					
101					
102					
103					
104					
105					
106					
107					
108					
109					
110					
111					
112					
113					
114					
115					
116					
117					
118					
119					
120					
121					
122					
123					
124					
125					
126					
127					
128					
129					
130					
131					
132					
133					
134					
135					
136					
137					
138					
139					
140					
141					
142					
143					
144					
145					
146					
147					
148					
149					
150					
151					
152					
153					
154					
155					
156					
157					
158					
159					
160					
161					
162					
163					
164					
165					
166					
167					
168					
169					
170					
171					
172					
173					
174					
175					
176					
177					
178					
179					
180					
181					
182					
183					
184					
185					
186					
187					
188					
189					
190					
191					
192					
193					
194					
195					
196					
197					
198					
199					
200					
201					
202					
203					
204					
205					
206					
207					
208					
209					
210					
211					
212					
213					
214					
215					
216					
217					
218					
219					
220					
221					
222					
223					
224					
225					
226					
227					
228					
229					
230					
231					
232					
233					
234					
235					
236					
237					
238					
239					
240					
241					
242					
243					
244					
245					
246					
247					
248					
249					
250					
251					
252					
253					
254					
255					
256					
257					
258					
259					
260					
261					
262					
263					
264					
265					
266					
267					
268					
269					
270					
271					
272					
273					
274					
275					
276					
277					
278					
279					
280					
281					
282					
283					
284					
285					
286					
287					
288					
289					
290					
291					
292					
293					
294					
295					
296					
2					

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
CRANKSHAFT AND CAMSHAFT—CONTINUED						
1	Chain—timing					
2	Tensioner—chain	2H4905	29	1		
3	Slipper head assembly	17H343	30	1		
4	Joint washer—tensioner	17H31		1		
5	Screw—tensioner to crankcase	AEC339	31	1		
6	Washer—lock—screw	HBN0412	32	2		
7	Bolt—flywheel to crankshaft	AFC340	33	1		
8	Washer—lock—bolt	51K1022	34	6		
9	Nut—bolt	6K26	35	3		
10	FLYWHEEL	FNZ506	36	6		
11	Dowel—clutch to flywheel					
12	Ring gear—starting					
TAPPET AND PUSH-ROD						
13	Tappet	1H713	37	1		
14	Push-rod	1G2984	38	2		
			39	1		
CRANKSHAFT PULLEY						
15	Pulley—crankshaft	1H822	40	8		
16	Nut—starting	1IG241	41	8		
17	Washer—lock—starting nut					

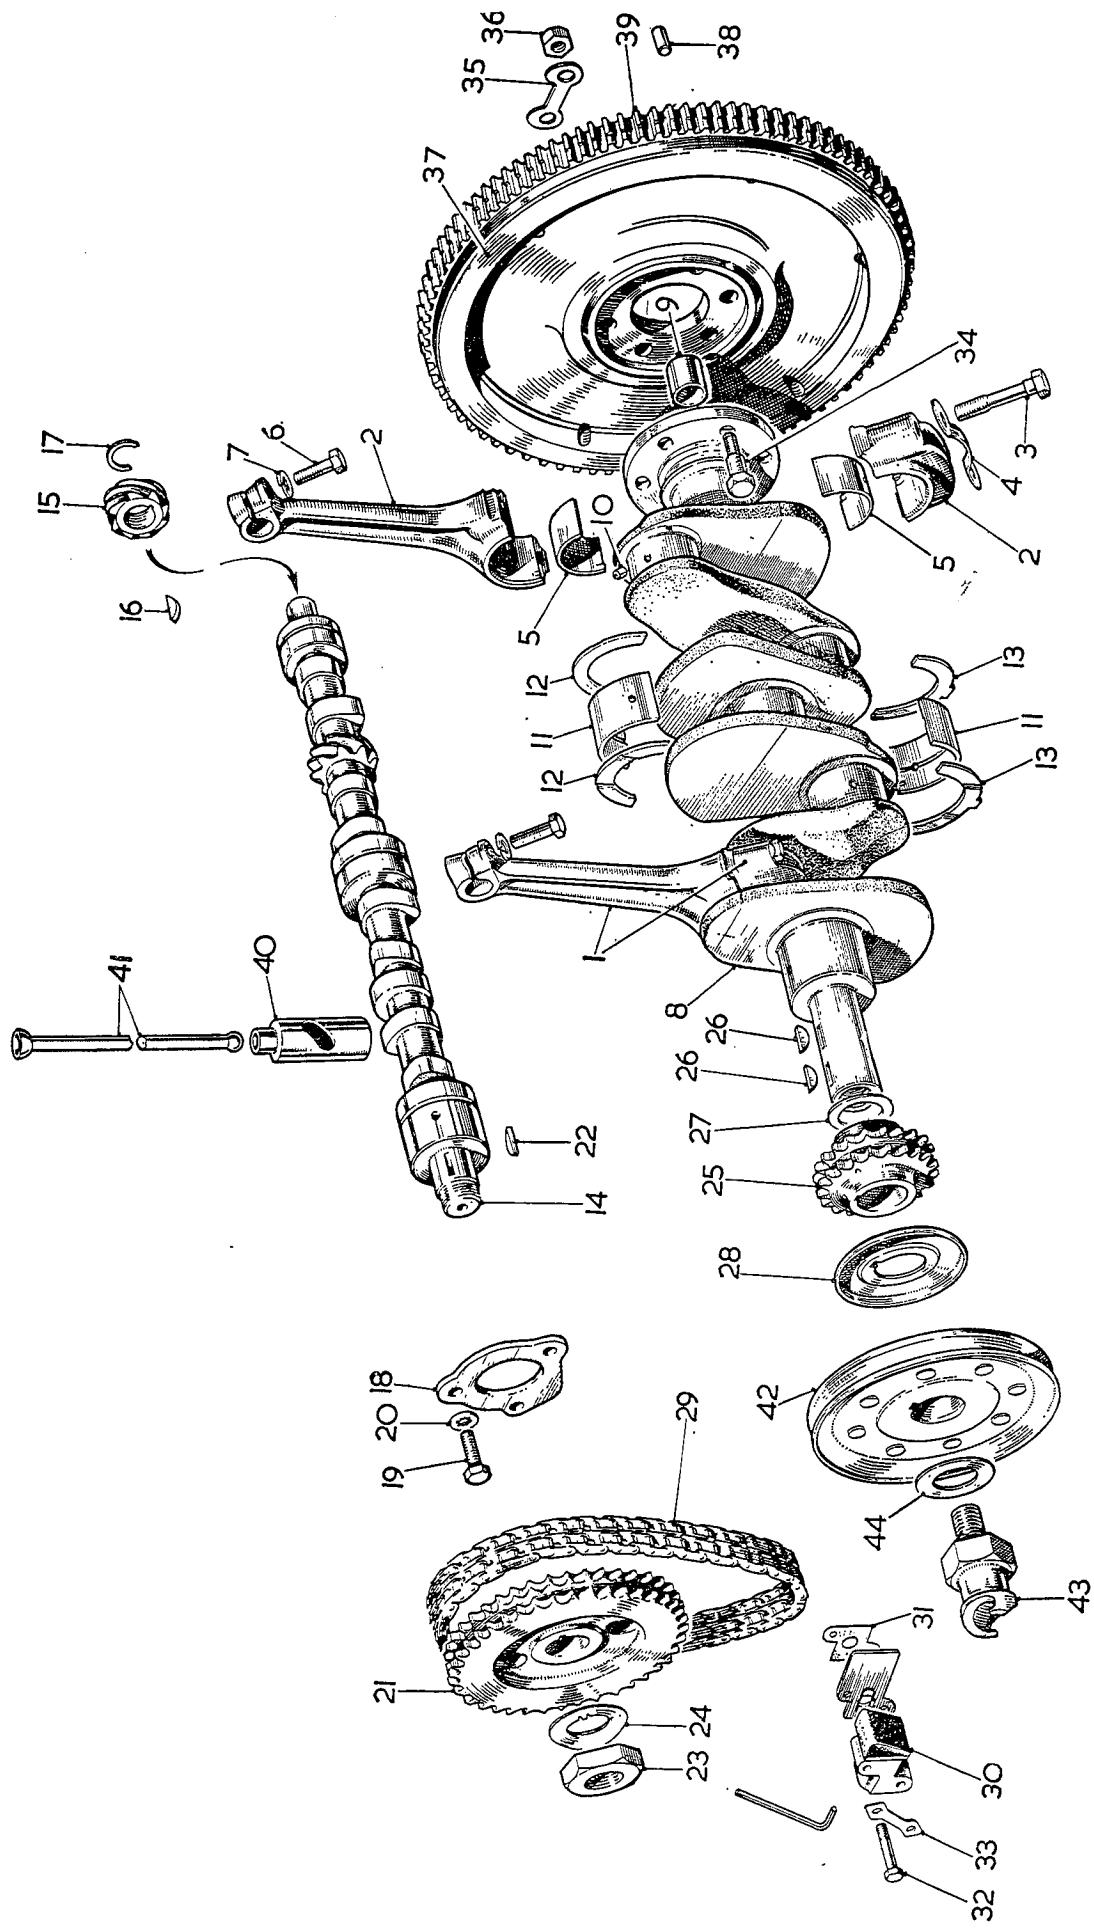


A26391

To face page A.4

SERVICE PARTS LIST

PLATE AB

THE MGB

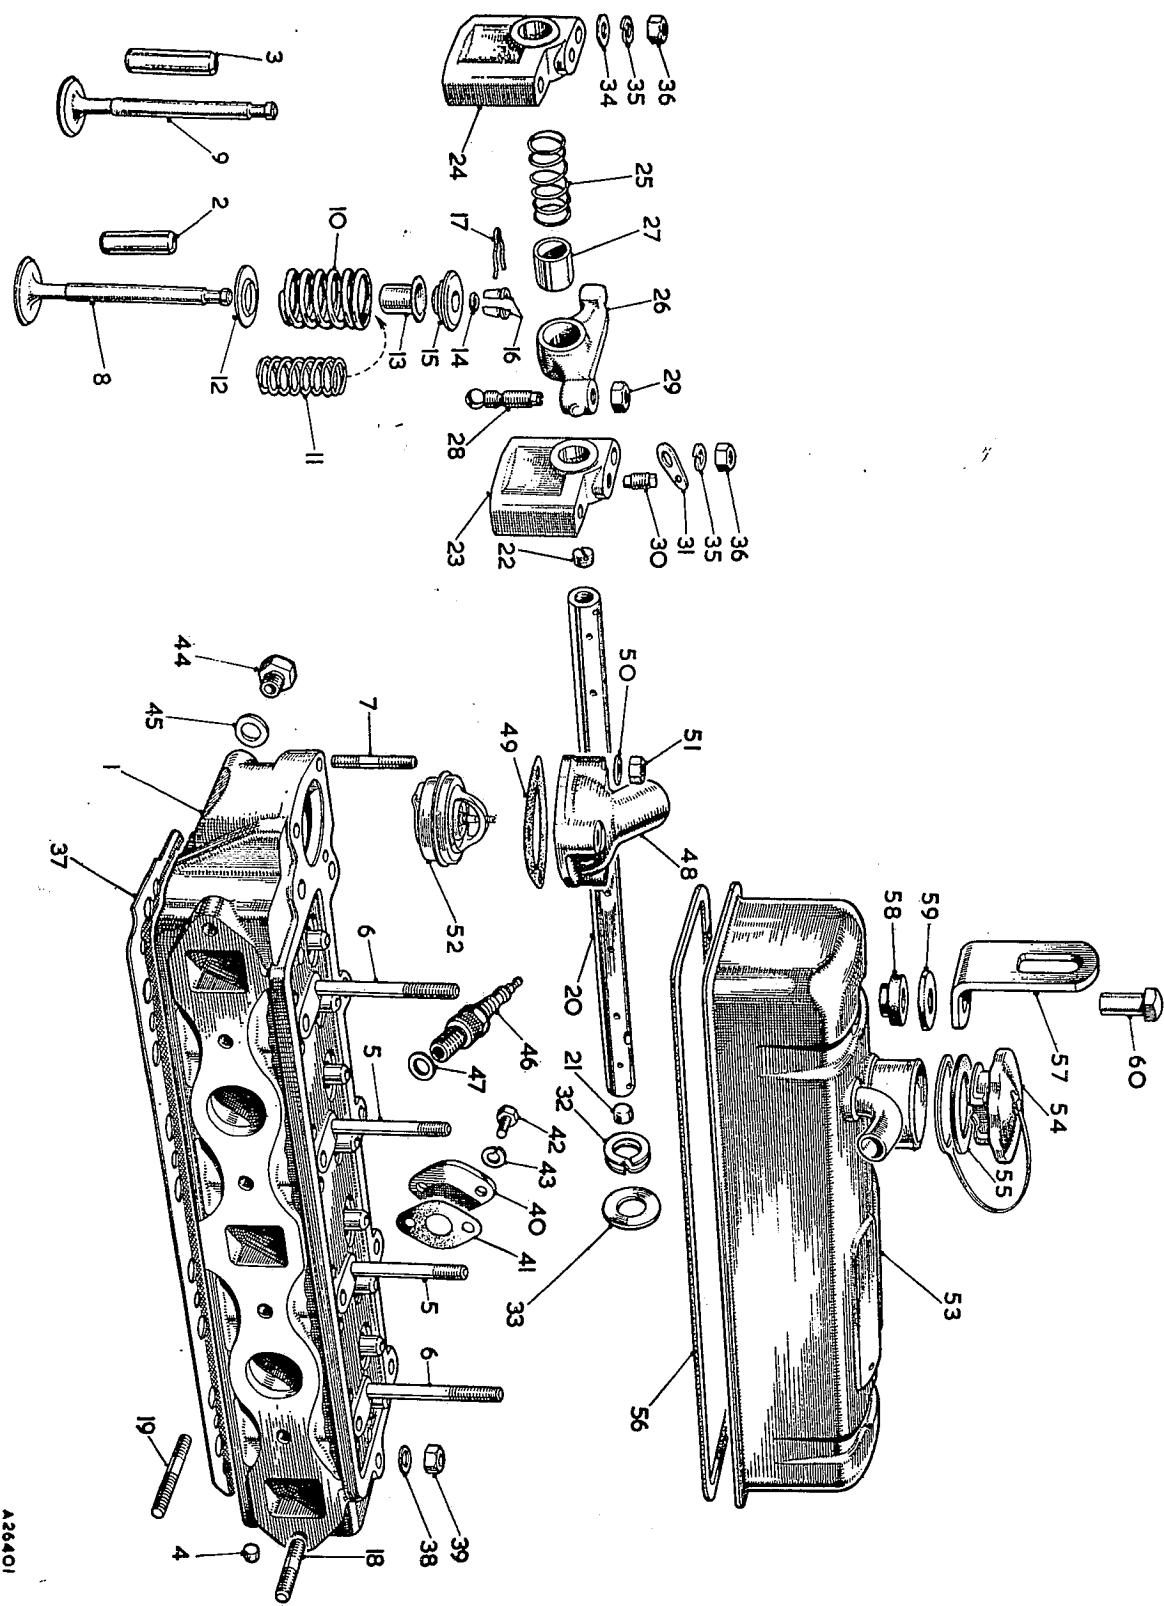

A26401

To face page A.5

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (E) 18G/101	MODIFICATIONS		REMARKS
			Part Number	New Part Number	
CYLINDER HEAD—VALVES—GUIDES—SPRINGS—ROCKERS					
1	Cylinder head assembly—less rocker gear	48G264	1	1	
2	Cylinder head assembly—with guides	48G263	1	1	
3	Guide—inlet valve	12H434	2	4	
4	Guide—exhaust valve	11G193	3	4	
5	Plug—oil hole	61K872	4	1	
6	Stud—short—rocker bracket	51K881	5	2	
7	Stud—long—rocker bracket	51K893	6	2	
8	Stud—water outlet elbow to head	53TK531	7	3	
9	Valve—inlet	12H435	8	4	
10	Valve—exhaust	12H436	9	4	
11	Spring—outer—valve	6K873	10	8	
12	Spring—inner—valve	1H723	11	8	
13	Collar—valve spring	1H1321	12	8	
14	Shroud—valve guide	1H1320	13	8	
15	Ring—valve packing	AEK113	14	8	
16	Cup—valve spring	1H1319	15	8	
17	Cotter—valve (halves)	1K800	16	8 prs	
18	Circlip—valve cotter	1K372	17	8	
19	Stud—exhaust manifold to head	FES2518	18	2	
20	Stud—inlet and exhaust manifold to head	53K490	19	4	
21	Shaft assembly—valve rocker	1G2522	1		
22	Shaft—valve rocker—plugged	11G62	20	1	
23	Plug—plain—valve rocker	6K878	21	1	
24	Plug—screwed—valve rocker	2K4608	22	1	
25	Bracket—tapped—rocker shaft	12H389	23	1	
26	Bracket—plain—rocker shaft	12H390	24	3	
27	Spring—rocker spacing	6K871	25	3	
28	Rocker—valve—bushed	11G45	26	8	
29	Bush—valve rocker	1G2295	27	8	
30	Screw—adjusting—tappet	48G207	28	8	
31	Nut—tappet adjusting screw	51K1178	29	8	
32	Screw—locating—rocker shaft	2A258	30	1	
33	Plate—lock—locating screw	2A259	31	1	
34	Washer—double coil—rocker shaft	1A2139	32	2	
35	Washer—rocker shaft	2K6804	33	2	

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	Commencing (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Oty. per Veh.	New Part Number	
Cylinder Head—Valves—Guides—Springs—Rockers—continued						
1	Washer—plain—rocker shaft stud	PWN105	34	.3		
2	Washer—spring—rocker shaft stud	2K5319	35	.4		
3	Nut—rocket bracket stud	FNN105	36	.4		
4	Joint washer—cylinder head	12H751	37	1		
5	Washer—cylinder head nut	PWN106	38	11		
6	Nut—cylinder head stud	51K371	39	.11		
7	Plate—blanking—heater outlet elbow	1G1282	40	.1		
8	Joint washer—blanking plate	1G2842	41	.1		
9	Screw—plate to cylinder head	HZS0404	42	.2		
10	Washer—spring—screw	LWN304	43	.2		
11	Plug—thermal transmitter boss	1G3953	44	.1		
12	Washer—plug	1B3664	45	.1		
SPARKING PLUGS						
13	Plug—sparkling	3H2006				
14	Gasket—steel—plug	11G145	.46	.4		
15	Gasket—copper—plug	2K5211	.47	.4		
WATER OUTLET ELBOW—THERMOSTAT						
16	Elbow—outlet—water	12H797	48	1		
17	Joint washer—elbow	12G114	49	1		
18	Washer—plain—stud in cylinder head	PWZ105	50	.3		
19	Nut—stud	FNZ105	51	.3		
20	Thermostat	13H590	52	.1		
VALVE ROCKER COVER—OIL FILLER						
21	Cover—valve rocker	12H596	53	1		
22	Cap and cable—oil filler	12A402	54	1		
23	Washer—oil filter cap	12A408	55	.1		
24	Joint washer—valve rocker cover	1H37	56	.1		
25	Bracket—engine sling	2A329	57	.2		
26	Bush—rubber—cover	2K8568	58	.2		
27	Washer—cup	1A2156	59	.2		
28	Nut—cap—rocker cover	2A150	60	.2		
] Alternatives						


SERVICE PARTS LIST

PLATE AB

THE MGB

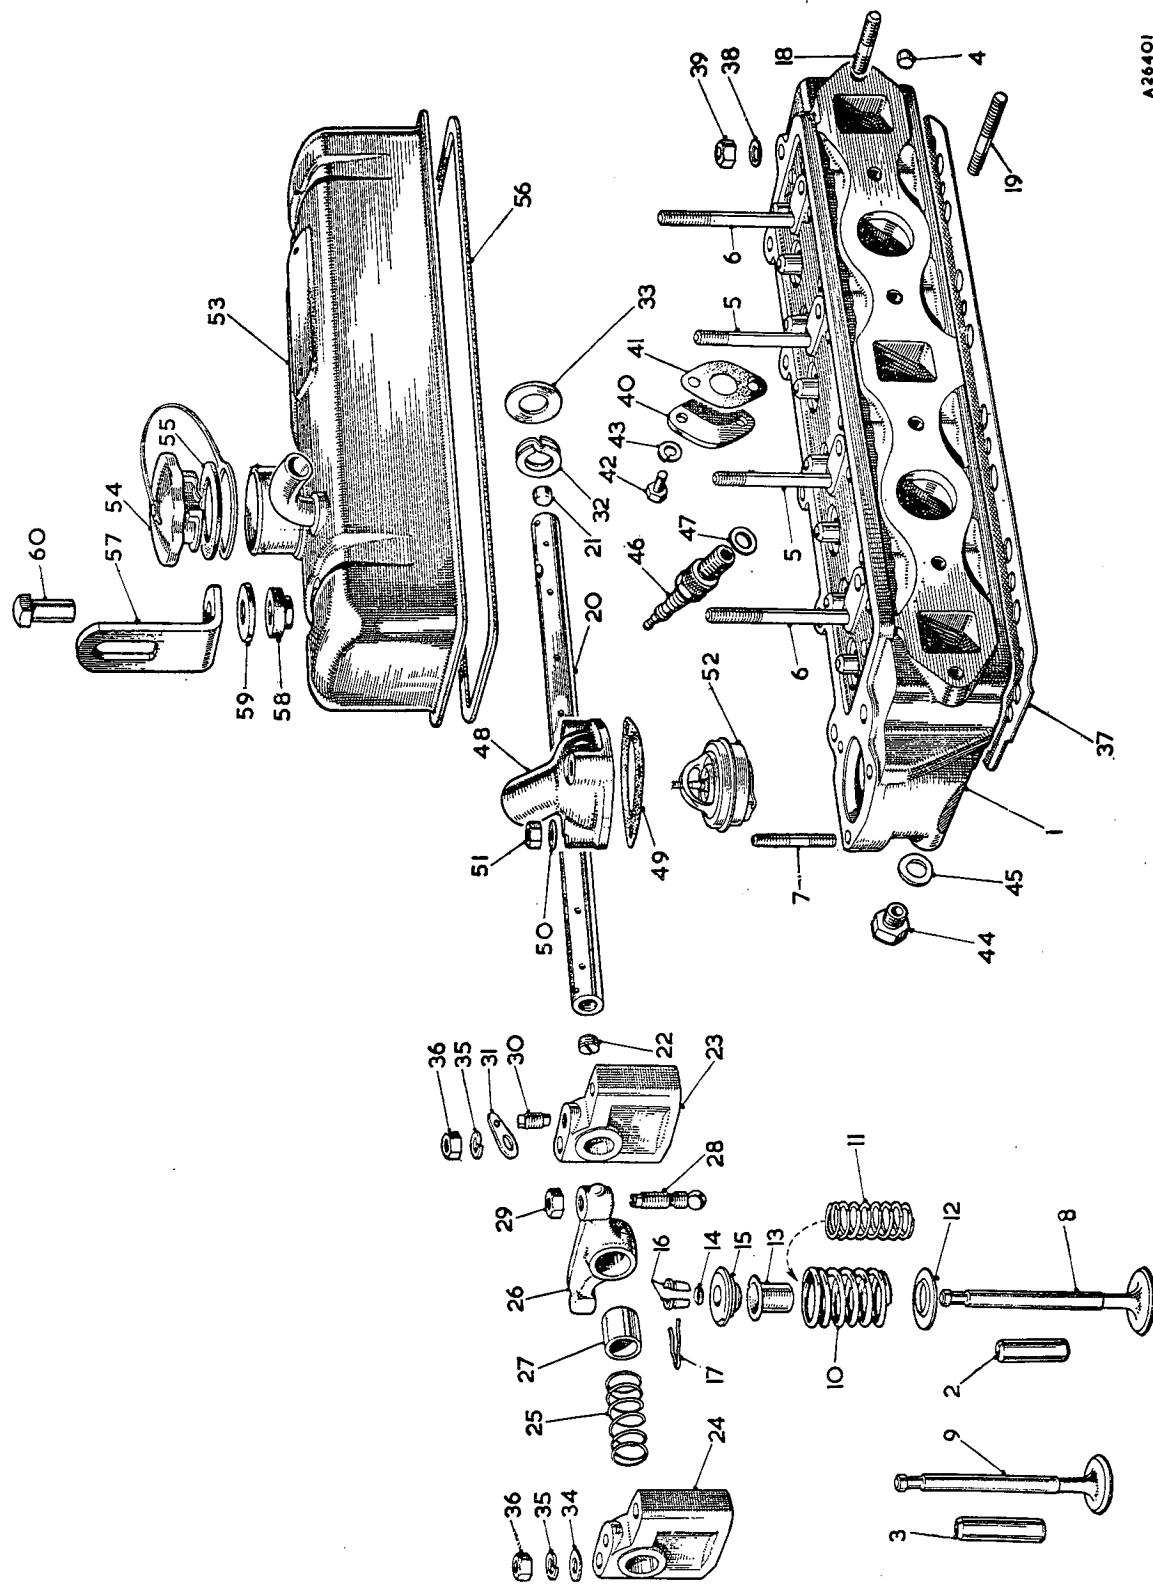

To face page A.6

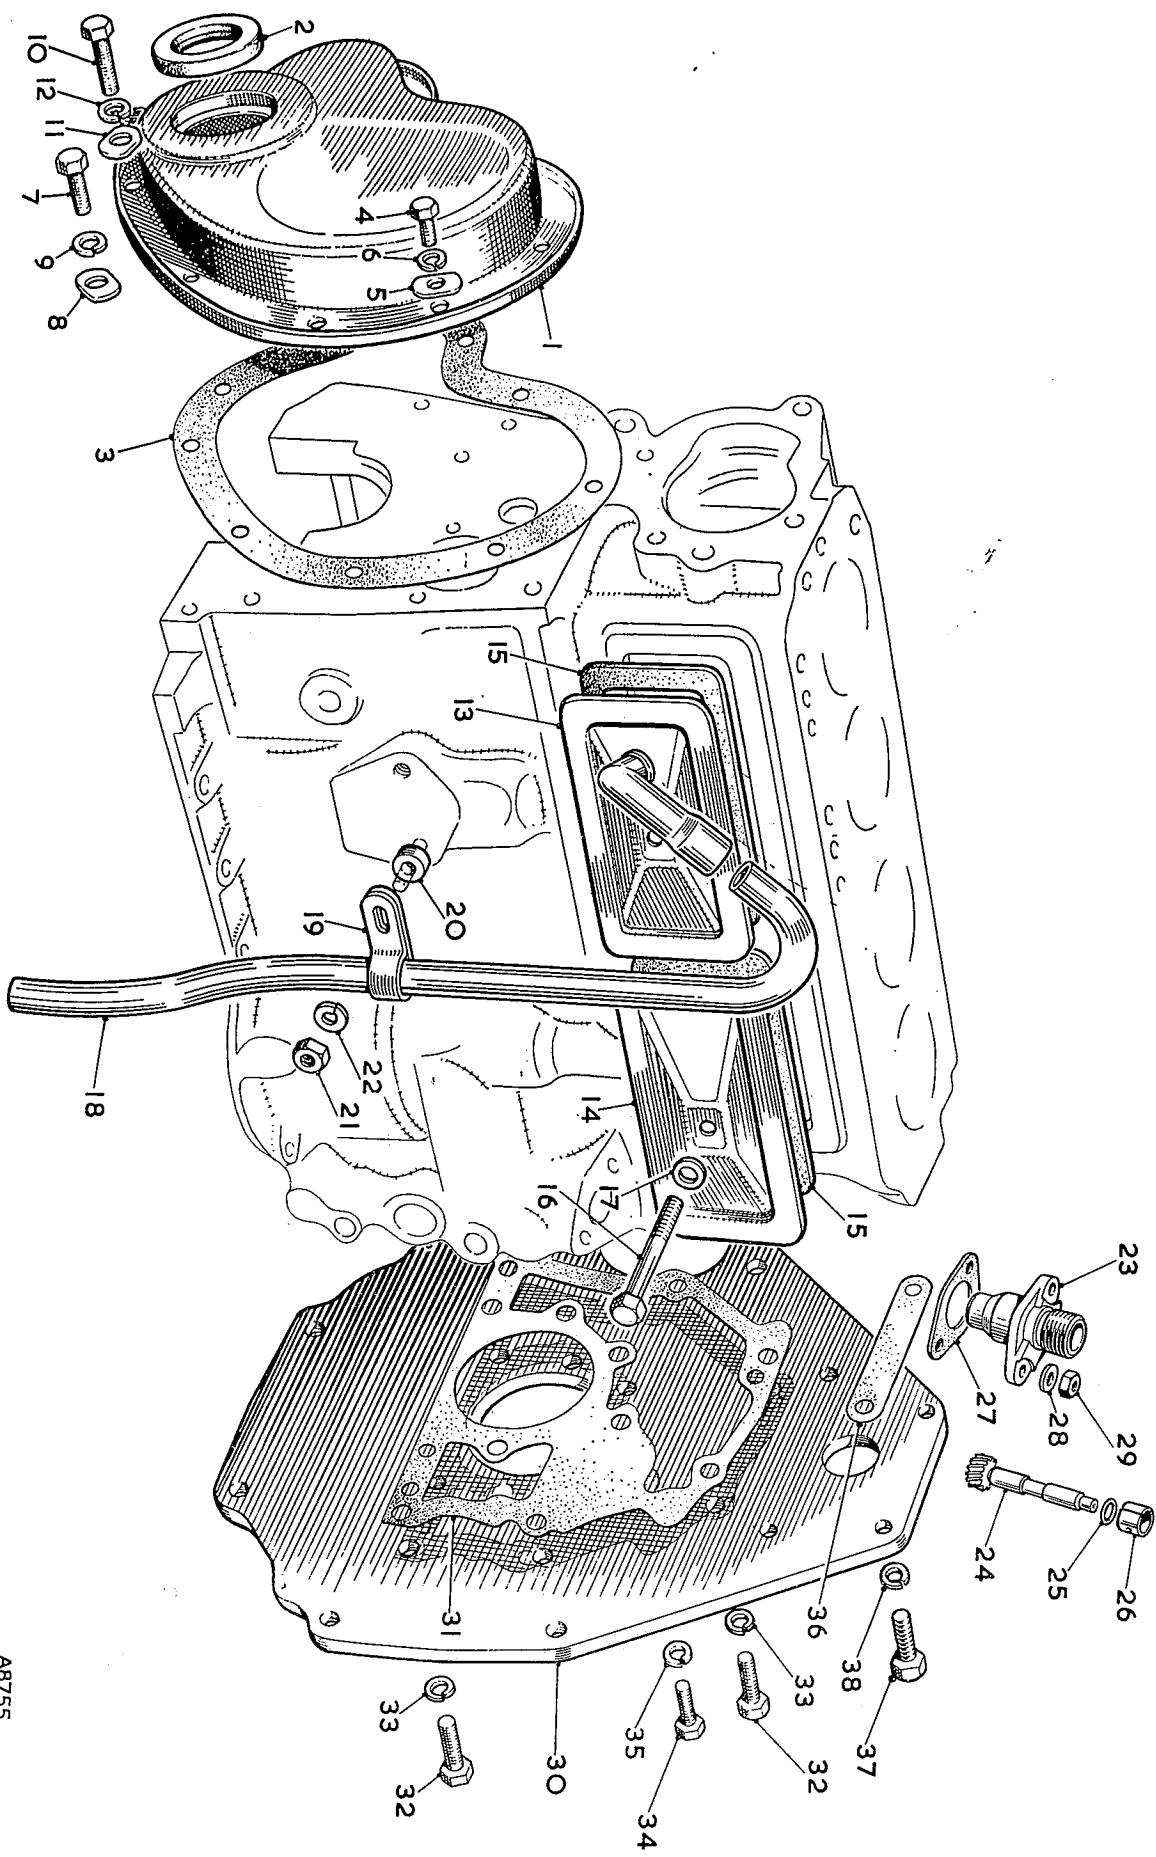

A8755

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (E) 18G/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
CYLINDER FRONT AND SIDE COVERS					
Cover—front with oil catcher and felt		12H71		1	
1 Seal—oil		2A939		2	
2 Joint washer—crankcase front cover		12H770		3	
3 Screw—front cover to front plate		HZS0403		4	
4 Washer—screw		2K5197		5	
5 Washer—spring—screw		LWN204		6	
6 Washer—front cover and plate to crankcase		HZS0506		7	
7 Washer—screw		2K7440		8	
8 Washer—spring—screw		LWN205		9	
9 Washer—front cover to bearing cap		HZS0406		10	
10 Washer—screw		2K5197		11	
11 Washer—spring—screw		LWN204		12	
12 Washer—screw		12H156		13	
Cover—cylinder side—with elbow—front		12H152		14	
Cover—cylinder side—rear		12A24		15	
1 Joint washer—side cover to crankcase		HBZ0513		16	
2 Screw—side cover to crankcase		2K4958		17	
3 Washer—screw		1H871		18	
4 Pipe—crankcase vent		IG2602		19	
5 Clip—crankcase vent pipe		1H840		20	
6 Distance piece—clip to crankcase		FNZ105		21	
7 Nut—stud—pipe to crankcase		LWZ205		22	
8 Washer—spring—nut					
TACHOMETER DRIVE					
1 Housing—tachometer pinion drive		1H691		23	
Pinion—tachometer drive		1H721		24	
2 Oil seal—pinion		IG2398		25	
3 Ring—oil seal retaining		IG2399		26	
4 Joint washer—tachometer pinion housing		1G2401		27	
5 Washer—plain—tachometer housing stud		PWZ105		28	
6 Nut—stud		FNZ105		29	
GEARBOX MOUNTING PLATE					
1 Plate—gearbox mounting		12H752		30	
2 Joint washer—mounting plate to crankcase		12H768		31	
3 Screw—mounting plate to crankcase		53K1779		32	
4 Washer—spring—screw		LWZ306		33	
5 Screw—mounting plate to crankcase		53K1778		34	
6 Washer—spring—screw		LWZ305		35	
7 Joint washer—upper—mounting plate to crankcase		12H762		36	
8 Screw—mounting plate to crankcase		HZS0608		37	
9 Washer—spring—screw		LWZ306		38	

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(E) 18G/101

REMARKS

| | | | |

OIL PUMP—STRAINER—RELEASE VALVE

Part Number	Illus. No.	New Part Number	Change Point	MODIFICATIONS
1H191				
TH1790	1	1		
1H1712	2	1		
HNS0408	3	1		
HNS0414	4	1		
LWN204	5	2		
TH1793	6	2		
TH1792	7	1		
12H184	1			
LG10	8	1		
11G12	9	1		
PWN105	10	3		
2K5319	11	3		
FNN105	12	3		
12H398	13	1		
IHI198	14	1		
HNS0407	15	3		
LWN304	16	3		
161452	17	1		
1H1756	18	1		
2K4982	19	2		
1A2206	20	1		
11G15	21	1		
6K638	22	1		

Alternative to 1H191

OIL RESERVOIR—DIPPER ROD

12H395

Part Number	Illus. No.	New Part Number	Change Point	MODIFICATIONS
2F4249	23	1		
6K638	24	1		
12H597	25	1		
12H818	26	1		
6K639	27	19		
1B1063	28	1		
12H74	29	1		
1B1735	30	1		


] Alternatives

Part Number	Illus. No.	New Part Number	Change Point	MODIFICATIONS
Reservoir—oil				
Plug—drain				
Washer—drain plug				
Joint washer—reservoir to crankcase				
Joint washer—reservoir to crankcase				
Screw assembly—reservoir to crankcase				
Tube—oil dipper rod				
Rod—oil level indicator				
Cover—dust—oil level indicator				

SERVICE PARTS LIST

PLATE AD

THE MGB

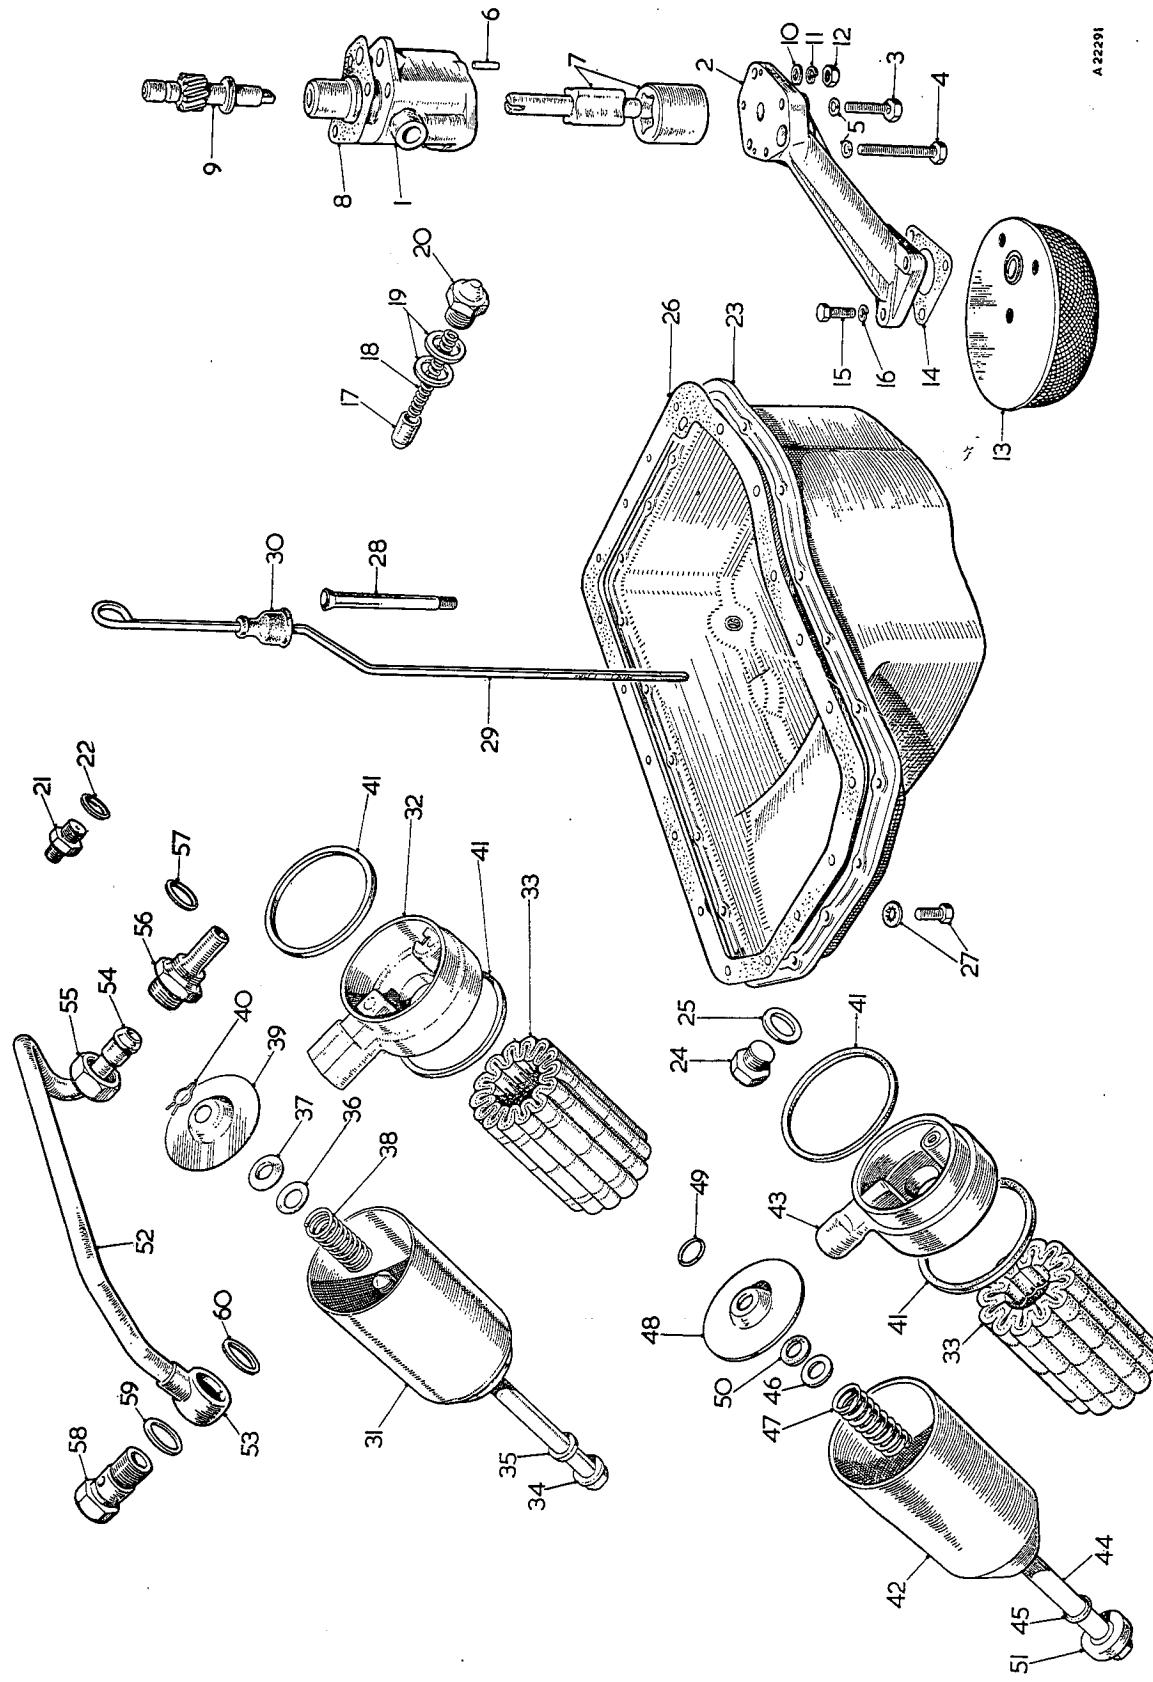


To face page A.8

SERVICE PARTS LIST

PLATE AD

THE MGB

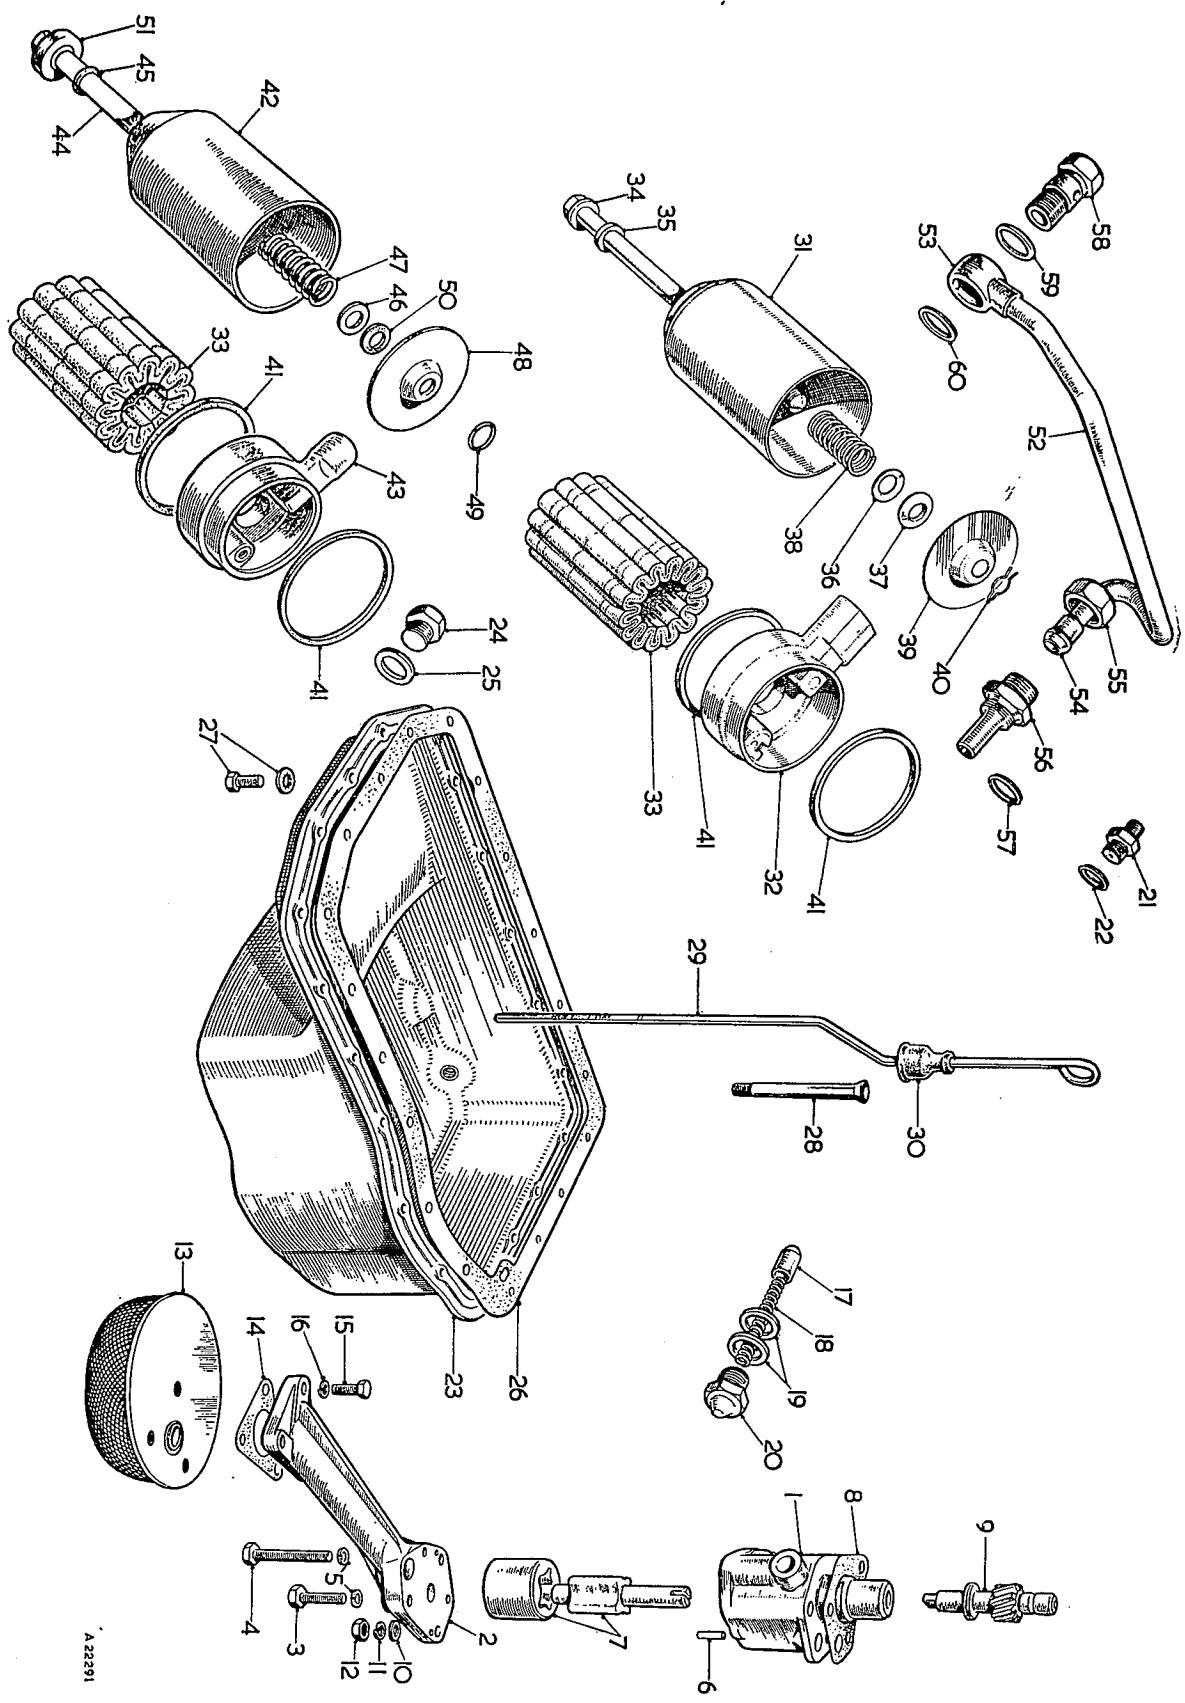

To face page A.9

SERVICE PARTS LIST

THE MGB

Part No.	DESCRIPTION	Commencing (E) 18G/101	MODIFICATIONS		REMARKS
			Part Number	Qty. Illus. No.	
OIL FILTER AND PIPE					
1	Filter assembly—oil (Tecalemit)	1H1067			
2	Container	NSP	1	31	
3	Head assembly	1H1068	1	32	
4	Element	8G683	1	33	
5	Centre bolt	7H1965	1	34	
6	Washer—sealing	7H1948	1	35	
7	Washer—steel	7H1969	1	36	
8	Washer—felt	7H1968	1	37	
9	Spring	7H1764	1	38	
10	Plate—pressure	17H846	1	39	
11	Circlip	7H1952	1	40	
12	Joint ring—body to filter head and crankcase	8G619	2	41	
13	Filter assembly—oil (Purolator)	1H1051		1	
14	Body assembly	NSP	1	42	
15	Head assembly	1H1052	1	43	
16	Element	8G683	1	44	
17	Centre bolt	17H1558	1	44	
18	Ring—sealing	17H1556	1	45	
19	Washer	17H1448	1	46	
20	Spring	17H1449	1	47	
21	Plate—pressure	17H1446	1	48	
22	Circlip	37H996	1	49	
23	Joint ring—body to filter and crankcase	8G619	2	41	
24	Seal	17H1447	1	50	
25	Collar—centre bolt	17H1559	1	51	
26	Pipe assembly—filter to crankcase	1H1056		52	
27	Banjo union	1K2141	1	53	
28	Nipple—pipe	2K5163	1	54	
29	Nut—nipple	2K5164	1	55	
30	Adaptor—full-flow filter connection	1H922	1	56	
31	Joint washer—adaptor	6K501	1	57	
32	Screw—banjo union	1K2142	1	58	
33	Washer—outer—screw	1H898	1	59	
34	Washer—inner—screw	6K501	1	60	

Alternative to 1H1051

Alternative to 1H1067

Not required when oil cooler is fitted

Not required when oil cooler is fitted

N.

SERVICE PARTS LIST

THE MGB


Item No.	DESCRIPTION	COMMENCING (E) 18G/101			MODIFICATIONS	REMARKS
		Part Number	Illus. No.	Qty. per Val.		
WATER PUMP AND PULLEY						
1	Pump assembly—water (with hub less pulley)	12H799	1	1		
2	Body—water pump	NSP		1		
3	Vane—water pump	12B178	2	1		
4	Bearing assembly complete with spindle	1H1153	3	1		
5	Wire—bearing locating	2A778	4	1		
6	Screw—lubricating point	58K1433	5	1		
7	Washer—fibre—screw	2K4974	6	1		
8	Hub—pulley	1H1154	7	1		
9	Seal—water pump	18H591	8	1		
10	Pulley—fan and water pump	12E174	9	1		
11	Joint washer—pump to crankcase	12H814	10	1		
12	Washer—spring—screw	2K5819	11	4		
13	Screw—long—water pump to crankcase	HBZ0514	12	2		
14	Screw—short—water pump to crankcase	HZS0510	13	2		
DYNAMO AND DISTRIBUTOR MOUNTING						
15	Bracket—rear—dynamo	2A758	14	1		
16	Washer—spring—screw	2K5819	15	2		
17	Screw—dynamo bracket to crankcase	HZS0506	16	2		
18	Pillar—dynamo adjusting link	2A128	17	1		
19	Washer—spring—pillar	LWN506	18	1		
20	Nut—dynamo pillar	FNZ506	19	1		
21	Housing—distributor	1G2285	20	1		
22	Screw—housing to crankcase	58K1206	21	1		
23	Spindle—distributor driving	2A139	22	1		
24	Spindle—distributor driving	2A847	23	1		
25	Pulley—dynamo	12H71				
26	Fan—dynamo	1TD11	24	1		
27	Link—dynamo	12H67	25	1		
28	Link—dynamo adjusting link to pillar	PWN106	26	1		
29	Washer—adjusting link to pillar	LWZ206	27	1		
30	Nut—adjusting link to pillar	LNZ206	28	1		
31	Screw—adjusting link to pillar	ZCS505	29	1		
32	Washer—spring—screw	2K5819	30	1		
33	Bolt—dynamo to mounting bracket	HZS0509	31	1		
34	Washer—spring—bolt	2K5819	32	1		
35	Nut—bolt	LNZ205	33	1		
36	Bolt—dynamo to water pump body	HBZ0513	34	1		
37	Washer—spring—bolt	2K5819	35	1		
38	Nut—bolt	LNZ205	36	1		

] Alternatives

SERVICE PARTS LIST

PLATE AE

THE MGB

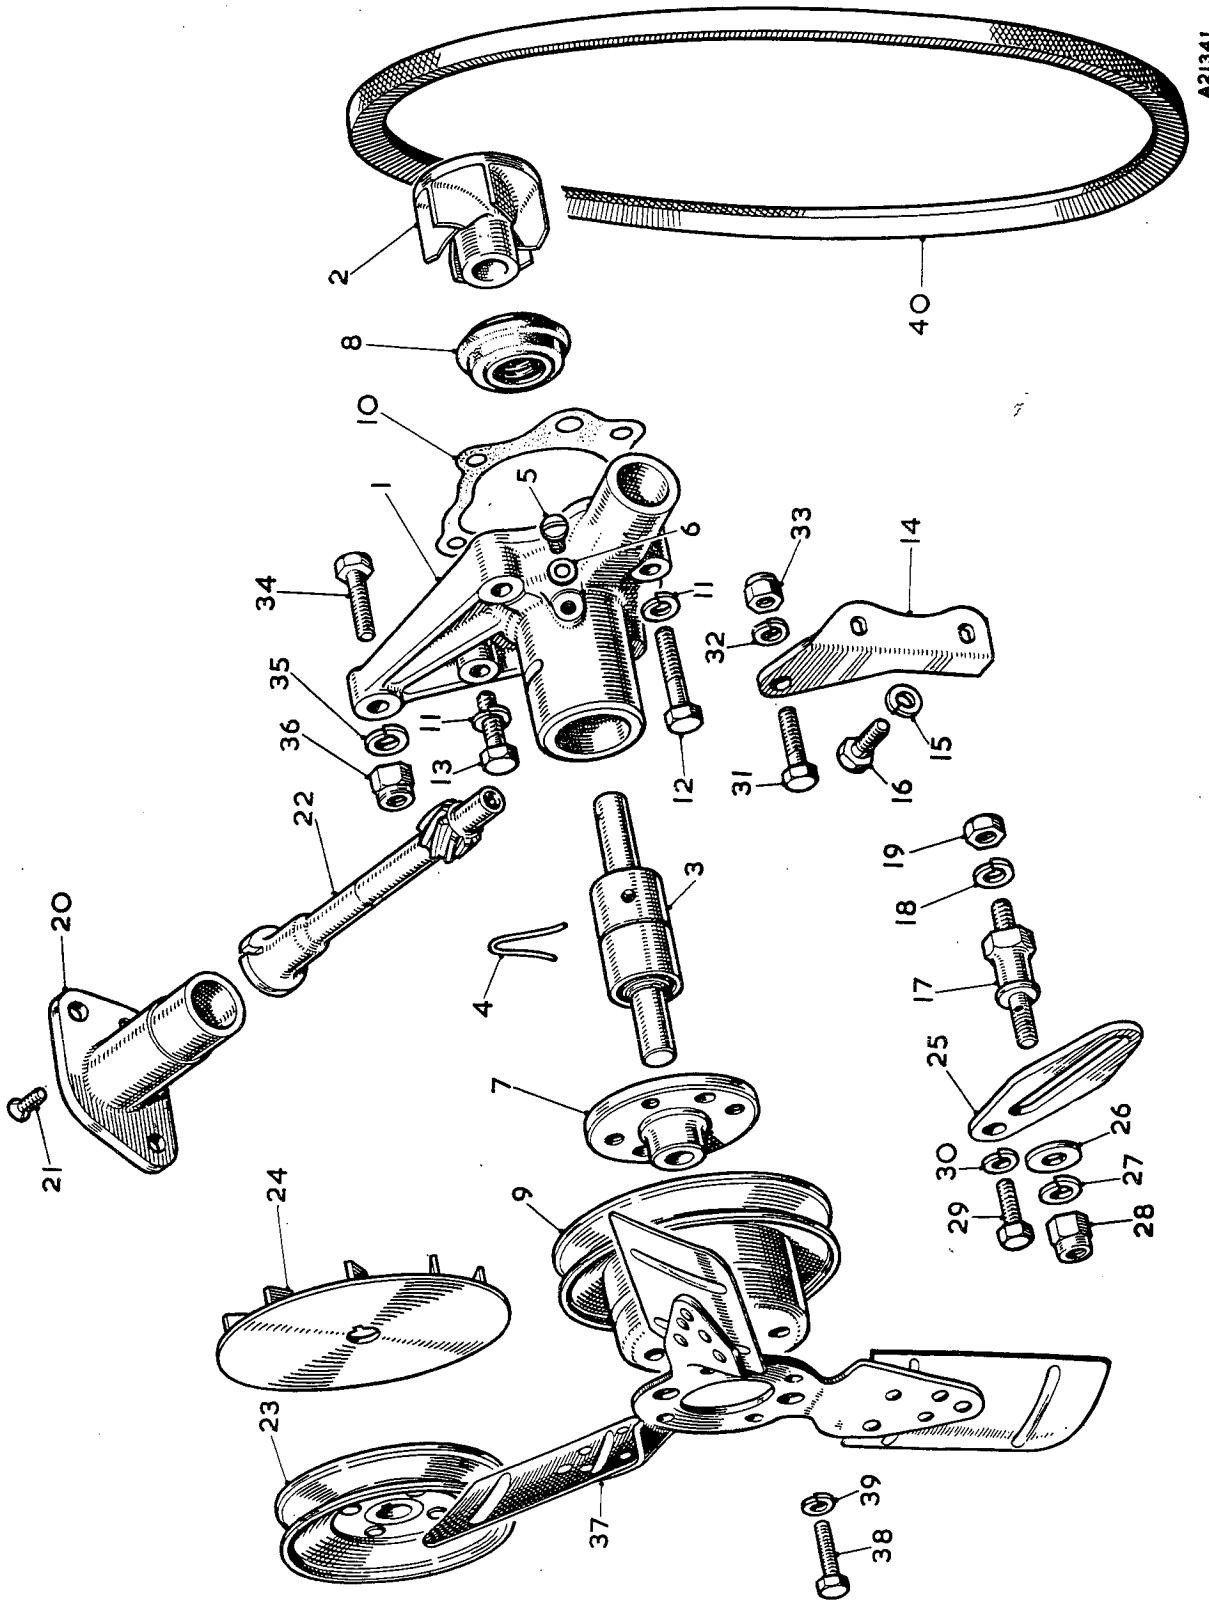


A21341

To face page A.10

SERVICE PARTS LIST

PLATE AE

THE MGB

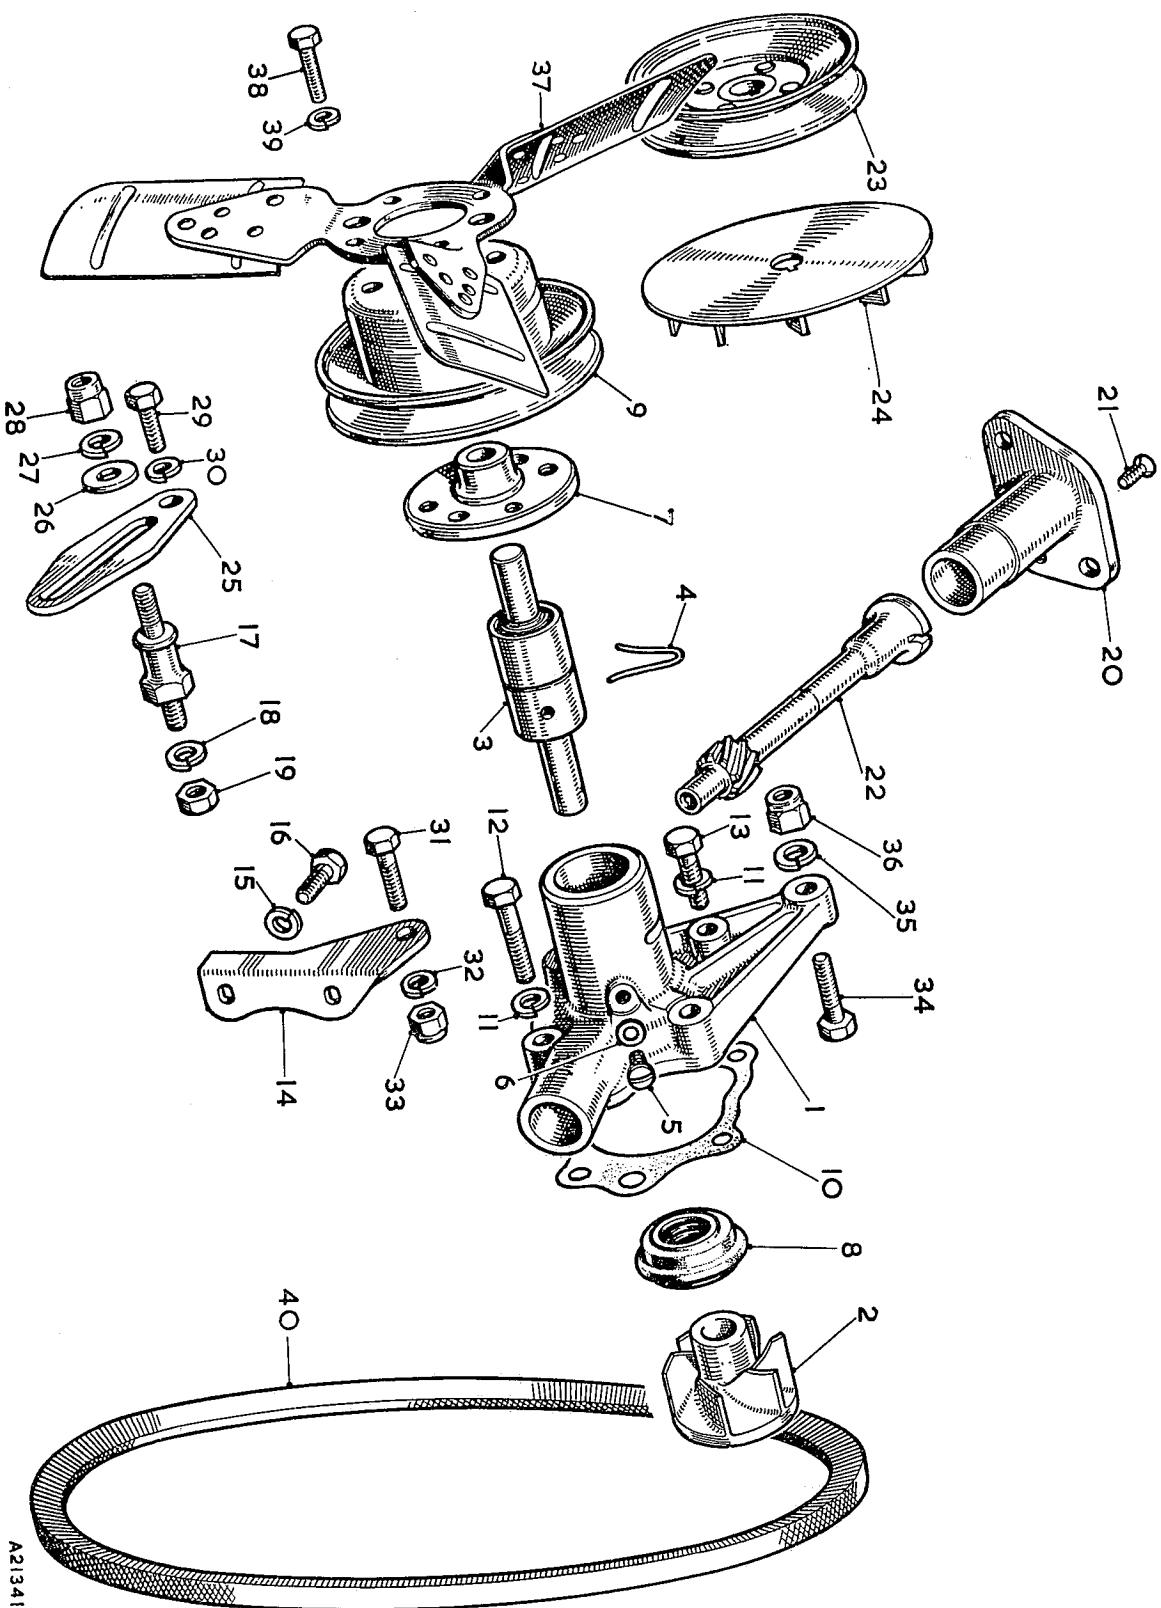

To face page A.11

A21341

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
1	FAN AND FAN BELT					
1	Fan—water pump—(3-bladed)	12H436	37	1		
2	Screw—fan to pulley	HZS0406	38	4		
3	Washer—spring—screw	LWN304	39	4		
4	Belt—fan	1H1001	40	1		
5	CYLINDER LINER	12H888	41			Service purposes only
	Liner—cylinder					

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3101

Part
Number

Qty.
Per
Veh.

MODIFICATIONS
New
Part
Number

REMARKS


OIL COOLER

Cooler—oil	ARH181	1	1	
Screw—cooler to front apron	HZS0405	2	4	
Washer—plain—screw	PWZ104	3	4	
Washer—spring—screw	LWZ204	4	4	
Pipe—flexible	AHH6715	5	2	
Grommet	AHH6551	6	2	
Clip—flexible pipe	AHH6863	7	1	
Strap—support	AHH6864	8	1	
Screw—clip to support strap	PMZ0808	9	1	
Washer—spring	LWZ203	10	1	
Nut	FNZ103	11	1	
Clip—strap (rubber)	AHH6865	12	2	
Plate—clamp—strap clip	AHH6866	13	4	
Screw	PMZ0314	14	2	
Washer—spring	LWZ203	15	2	
Nut	FNZ103	16	2	

SERVICE PARTS LIST


PLATE AF

THE MGB

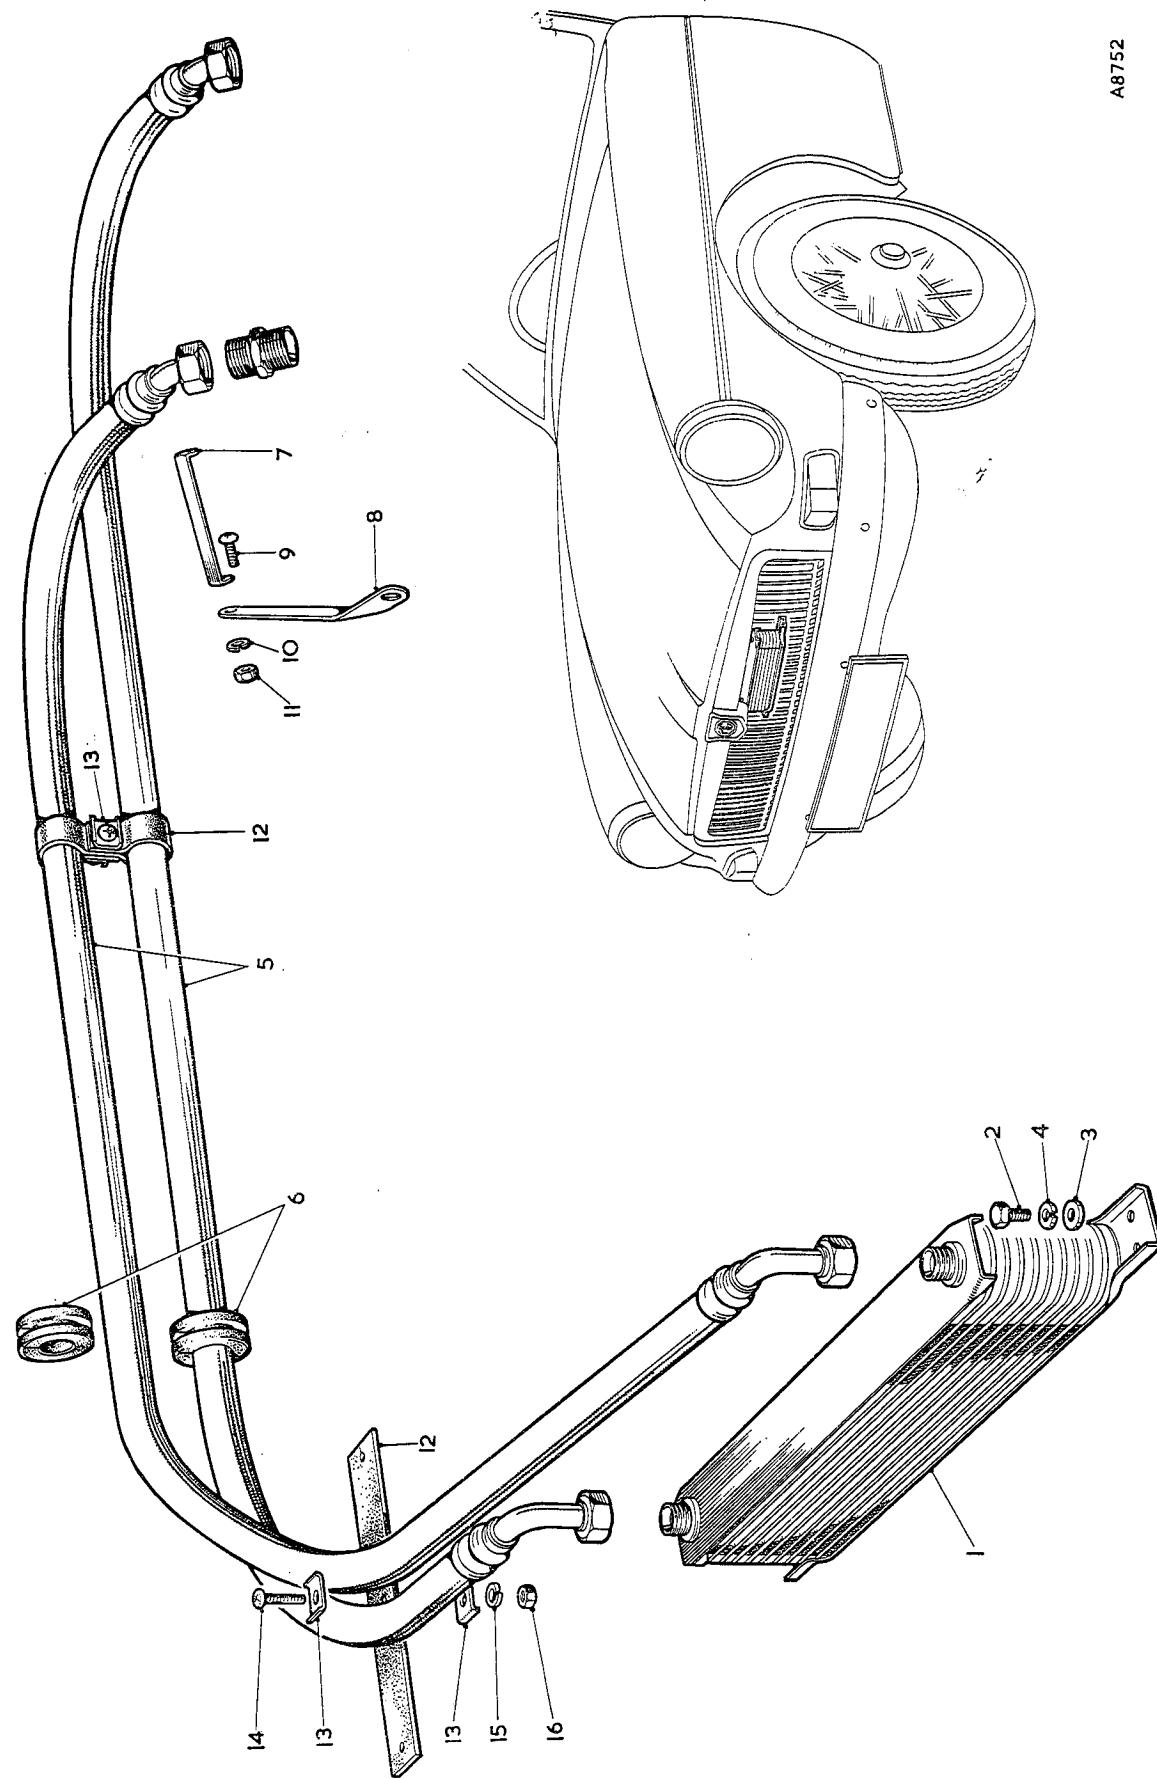

A8752

 To face page A.12



SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	Oty. per Veh.	New Part Number	Change Point	
ENGINE SERVICE KITS						
1	Joint washer set—engine decarbonizing	48 G281	1			
2	Joint washer—cylinder head		1			
3	Joint washer—manifold to cylinder head		1			
4	Joint washer—valve rocker cover		1			
5	Ring—valve packing		8			
6	Joint washer—water outlet elbow		1			
7	Joint washer—carburettor		4			
8	Joint washer—heater outlet blanking plate		1			
9	Joint washer—air cleaner to carburettor		1			
10	Joint washer set—engine supplementary	48 G282	1	2		
11	Joint strip—main bearing cap		2			
12	Joint washer—strainer to oil pump		1			
13	Joint washer—oil pump to crankcase		1			
14	Joint washer—oil reservoir		1			
15	Joint washer—cylinder side cover		2			
16	Joint washer—water pump to crankcase		1			
17	Washer—drain plug		1			
18	Washer—gearbox to mounting plate		1			
19	Joint washer—upper—mounting plate to crankcase		1			
20	Joint washer—oil filter to crankcase		1			
21	Joint washer—oil pipe adaptor		1			
22	Joint washer—front mounting plate		1			
23	Joint washer—crankcase front cover		1			
24	Joint washer—chain tensioner		1			
25	Washer—cylinder drain tap		1			
26	Chain tensioner servicing kit	17 H341	1			
27	Spring		1			
28	Plug—bottom		1			
29	Washer—tab		1			
30	Cylinder		1			

SERVICE PARTS LIST

THE MGB


Item No.	DESCRIPTION	Commencing (E) 18G/101		MODIFICATIONS	REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number
INLET AND EXHAUST MANIFOLDS					
1	Manifold— inlet	12H708	1	1	
2	Plug (welch)	2K8159	2	2	
3	Stud—carburettor to manifold	CHS2522	4	4	
4	Nut—carburettor to manifold	FNZ105	5	4	
5	Washer—spring	LWZ205	6	4	
6	Washer—plain	PWZ105	7	2	
7	Screw—inlet manifold—top blanking	HZS0505	8	2	
8	Washer—spring	LWZ205	9	2	
9	Washer—plain	PWZ205	10	2	
10	Screw—inlet manifold blanking	HZS1005	11	1	
11	Washer—plain	PWZ110	12	1	
12	Manifold— exhaust	12H709	13	1	
13	Stud—outlet flange	CHS2518	14	6	
14	Washer—spring	LWZ205	15	6	
15	Nut—stud (brass)	BNH105	16	6	
16	Yoke—manifold	IG2418	17	4	
17	Joint—manifold to head	IG2417	18	1	
18	Stud—exhaust manifold to cylinder head	LWZ205	19	6	
19	Stud—inlet and exhaust manifold to cylinder head	AHH5171	20	6	
20	Washer—spring—cylinder head stud				
21	Nut—stud				

] See Page A.5

SERVICE PARTS LIST

PLATE AG

THE MGB

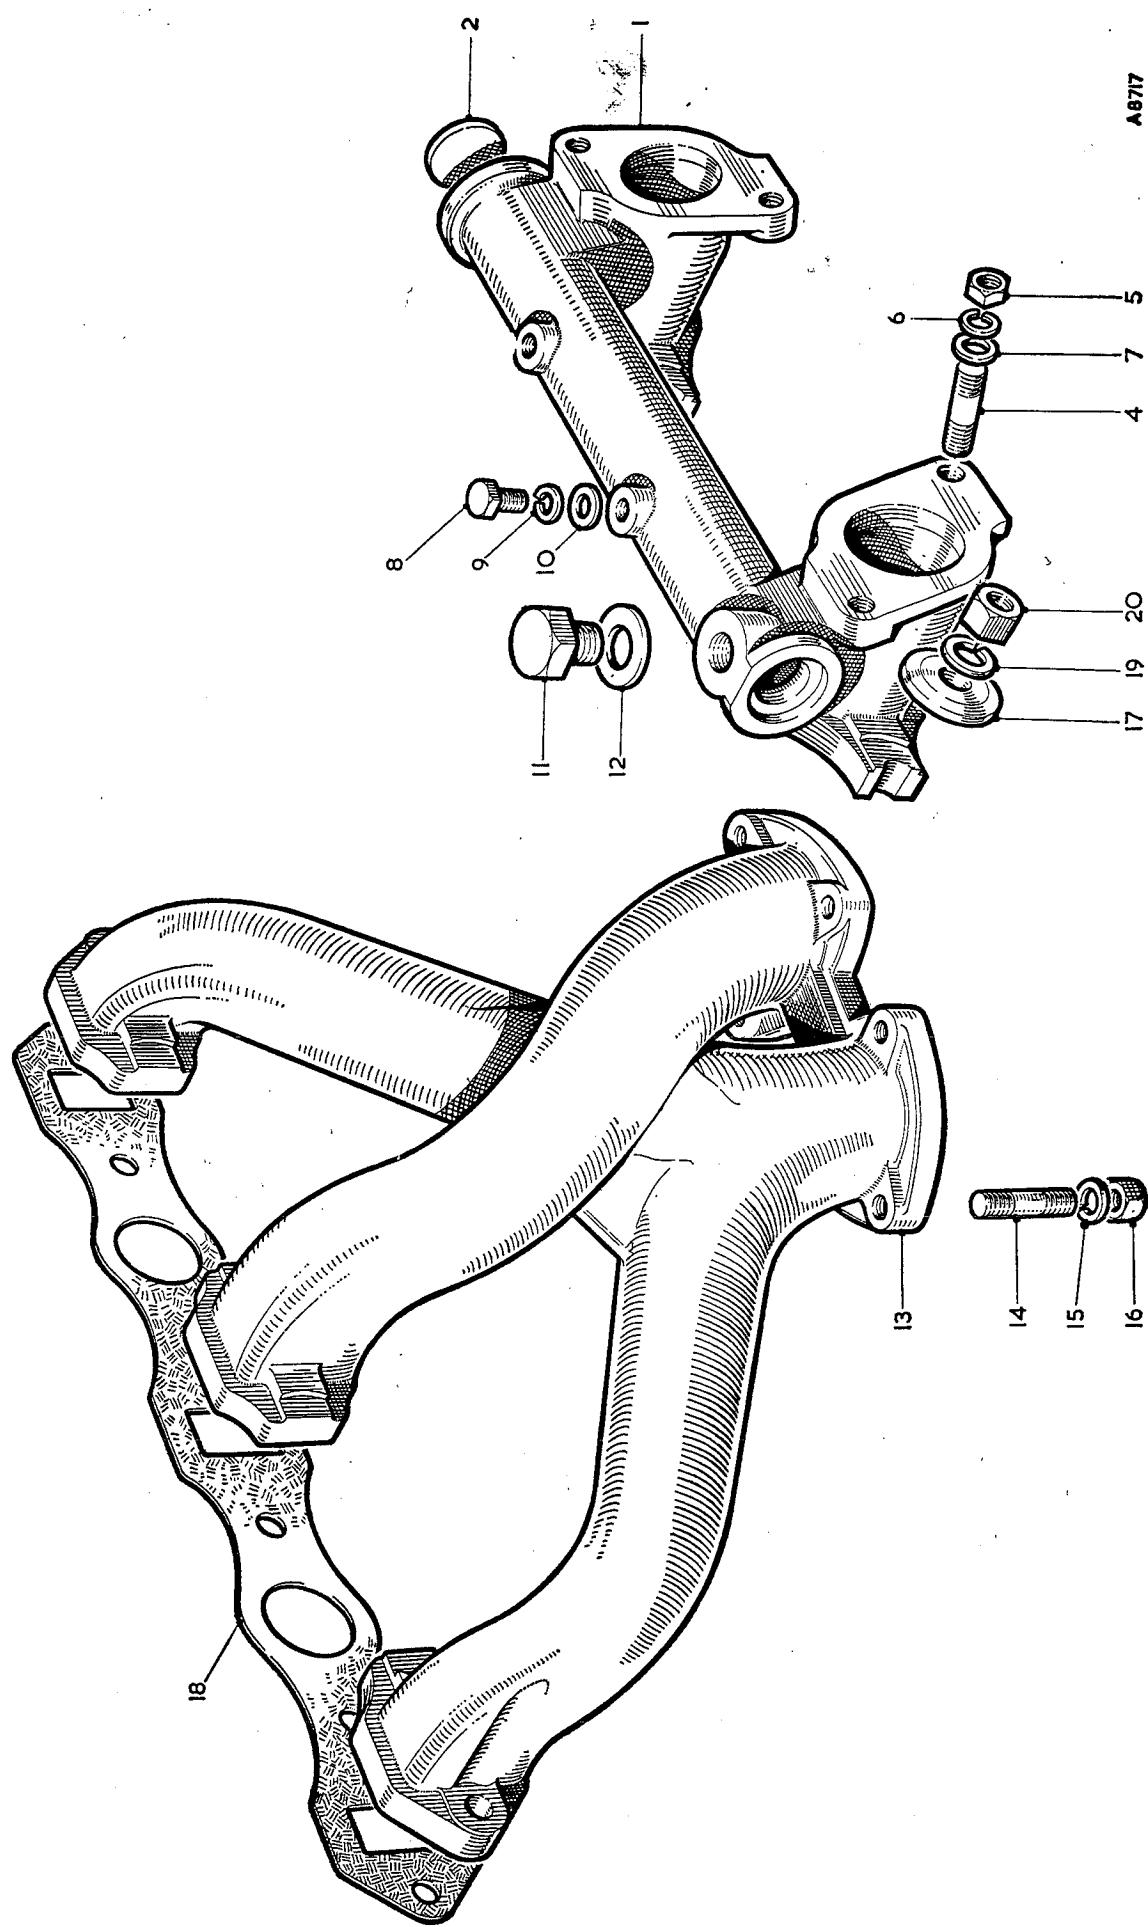


To face page A.14

SERVICE PARTS LIST

PLATE AH

THE MGB

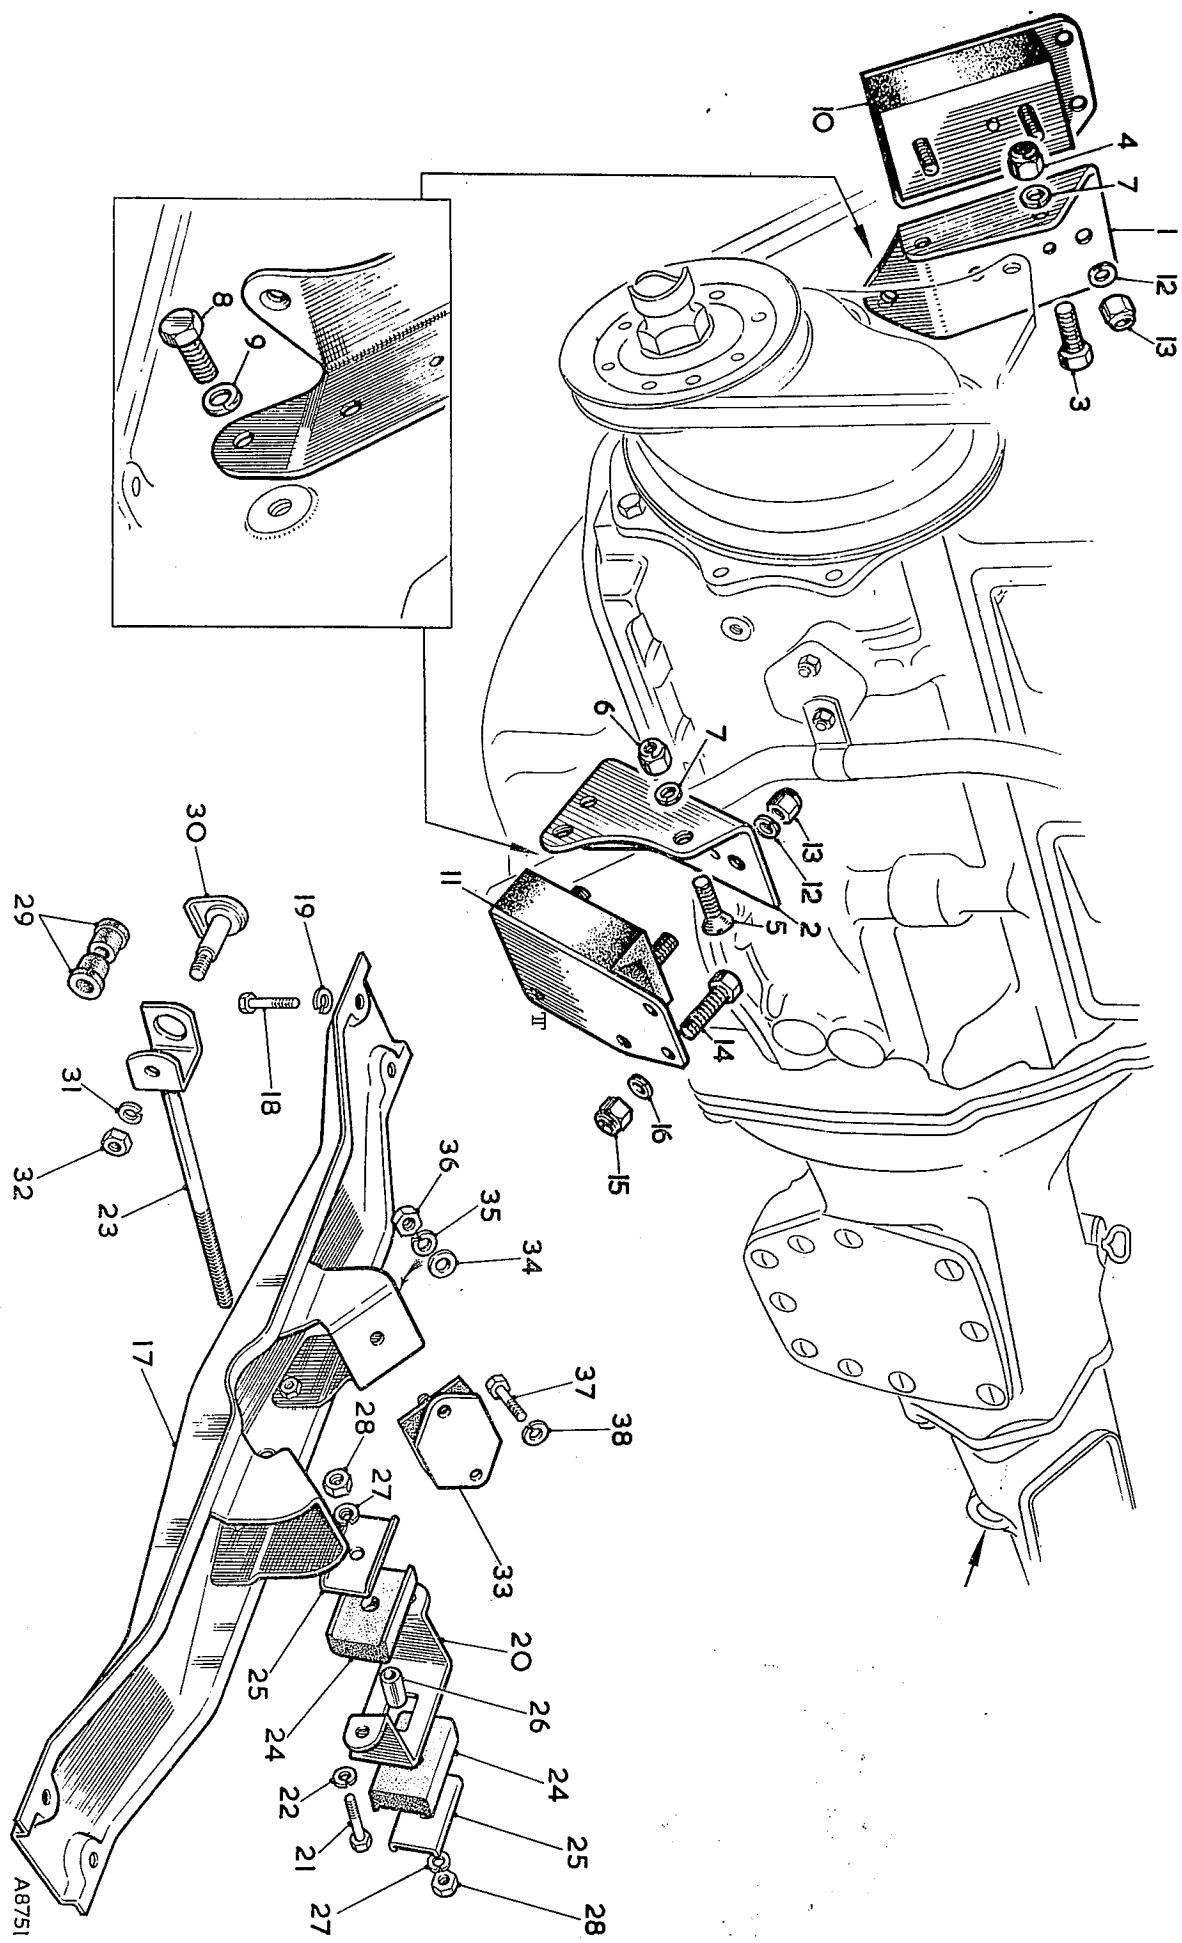

To face page A.15

SERVICE PARTS LIST

THE MGB

REF. No.	DESCRIPTION	Commencing (E) 18G/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Qty. per Veh.	
ENGINE MOUNTING						
1	Bracket—front engine mounting—RH	AHH5065	1	1	1	
2	Bracket—front engine mounting—LH	AHH5066	2	1	2	
3	Screw—bracket to mounting plate—RH	HZS0508	3	2		
4	Nut—screw	LNZ105	4	2		
5	Screw—bracket to mounting plate—LH	CMZ0516	5	2		
6	Nut—screw	LNZ105	6	2		
7	Washer—spring	LWZ205	7	4		
8	Screw—bracket to block	HZS0606	8	2		
9	Washer—spring	LWZ206	9	2		
10	Rubber—front engine mounting—RH	AHH5027	10	1	1	
11	Rubber—front engine mounting—LH	AHH5028	11	1	1	
12	Washer—spring—mounting to bracket	LWZ205	12	4		
13	Nut—mounting to bracket	FNZ105	13	4		
14	Screw—mounting and coil bracket to frame bracket	HZS0506	14	8		
15	Nut—screw	FNZ105	15	8		
16	Washer—spring	LWZ205	16	8		
17	Cross-member assembly—rear mounting	AHH6134	17	1	1	
18	Screw—cross-member to frame	HZS0607	18	4		
19	Washer—spring	LWZ206	19	4		
20	Bracket—engine stay rod	AHH6208	20	1		
21	Screw—bracket	HZS0405	21	2		
22	Washer—spring	LWZ204	22	2		
23	Stay rod—engine	AHH6056	23	1		
24	Buffer—stay rod	IG8781	24	2		
25	Plate—buffer	IG8782	25	2		
26	Distance tube for stay rod	IG8775	26	1		
27	Washer—spring—stay rod	LWZ306	27	2		
28	Nut—stay rod	FNZ106	28	2		
29	Bush—shouldered—gearbox rear extension	IB8347	29	2		
30	Pin—stay rod	IG9384	30	1		
31	Washer—spring—stay rod pin	LWZ306	31	1		
32	Nut—stay rod pin	FNZ106	32	1		
33	Mounting—engine—rear	11B5074	33	2		
34	Washer—plain—rear mounting to cross-member	PWZ105	34	2		
35	Washer—spring—rear mounting to cross-member	LWZ305	35	2		
36	Nut—rear mounting to cross-member	FNZ105	36	2		
37	Screw—rear mounting to gearbox	ZCS0505	37	4		
38	Washer—spring	LWZ305	38	4		

SERVICE PARTS LIST

THE MGB


Item No.

DESCRIPTION	Commencing (E) 18G/101			MODIFICATIONS		REMARKS
	Part Number	Illus. No.	Qty. Per Veh.	New Part Number	Change Point	
EXHAUST SYSTEM						
1 Pipe and junction assembly—front	ARH1809	1	1			
2 Pipe—intermediate—front	ARH1810	2	1			
3 Silencer—front	ARH1811	3	1			
4 Pipe—intermediate—rear	ARH1811	4	1			
5 Bracket—mounting—rear	ARH952	5	1			
6 Silencer and tail pipe assembly—rear	ARH1813	6	1			
7 Joint—exhaust pipe to manifold	AHH6358	7	1			
8 Strap—exhaust mounting—front	AHH6479	8	1			
9 Bracket—exhaust mounting—front	AHH6480	9	1			
10 Screw—strap to bracket	HZS0506	10	1			
11 WASHER—PLAIN—SCREW	PWZ105	11	1			
12 WASHER—SPRING—SCREW	LWZ205	12	1			
13 NUT—SCREW	FNZ105	13	1			
14 BOLT—STRAP TO PIPE	HZS0508	14	1			
15 WASHER—SPRING—BOLT	LWZ205	15	1			
16 NUT—BOLT	FNZ105	16	1			
17 MOUNTING—INTERMEDIATE PIPE—REAR	AHH6080	17	1			
18 BUSH—MOUNTING	AHH5403	18	2			
19 HOUSING—MOUNTING	AHH5404	19	1			
20 BOLT—BUSH AND HOUSING TO PIPE	HBZ0522	20	1			
21 WASHER—SPRING—BOLT	LWZ205	21	1			
22 NUT—BOLT	FNZ105	22	1			
23 SCREW—MOUNTING TO FRAME	HZS0404	23	2			
24 WASHER—SPRING—SCREW	LWZ204	24	2			
25 SCREW—HOUSING TO MOUNTING	HZS0404	25	2			
26 WASHER—SPRING—SCREW	LWZ204	26	2			
27 NUT—SCREW	FNZ104	27	2			
28 MOUNTING—EXHAUST PIPE—REAR	AHH6081	28	1			
29 BOLT—REAR MOUNTING AND TAIL PIPE	HBZ0422	29	1			
30 WASHER—PLAIN—SCREW	PWZ104	30	1			
31 WASHER—SPRING—SCREW	LWZ204	31	1			
32 NUT—BOLT	HBZ0422	32	1			
33 SCREW—MOUNTING TO FRAME	HZS0404	33	2			
34 WASHER—SPRING—SCREW	LWZ204	34	2			

SERVICE PARTS LIST

PLATE AJ

THE MGB

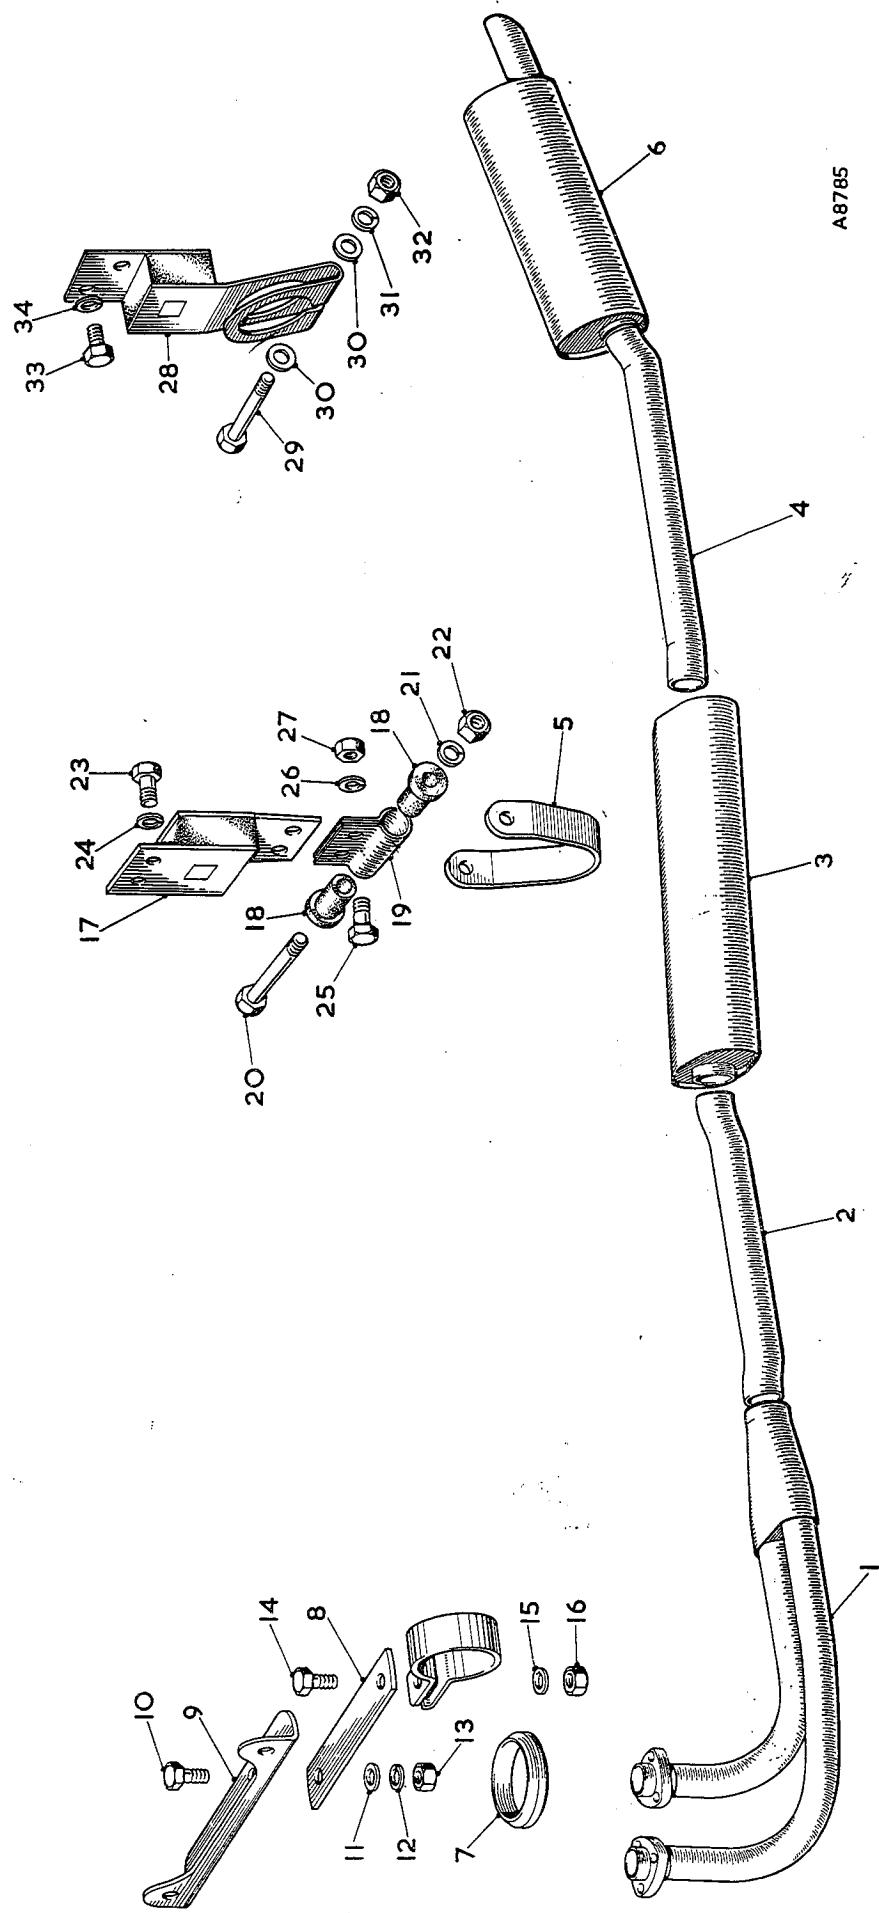


To face page A.16

SERVICE PARTS LIST

PLATE AK

THE MGB

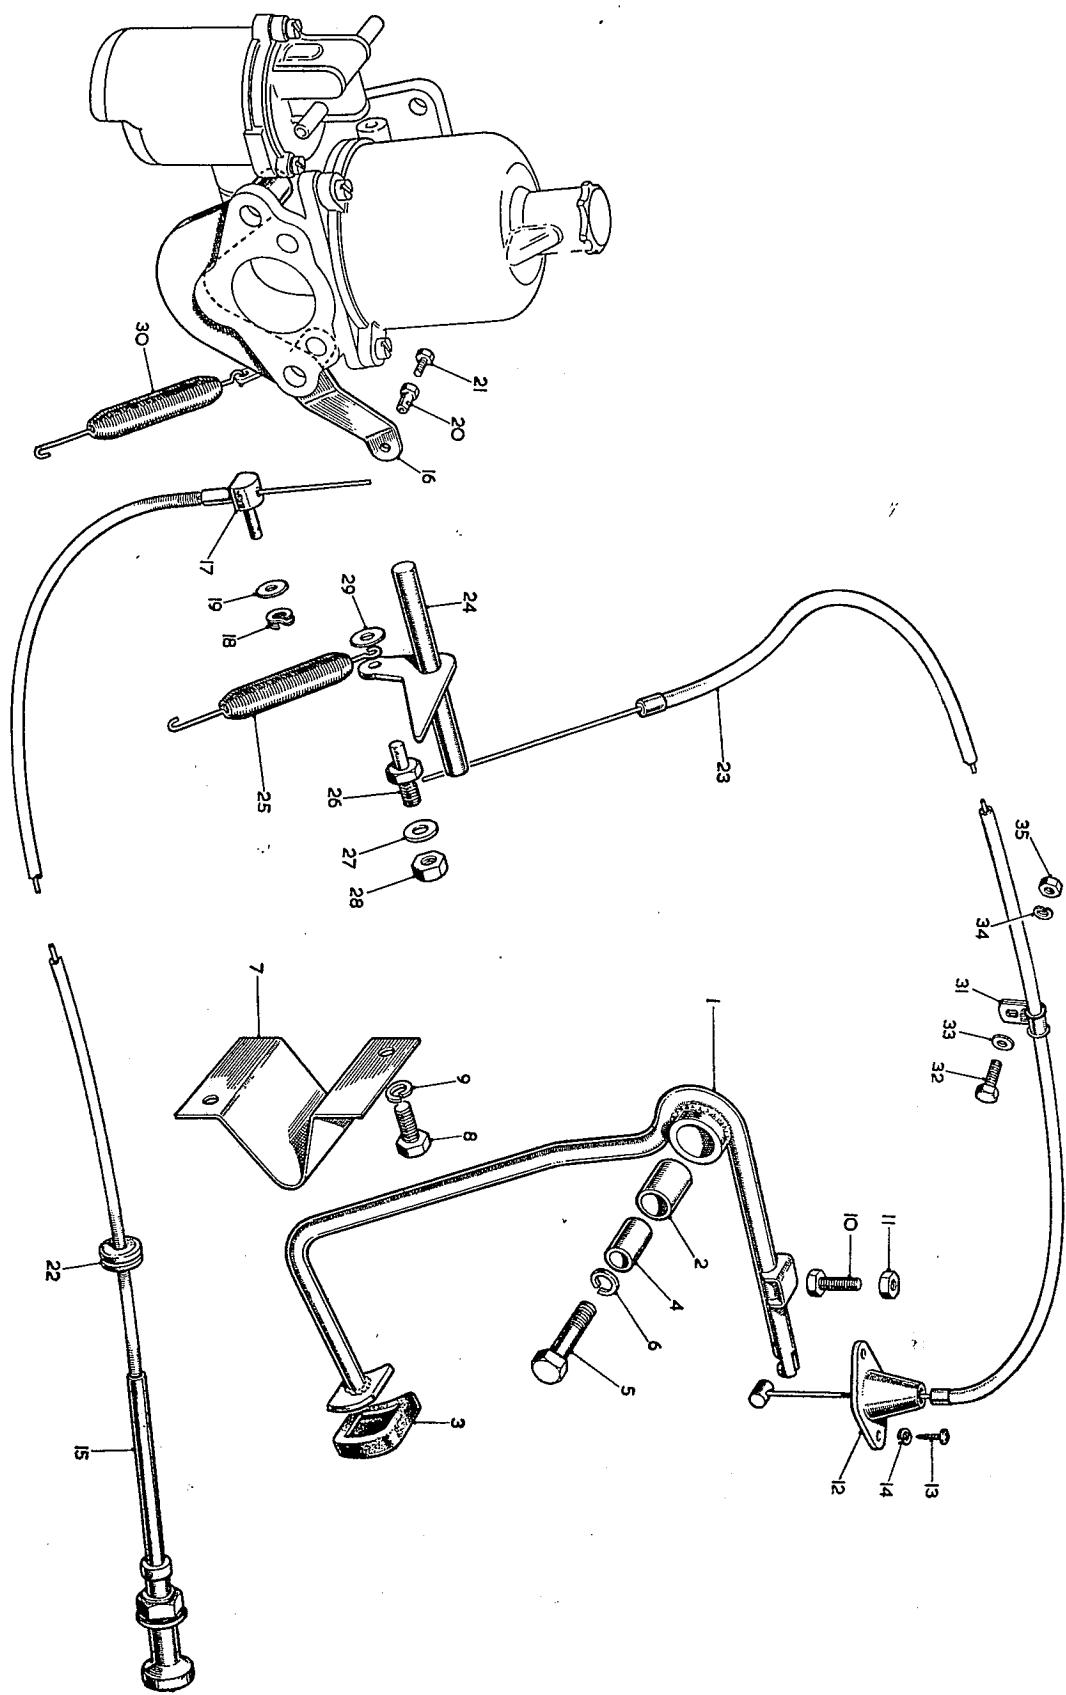

To face page A.17

A 8100

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
ENGINE CONTROLS						
1	Pedal assembly—accelerator	RHD	AHH6497	1	1	
2	Bush	LHD	AHH6501	2	1	
3	Pedal assembly—accelerator	LHD	AHH6501	1	1	
4	Bush		AHH6501	1	1	
5	Pad—pedal (rubber)		ACA5321	3	1	
6	Tube—distance—pedal to mounting bracket		AHH6504	4	1	
7	Bolt		HBB0511	5	1	
8	Washer—spring		LWZ205	6	1	
9	Stop—accelerator pedal		AHH6503	7	1	
10	Stop—accelerator pedal		AHH6494	1	1	
11	Screw—stop to pedal box		HZS0405	8	2	
12	Washer—spring		LWZ204	9	2	
13	Screw—pedal return stop to bulkhead		HZS0408	10	1	
14	Nut—screw		FNZ2104	11	1	
15	Guide—accelerator cable		AHH5308	12	1	
16	Screw—guide to bulkhead		PMZ0807	13	2	
17	Washer—spring		LWZ203	14	2	
18	Cable assembly—choke control	RHD	AHH6725	15	1	
19	Bracket—choke control	LHD	AHH6731	16	1	
20	Abutment—choke control cable		AHH6734	17	1	
21	Washer—spring (double coil)		AJD7712	18	1	
22	Washer—plain		AJD7042	19	1	
23	Pin—lever—clamping cable to choke control bracket		AHA6367	20	1	
24	Screw—lever pin		ACA5453	21	1	
25	Grommet—cable		RFR103	22	1	
26	Cable—accelerator		AHH6726	23	1	
27	Cable—accelerator		AHH6727	1	1	
28	Lever and spindle—accelerator		12IFT15	24	1	
29	Spring—accelerator return		AE2075	25	1	
30	Pin—accelerator lever		AC5062	26	1	
31	Washer—plain		PWZ203	27	1	
32	Nut—accelerator cable to pin		FNZ104	28	1	
33	Washer—plain		PWZ204	29	1	
34	Spring—choke lever return		AEC2075	30	2	
35	Clip—accelerator cable		PCR0307	31	1	
36	Screw—clip to master cylinder box		PMZ0307	32	1	
37	Washer—plain—screw		PWZ103	33	1	
38	Washer—spring—screw		LWZ103	34	1	
39	Nut—screw		FNZ103	35	1	






SERVICE PARTS LIST

PLATE B

THE MGB

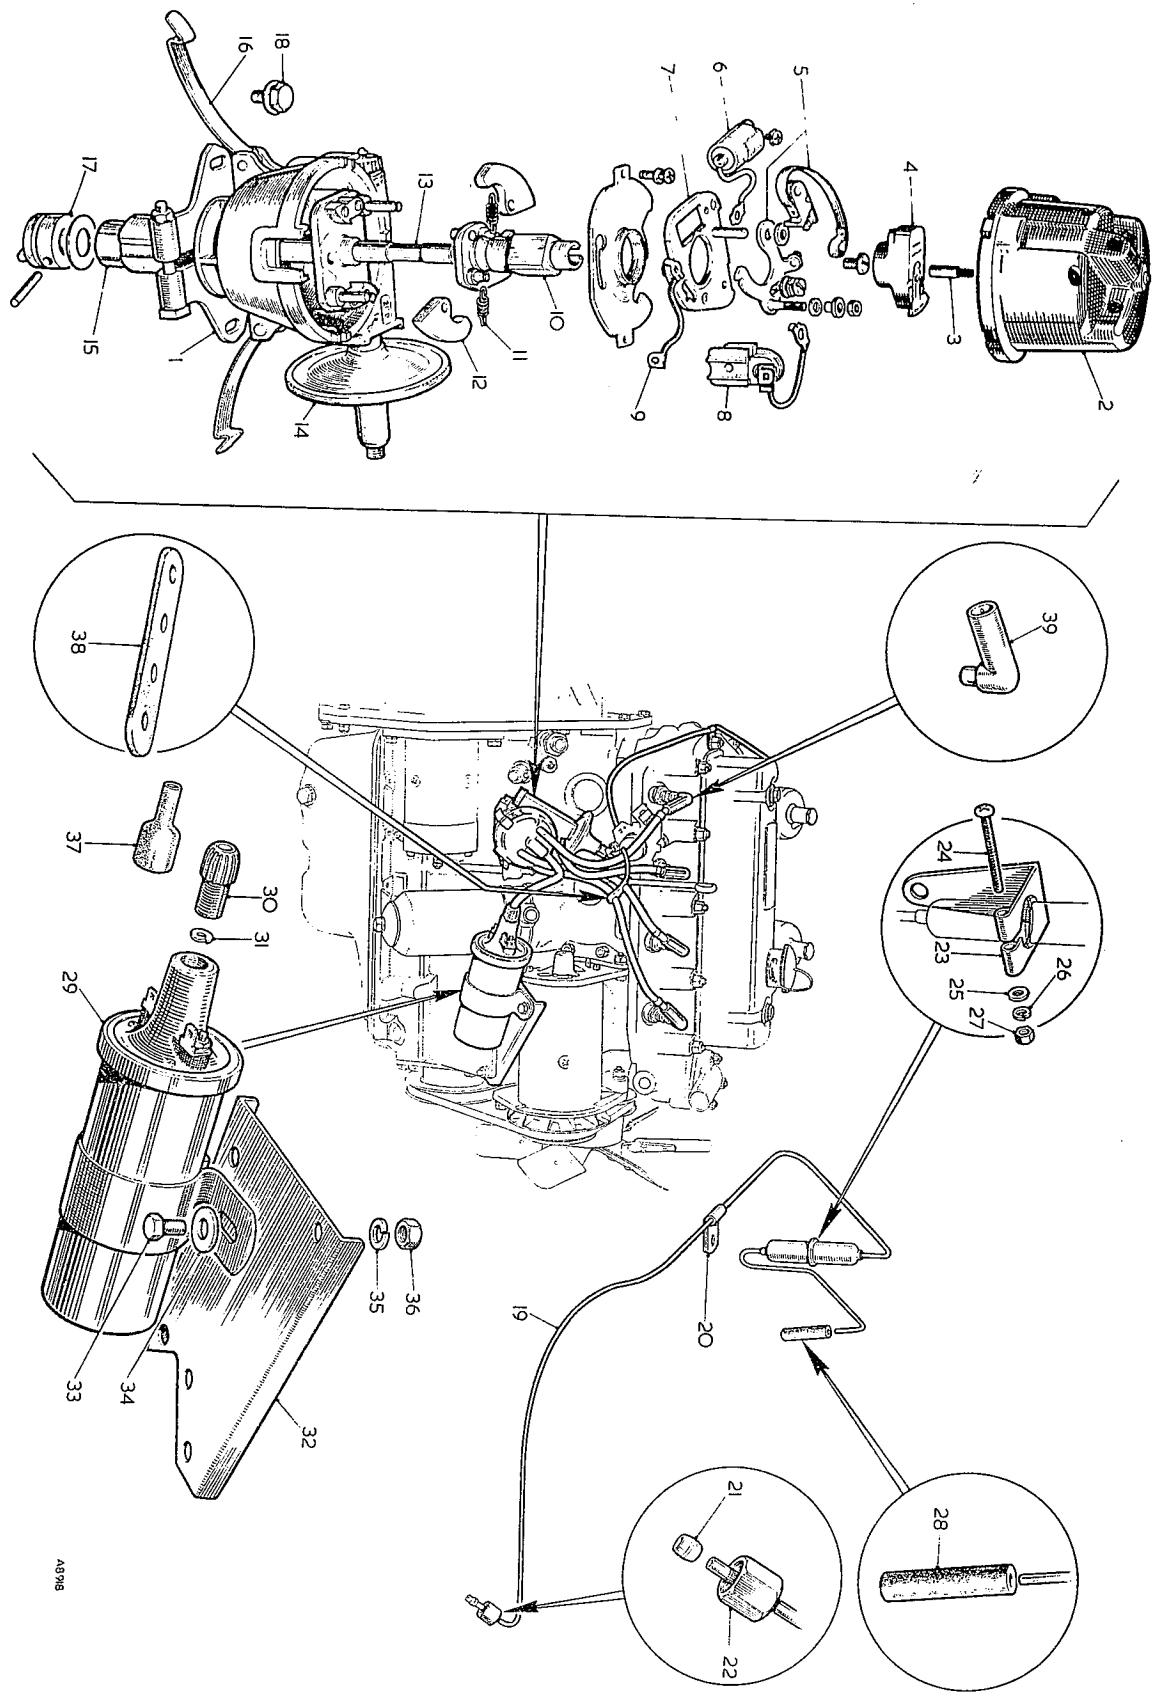


To face page B.1

SERVICE PARTS LIST


THE MGB

SERVICE PARTS LIST

THE MGB

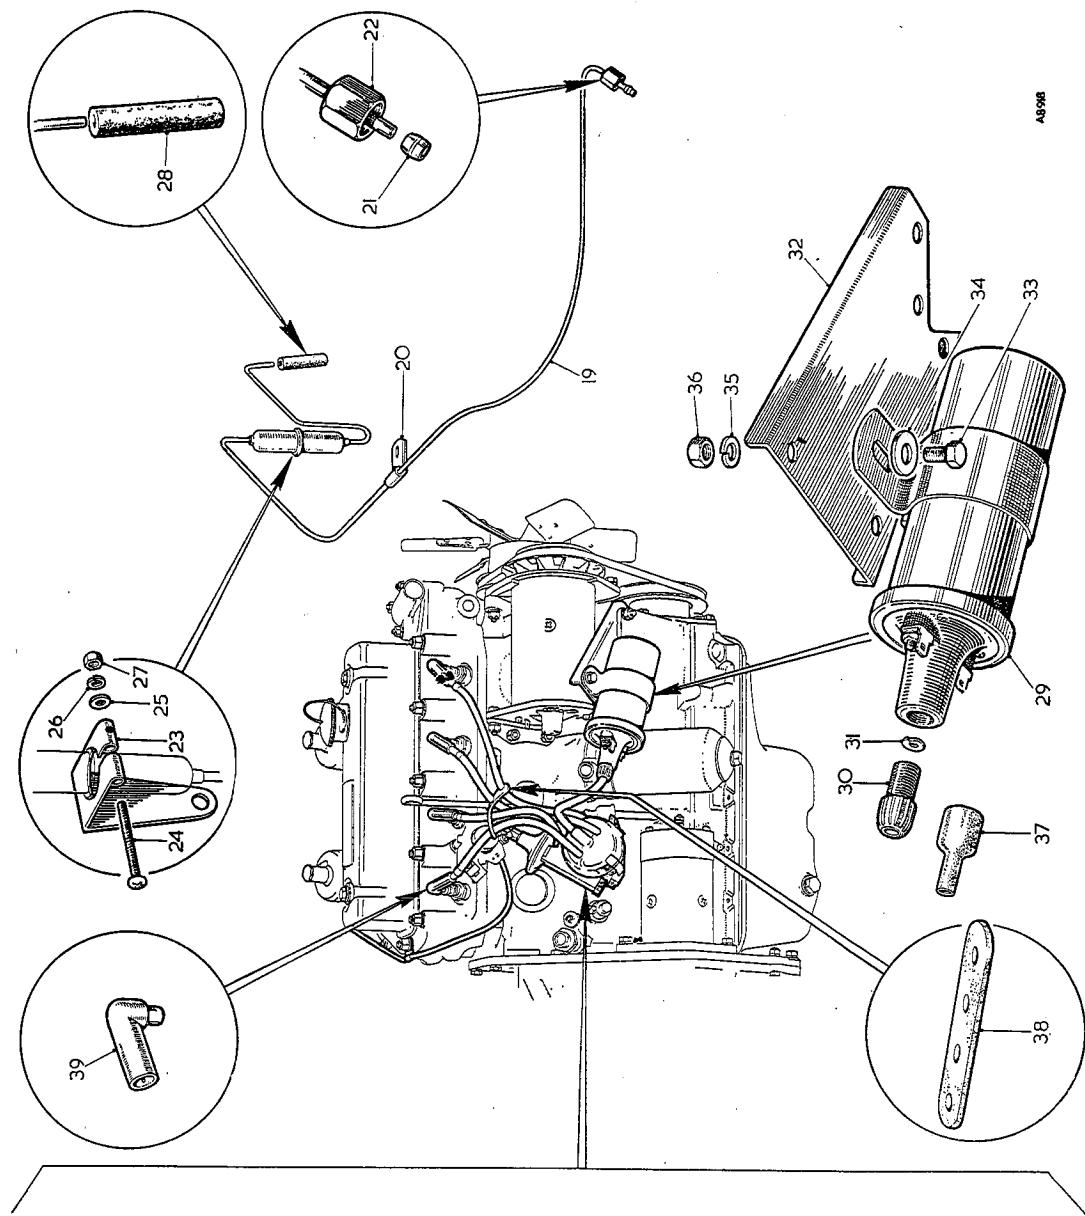


To face page B.2

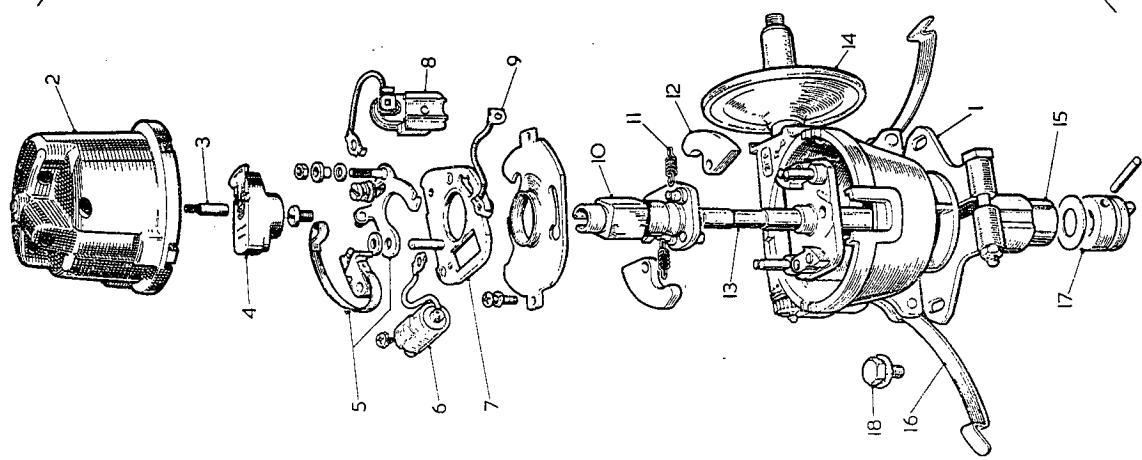

SERVICE PARTS LIST

PLATE C

THE MGB

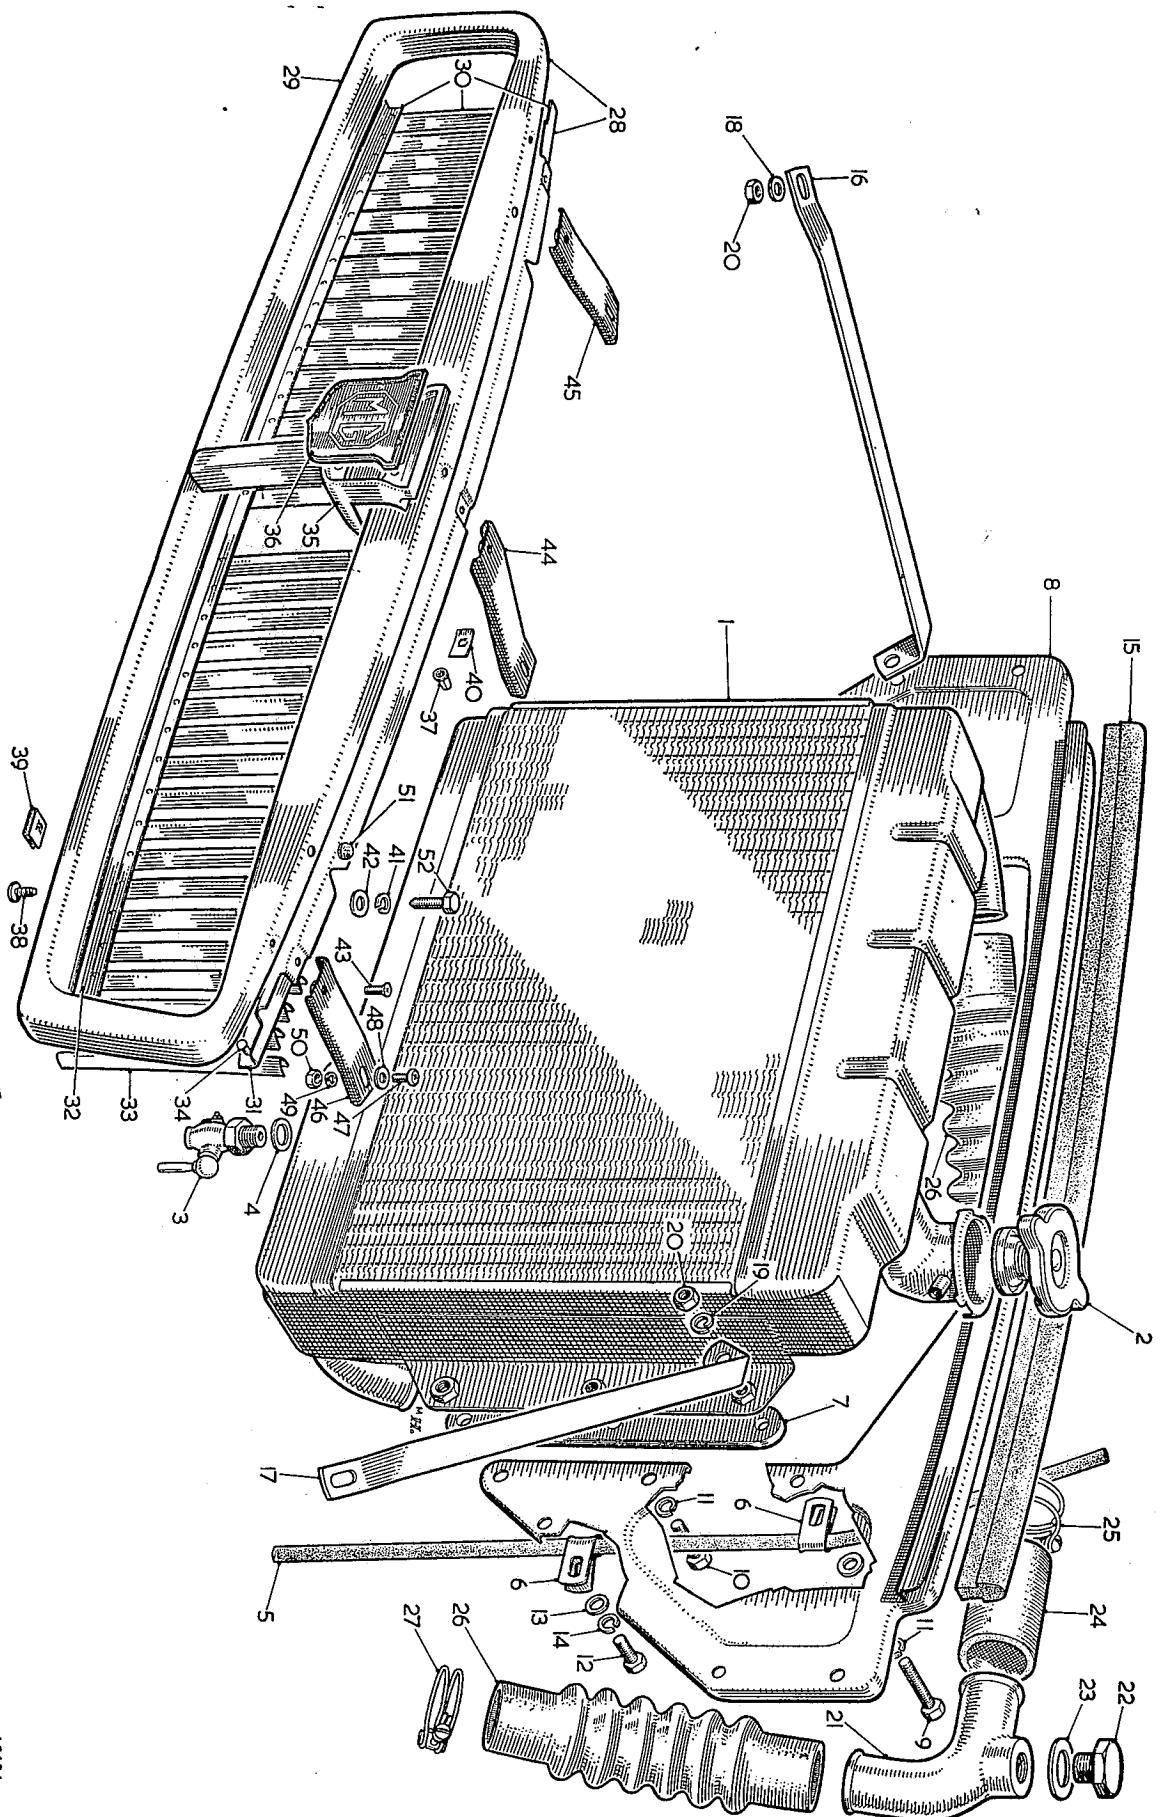

To face page G.1

SERVICE PARTS LIST

DESCRIPTION	COMMENCING (C) GHNB/101		MODIFICATIONS		REMARKS
	PART NUMBER	ILLUS. NO.	QTY. PER VEH.	NEW PART NUMBER	
COOLING SYSTEM					
Core assembly—radiator	ARH143		1	1	
1 Cap—filter	ARH1541		2	1	
2 Tap—drain	ARH1050		3	1	
3 Washer—tap	ARH517		4	1	
4 Tube—drain	ARA922		5	1	
5 Clip—drain tube	PCR0611		6	2	
6 Packing	AHF16320		7	2	
7 Diaphragm—radiator	HZA457		8	1	
8 Diaphragm—radiator	HZS0510		9	2	
9 Screw—long—radiator to diaphragm	HZS0505		10	4	
10 Screw—short—radiator to diaphragm	LWZ205		11	6	
11 Washer—spring—screw	HZS0505		12	8	
12 Screw—diaphragm to body	PWZ105		13	8	
13 Washer—plain—screw	LWZ205		14	8	
14 Washer—spring—screw	AHH6076		15	1	
15 Rubber—radiator air seal	AHH6521		16	1	
16 Tie—radiator—RH	AHH6322		17	1	
17 Tie—radiator—LH	PWZ105		18	2	
18 Washer—plain—radiator tie	LWZ205		19	4	
19 Washer—spring—radiator tie	FNZ105		20	4	
20 Nut—tie	ACH16031		21	1	
21 Pipe—water pump connector	AFK122		22	1	
22 Plug—connector pipe	AEK123		23	1	
23 Washer—plug	ACH5032		24	1	
24 Hose—connector	HCS1217		25	2	
25 Clip—hose	AHM5143		26	2	
26 Hose—top and bottom	HCS1217		27	4	
27 Clip—hose	ARH155		28	1	
28 Case and grille assembly—radiator	ARH1790		29	1	
29 Case assembly	ARH1801		30	1	
30 Grille assembly	ARH1795		31	1	
31 Bar—grille fixing—top	ARH1797		32	1	
32 Bar—grille fixing—bottom	ARH1799		33	36	
33 Shats—grille	ARO9399		34	72	
34 Rivet—shat fixing	ARH1800		35	1	
35 Bar and badge housing—centre	ARA1211		36	1	
36 Badge	ARA1238		37	4	
37 Fix—blind badge	ARH649		38	4	
38 Screw—grille to case	PFS410		39	4	
39 Nut—spring	PFS106		40	1	
40 Fix—push-on—badge housing to case					

]
Not required when heater is fitted

SERVICE PARTS LIST

THE MGB

Item No.


DESCRIPTION

Commencing
(C) GHNS/101

MODIFICATIONS

REMARKS

		Part Number	Illus. No.	Dty. per Veh.	New Part Number	Change Point	
Cooling System—continued							
1	Screw—grille to radiator duct panel	HZS0404	40	3			
2	Washer—spring—screw	LWZZ204	41	3			
3	Washer—plain—screw	PWZ104	42	3			
4	Screw—grille to steady bracket	RMP0306	43	3			
5	Bracket—steady grille centre assembly	HZA489	44	1			
6	Bracket—steady grille side assembly—RH	HZA490	45	1			
7	Bracket—steady grille side assembly—LH	HZA491	46	1			
8	Screw—steady bracket to bonnet lock platform	PWZ0308	47	3			
9	Washer—plain	PWZ103	48	3			
10	Washer—spring	LWZZ203	49	3			
11	Nut—screw	ENZ108	50	8			
12	Buffer—grille top rail	ADA808	51	2			

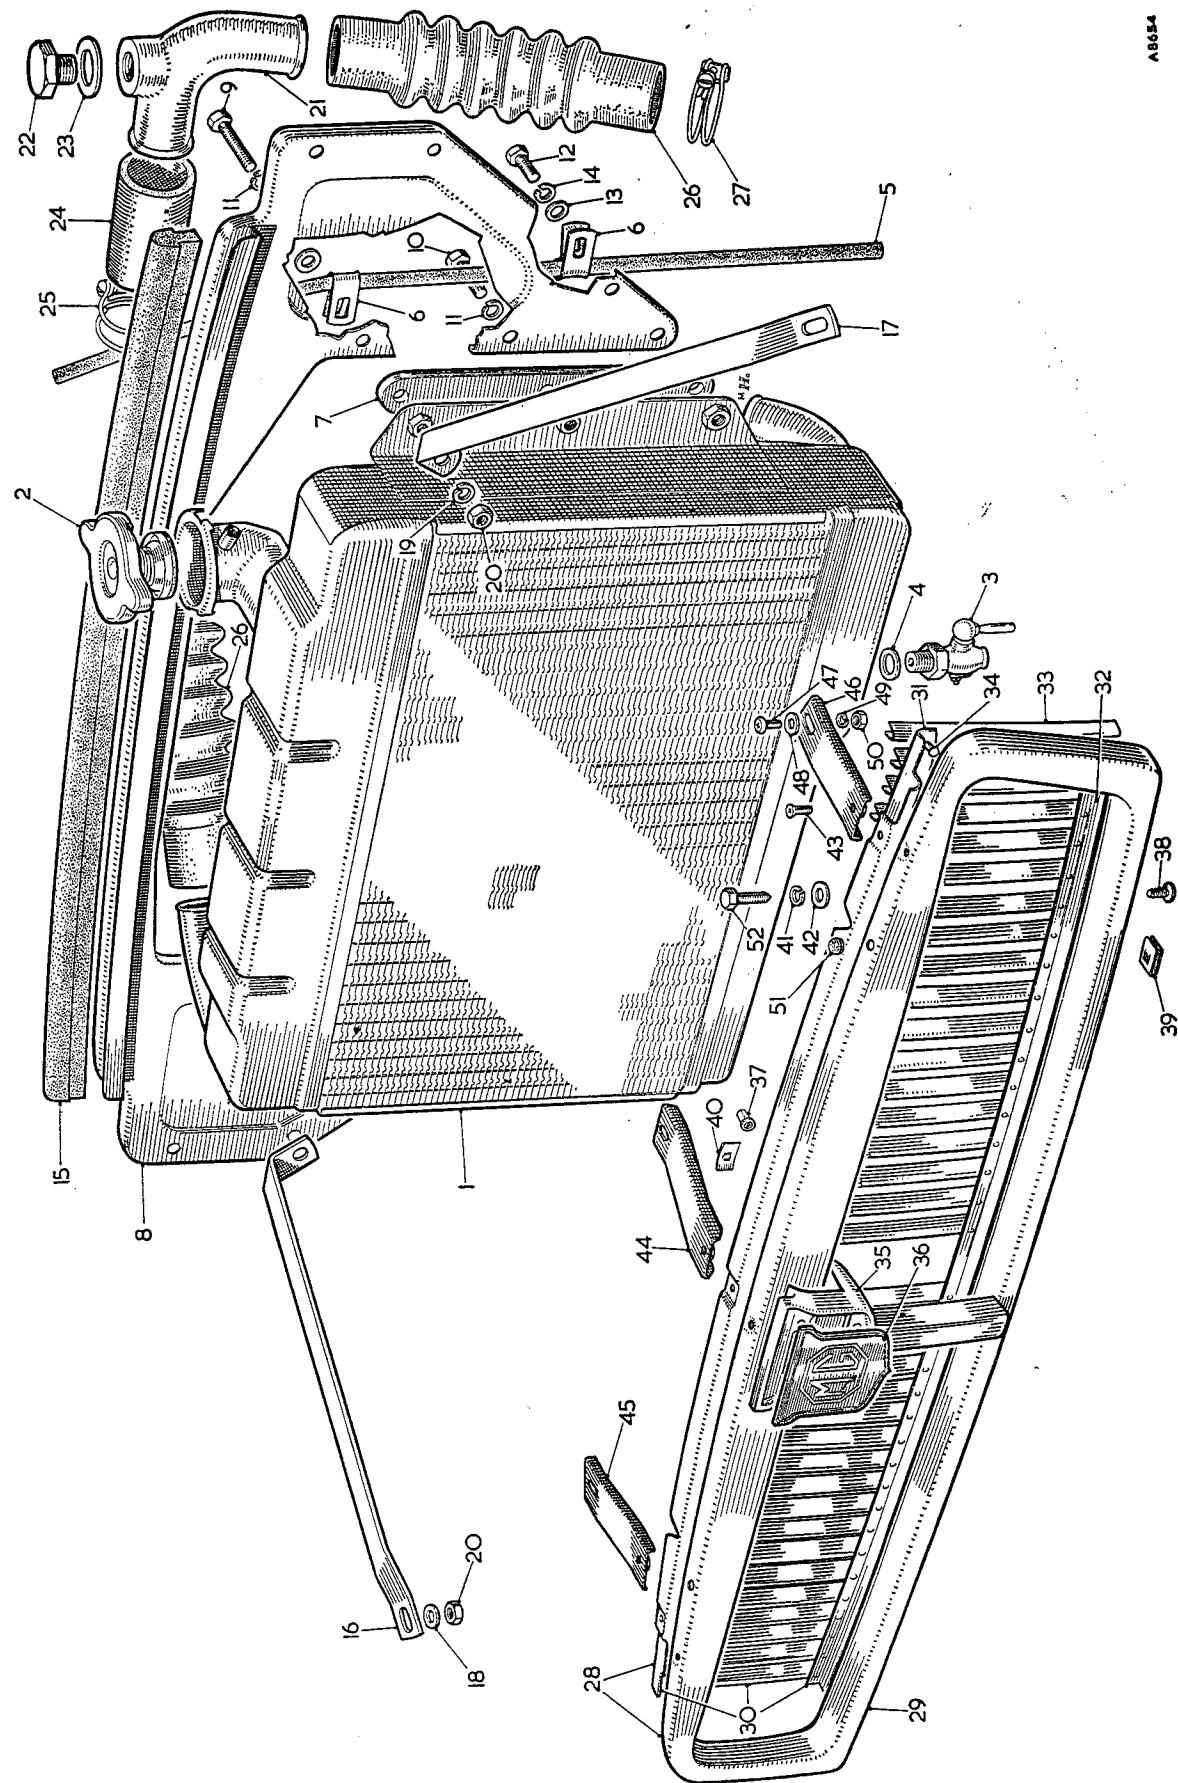


A8654

To face page C.2

SERVICE PARTS LIST

PLATE D

THE MGB

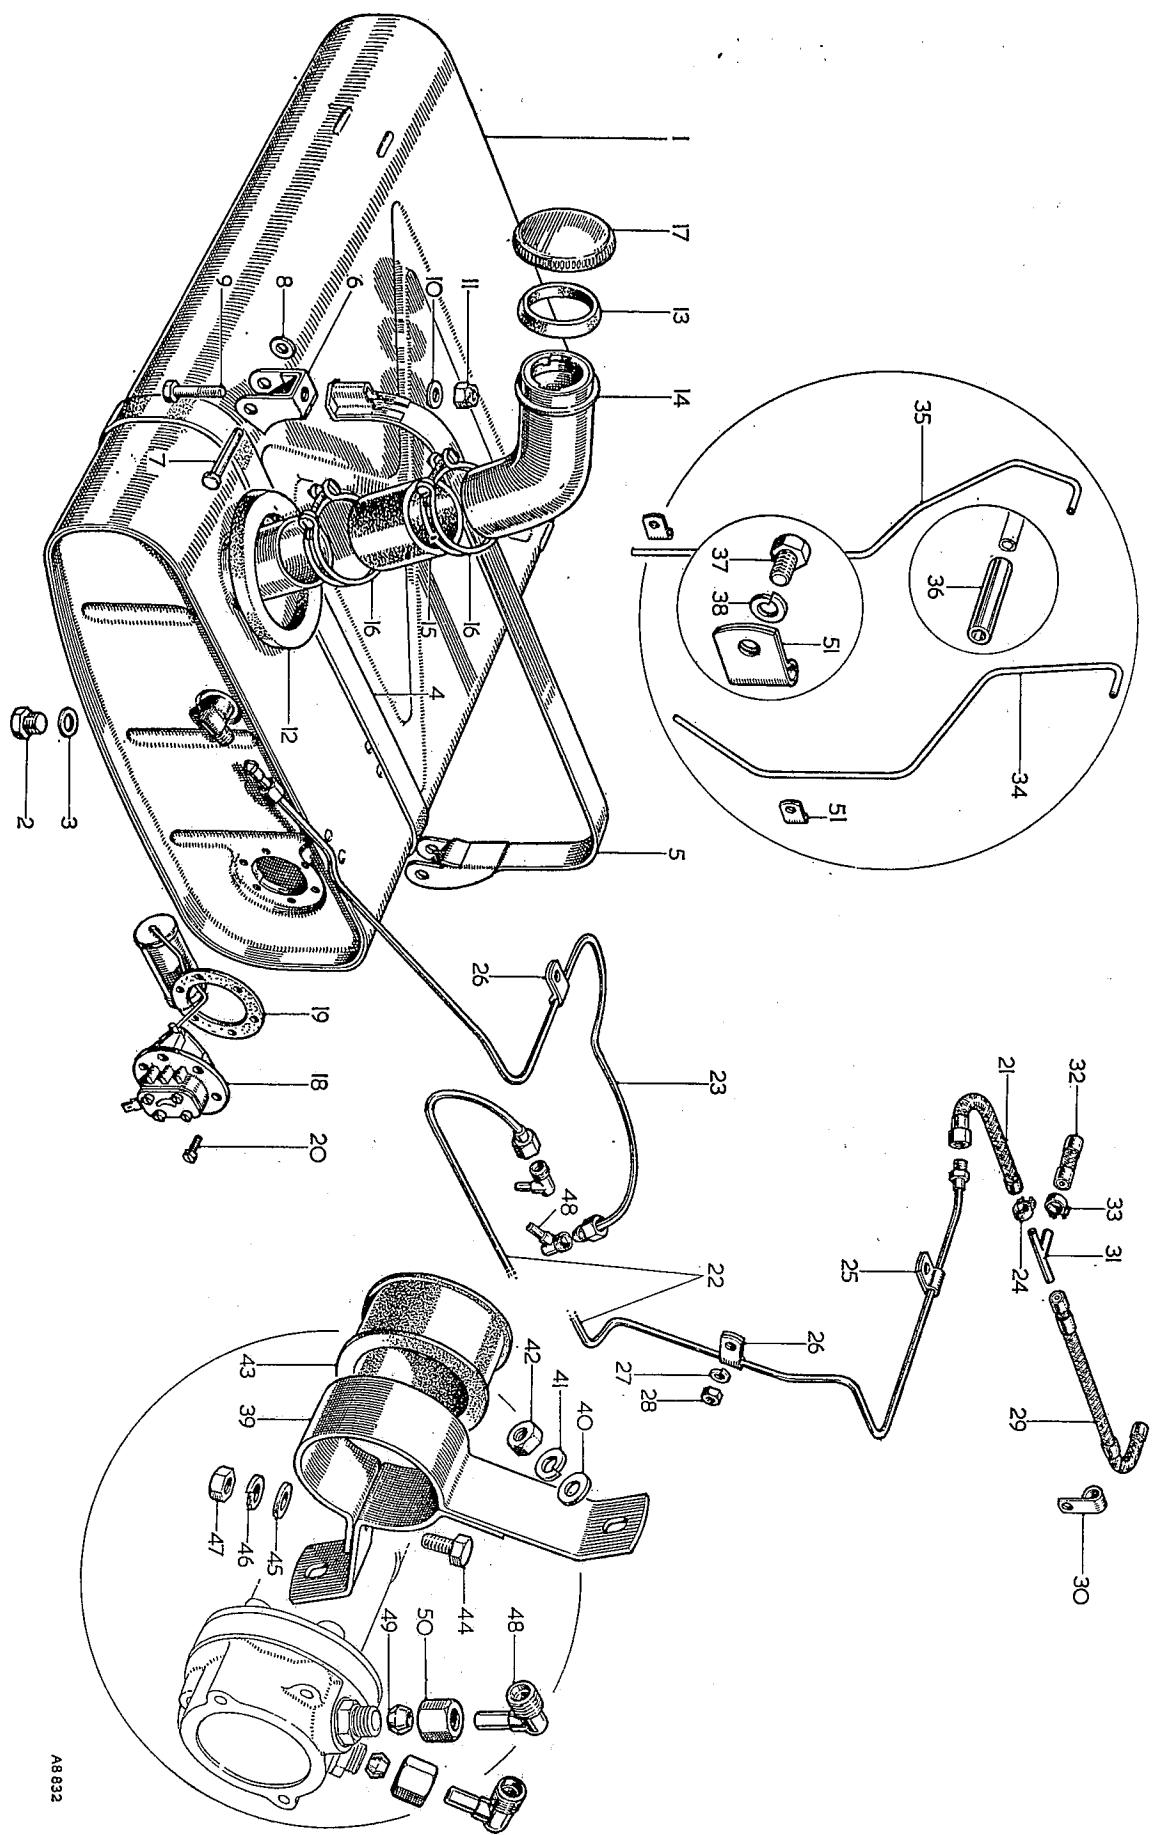

To face page D.1

A8832

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS			
			Part Number	Oty. per Veh.	New Part Number				
FUEL SYSTEM									
FUEL TANK									
1	Tank—fuel	ARH176	1	1					
2	Plug—drain	ARO4566	2	1					
3	Washer—plug	ARH673	3	1					
4	Packing strip—tank (rubber)	AHH6252	4	2					
5	Strap—tank and mounting	AHH6253	5	2					
6	Hanger and stiffener—rear	AHH6257	6	2					
7	Pin—clevis	CLZ0427	7	4					
8	Washer—plain	PWZ104	8	4					
9	Bolt	HBZ0418	9	2					
10	Washer—plain	PWZ104	10	2					
11	Nut	LNZ104	11	2					
12	Seal—tank to trunk floor (rubber)	AHH6280	12	1					
13	Ferrule—filter neck (rubber)	AHH6288	13	1					
14	Tube—fuel filter	AHH6281	14	1					
15	Hose—filter connection	11B2011	15	1					
16	Clip—hose	8G505	16	2					
17	Cap—filter	8G654	17	1					
18	Unit—tank	BHA4292	18	1					
19	Gasket—unit tank	37H1242	19	1					
20	Screw—tank unit to tank	ACAS127	20	6					
FUEL PIPES									
21	Pipe—flexible—main pipe to carburettors	AHH6707	21	1					
22	Pipe—pump to flexible pipe	AHH6705	22	1					
23	Pipe—pump to tank	AHH6703	23	1					
24	Clip—flexible pipe to carburettor T-piece	ACH5854	24	1					
25	Clip—pipe to bulkhead	PCR0507	25	1					
26	Clip—pipe to pedal box panel and boot floor	PCR0509	26	2					
27	Washer—spring	LWZ204	27	2					
28	Nut—clip	FNZ104	28	2					
29	Pipe—flexible—carburettor to carburettor	12H722	29	1					
30	Clip—pipe to carburettor flange	AEA589	30	2					
31	"T" piece—supply pipe to flexible pipe	12H723	31	1					
32	Connection—"T"-piece to rear carburettor	BRT2404	32	1					
33	Clip—connection	ACH5854	33	3					

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	MODIFICATIONS				REMARKS
		Commencing (C) GHN8/101	Part Number	Illus. No.	Qty. per Ver.	
OVERFLOW PIPES						
1	Pipe—overflow—front carburettor		12HH25	34	1	
2	Pipe—overflow—rear carburettor		12H727	35	1	
3	Connector—overflow pipe		12H802	36	2	
4	Screw—rear overflow pipe to crankcase		HZS054	37	1	
5	Washer—spring		LWZ305	38	1	
6	Ring—retaining—overflow pipe		12H860	4		
FUEL PUMP FITTINGS						
7	Bracket—fuel pump	AHH6709				
8	Washer—plain	PWZ104	39	1		
9	Washer—spring	LWZ204	40	2		
10	Nut—bracket to fuelboard	FNZ104	41	2		
11	Mounting—fuel pump (rubber)	AHH6708	42	2		
12	Screw—pump to bracket	HZS0405	43	1		
13	Washer—plain	PWZ104	44	1		
14	Washer—spring	LWZ204	45	1		
15	Nut—screw	FNZ104	46	1		
16	Elbow—fuel pump	127464	47	1		
17	Olive—elbow	2718	48	2		
18	Nut—elbow	2715	49	2		

SERVICE PARTS LIST

PLATE D

THE MGB

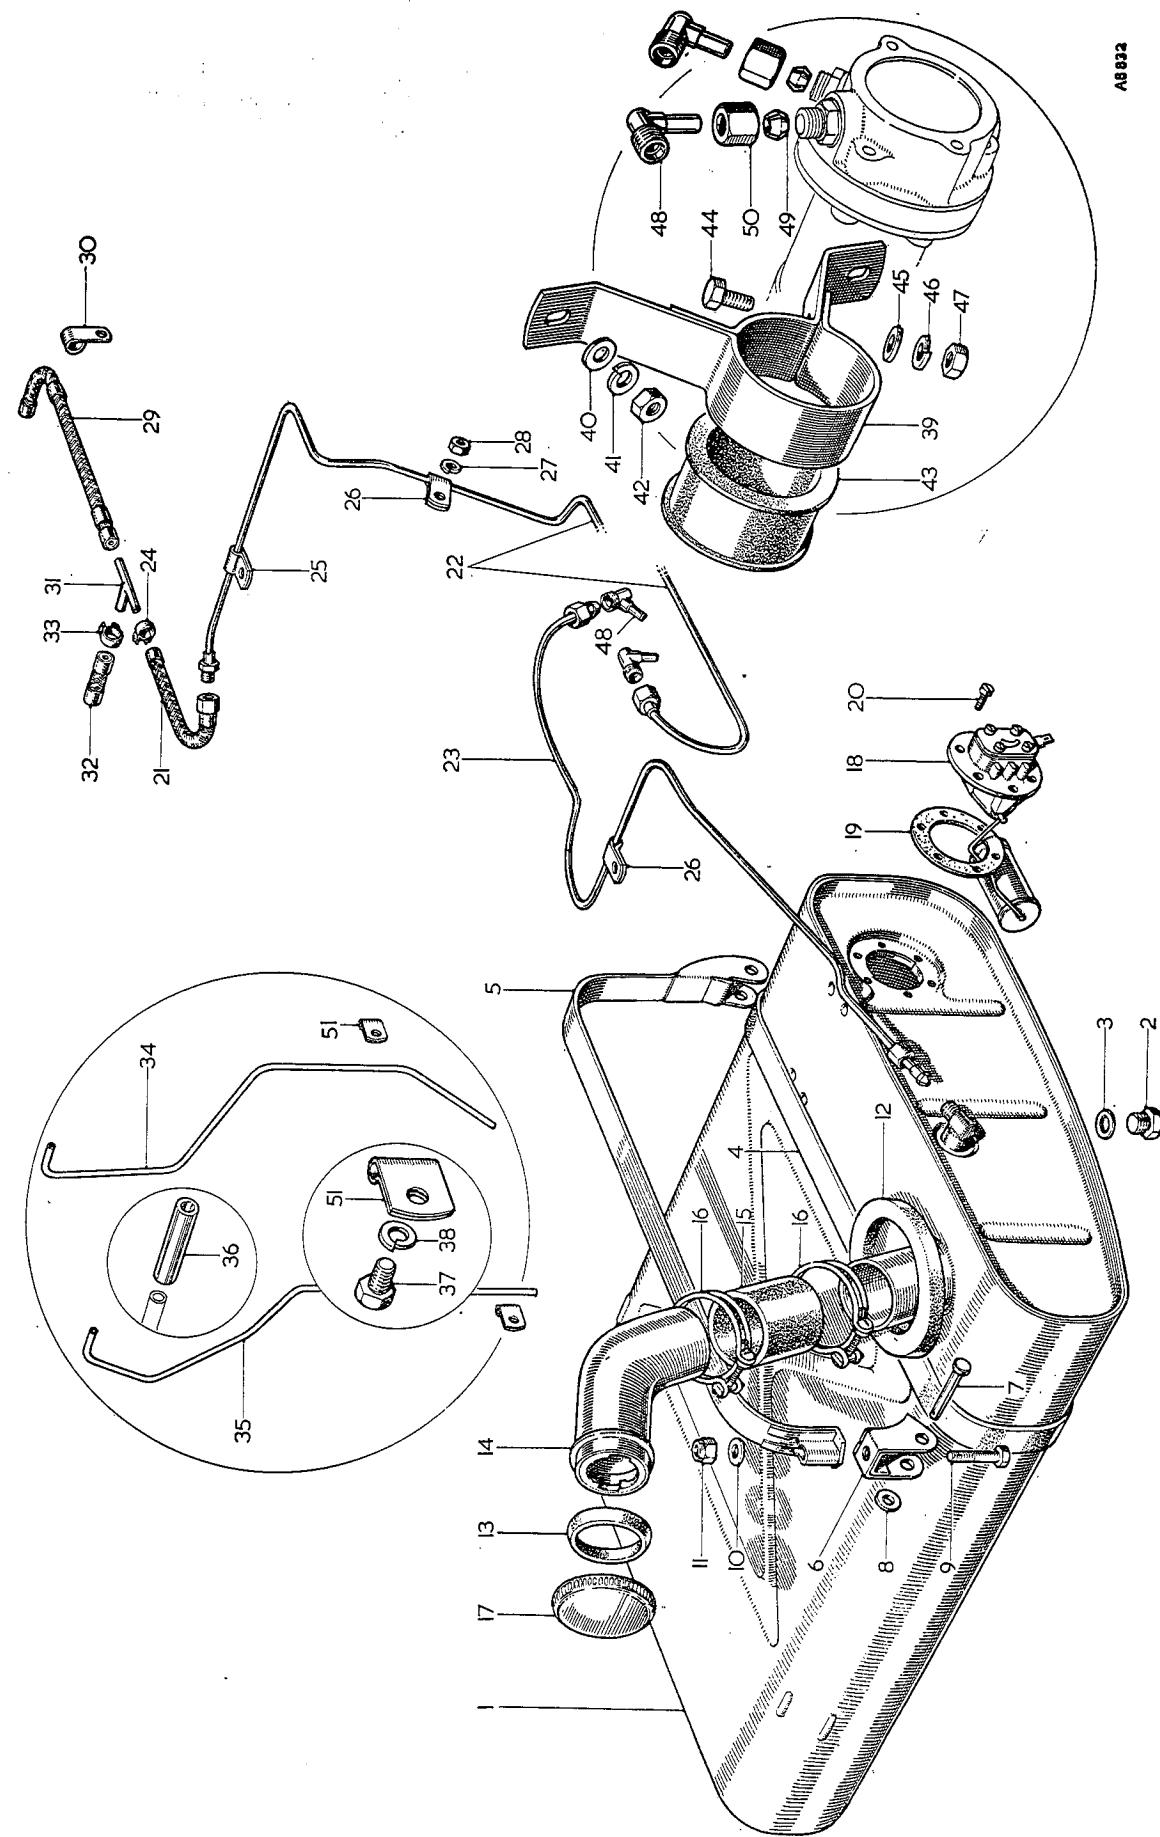


A6832

To face page D.2

SERVICE PARTS LIST

PLATE DA

THE MGB

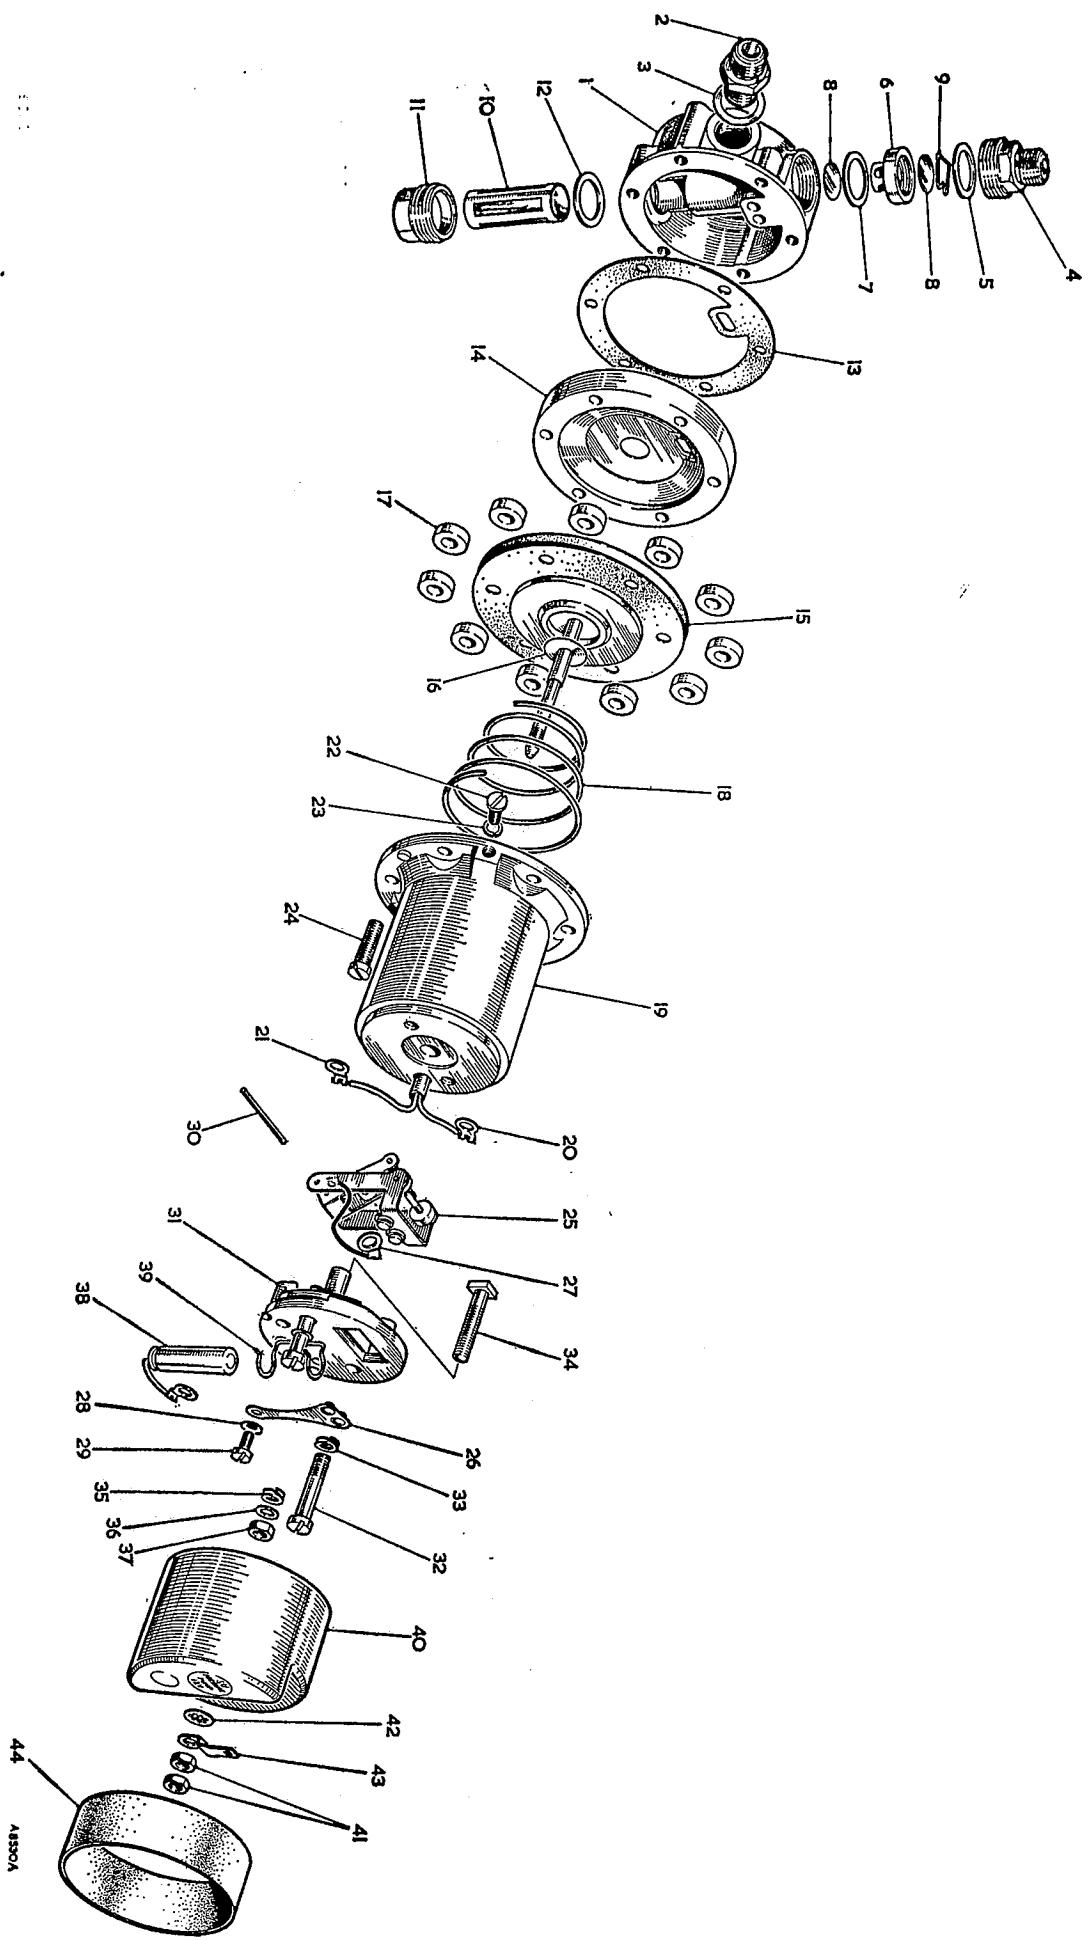

To face page D.3

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	MODIFICATIONS				REMARKS
		Commencing (C) GHN3/101	Part Number	Oty. per Veh.	New Part Number	
FUEL PUMP						
1	Pump assembly		AUA150	1		
2	Body	AUA4080		1		
3	Union—inlet	AUA887		2		
4	Washer—union	AUA1405		3		
5	Union—outlet	AUA1422		4		
6	Washer—union	AUA1442		5		
7	Cage—valve	AUA1822		6		
8	Washer—cage	AUA1479		7		
9	Disc—valve	AUA839		8		
10	Clip—valve cage	AUA840		9		
11	Filter	AUA1464		10		
12	Plug—filter	AUA1421		11		
13	Washer—plug	AUA1442		12		
14	Washer—joint—body to plate	AUA4082		13		
15	Plate—body	AUA4081		14		
16	Diaphragm assembly		AUB6004	15		
17	Washer—impact	AUB6015		1		
18	Roller	AUA1447		16		
19	Spring—diaphragm	AUA1438		17		
20	Housing—coil	AUB521		18		
21	Tag—5 B.A. terminal	AUB6007	19	1		
22	Tag—2 B.A. terminal	AUA1455		20		
23	Screw—earth	AUA1456		21		
24	Washer—spring—screw	AUA699		22		
25	Screw—coil housing to body	AUA585		23		
26	Rocker and blade	AUA4083		24		
27	Blade	AUA6021	25	1		
28	Tag—2 B.A. terminal	AUA6036		26		
29	Washer—dished	AUA1456		27		
30	Screw—blade	AUA566		28		
31	Spindle—contact breaker	AUA565		29		
32	Pedestal	AUA1485		30		
33	Screw—pedestal to coil housing	AUA6034		31		
34	Washer—spring—screw	AUA1459		32		
35	Screw for terminal	AUA1863		33		
36	Washer—spring—screw	AUA1468		34		
37	Washer—lead	AUA1863		35		
38	Nut—terminal	AUA1662		36		
39	Condenser	AUA1661		37		
40	Clip—condenser	AUA5060		38		
41	Cover—end	AUA5059		39		
42	Nut—cover	AUA5078		40		
43	Washer—shakeproof	AUA878		41		
44	Connector—Lucar	AUA4648		42		
45	Sleeve (rubber)	AUA692		43		
		AUA504		44		

Alternatives

Use with AUB6015 only

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION
(C) GHN3101

Commencing
Illus.
Part
Number
No.

MODIFICATIONS
New
Part
Number
Change Point

REMARKS


		CARBURETTER		MODIFICATIONS		REMARKS	
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point	
1	Carburetter installation						
2	Carburetter assembly—front	AUD52	1				
3	Carburetter assembly—rear	AUC9186	1				
4	Body—front carburetter	AUC9187	1				
5	Pin—rear carburetter	AUC8728	1				
6	Pin—piston lifting	AUC8734	2				
7	Spring—pin	AUC1249	3				
8	Girclip—pin	AUC1151	4				
9	Chamber and piston assembly	AUC8070	5				
10	Screw—needle locking	AUC2057	6				
11	Gap and damper assembly	AUG8114	7				
12	Washer—cap (fibre)	AUC8400	8				
13	Spring—piston (red)	AUC4387	9				
14	Screw—chamber to body	AUC2175	10				
15	Jet assembly—front carburetter	AUD9072	11				
16	Jet assembly—rear carburetter	AUD9073	12				
17	Bearing—jet	AUC8460	13				
18	Washer—jet bearing (brass)	AUC8478	14				
19	Screw—jet locking	AUC2002	15				
20	Spring—jet locking	AUC2114	16				
21	Screw—jet adjusting	AUC8461	17				
22	Needle	AUC8461	18				
23	Needle—No. 6 standard—jet	AUD1005	19				
24	Needle						
25	Chamber—float	AUC1310	20				
26	Washer—support	AUC1329	21				
27	Grommet—front carburetter (rubber)	AUC1366	22				
28	Grommet—rear carburetter (rubber)	AUC1367	23				
29	Washer (rubber)	AUC1318	24				
30	Washer—plain	AUC1317	25				
31	Bolt—float-chamber fixing	AUC1319	26				
32	Float assembly	AUD8867	27				
33	Pin—hinged lever	AUC1152	28				
34	Lid—float-chamber—front carburetter	AUD9085	29				
35	Lid—float-chamber—rear carburetter	AUD9086	30				
36	Washer—lid	AUC9459	31				
37	Needle and seat assembly	AU68170	32				
38	Screw—lid	AUC2175	33				
39	Washer—spring—screw	AUC9246	34				
40	Spindle—throttle	AUC1302	35				
41	Disc—throttle	AUC3116	36				
42	Screw—disc	AUC1358	37				
43	Lever—throttle return—front carburetter	AUC1145	38				
44	Lever—throttle return—rear carburetter	AUD2101	39				

*SEE EXP. D.2.E.
P.H.G. 732*

SERVICE PARTS LIST

PLATE DB

THE MGB

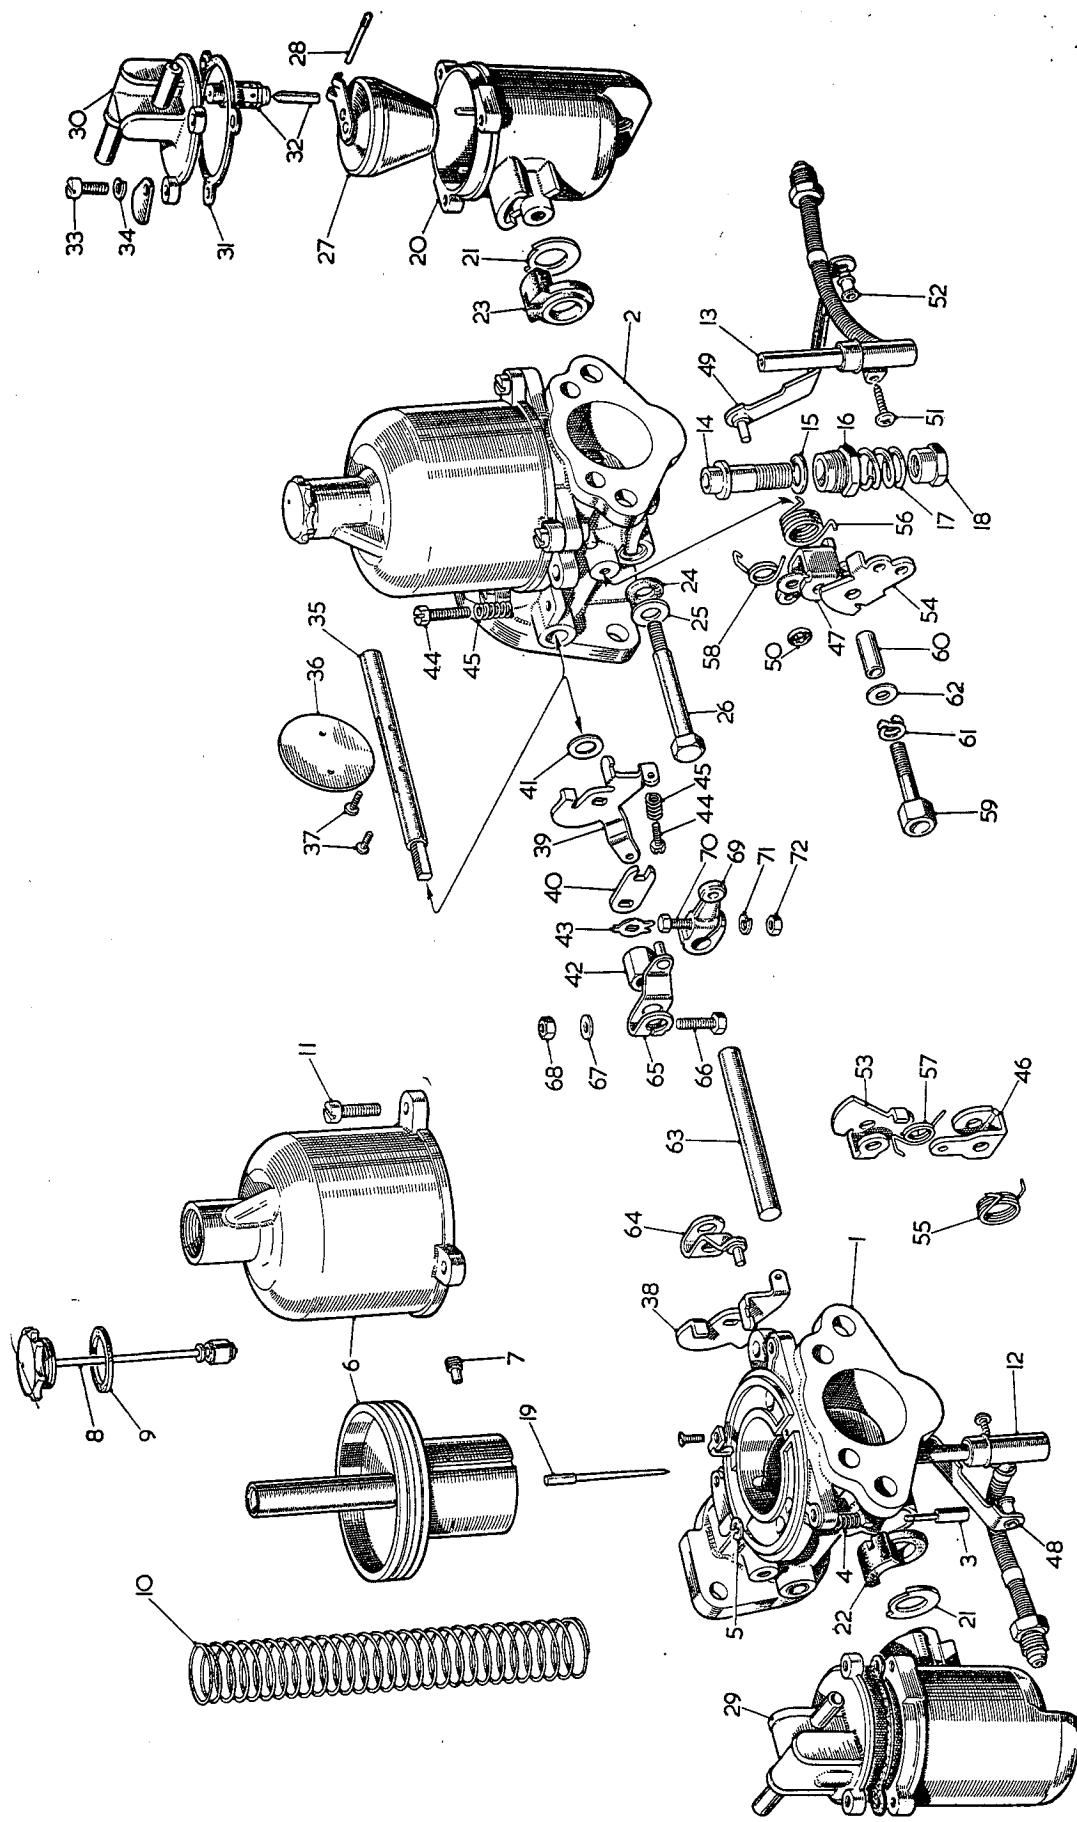


A 8798

To face page D.4

SERVICE PARTS LIST

PLATE DB

THE MGB

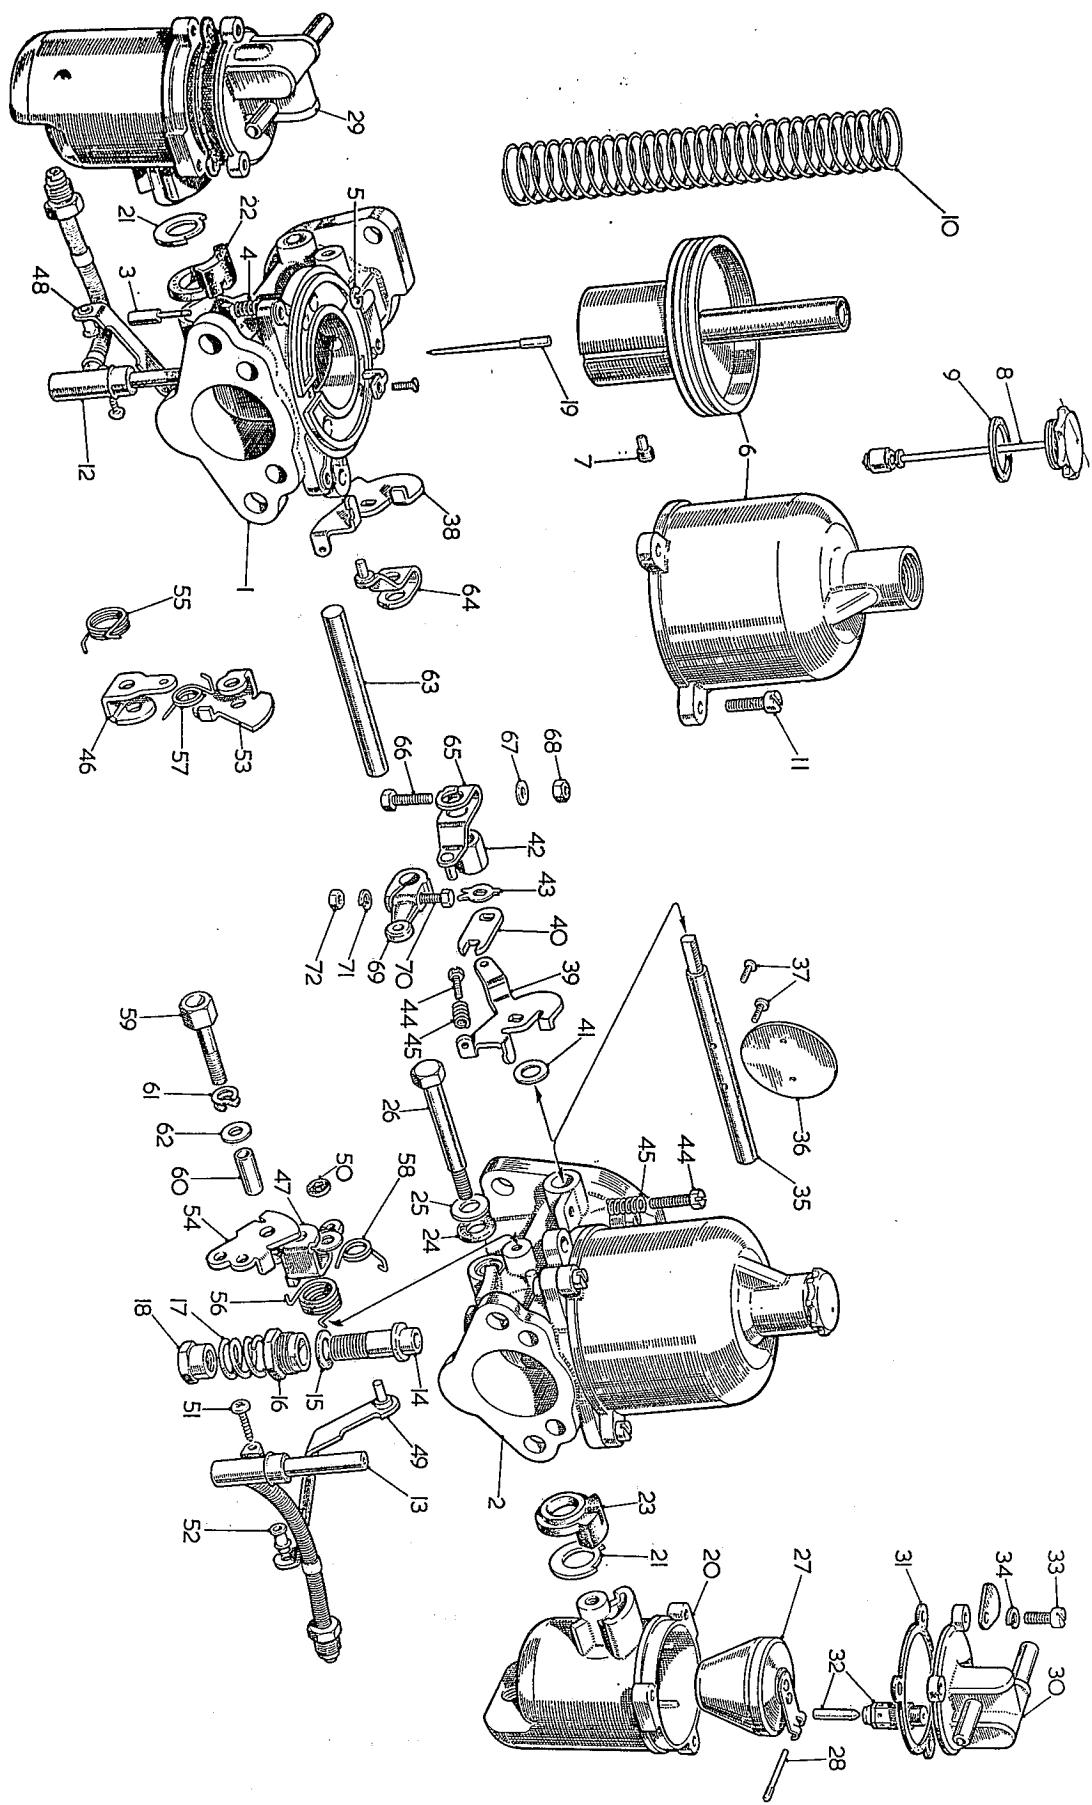

To face page D.5

SERVICE PARTS LIST


THE MGB

DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
Carburettor—continued					
1 Lever—lost motion	AUC1400	.40		2	
2 Washer—spacing	AUC2625	.41		2	
3 Nut—lever	AUC1424	.42		2	
4 Washer—tab—nut	AUC1206	.43		2	
5 Screw—throttle stop	AUC8483	.44		4	
6 Spring—throttle stop screw	AUC2451	.45		4	
7 Lever and link assembly—pick-up—front carburettor	AUD9092	.46		1	
8 Lever and link assembly—pick-up—rear carburettor	AUD9093	.47		1	
9 Lever—pick-up—front carburettor	AUC8457			1	
10 Lever—pick-up—rear carburettor	AUC1374			1	
11 Link—front carburettor	AUD2176			1	
12 Link—rear carburettor	AUD2177			1	
13 Washer—Starlock—link	AUC6002			2	
14 Bush	AUD2173			2	
15 Screw—link to jet	PTZ605	.51		2	
16 Lever—cam—front carburettor	AUD22163	.53		1	
17 Lever—cam—rear carburettor	AUD2164	.54		1	
18 Spring—pick-up lever—front carburettor	AUC8462	.55		1	
19 Spring—pick-up lever—rear carburettor	AUC8375	.56		1	
20 Spring—cam lever—front carburettor	AUD2050	.57		1	
21 Spring—cam lever—rear carburettor	AUD2049	.58		1	
22 Bolt—pivot	AUC1426	.59		2	
23 Tube—pivot bolt	AUC8473	.60		2	
24 Washer—spring—pivot bolt	AUD2076	.61		2	
25 Washer—distance	AUC5032	.62		4	
26 Rod—jet connecting	AUC1462	.63		1	
27 Lever and pin assembly—front carburettor	AUE86	.64		2	
28 Lever and pin assembly—rear carburettor	AUE87	.65		2	
29 Lever and pin assembly—front carburettor	AUC8965	2			No longer available. Use AUE86
30 Lever and pin assembly—rear carburettor	AUD9002	2			No longer available. Use AUE87
31 Bolt—lever	AUC2694	.66		4	
32 Washer—bolt	AUC8396	.67		4	
33 Nut—bolt	AJD80122	.68		4	
34 Lever—choke	AUC1501	.69		1	
35 Bolt—lever	AUC2694	.70		1	
36 Washer—spring	AUC2246	.71		1	
37 Nut—bolt	AJD80122	.72		1	

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	MODIFICATIONS				REMARKS
		Part Number	Qty. Illus. per Veh.	New Part Number	Change Point	
1	Shield assembly—heat	HEAT SHIELD				
2	Joint—heat shield and carburetter	12H719	1	1		
3	Distance piece—carburetter to heat shield	AEC2183	2	6		
4	Distance piece—carburetter	12H712	3	2		
5	Heater—induction	1H1257	1			
6	Cleaner—air—front	AIR CLEANER				
7	Cleaner—air—rear	AHH6447	4	1		
8	Bolt	AHH6448	1			
9	Washer—plain	17H2541	5	4		
10	Grommet	PWZ205	6	4		
11	Spacer	17H2540	7	4		
12	Element	17H2542	8	4		
13	Plate assembly—base—front cleaner	17H2538	9	2		
14	Plate—base—rear cleaner	17H2543	10	1		
15	Seal (rubber)	17H2537	1			
16	Casting—base	17H2544	11	2		
17	Gasket—cleaner to carburetter	17H2545	12	2		
18	Hose—cleaner to rocker cover	ACG5184	13	2		
19	Clip—hose	AHH6464	14	1		
20	Seal—air cleaner coupling	ACA5290	15	2		
21	Plate—fixing—rear air cleaner	AHH6465	16	1		
22	Plate assembly—fixing—front air cleaner and choke control bracket	AHH6732	17	1		
		AHH6731				

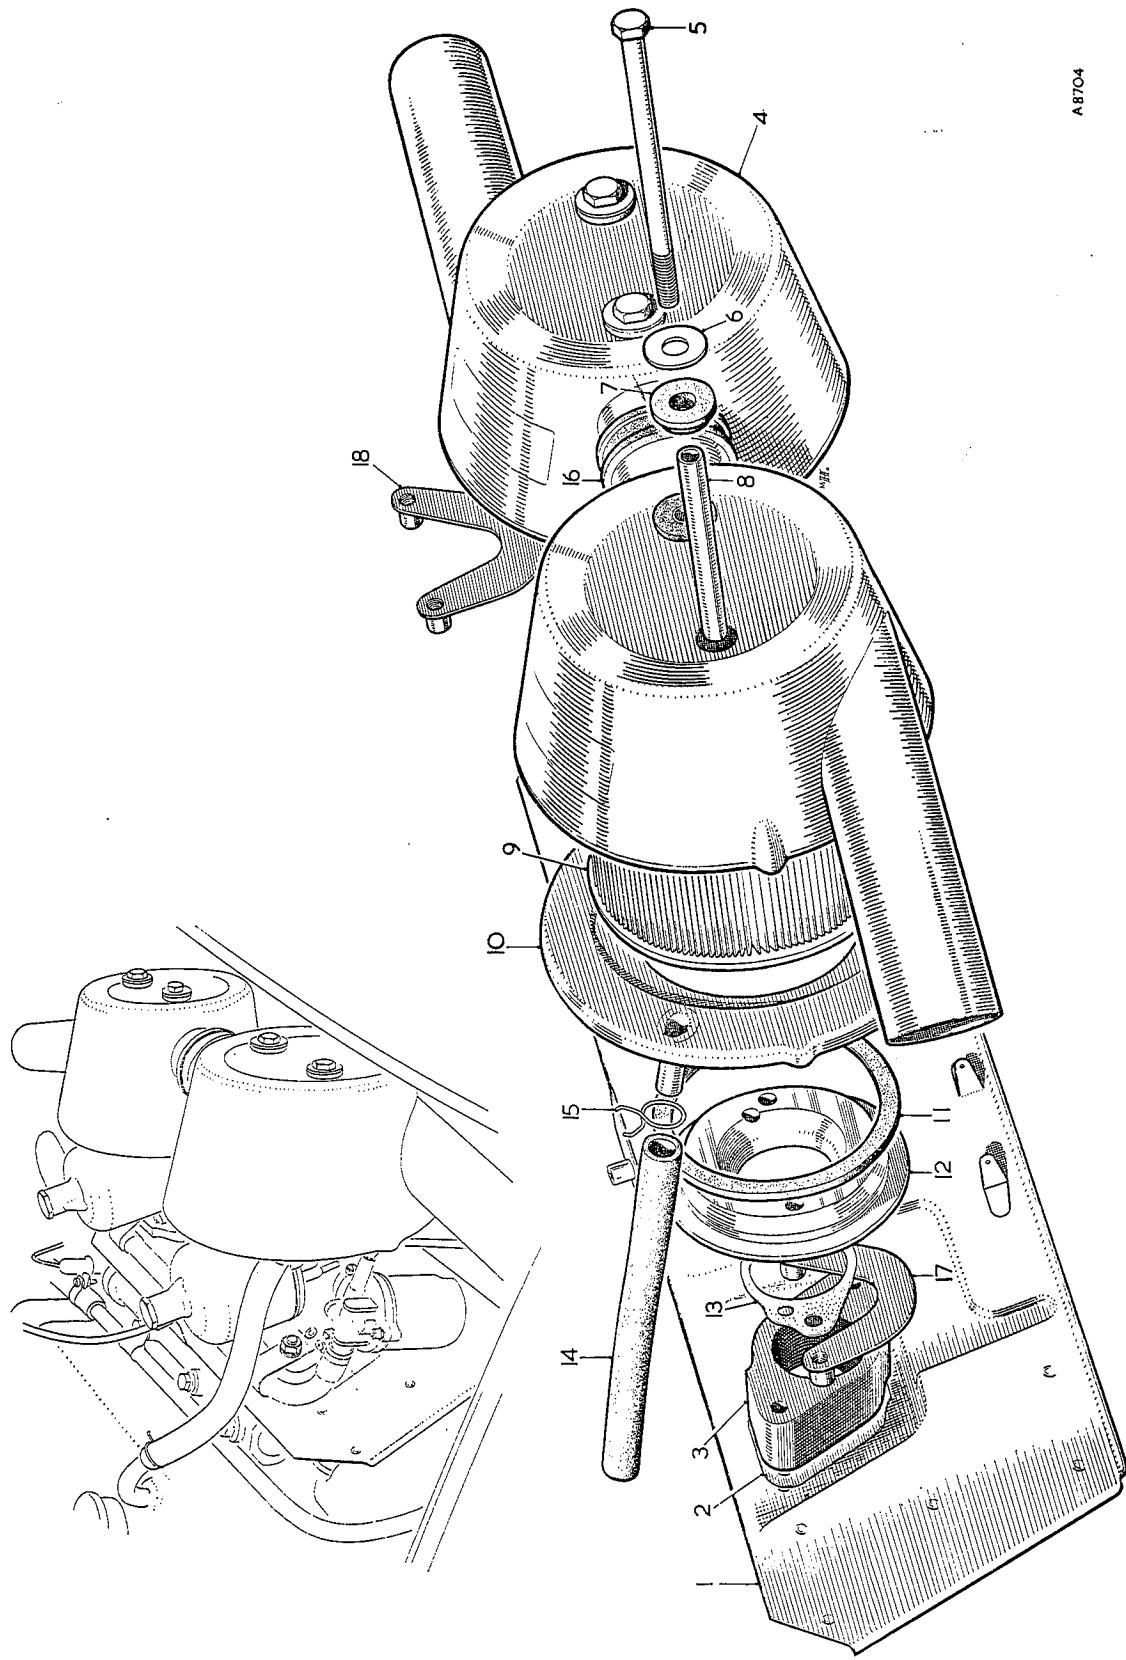


A8704

To face page D.6

SERVICE PARTS LIST

PLATE E

THE MGB

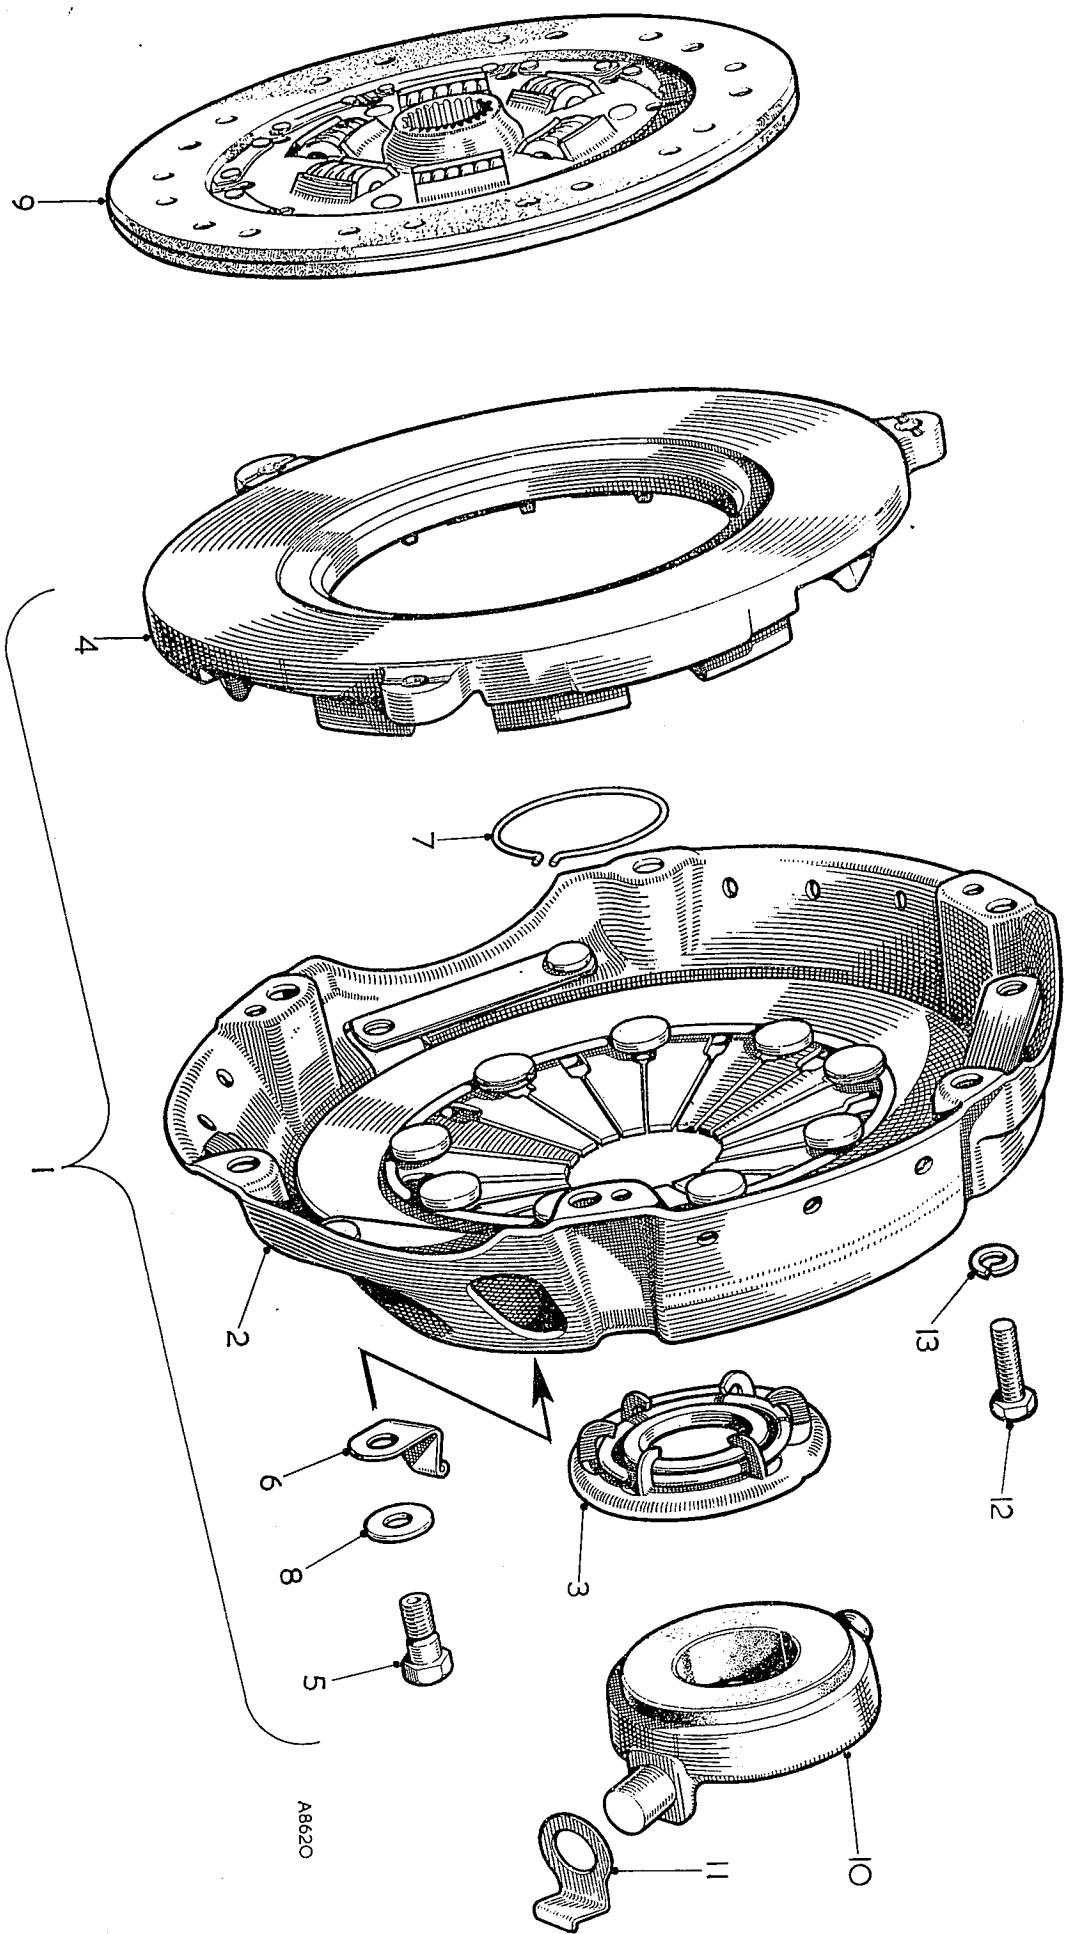

To face page E.1

SERVICE PARTS LIST

THE MGB

ITEM No.	DESCRIPTION	COMMENCING (E) 18G/101		MODIFICATIONS		REMARKS
		Part Number	ILLUS. No.	Qty. per Veh.	New Part Number	
CLUTCH						
1	Clutch assembly	NSP 13H484		1	1 17H-8181-1	
2	Cover assembly	27H3280		2	1	
3	Cover with straps and diaphragm spring	27H3281		3	1	
4	Plate—release—housing and thrust ring	27H3282		4	1	
5	Plate—pressure	27H3283		5	3	
6	Bolt—strap	27H3284		6	3	
7	Clip—pressure plate	27H3285		7	1	
8	Circlip—release plate	7H7553		8	3	
9	Washer—strap	12H579		9	1	
10	Plate assembly—driven	8C8348		1 set		
11	Lining and rivets	7H3078		22		
12	Rivet	27H3286		10	1	
13	Bearing assembly—release	NSP		1		
14	Ring—carbon	22B66		11	2	
15	Retainer—bearing	HZS0507		12	6	
16	Screw—clutch to flywheel	2K5319		13	6	
17	Washer—spring—screw					

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3/101

MODIFICATIONS

REMARKS

DESCRIPTION	RHD	LHD	Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point	REMARKS
Pedal—clutch	Pedal—clutch		AHH6154	1	1			
Bush			AHH6505	1				
Pad—pedal (rubber)			185794	2				
Tube—distance—clutch pedal			AHH5100	3				
Spring—pedal pull-off			183795	4				
Pin—clevis—fork end to pedal			180154	5				
Washer—plain—pin			CLZ0514	6				
Bolt—fulcrum—pedal to bracket			PWZ105	7				
Nut—bolt								
Spacer—pedal fulcrum								
Washer—plain								

MASTER CYLINDER ASSEMBLY

14

AHH6553

1

Cylinder—clutch master								
Barrel and tank								
Cap—filter			17H7836	8				
Seal—cap			17H7407	9				
Boot			17H7408	10				
Circlip			17H7411	11				
Rod—push			17H7560	12				
Cup—secondary			17H7985	13				
Fiston			17H7123	14				
Washer—piston			17H7860	15				
Cup—main			17H7984	16				
Retainer—spring			17H7122	17				
Spring			17H7554	18				
Screw—cylinder to box			17H7981	19				
Screw—cylinder and stiffener to box			HZS0507	20				
Washer—spring—screw			HZS0508	21				
Nut—screw			LWZ205	22				
Pipe—master cylinder to hose			ENZ105	23				
Pipe—master cylinder to hose			AHH6362	24				
Hose—clutch			ACB8754	25				
Locknut—hose			7H7857	26				
Washer—shakeprot			2K8686	27				
Gasket—hose to pipe			LWZ510	28				
			3H550	29				


[Sec page M.1]

Cylinder—clutch master								
Barrel and tank								
Cap—filter			17H7836	8				
Seal—cap			17H7407	9				
Boot			17H7408	10				
Circlip			17H7411	11				
Rod—push			17H7560	12				
Cup—secondary			17H7985	13				
Fiston			17H7123	14				
Washer—piston			17H7860	15				
Cup—main			17H7984	16				
Retainer—spring			17H7122	17				
Spring			17H7554	18				
Screw—cylinder to box			17H7981	19				
Screw—cylinder and stiffener to box			HZS0507	20				
Washer—spring—screw			HZS0508	21				
Nut—screw			LWZ205	22				
Pipe—master cylinder to hose			ENZ105	23				
Pipe—master cylinder to hose			AHH6362	24				
Hose—clutch			ACB8754	25				
Locknut—hose			7H7857	26				
Washer—shakeprot			2K8686	27				
Gasket—hose to pipe			LWZ510	28				
			3H550	29				

SERVICE PARTS LIST

PLATE EA

THE MGB

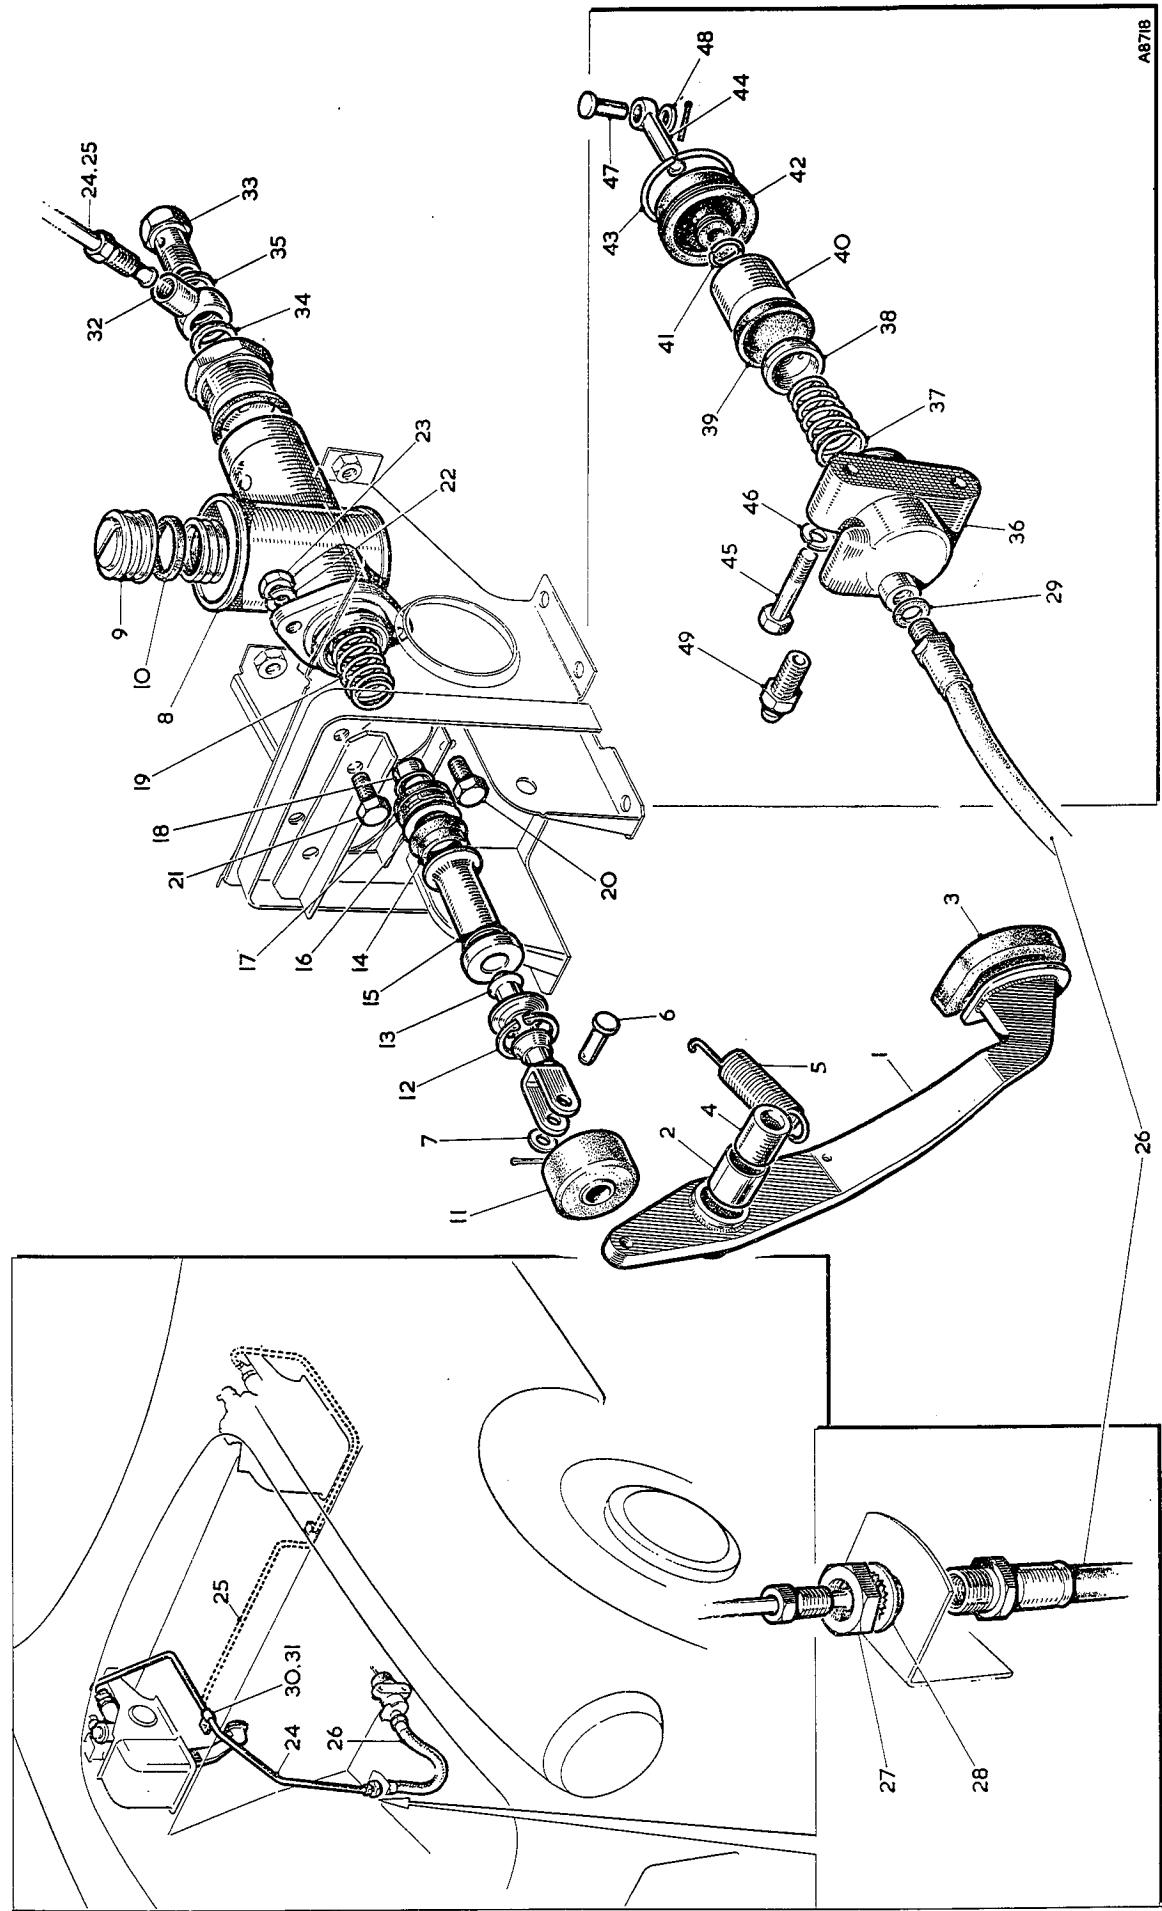


To face page E.2

SERVICE PARTS LIST

PLATE EA

THE MGB

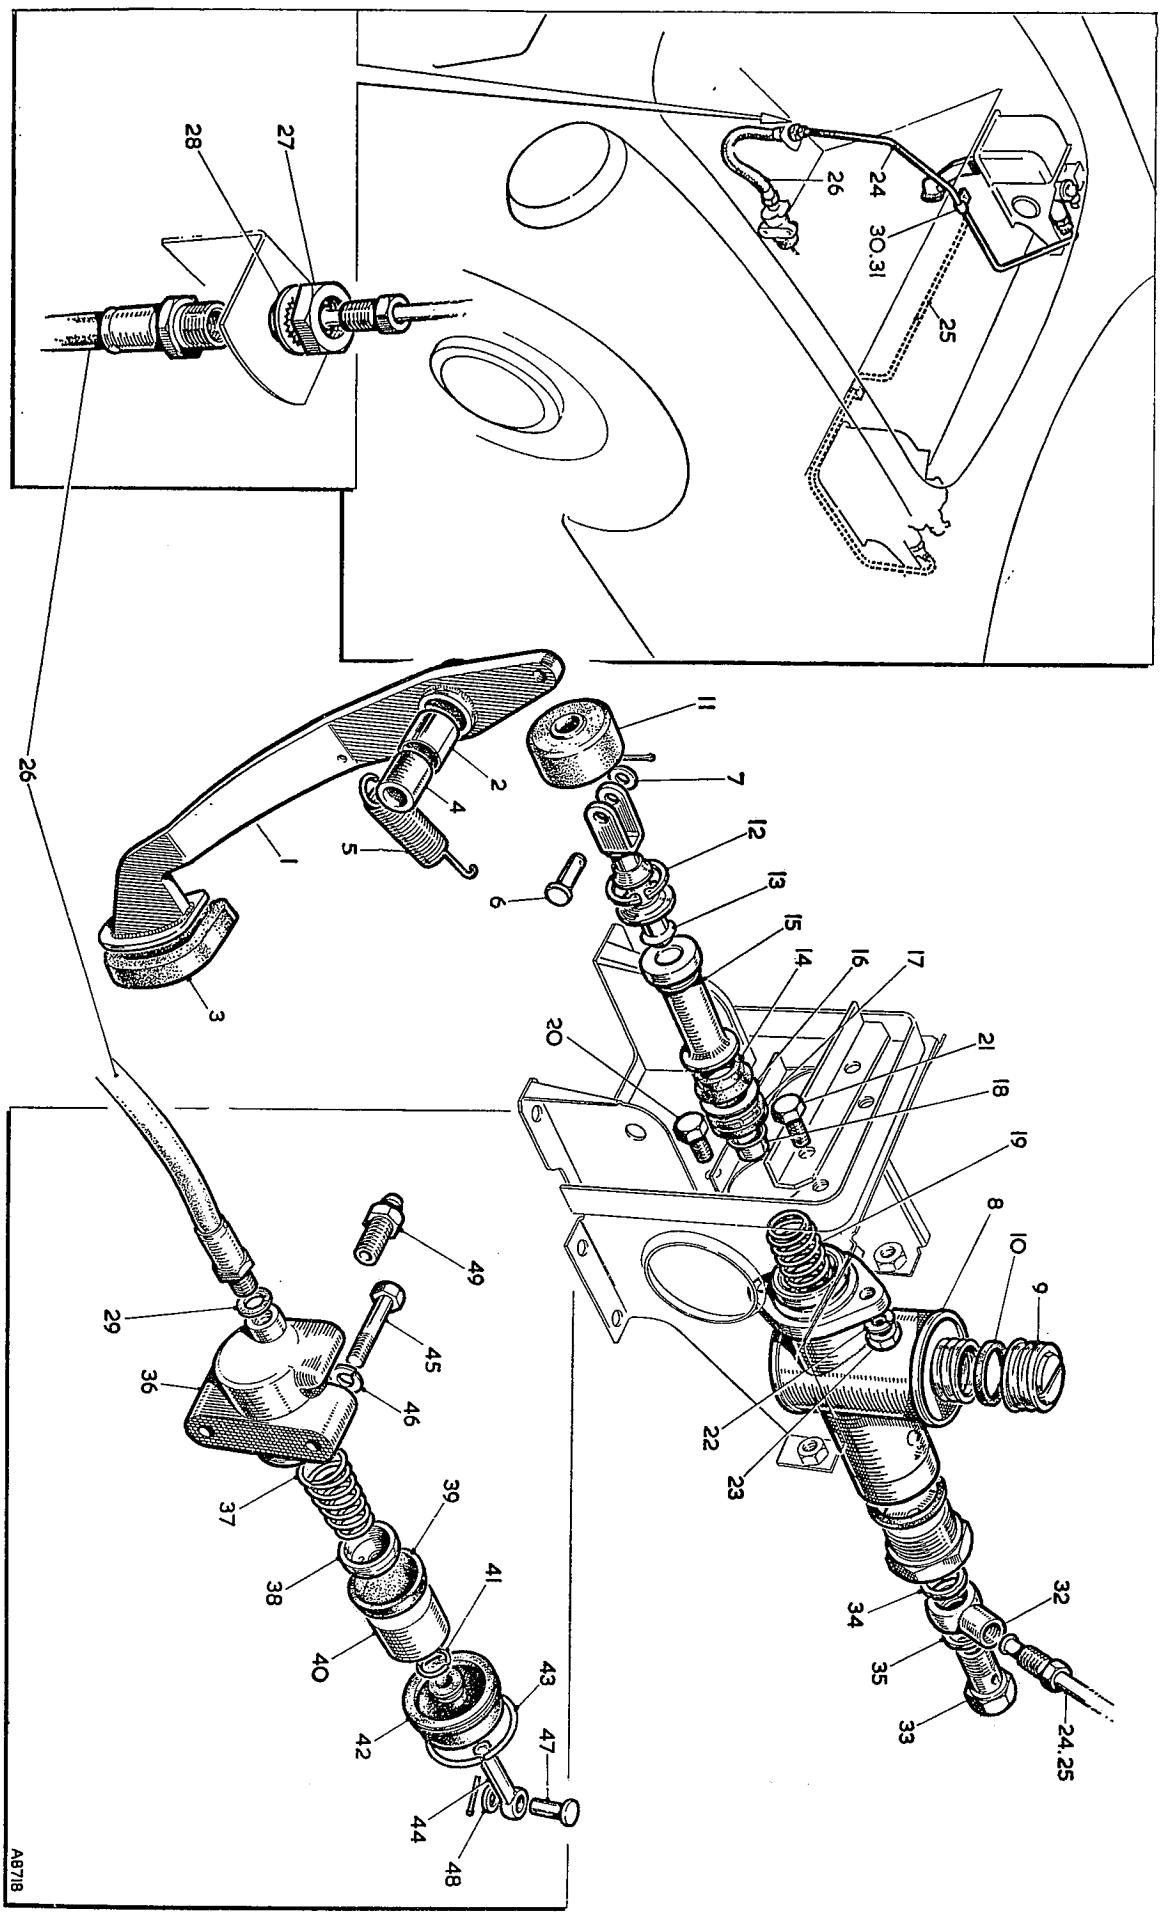

To face page E.3

A8718

SERVICE PARTS LIST

THE MGB


Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Qty. per Veh.	
Clutch Master Cylinder—continued						
1	Clip—clutch pipe to bulkhead	RHD	PCIR0411	30	1	
2	Clip—clutch pipe to bulkhead	LHD	PCIR0411	31	2	
3	Connection—banjo	BHA44310	32	1		
4	Bolt—banjo connection	11D5264	33	1		
5	Gasket	3H2287	34	1		
6	Kit—master cylinder repair	3H1550	35	1		
7	Boot	8G8424				
8	Cup—secondary					
9	Washer—piston					
10	Cup—main					
11						
 CLUTCH OPERATING CYLINDER						
12	Cylinder assembly—clutch operating	17H7878				
13	Body	7H7983	36	1		
14	Spring—cup filler	7H7959	37	1		
15	Filler—piston cup	7H7560	38	1		
16	Cup—piston	7H7004	39	1		
17	Piston	7H7003	40	1		
18	Clip—boot (small)	7H7958	41	1		
19	Boot	7H7957	42	1		
20	Clip—boot (large)	7H7956	43	1		
21	Rod—push	7H7954	44	1		
22	Bolt—cylinder to gearbox	H CZ0615	45	2		
23	Washer—spring—bolt	LWZ206	46	2		
24	Pin—clevis—cylinder to clutch fork	2K5922	47	1		
25	Washer—plain—pin	2K1203	48	1		
26	Screw—bleeder	3H554	49	1		
27	Kit—clutch operating cylinder repair	8G8420				
28	Cup—piston					
29	Boot					



SERVICE PARTS LIST

PLATE F

THE MGB

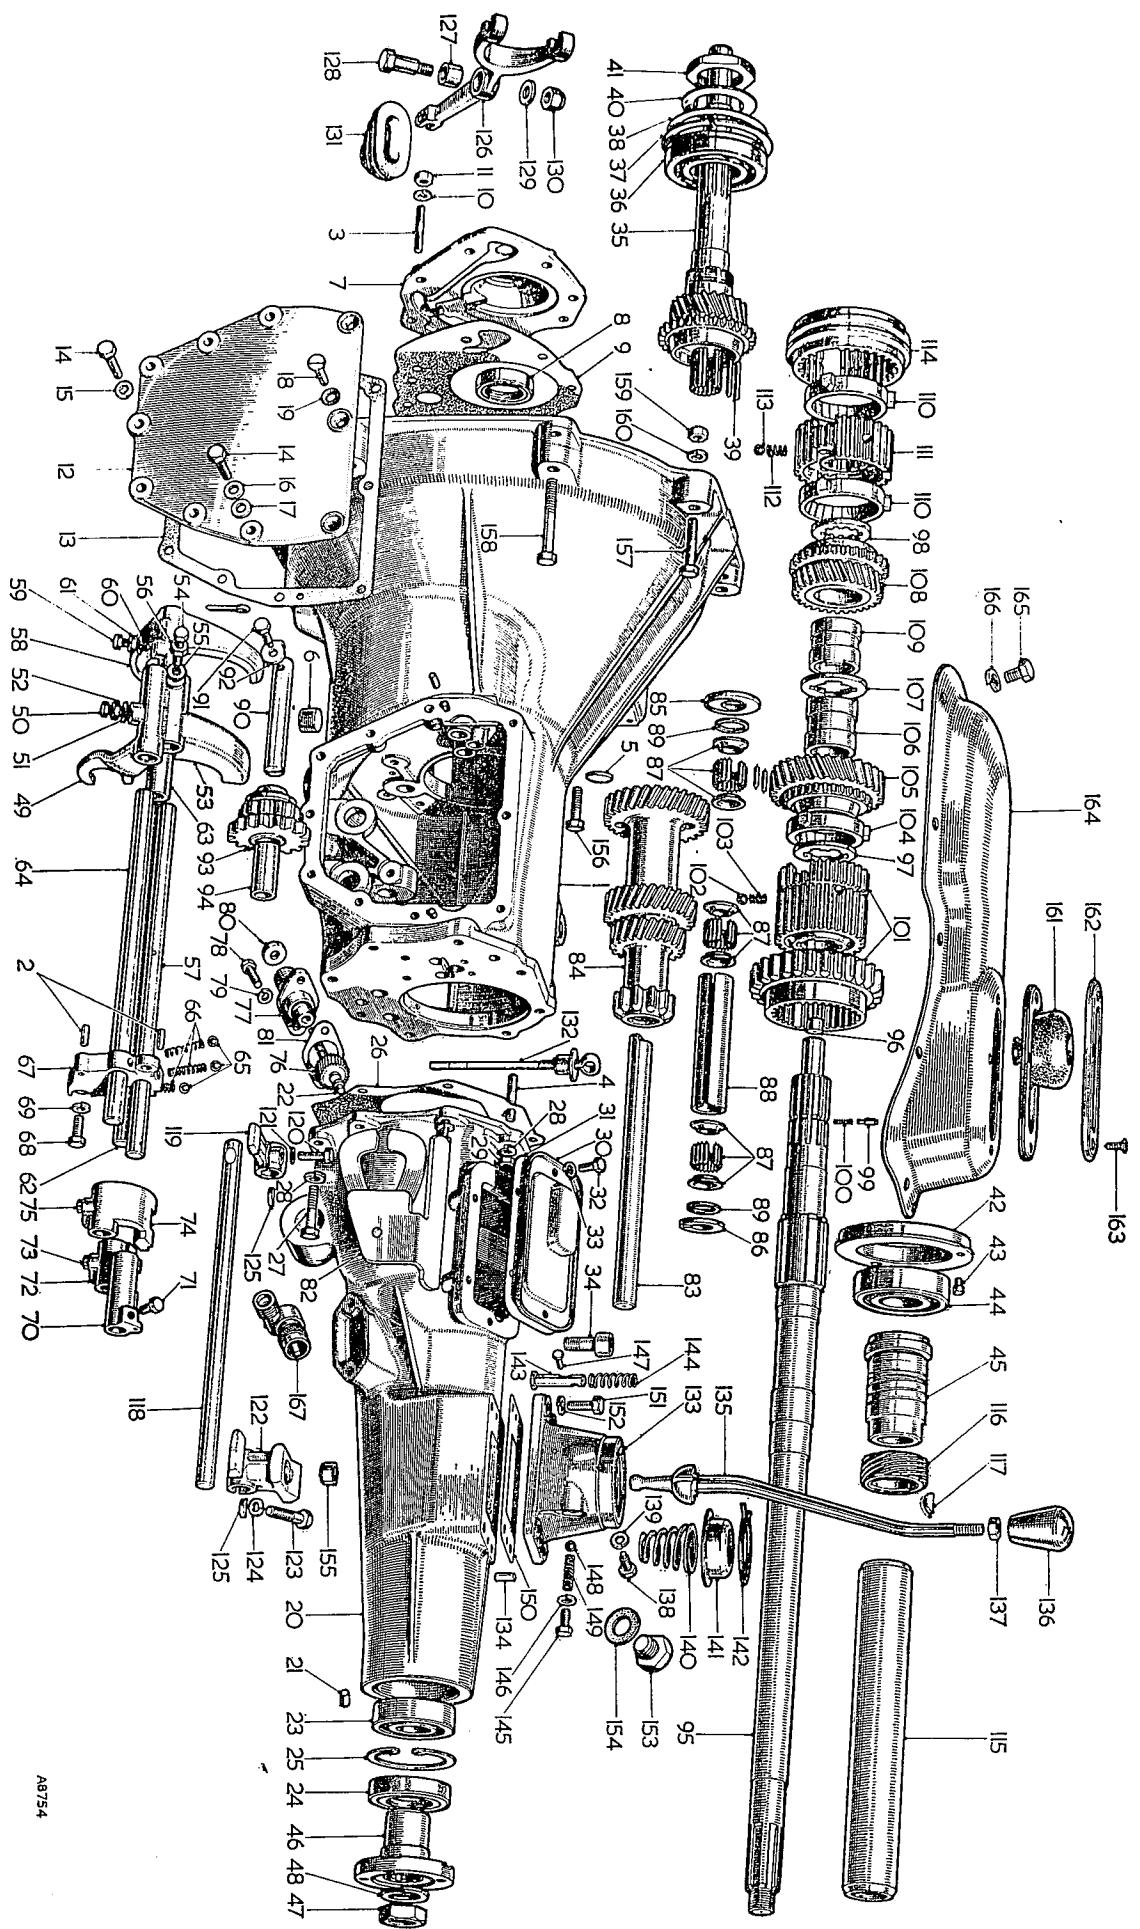

To face page F.1

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (E) 18G/101	PART NUMBER	ILLUS. NO.	QTY. PER VEH.	MODIFICATIONS		REMARKS
					NEW PART NUMBER	CHANGE POINT	
GEARBOX—STANDARD							
Gearbox assembly							
1 Dowel—locating block to gearbox	22H211	1	1				
2 Stud—front cover	48G283	1	1				
3 Stud—rear extension	AEG3108	.2	.2				
4 Seal—welch—casing	53K2172	3	7				
5 Plug—drain	CH52513	4	2				
6 Plug—oil	2K8158	5	1				
7 Plug—drain	2K5830	6	1				
Cover assembly—front	48G266	7	1				
8 Seal—oil	1H3138	8	1				
9 Seal—oil	1G3666	9	1				
10 Joint washer—front cover to casing	LWZ305	10	7				
11 Washer—spring—stud—front cover to casing	FNZ105	11	7				
12 Nut—stud		12	1				
13 Cover—gearbox side	1G3656	13	1				
14 Joint washer—side cover to casing	1G3658	13	1				
15 Screw—gearbox side cover	53K147	14	7				
16 Washer—spring—screw	LWZ305	15	6				
17 Washer—plain—screw	PWZ105	16	1				
18 Washer—fibre screw	2K4958	17	1				
19 Screw—countersunk—gearbox side cover	53K162	18	3				
20 Washer—shakeproof—screw	6K9012	19	3				
21 Extension—rear	22H150	20	1				
22 Plug—taper—rear extension	2K1356	21	2				
23 Button—thrust—speedometer pinion	IA3073	22	1				
24 Bearing—rear extension	6K229	23	1				
25 Seal—oil—rear extension	1H3275	24	1				
26 Circlip—oil seal	CCN240	25	1				
27 Joint washer—extension to casing	ICB712	26	1				
28 Screw—extension to casing	HCZ0510	27	6				
29 Washer—spring—stud	LWZ305	28	6				
30 Washer—spring—stud	LWZ305	29	2				
31 Nut—stud—rear extension to casing	FNZ105	30	1				
32 Cover—side—rear extension	IG5809	31	1				
33 Joint washer—side cover to extension	IG3810	32	6				
34 Screw—side cover to extension	HZ50405	33	6				
35 Washer—spring—screw	LWZ304	34	1				
Breather assembly	1H3264	35	1				
Shaft—1st motion	22H156	36	1				
37 Bearing	6K885	37	1				
38 Ring—spring—bearing	6K886						
39							

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(E) 1867/101

Part Number

Illus.
No.

Qty.
per
Veh.

New
Part
Number

Change Point

REMARKS

MODIFICATIONS


Gearbox—Standard—continued

1	Shim—1st motion shaft—.002" (.051 mm.)	6K907	38	A/R	
2	Shim—1st motion shaft—.004" (.102 mm.)	6K908	39	A/R	
3	Roller—needle—1st motion shaft	6K892	39		
4	Washer—locking—1st motion shaft nut	1A3717	40		
5	Nut—1st motion shaft	1G3584	41		
6	Housing—rear bearing	1G3586	42	1	
7	Peg—locating—rear bearing housing	1G3580	43	1	
8	Bearing—rear—3rd motion shaft	6K528	44	1	
9	Distance piece assembly—speedometer gear to rear bearing	A/EH3242	45	1	
10	Flange—3rd motion shaft	1H3804	46	1	
11	Nut—3rd motion shaft flange	FNZ612	47	1	
12	Washer—spring—nut	LWZ212	48	1	
13	Fork—reverse	1LG3134	49	1	
14	Screw—reverse fork locating	2AB341	50	1	
15	Washer—shakproof—screw	LWN404	51	1	
16	Nut—screw—fork locating	FNN504	52	1	
17	Fork—1st and 2nd speed	1LG3135	53	1	
18	Screw—fork locating	2AB341	54	1	
19	Washer—shakproof—screw	LWN404	55	1	
20	Nut—screw—fork locating	FNN504	56	1	
21	Rod—1st and 2nd speed fork	1LG3070	57	1	
22	Fork—3rd and 4th speed	1H3257	58	1	
23	Screw—fork locating	2AB341	59	1	
24	Washer—shakproof—screw	LWN404	60	1	
25	Nut—screw—fork locating	FNN504	61	1	
26	Rod—3rd and 4th speed fork	1LG3140	62	1	
27	Distance piece—3rd and 4th speed fork rod	1H3258	63	1	
28	Rod—reverse fork	1LG3137	64	1	
29	Ball—fork locating	BLS110	65	3	
30	Spring—locating ball	22A75	66	3	
31	Block—sliding shaft locating	1LG3187	67	1	
32	Screw—locating block to gearbox	HNS0407	68	2	
33	Washer—spring—screw	LWN504	69	2	
34	Selector—1st and 2nd gear	1LG3132	70	1	
35	Screw—selector locating	1G3708	71	1	
36	Selector—3rd and 4th gear	1LG3133	72	1	
37	Screw—selector locating	1G3708	73	1	
38	Selector—reverse gear	1LG3131	74	1	
39	Screw—selector locating	1G3708	75	1	

SERVICE PARTS LIST

PLATE F

THE MGB

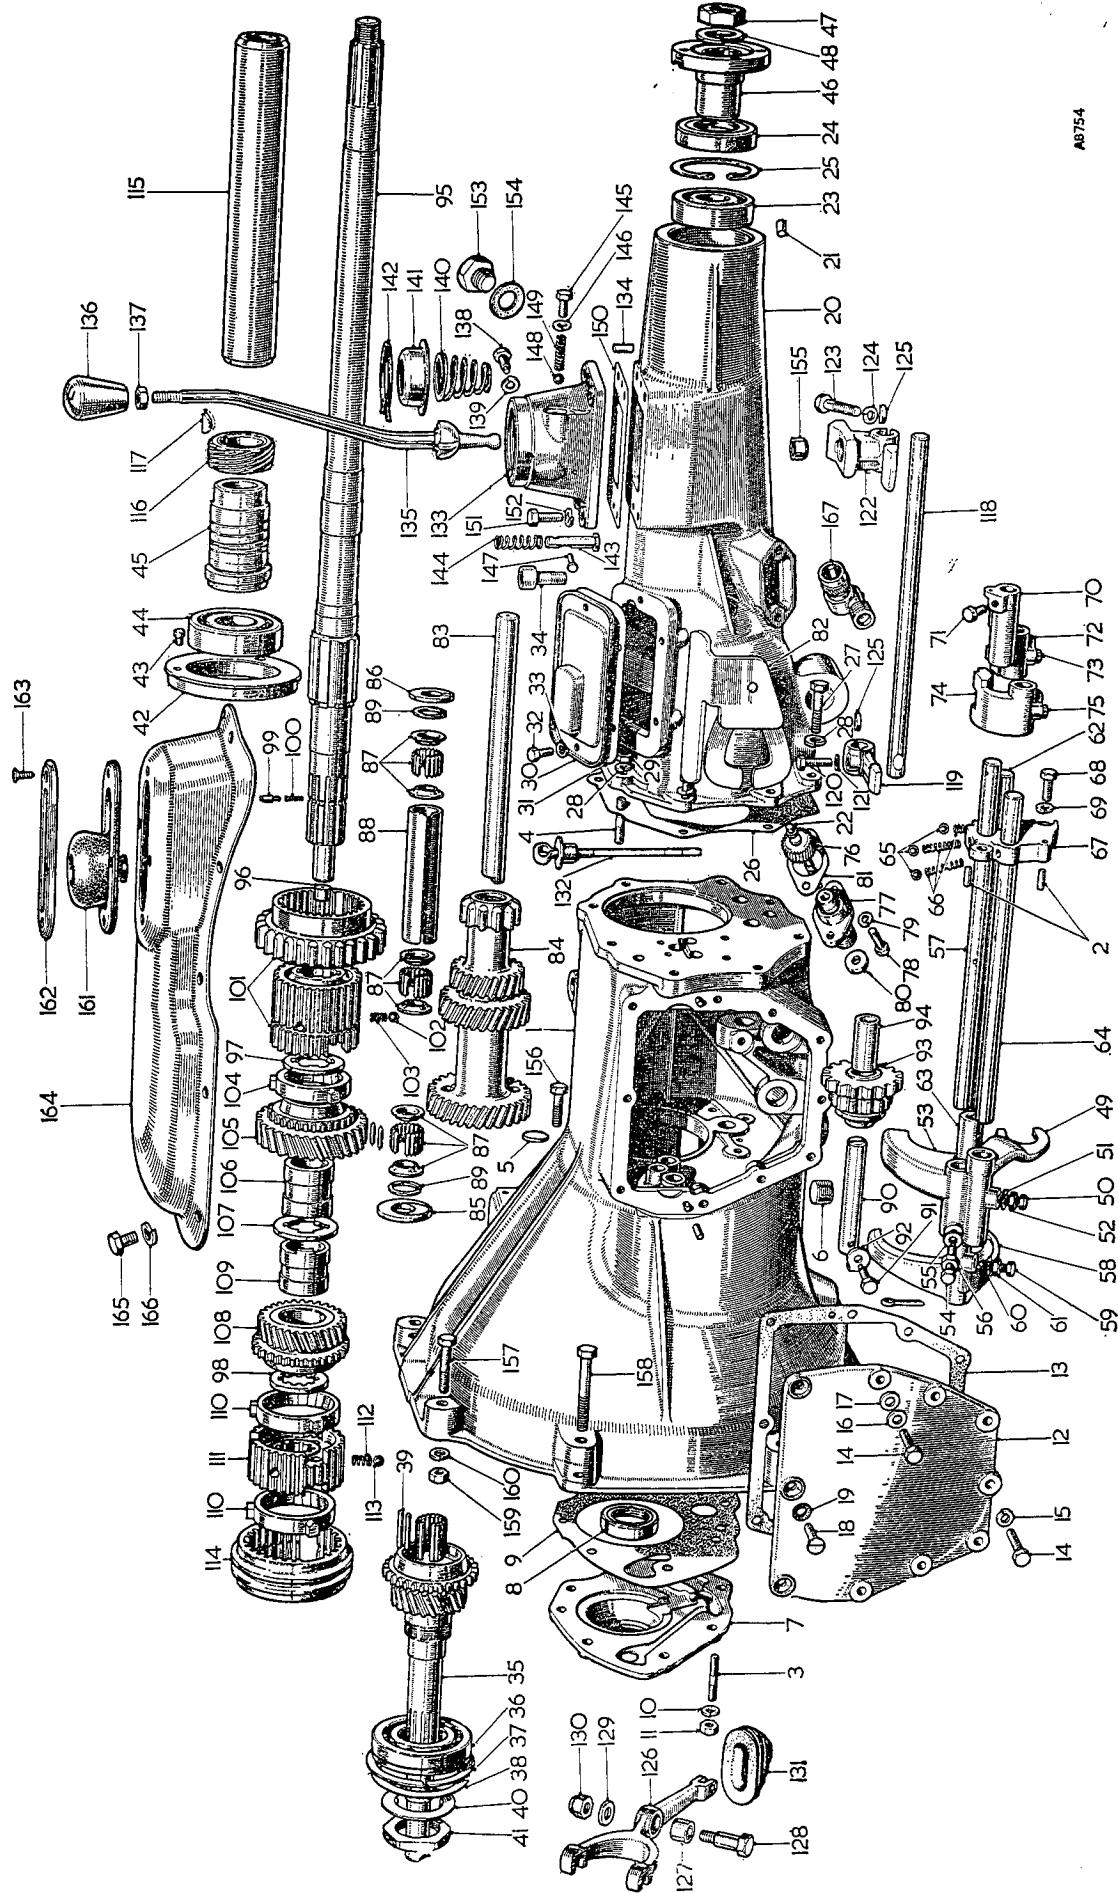


To face page F.2

AB754

SERVICE PARTS LIST

PLATE F

THE MGB

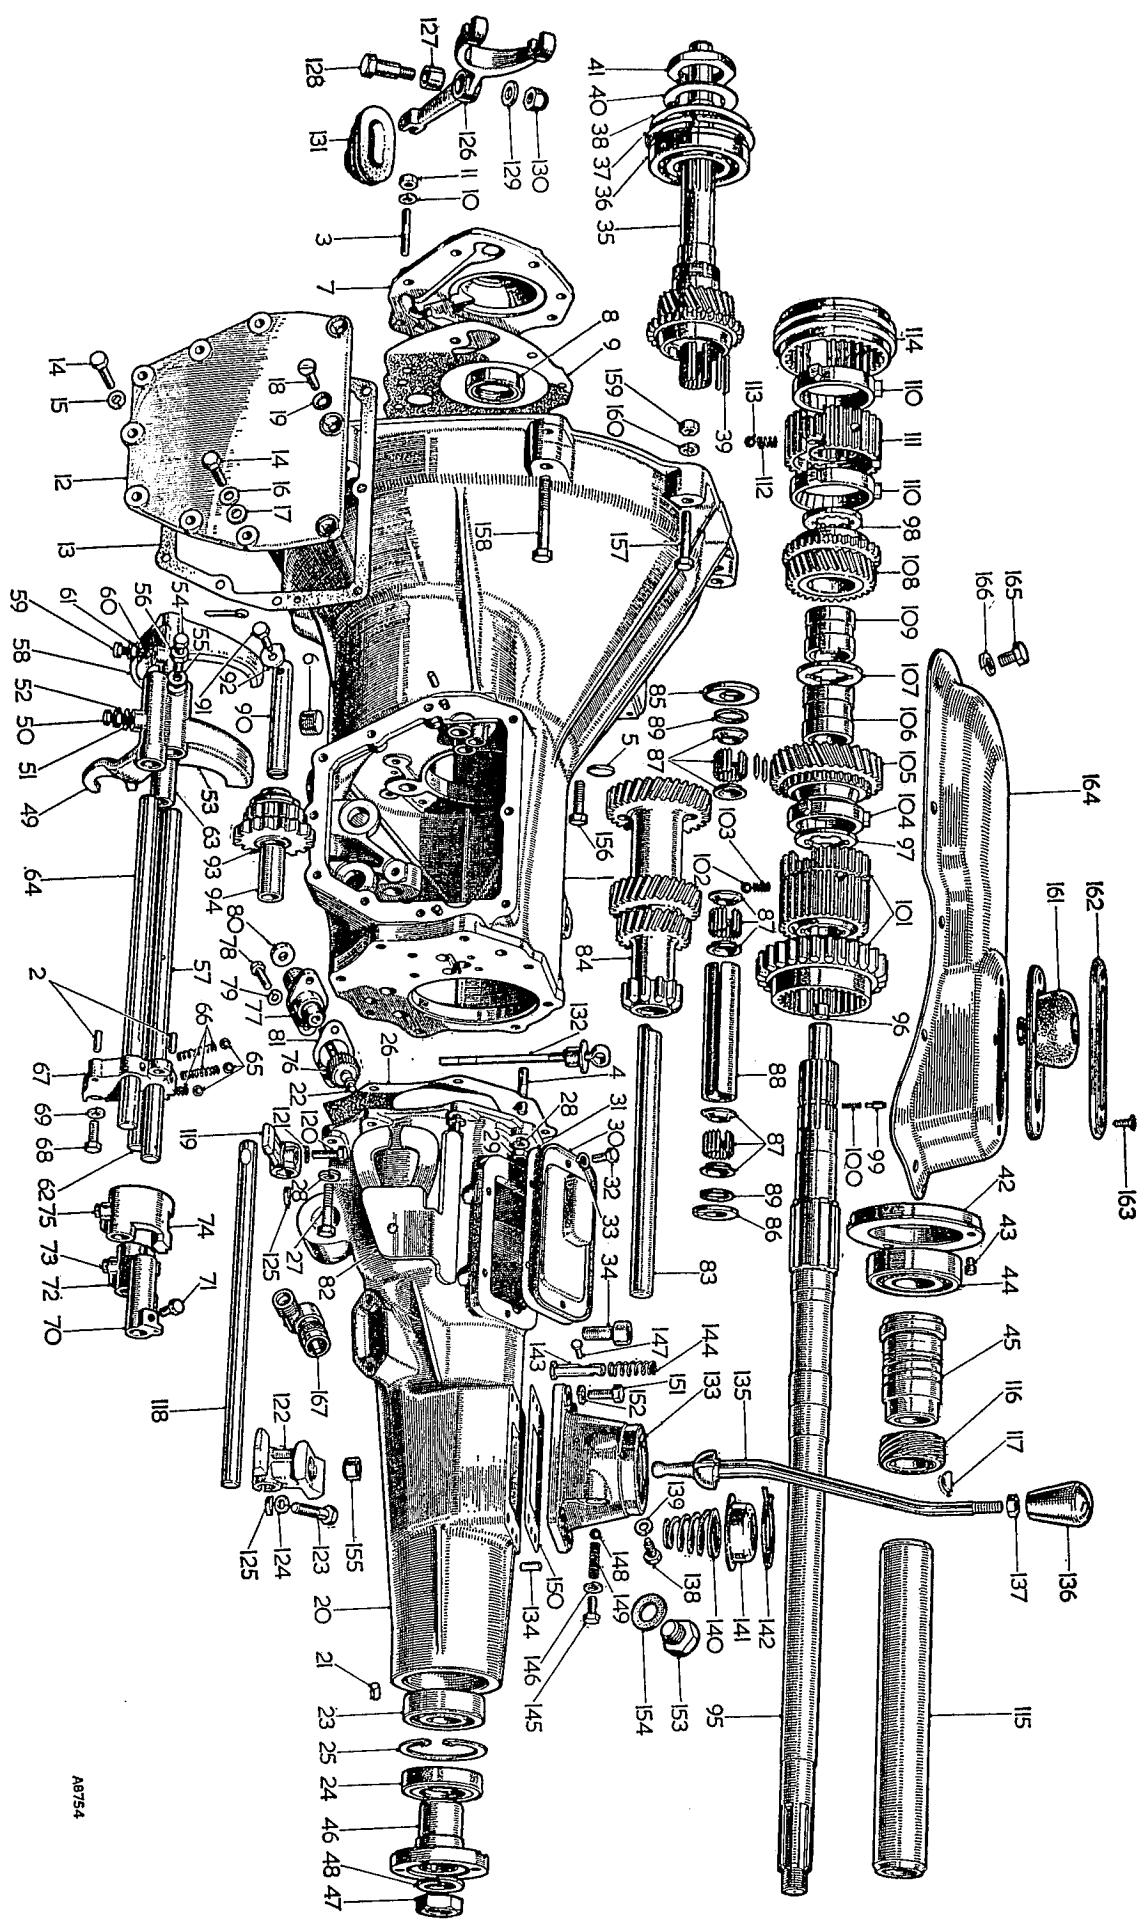

To face page F.3

A8754

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (F) 18G/101	PART NUMBER	ILLUS. NO.	QTY. PER VEH.	MODIFICATIONS		REMARKS
					NEW PART NUMBER	CHANGE POINT	
Gearbox—Standard—continued							
Pinion—speedometer							
1 Bush—speedometer pinion	11G3264	76	1				
2 Screw—speedometer pinion	22H29	77	1				
3 Washer—lock—screw	H25406	78	2				
4 Seal—oil—speedometer pinion	LWZ404	79	2				
5 Joint washer—speedometer pinion bush	2A3254	80	1				
6 Arm assembly—interlocking	11G3228	81	1				
7 Arm assembly	22H35	82	1				
8 Layshaft	1H3305	83	1				
Gear unit—layshaft	22H54	84	1				
9 Washer—thrust—front—laygear	IG3576	85	A/R				
10 Washer—thrust—rear—154 to .156" (3.912 to 3.962 mm.)	IG3577	86	A/R				
11 Washer—thrust—rear—157 to .158" (3.988 to 4.013 mm.)	IG3578	86	A/R				
12 Washer—thrust—rear—160 to .161" (4.06 to 4.085 mm.)	IG3579	86	A/R				
13 Washer—thrust—rear—163 to .164" (4.136 to 4.162 mm.)	IG3580	87	A/R				
14 Roller—needle bearing—layshaft	3H2865	87	3				
15 Tube—distance—laygear bearing	11G3026	88					
16 Ring—spring—layshaft	11G3027	89					
17 Shaft—reverse	11G3124	90					
18 Shaft—reverse	11G3093	91					
19 Screw—reverse shaft	IG3581	91					
20 Washer—locking—screw	1B3363	92					
Gear assembly—reverse	22H83	93	1				
21 Bush—reverse gear	11G3092	94	1				
22 Shaft—3rd motion	1H3277	95	1				
23 Restrictor—oil	IA1964	96	1				
24 Washer—thrust—rear—3rd motion shaft	IG3492	97	1				
25 Washer—thrust—front—1565 to .1575" (3.962 to 3.988 mm.)	1IG3127	98	A/R				
26 Washer—thrust—front—1585 to .1595" (4.013 to 4.039 mm.)	1IG3128	98	A/R				
27 Washer—thrust—front—1605 to .1615" (4.046 to 4.085 mm.)	1IG3129	99	A/R				
28 Washer—thrust—front—1605 to .1615" (4.046 to 4.085 mm.)	IG3268	99	A/R				
29 Peg—thrust washer	2K8960	100	1				
30 Spring—peg	48G206	101	1				
First speed wheel and synchronizer assembly							
31 Ball—synchronizer	BL3109	102	3				
32 Spring—synchronizer ball	6K884	103	3				
33 Baulk ring—2nd speed gear	11G3063	104	1				
Gear—2nd speed	11G3064	105	1				
34 Bush—2nd speed mainshaft gear	11G3028	106	1				
35 Ring—interlocking—2nd and 3rd gear bushes	IG3381	107	1				
36 Gear—3rd speed	1G3594	108	1				
37 Bush—3rd speed gear	11G3029	109	1				
38 Baulk ring—3rd and 4th speed gear	11G3022	110	2				
39							
40							
41							

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(E) 18G/101

Part
Number

MODIFICATIONS

Change
Point


REMARKS

1	Gearbox—Standard—continued				
2	Synchronizer—3rd and 4th speed	1G3597	111	1	
3	Spring—synchronizer ball	6K884	112	3	
4	Ball—synchronizer	BLS109	113	3	
5	Coupling—sliding—3rd and 4th speed	1G3898	114	1	
6	Distance piece—3rd motion shaft	1LG3228	115	1	
7	Gear—speedometer	1H3369	116	1	
8	Key—speedometer gear	WKN304	117	1	
9	Shaft—remote control (rear extension)	1H3888	118	1	
10	Lever—selector—front	1G3880	119	1	
11	Lever—selector—front	22H24	120	1	
12	Screw—selector lever—front	5IK1030	121	1	
13	Washer—shakproof—screw	LWN404	122	1	
14	Lever—selector—rear	1H3095	123	1	
15	Lever—selector—rear (long pad)	22H25	124	1	
16	Screw—selector lever—rear	5IK1081	125	2	
17	Washer—spring—screw	2K5819	126	1	
18	Key—selector lever	WKN404	127	1	
19	Lever—clutch withdrawal	22B56			
20	Bush—withdrawal lever	1LG3195	128	1	
21	Bolt—clutch withdrawal lever	1LG3199	129	1	
22	Washer—bolt	LNZ206	130	1	
23	Nut—stiff—bolt	1G3667	131	1	
24	Cover—dust—clutch withdrawal lever	1G3802	132	1	
25	Indicator—oil level—gearbox	1H3130	133	1	
26	Tower—remote control	AEG-8101	134	2	
27	Dowel—remote control tower	22H152	135	1	
28	Lever—change speed	1G3706	136	1	
29	Knob—change speed lever	54K312	137	1	
30	Locknut—change speed knob	1H3101	138	2	
31	Pin—locating—change speed lever	LWZ304	139	2	
32	Washer—spring	1LG3144	140	1	
33	Spring—change speed lever	1G3927	141	1	
34	Cover—ball spring	1H3087	142	1	
35	Circlip—ball spring cover	1G3877	143	1	
36	Plunger—reverse selector	1G3863	144	1	
37	Spring—reverse plunger	H2S0608	145	1	
38	Screw—reverse plunger spring	LWZ206	146	1	
39	Washer—spring—screw	2A3378	147	1	
40	Pin—locating reverse plunger	BLS110	148	1	
41	Ball—reverse plunger	22A75	149	1	
42	Spring—reverse plunger detent	1G3711	150	2	
	Gasket—control tower				

SERVICE PARTS LIST

PLATE F


THE MGB

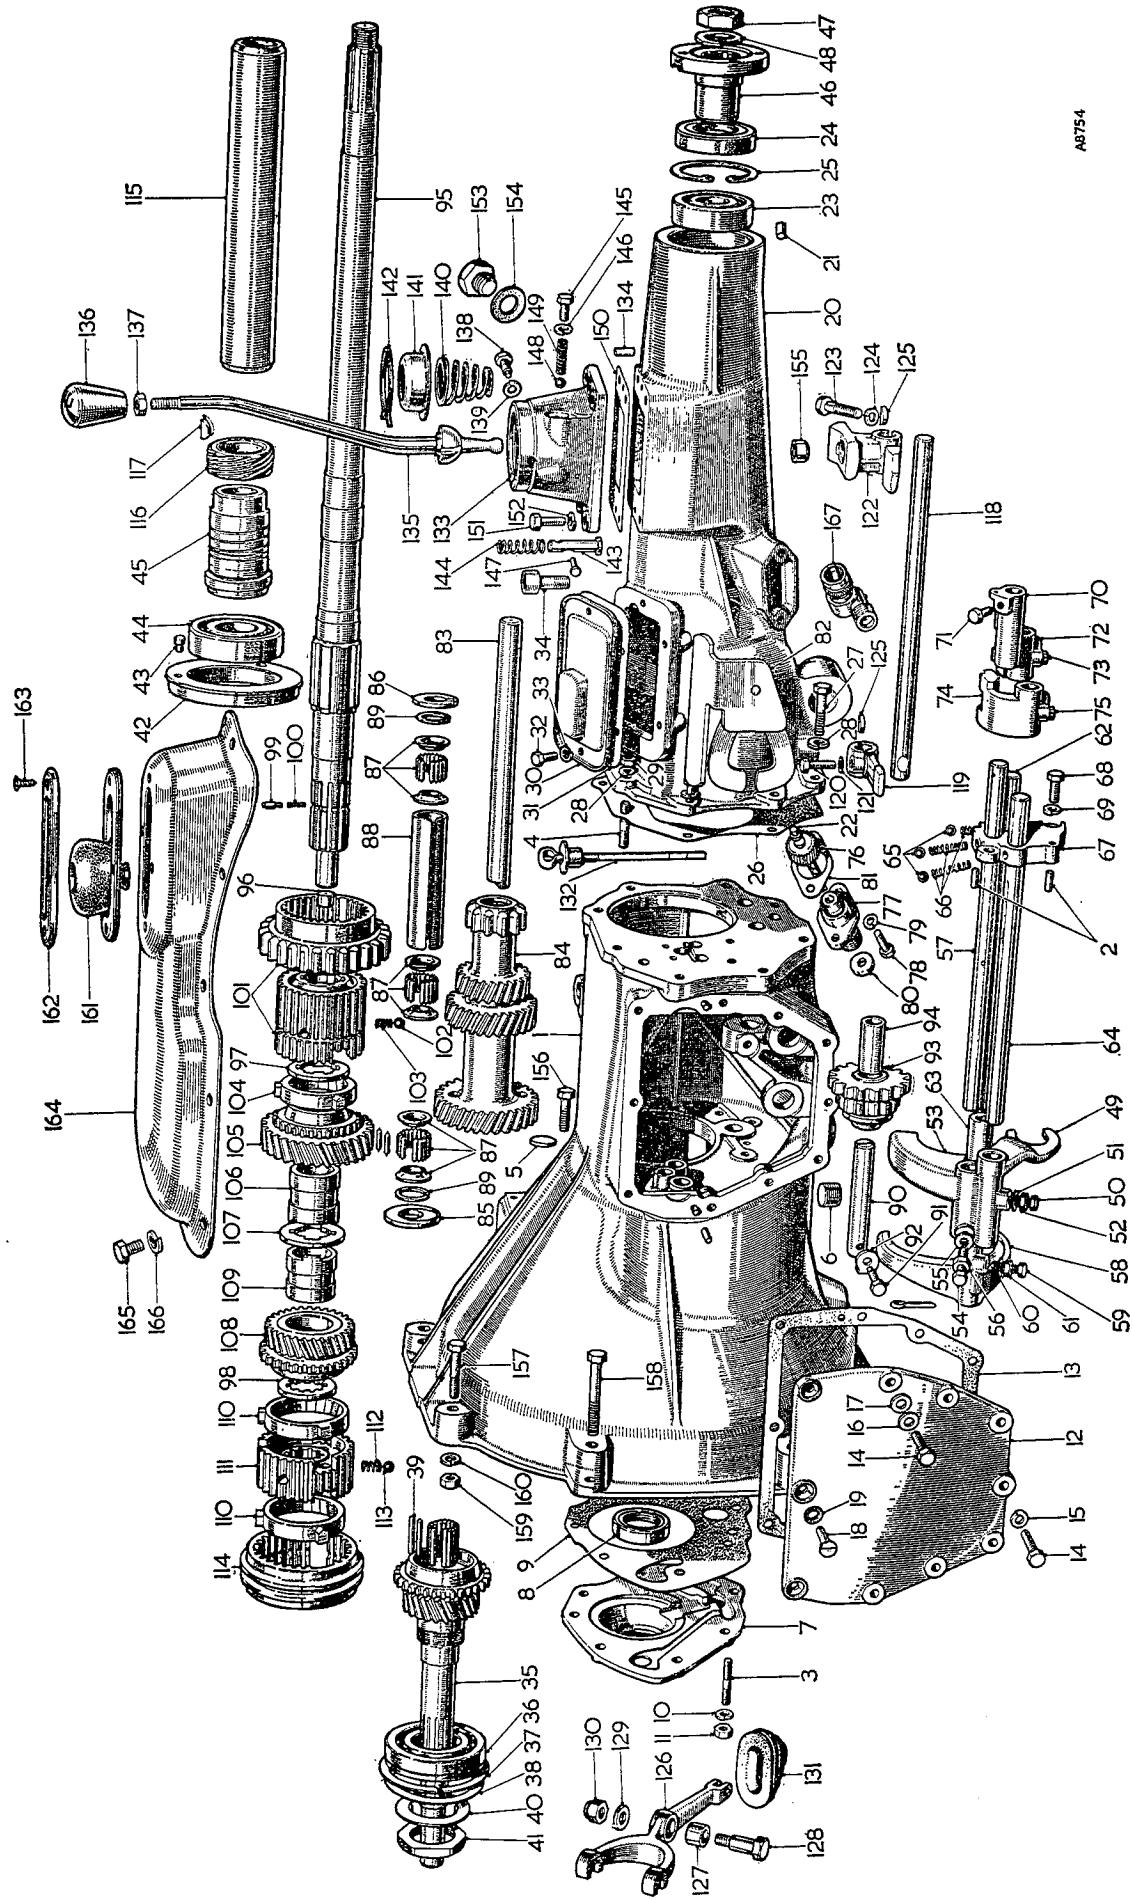

SERVICE PARTS LIST

PLATE F

THE MGB

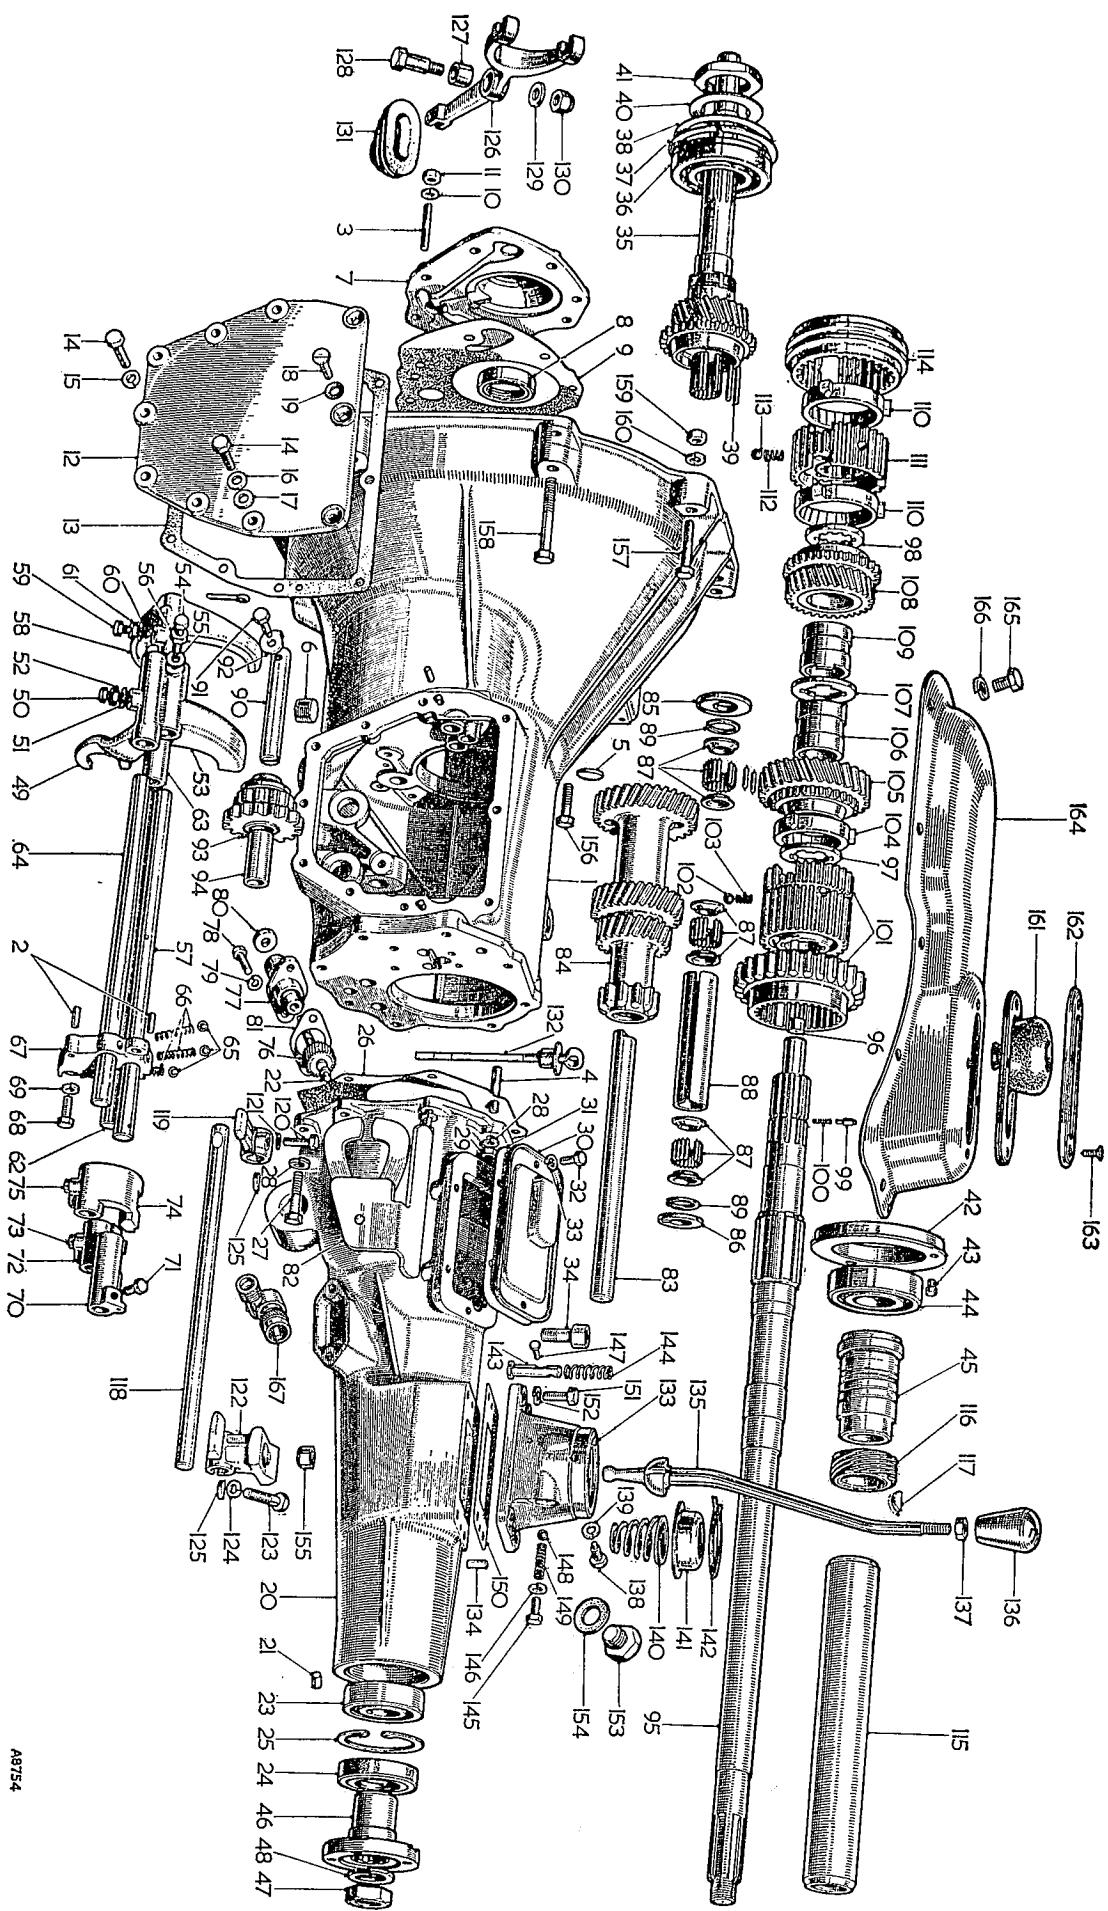

To face page F.5

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (E) 18G/101			MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point		
Gearbox—Standard—continued								
1	Screw—tower to extension	53K143	151	4				
2	Washer—spring—screw	LWVZ305	152	4				
3	Plug—reverse light switch hole	1H3026	153	1				
4	Joint washer—plug	1B3664	154	1				
5	Bush—change speed lever	22H15	155	1				
6	Bolt—gearbox to mounting plate	HBZ0510	156	1				
7	Bolt—gearbox to mounting plate	HBZ0515	157	2				
8	Bolt—gearbox to mounting plate	HBZ0520	158	4				
9	Nut—bolt	FNZ305	159	7				
10	Washer—spring—bolt	LWVZ305	160	7				
11	Grommet—gear lever	AHH6350	161	1				
12	Retainer—gear lever grommet	AHH6486	162	1				
13	Screw—retainer to cover	RTP1006	163	4				
14	Cover—gearbox remote control	HZA266	164	1				
15	Screw—cover to tunnel	HZS0404	165	11				
16	Washer—spring	LWVZ204	166	11				
17	Box—speedometer drive adaptor	1H3131	167	1				
18	Washer—adaptor to gearbox	3E1550		1				

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	MODIFICATIONS			REMARKS
		Commencing (E) 18G/5101	Part Number	Illus. No.	
G E A R B O X — O V E R D R I V E					
1	Gearbox assembly	22H209		1	
2	Casing—assembly	48G265	1	1	
3	Dowel—locating block to gearbox	AEG8108	2	2	
4	Stud—front cover	58K2172	3	7	
5	Stud—overdrive adaptor	CHSS511	4	8	
6	Plug—welch—casing	2K8158	5	1	
7	Plug—drain	2K5830	6	1	
8	Cover assembly—front	48G266	7	1	
9	Seal—oil	1H5138	8	1	
10	Joint washer—front cover to casing	1G3666	9	1	
11	Washer—spring—stud—front cover to casing	LWZ305	10	7	
12	Nut—stud	ENZ105	11	7	
13	Cover—gearbox side	1G8656	12	1	
14	Joint washer—side cover to casing	1G3658	13	1	
15	Screw—gearbox side cover	58K147	14	7	
16	Washer—spring—screw	LWZ305	15	6	
17	Washer—plain—screw	PWZ105	16	1	
18	Washer—fibre—screw	2K4958	17	1	
19	Screw—countersunk—gearbox side cover	58K162	18	3	
20	Washer—shakeproof—screw	6K9012	19	3	
21	Adaptor—overdrive	22H479	20	1	
22	Plug—taper	2K1856	21	1	
23	Joint washer—adaptor to casing	1G8712	22	1	
24	Joint washer—adaptor to overdrive	22H166	23	1	
25	Nut—stud—adaptor	FNZ505	24	8	
26	Washer—spring—nut	LWZ205	25	8	
27	Breather assembly	1H3364	26	1	
28	Shaft—1st motion	22H56	27	1	
29	Bearing	6K885	28	1	
30	Ring—spring—bearing	6K886	29	1	
31	Shim—1st motion shaft—.002" (-0.51 mm.)	6K907	30	A/R	
32	Shim—1st motion shaft—.004" (.102 mm.)	6K908	31	A/R	
33	Roller—needle—1st motion shaft	6K892	31	18	
34	Washer—locking—1st motion shaft nut	1A8717	32	1	

SERVICE PARTS LIST

PLATE FA

THE MGB

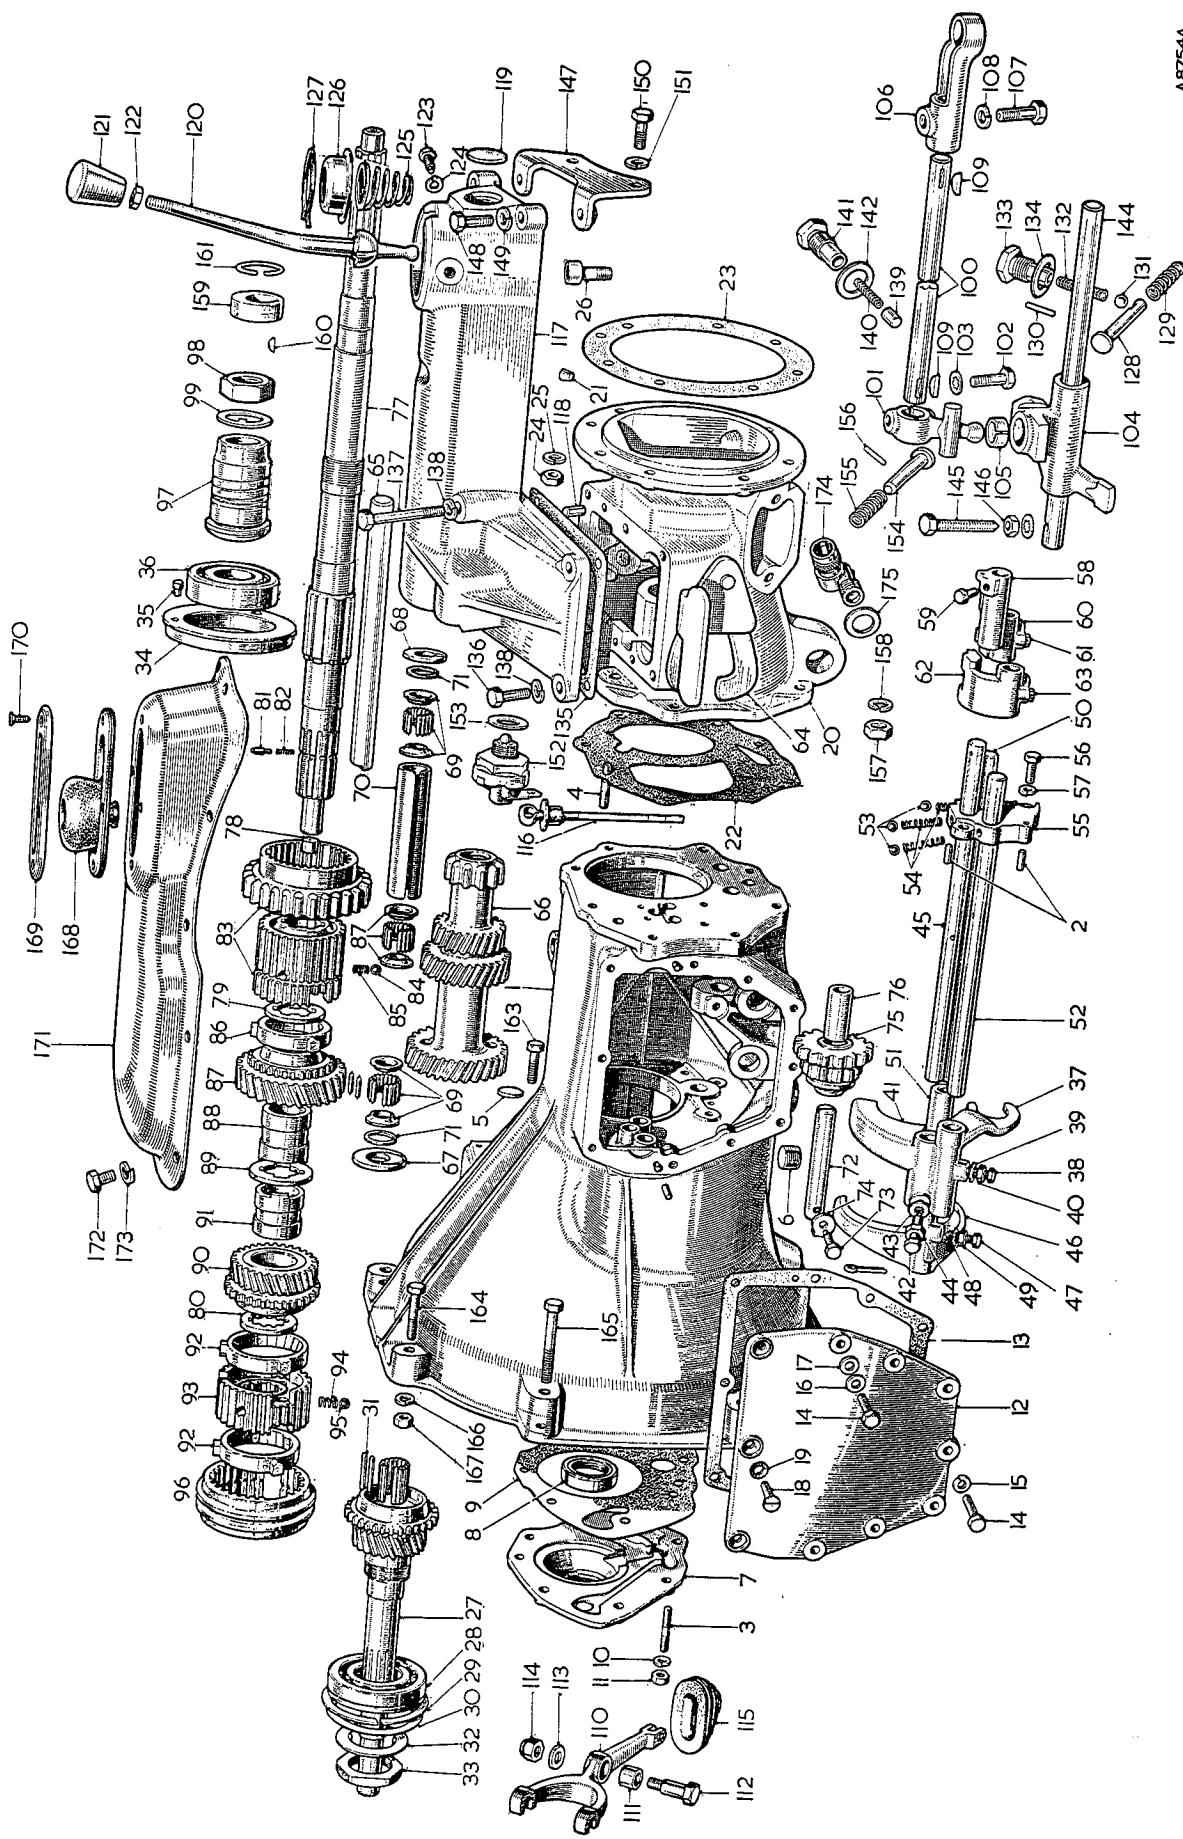


To face page F.6

SERVICE PARTS LIST

PLATE FA

THE MGB

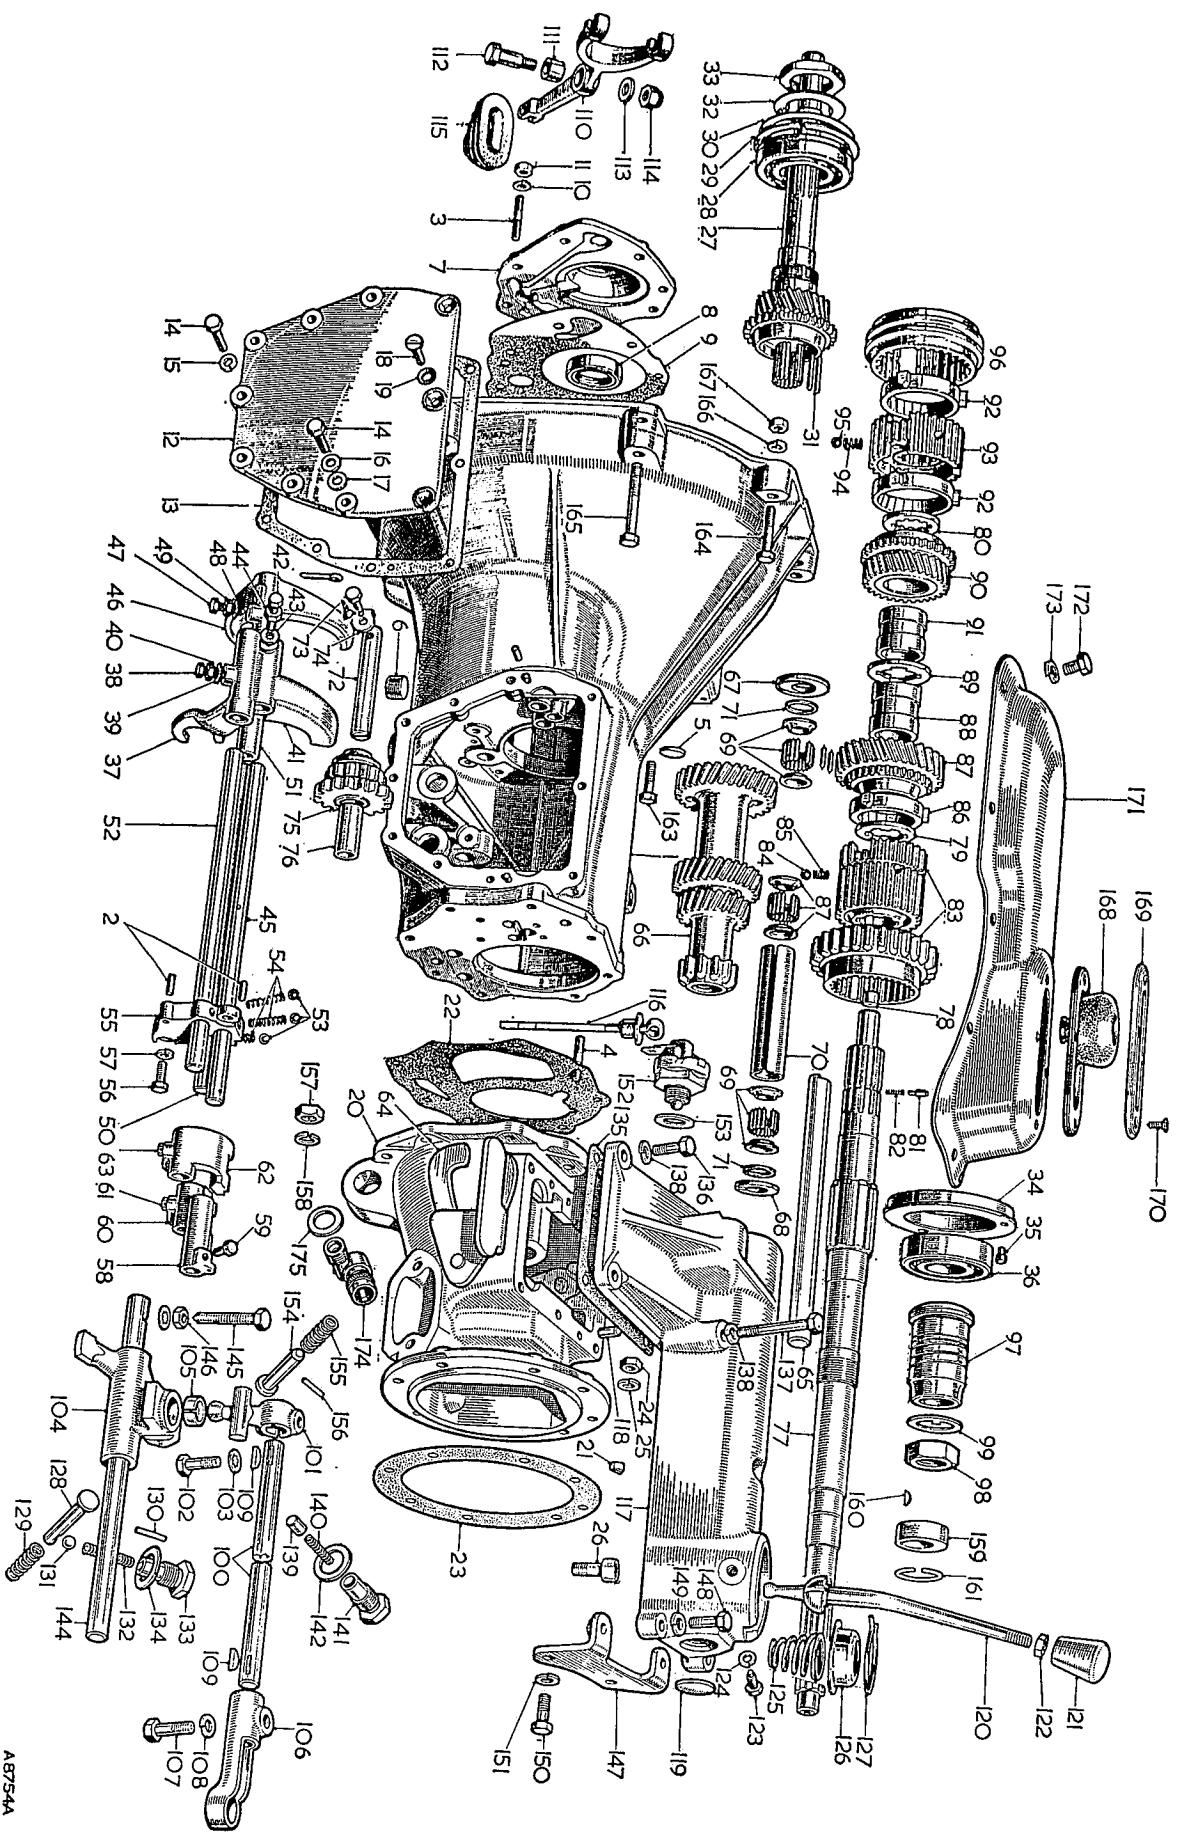

To face page F.7

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (E) 18G/5101	MODIFICATIONS		REMARKS
		Part Number	Qty. per Veh.	
Gearbox—Overdrive—continued				
Nut—1st motion shaft	1G3584	33	1	
Housing—rear bearing	1G3586	34	1	
Peg—locating—rear bearing housing	1G3530	35	1	
Bearing—rear—3rd motion shaft	6K528	36	1	
Fork—reverse	11G3134	37	1	
Screw—reverse fork locating	2A3141	38	1	
Washer—shakeproof—screw	LWN404	39	1	
Nut—screw—fork locating	FNN504	40	1	
Fork—1st and 2nd speed	11G3135	41	1	
Screw—fork locating	2A3141	42	1	
Washer—shakeproof—screw	LWN404	43	1	
Nut—screw—fork locating	FNN504	44	1	
Rod—1st and 2nd speed fork	11G3079	45	1	
Fork—3rd and 4th speed	1H3257	46	1	
Screw—fork locating	2A3141	47	1	
Washer—shakeproof—screw	LWN404	48	1	
Nut—screw—fork locating	FNN504	49	1	
Rod—3rd and 4th speed fork	11G3140	50	1	
Distance piece—3rd and 4th speed fork rod	1H3258	51	1	
Rod—reverse fork	1G3187	52	1	
Ball—fork locating	BLS110	53	3	
Spring—locating ball	22A75	54	3	
Block—sliding shaft locating	11G3187	55	1	
Screw—locating block to gearbox	HNS0407	56	2	
Washer—spring—screw	LWN304	57	2	
Selector—1st and 2nd gear	11G3132	58	1	
Screw—selector locating	1G3708	59	1	
Selector—3rd and 4th gear	11G3133	60	1	
Screw—selector locating	1G3708	61	1	
Selector—reverse gear	11G3131	62	1	
Screw—selector locating	1G3708	63	1	
Arm assembly—interlocking	22H158	64	1	
Layshaft	1H3305	65	1	
Gear unit—layshaft	22H54	66	1	
Washer—thrust—front—laygear	1G3576	67	A/R	
Washer—thrust—rear—154 to 156" (3.912 to 3.962 mm.)	1G3577	68	A/R	
Washer—thrust—rear—157 to 161" (3.988 to 4.013 mm.)	1G3578		A/R	
Washer—thrust—rear—160 to 161" (4.06 to 4.085 mm.)	1G3579		A/R	
Washer—thrust—rear—163 to 164" (4.136 to 4.162 mm.)	1G3580		A/R	

Alternatives

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	COMMENCING (E) 18G/5101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Oty. per Veh.	New Part Number	
Gearbox—Overdrive—continued						
1	Roller—needle bearing—layshaft	3H2865	69	3		
2	Tube—distance—laygear bearing	11G3026	70	1		
3	Ring—spring—layshaft	11G3027	71	4		
4	Shaft—reverse	11G3124	72	1		
5	Shaft—reverse	11G3093	1	1		
6	Screw—reverse shaft	1G3581	73	1		
7	Washer—locking—screw	1B3863	74	1		
8	Gear assembly—reverse	22H83	75	1		
9	Bush—reverse gear	11G3092	76	1		
10	Shaft—3rd motion	22H226	77	1		
11	Restrictor—oil	1A1964	78	1		
12	Washer—thrust—3rd motion shaft—rear	1G3492	79	1		
13	Washer—thrust—front—1.565 to 1.575" (3.962 to 3.988 mm.)	11G3127	80	A/R		
14	Washer—thrust—front—1.585 to 1.595" (4.013 to 4.039 mm.)	11G3128		A/R		
15	Washer—thrust—front—1.605 to 1.615" (4.046 to 4.085 mm.)	11G3129		A/R		
16	Peg—thrust washer	1G3268	81	1		
17	Spring—peg	2K8960	82	1		
18	First speed wheel and synchronizer assembly	48G206	83	1		
19	Ball—synchronizer	BS1109	84	3		
20	Spring—synchronizer ball	6K884	85	3		
21	Baulk ring—2nd speed gear	11G3063	86	1		
22	Gear—2nd speed	11G3064	87	1		
23	Bush—2nd speed mainshaft gear	11G3028	88	1		
24	Ring—2nd and 3rd gear bushes—interlocking	1G3331	89	1		
25	Gear—3rd speed	1G3594	90	1		
26	Bush—3rd speed gear	11G3029	91	1		
27	Baulk ring—3rd and 4th speed gear	11G3022	92	2		
28	Synchronizer—3rd and 4th speed	1G3597	93	1		
29	Spring—synchronizer ball	6K884	94	3		
30	Bush—synchronizer	BS1109	95	3		
31	Coupling—sliding—3rd and 4th speed	1G3598	96	1		
32	Distance piece—3rd motion shaft	11G3223	97	1		
33	Nut—distance piece	11G3225	98	1		
34	Washer—lock—distance piece	11G3226	99	1		
35	Shaft—remote control	22H431	100	1		
36	Lever—selector—front	22H173	101	1		
37	Screw—selector lever—front	22H174	102	1		
38	Washer—shakeproof—screw	1WN405	103	1		
39	Lever—selector—intermediate	22H254	104	1		
40	Bush—intermediate selector lever	22H115	105	1		
41	Lever—selector—rear	22H252	106	1		

SERVICE PARTS LIST

PLATE FA


THE MGB

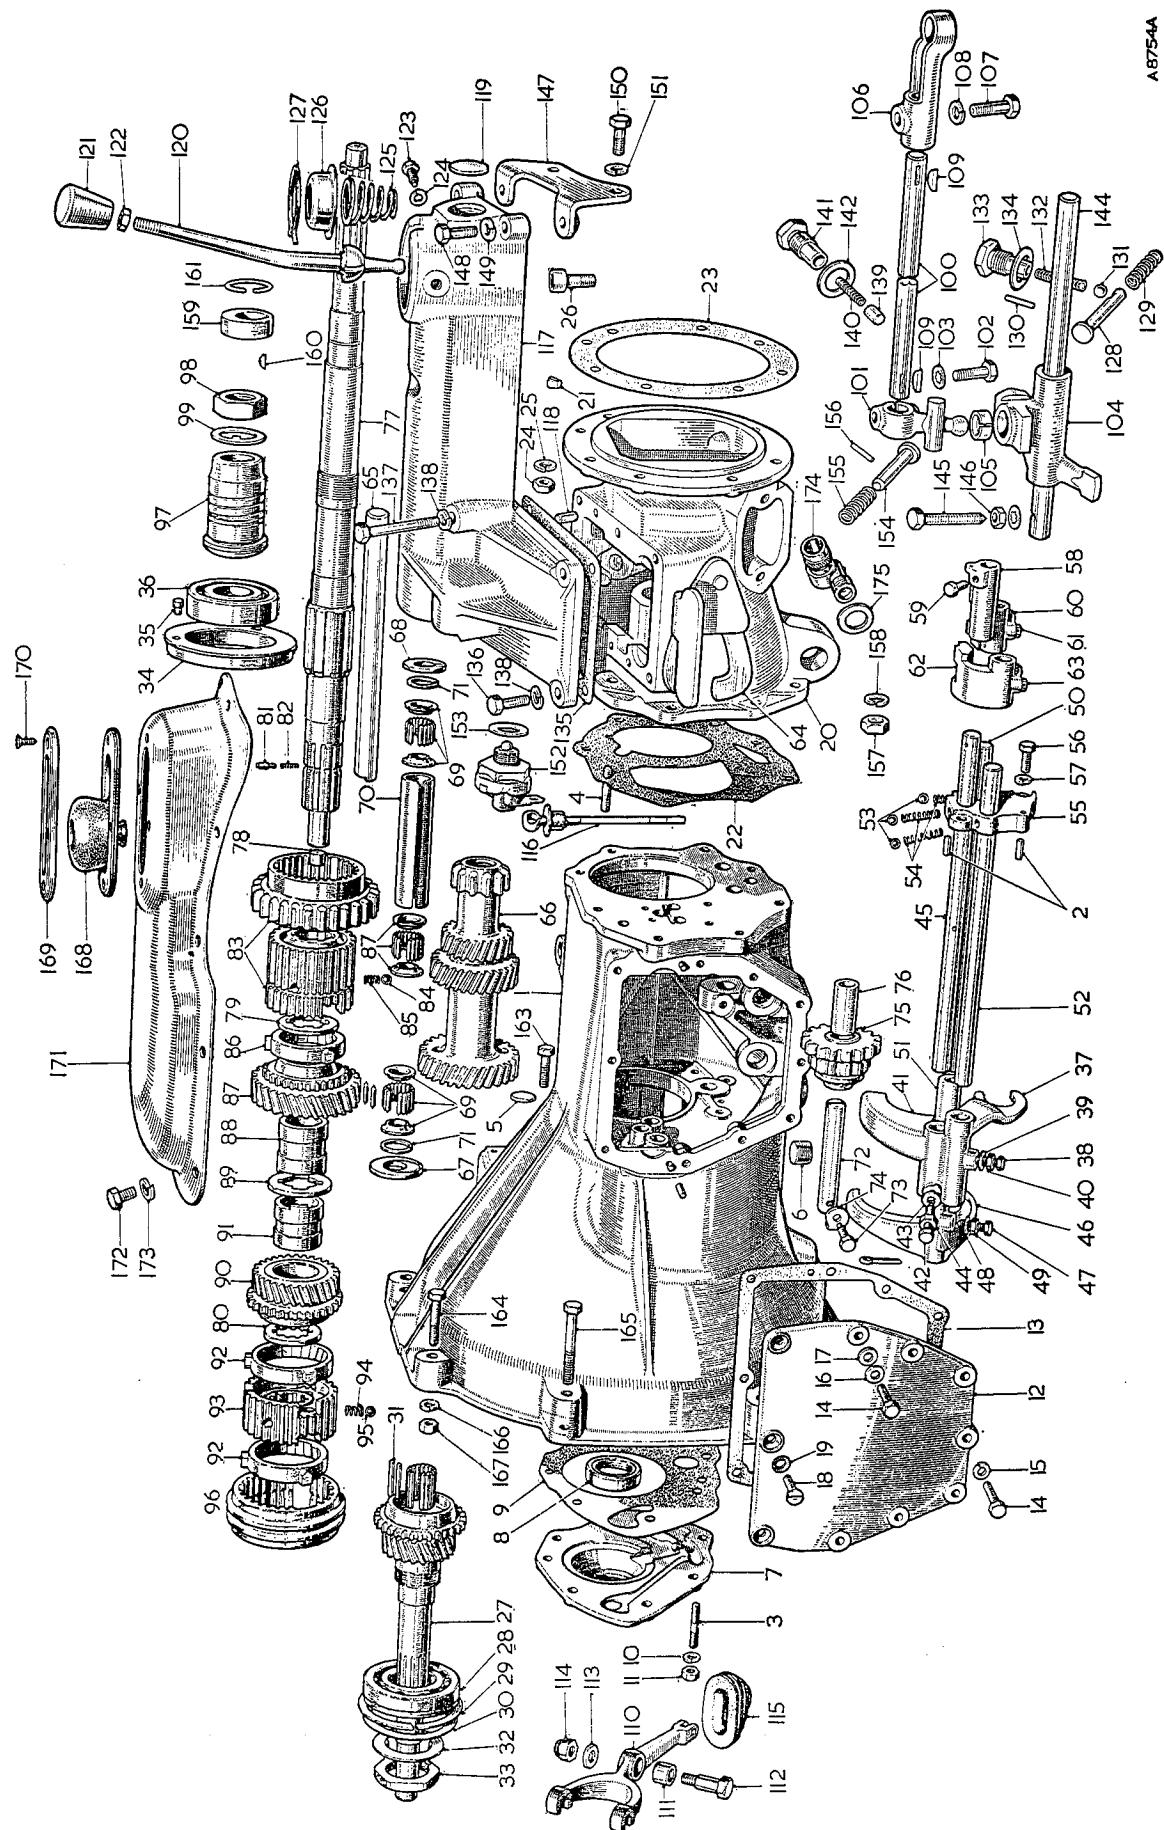

SERVICE PARTS LIST

PLATE FA

THE MGB

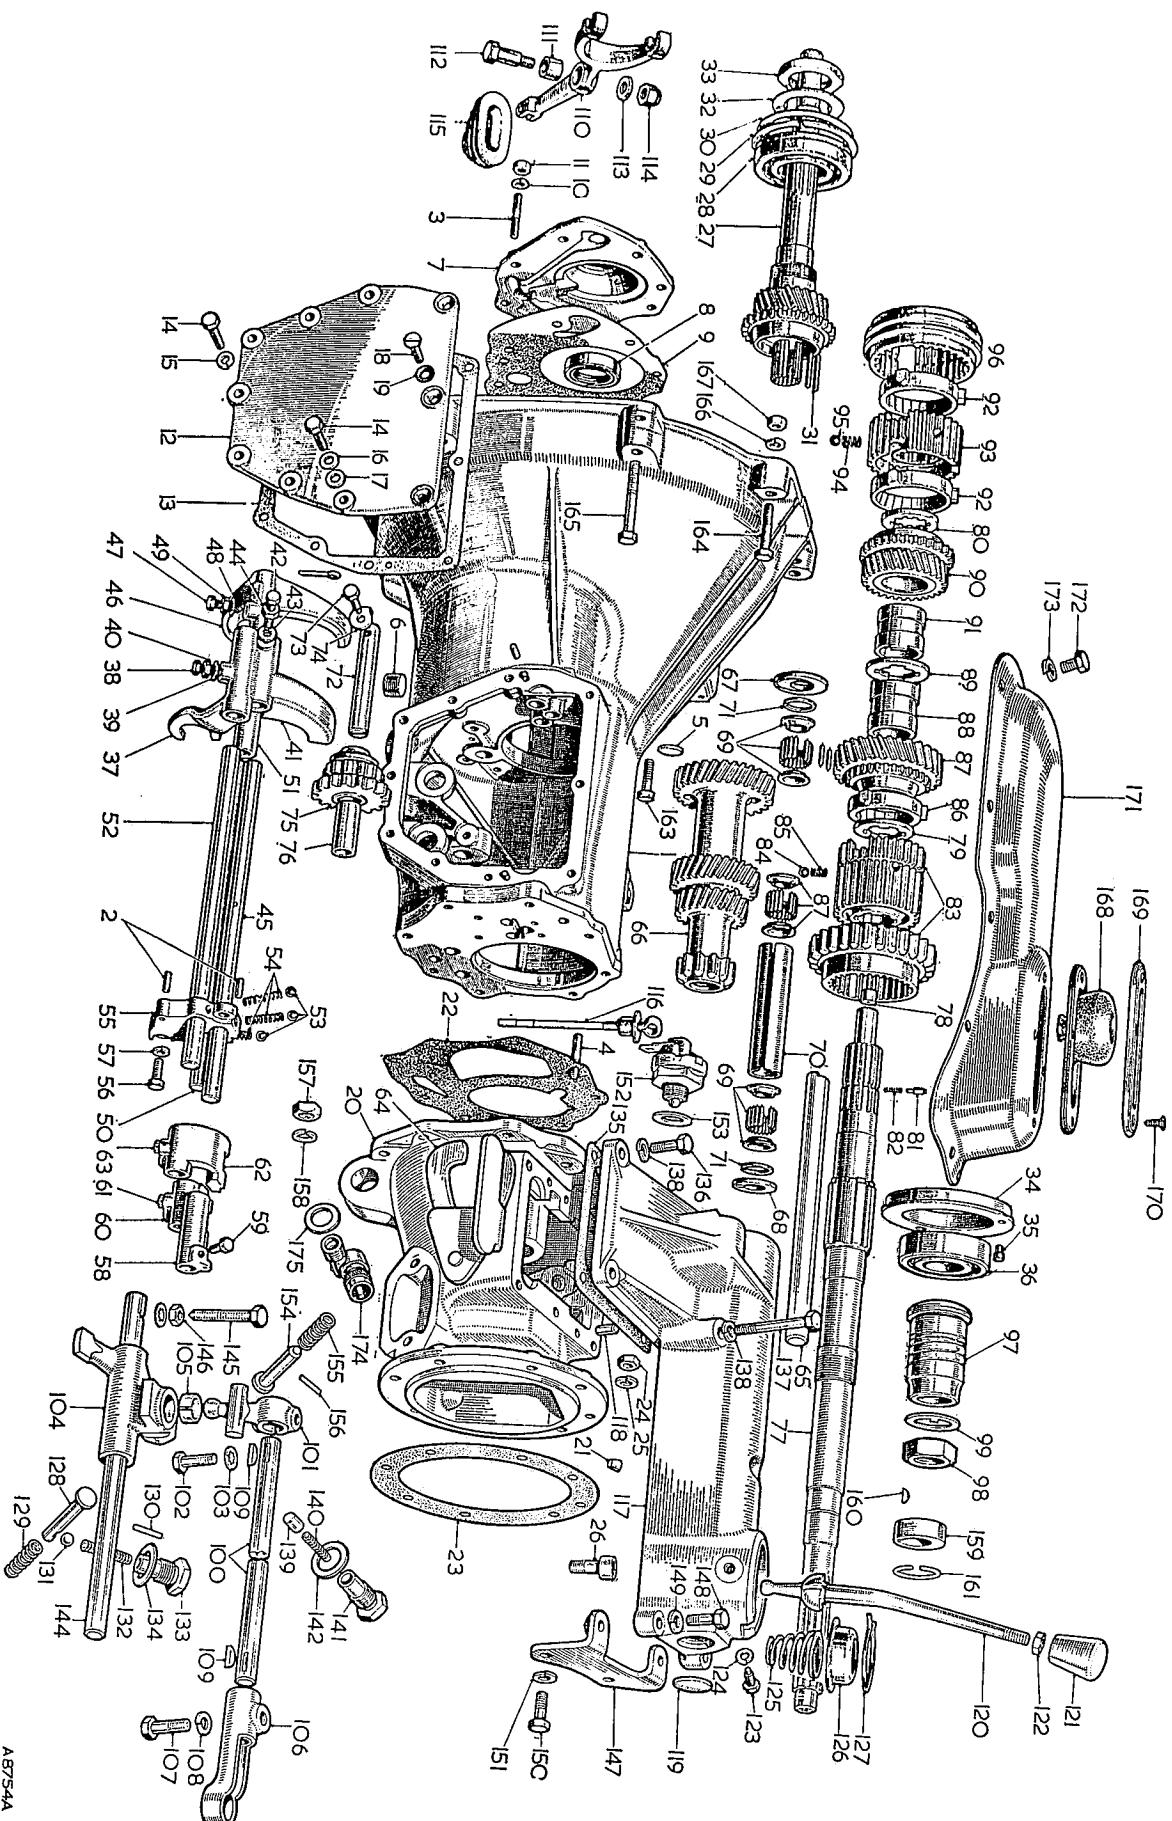

To face page F.9

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (E) 18G/5101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
Gearbox—Overdrive—continued					
Screw—rear selector lever					
1 Washer—spring—screw	22H175	.107	1		
2 Key—front and intermediate selector levers	LWZ7305	.108	1		
3 Lever—clutch withdrawal	WKN404	.109	2		
4 Bush—withdrawal lever	22B56	.110	1		
5 Bolt—clutch withdrawal lever	11C8195	.111	1		
6 Washer—bolt	11C8196	.112	1		
7 Nut—stiff—bolt	11C8199	.113	1		
8 Cover—dust—clutch withdrawal lever	LNZ206	.114	1		
9 Indicator—oil level—gearbox	IG3867	.115	1		
10 Indicator—remote control	IG3802	.116	1		
11 Dowel—remote control tower	22H167	.117	1		
12 Plug—welch—tower	AEG3101	.118	2		
13 Knob—change speed lever	2K8158	.119	2		
14 Locknut—knob	22H251	.120	1		
15 Pin—change speed lever locating	IG3706	.121	1		
16 Cover—ball spring	FNP205	.122	1		
17 Circlip—ball spring cover	1H3101	.123	2		
18 Plunger—reverse selector	LWZ7304	.124	2		
19 Spring—change speed lever	AEG3105	.125	1		
20 Cover—ball spring	IG3927	.126	1		
21 Circlip—ball spring cover	1H3087	.127	1		
22 Plunger—reverse selector	22H163	.128	1		
23 Spring—reverse plunger	IG3863	.129	1		
24 Peg—reverse plunger	2K5414	.130	1		
25 Ball—reverse selector	BLS110	.131	1		
26 Spring—selector ball	22A75	.132	1		
27 Plug—spring retaining	2A3879	.133	1		
28 Washer—plug	6K638	.134	1		
29 Joint washer—control tower to adaptor	22H168	.135	1		
30 Bolt—short—tower to adaptor	ZC50908	.136	4		
31 Bolt—long—tower to adaptor	HEZ0520	.137	2		
32 Washer—spring—bolt	LWZ7305	.138	6		
33 Plunger	22H176	.139	1		
34 Spring—plunger	22H177	.140	1		
35 Cap—spring retaining	22H178	.141	1		
36 Washer—cap	AEG3122	.142	1		

SERVICE PARTS LIST

THE MGB

Item No.

Commencing
(E) 18G/5101

MODIFICATIONS

REMARKS

DESCRIPTION

Part
Number

Q'ty
per
Veh.

New
Part
Number

Change Point


Gearbox—Overdrive—continued

1	Shaft—selector lever	22H255	144	1		
2	Screw—locating—shaft	HIP2041	145	1		
3	Nut—lock—screw	FN2604	146	1		
4	Bracket—support—overdrive to remote control tower	22H206	147	1		
5	Screw—support bracket to remote control tower	HIZS0409	148	2		
6	Washer—spring—screw	LWZ304	149	2		
7	Screw—support bracket to overdrive	HNSU406	150	2		
8	Washer—spring—screw	LWZ304	151	2		
9	Switch—overdrive isolation	AEJ20	152	1		
10	Joint washer—switch	2K7914	153	1		
11	Plunger—overdrive switch	22H203	154	1		
12	Spring—plunger	22H204	155	1		
13	Pin—locating—plunger	22H205	156	1		
14	Nut—stud	FNZ504	157	8		
15	Washer—spring	LWZ304	158	8		
16	Can—overdrive pump	22H190	159	1		
17	Key—cam	22H191	160	1		
18	Ring—cam retaining	22H228	161	1		
19	Clip—3rd motion shaft	22H193	162	1		

SERVICE PARTS LIST

PLATE FA

THE MGB

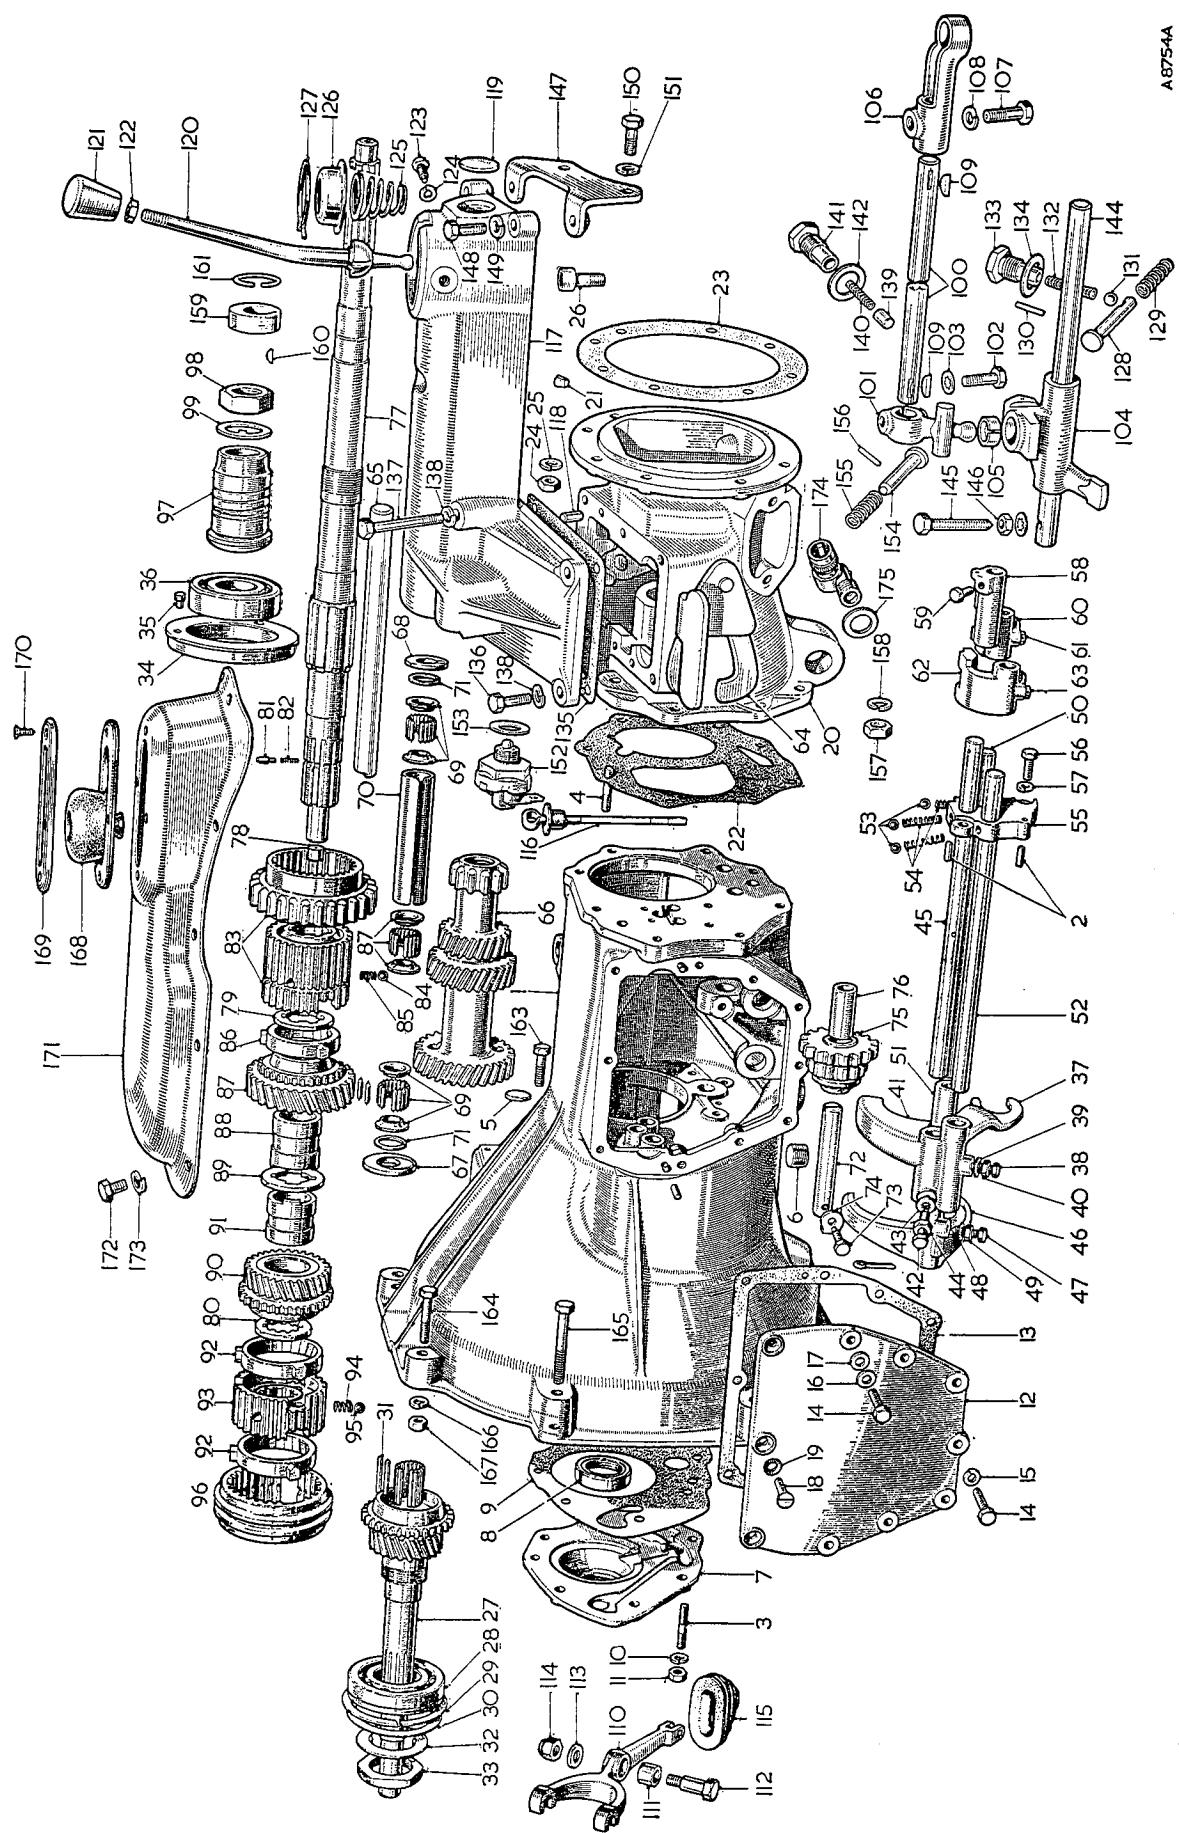


To face page F.10

SERVICE PARTS LIST

PLATE FB

THE MGB

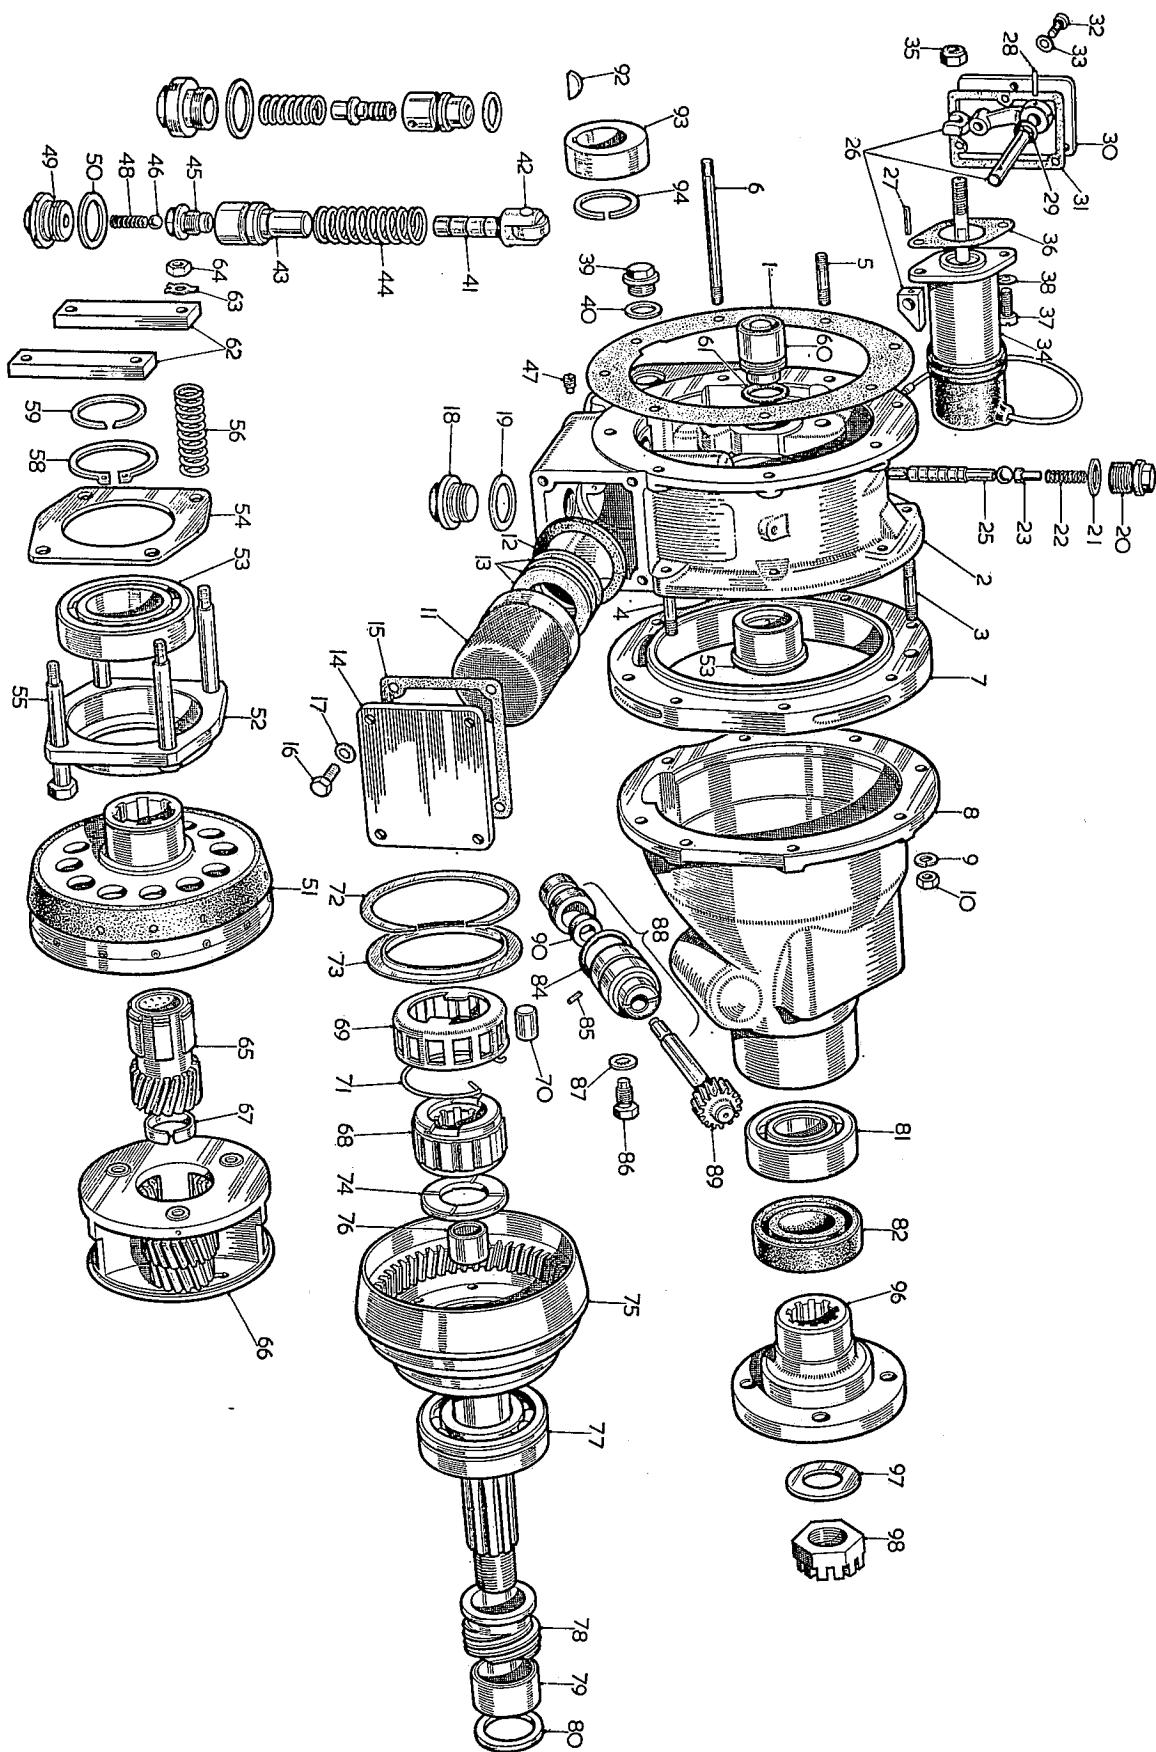

To face page F.11

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (E) 18G/501	MODIFICATIONS		REMARKS
			Part Number	Qty. per Veh. Illus. No.	
Gearbox—Overdrive—continued					
1	Joint washer—main casing to adaptor	22H165	1	1	
2	Casing assembly—main	7H8295	1	1	
3	Stud—main casing to rear casing	17H8018	2	1	
4	Stud—main casing to rear casing	7H8284	3	6	
5	Stud—main casing to adaptor	7H8296	4	2	
6	Stud—main casing to adaptor	7H8285	5	7	
7	Stud—long—main casing to adaptor	17H8022	6	1	
8	Ring—brake—clutch cone	7H8310	7	1	
9	Casing assembly—rear	17H8019	8	1	
10	Thrust button	7H8288	1	1	
11	Breather	17H5825	1	1	
12	Washer—spring—nut	7H8320	9	8	
13	Nut—rear to main casing stud	FNN104	10	8	
14	Filter	7H8197	11	1	
15	Plate—filter sealing	7H8299	12	1	
16	Ring—filter sealing (magnetic)	17H8604	13	3	
17	Plate—filter side cover	7H8292	14	1	
18	Washer—joint filter side cover	7H8293	15	1	
19	Screw—filter cover-plate	HNS0406	16	4	
20	Washer—cover-plate screw	LWN404	17	4	
21	Plug—filter drain	7H8303	18	1	
22	Washer—drain plug	7H8307	19	1	
23	Plug—valve operating	17H5876	20	1	
24	Washer—plug	7H5898	21	1	
25	Spring—valve operating	7H5886	22	1	
26	Plunger—ball valve	7H5837	23	1	
27	Valve—operating	17H8030	25	1	
28	Lever assembly—valve operating	7H8184	26	1	
29	Mills pin—operating lever	17H8036	27	1	
30	Mills pin	17H8035	28	1	
31	'O' ring—solenoid operating lever	17H5815	29	1	
32	Plate—side cover—solenoid	7H8195	30	1	
33	Washer—joint—solenoid cover-plate	7H8199	31	1	
34	Screw—solenoid cover-plate	LWN403	32	3	
35	Washer—cover-plate screw	17H8581	33	3	
36	Solenoid	34	1		

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(E) 18G/5101

Part
Number

Illus.
No.

Qty.
per
Veh.

New
Part
Number

MODIFICATIONS

Change Point

REMARKS

Gearbox—Overdrive—continued

1

Nut—solenoid adjusting

7H8324

.35

1

Washer—joint—solenoid

7H8196

.36

1

Screw—solenoid to casing

7H8309

.37

2

Washer—solenoid screw

LWN408

.38

2

Plug—solenoid adjusting nut

7H8306

.39

1

Washer—plug

7H8281

.40

1

Pump plunger assembly

17H8015

.41

1

Pin—bearing

17H8034

.42

1

Body—pump

7H8287

.43

1

Spring—pump plunger

7H5839

.44

1

Non-return valve body assembly

7H8190

.45

1

Steel ball

BL5107

.46

1

Screw—retaining pump non-return valve

7H8282

.47

1

Spring—pump non-return valve

7H8272

.48

1

Plug—non-return valve

7H8271

.49

1

Washer—plug

7H8307

.50

1

Clutch sliding member assembly

7H18017

.51

1

Housing—sun wheel bearing

7H8283

.52

1

Bearing—sun wheel

7H8301

.53

1

Base plate—clutch return spring

7H8297

.54

1

Bolt—bearing housing

7H8198

.55

4

Clutch spring set

17H8016

.56

1

Snap ring—bearing housing

7H8323

.58

1

Snap ring—sun gear retaining—bearing housing

7H8289

.59

1

Piston—operating

7H8290

.60

2

'O' ring—operating piston seal

7H8315

.61

2

Bridge bar

7H8286

.62

2

Washer—tab

7H5863

.63

4

Nut—bolt

FNN104

.64

4

Sun wheel assembly

7H8187

.65

1

Planet carrier assembly

7H18014

.66

1

Spring ring

17H8033

.67

1

Inner member

7H8274

.68

1

Cage—clutch

7H5881

.69

1

Steel roller

17H5823

.70

set


1

Spring—clutch

7H8273

.71

1

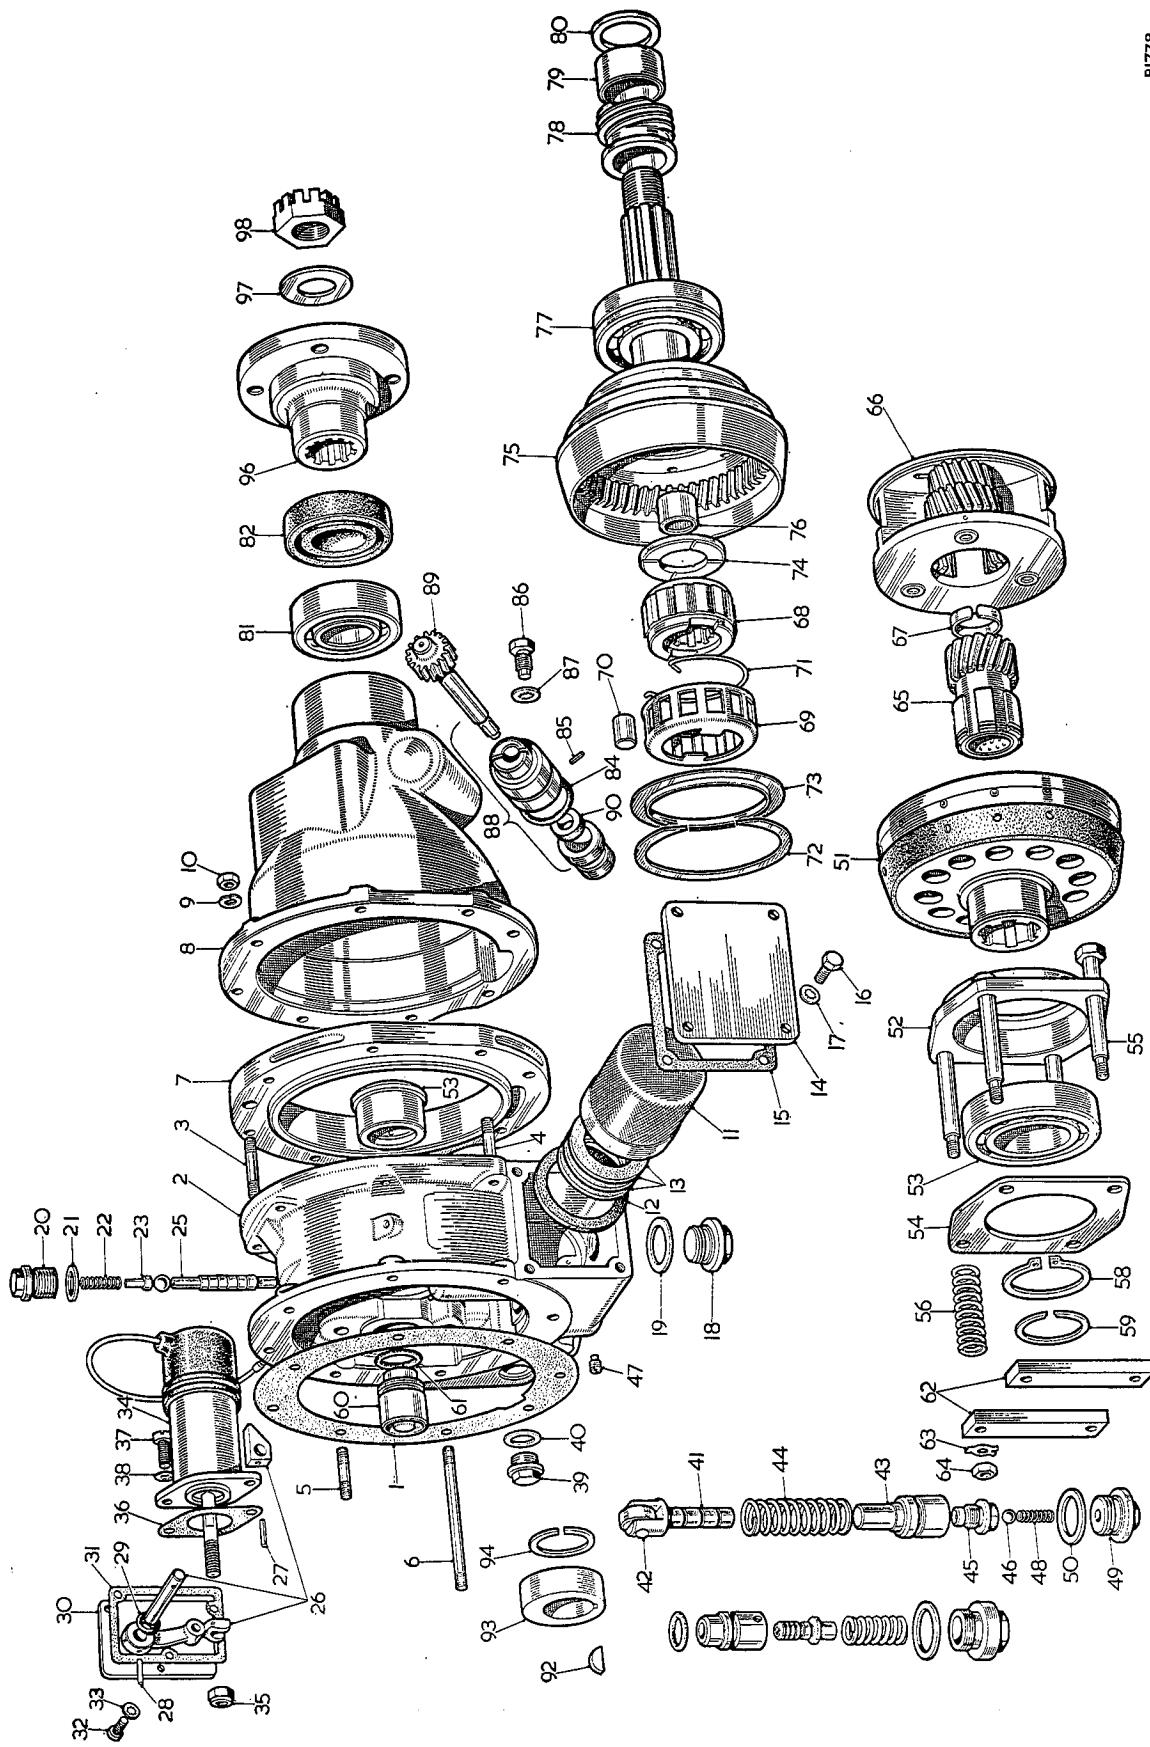


To face page F.12

SERVICE PARTS LIST

PLATE FB

THE MGB

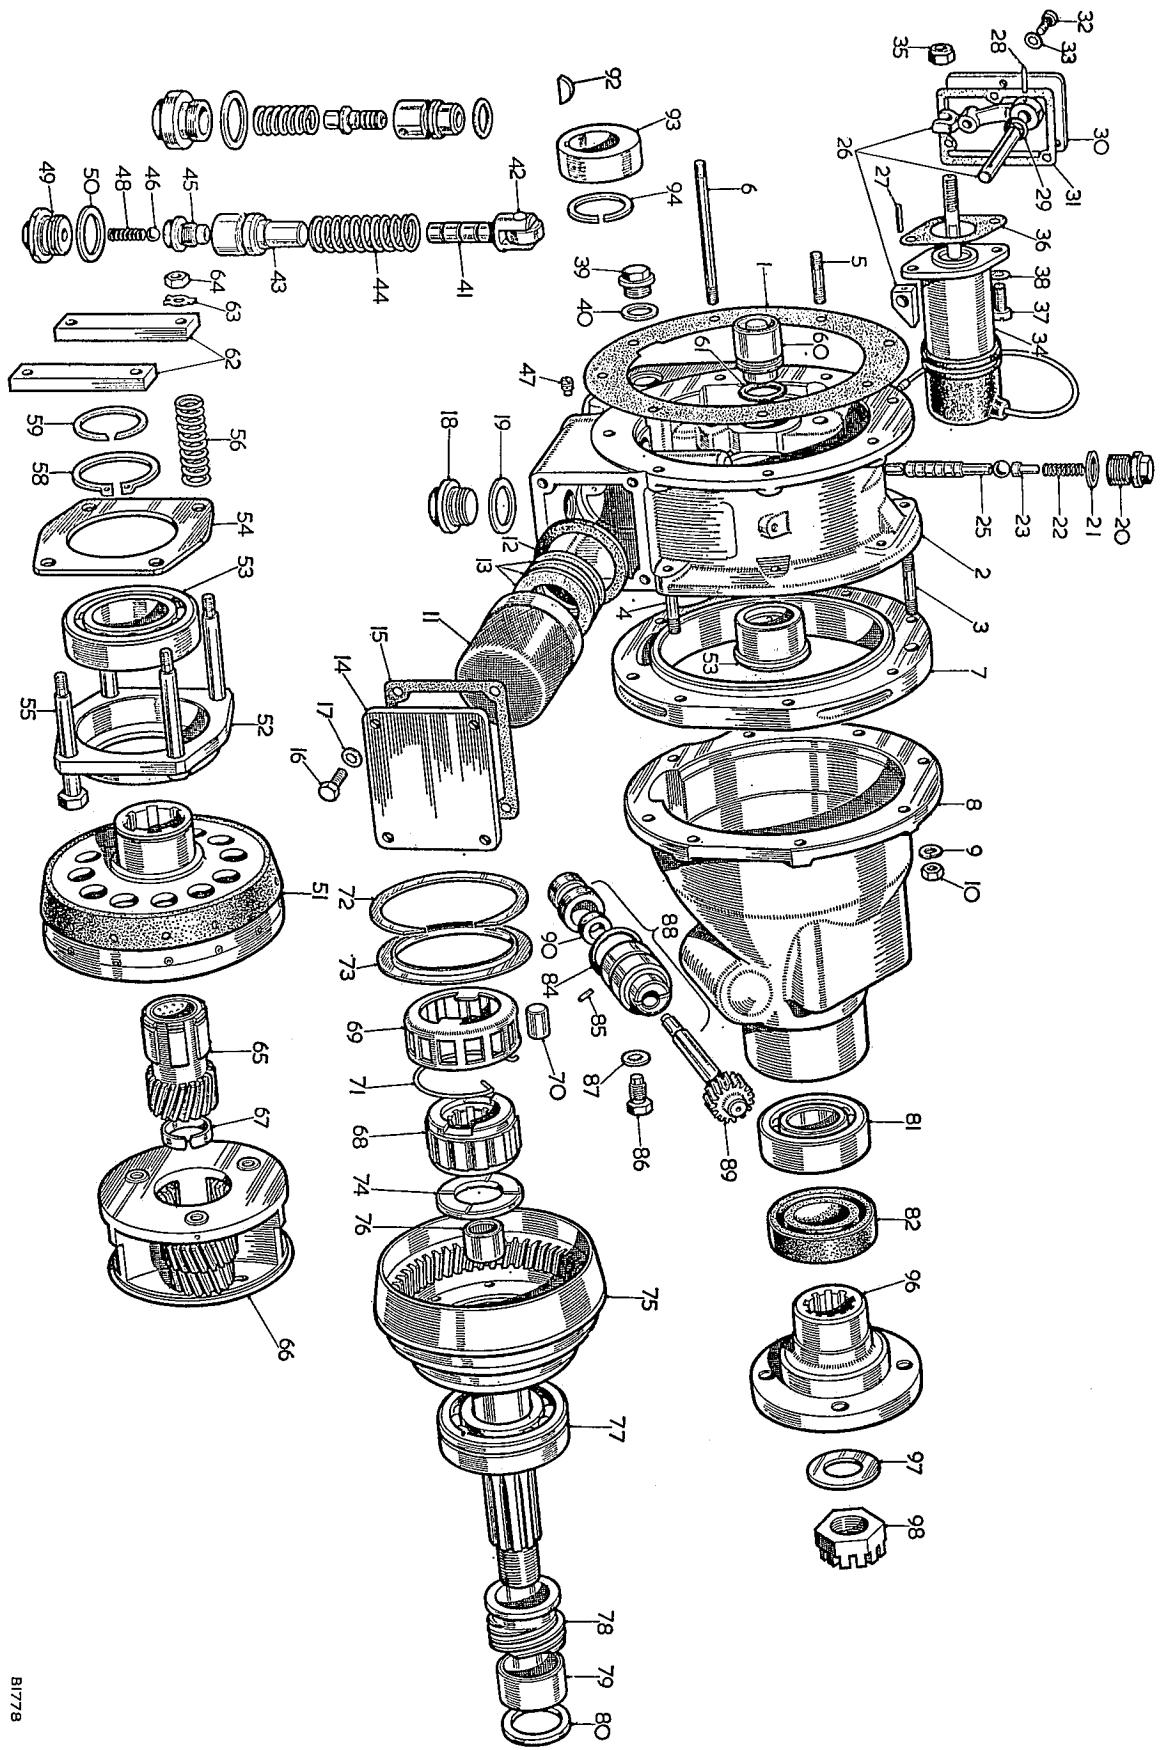

To face page F.13

SERVICE PARTS LIST

THE MGB

Part No.	DESCRIPTION	COMMENCING (E) 18G/5101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
Gearbox—Overdrive—continued						
1	Spring ring—clutch	7H8275	r2	1		
2	Washer—clutch retaining	17H8028	73	1		
3	Washer—clutch thrust	7H5883	74	1		
4	Annulus assembly	7H194	75	1		
5	Bearing—annulus assembly—front	7H8302	76	1		
6	Bearing—annulus assembly—rear	7H8300	77	1		
7	Gear—speedometer driving	7H8294	78	1		
8	Tube—spacing—annulus assembly	17H8020	79	1		
9	Washer—annulus bearing adjusting—.105" (2.68 mm.)	17H8024	80	1		
10	Washer—annulus bearing adjusting—.100" (2.54 mm.)	17H8025		1		
11	Washer—annulus bearing adjusting—.095" (2.40 mm.)	17H8026		1		
12	Washer—annulus bearing adjusting—.090" (2.28 mm.)	17H8027		1		
13	Bearing—annulus rear	2F1966	81	1		
14	Seal—oil—annulus	7H8325	82	1		
15	Bearing assembly—speedometer	17H8012	83	1		
16	'O' ring—speedometer housing	7H8304	84	1		
17	Pin—bearing	17H8034	85	1		
18	Screw—locking—speedometer bearing	7H5894	86	1		
19	Washer—speedometer locking screw	17H5834	87	1		
20	Drive assembly—speedometer	17H8013	88	1		
21	Gear—speedometer driven	17H8021	89	1		
22	'O' ring—speedometer housing	7H8304	90	1		
23	Pin—bearing	17H8034	91	1		
24	Key—cam	22H191	92	1		
25	Cam—pump operating	17H8029	93	1		
26	Spring ring	7H8313	94	1		
27	Locknut	1FNN212	95	1		
28	Flange—coupling	22H189	96	1		
29	Washer—coupling flange	LWZ212	97	1		
30	Nut—flange	FNZ612	98	1		
31	Kit—relief valve	7H8191	1	1		
32	'O' ring—relief valve					
33	Plug—relief valve					
34	Washer—relief valve plug					
35	Spring—relief valve					
36	Valve—relief					
37	Sleeve—outer—relief valve					
38	Pump					

Alternatives

SERVICE PARTS LIST

THE MGB


Item No.

	DESCRIPTION	Commencing (E) 18G/5101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	New Part Number	Change Point	
Gearbox—Overdrive—continued						
1	Bolt—gearbox to mounting plate	HBZ0510	163	1		
2	Bolt—gearbox to mounting plate	HBZ0515	164	2		
3	Bolt—gearbox to mounting plate	HBZ0520	165	4		
4	Washer—spring—bolt	LWZ305	166	7		
5	Nut—bolt	FNZ205	167	7		
6	Grommet—gear lever	AHH6350	168	1		
7	Retainer—gear lever Grommet	AHH6486	169	1		
8	Screw—retainer to cover	RTP106	170	4		
9	Cover—gearbox remote control	HZA266	171	1		
10	Screen—cover to tunnel	HZS0404	172	11		
11	Washer—spring	LWZ204	173	11		
12	Box—speedometer drive adaptor	1H3131	174	1		
13	Washer—adaptor to gearbox	3H50	175	1		

SERVICE PARTS LIST

PLATE FA

THE MGB

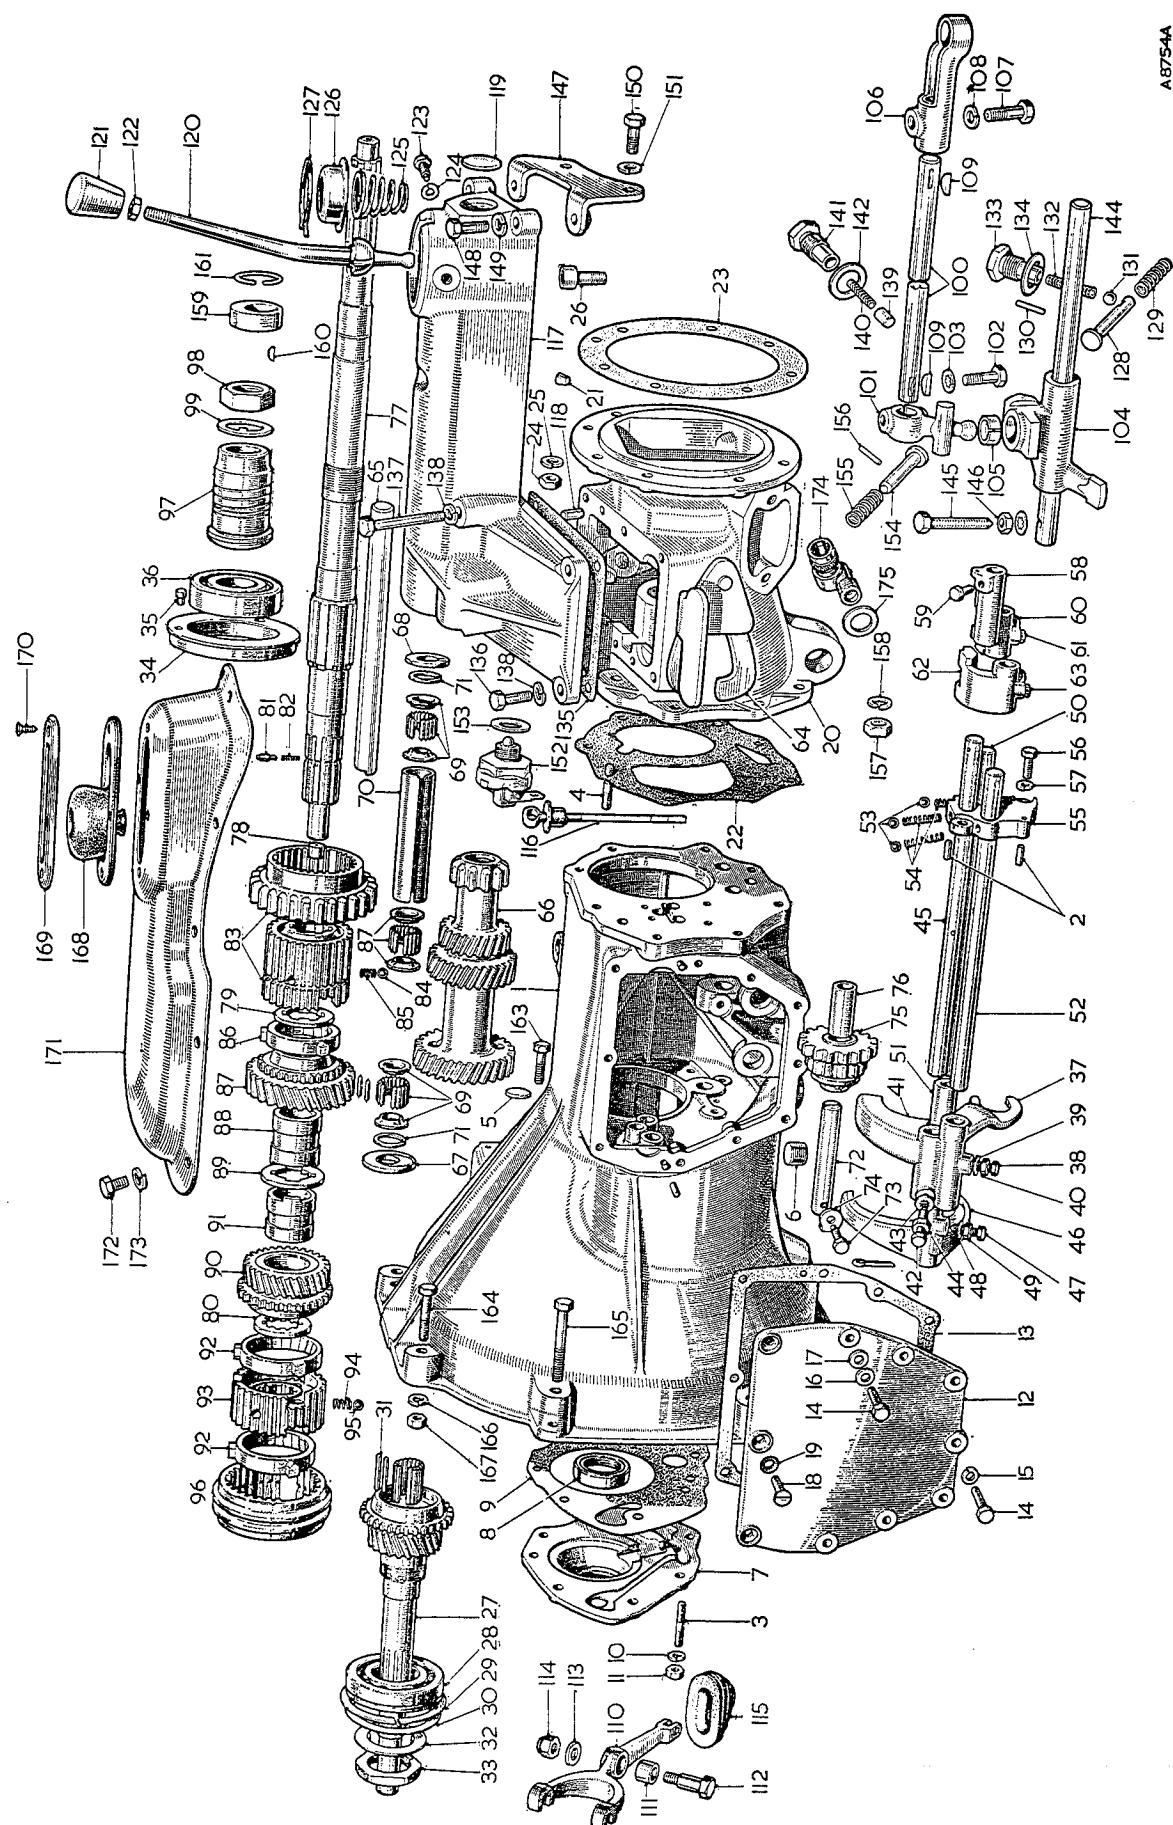

To face page F.14






SERVICE PARTS LIST

PLATE G

THE MGB

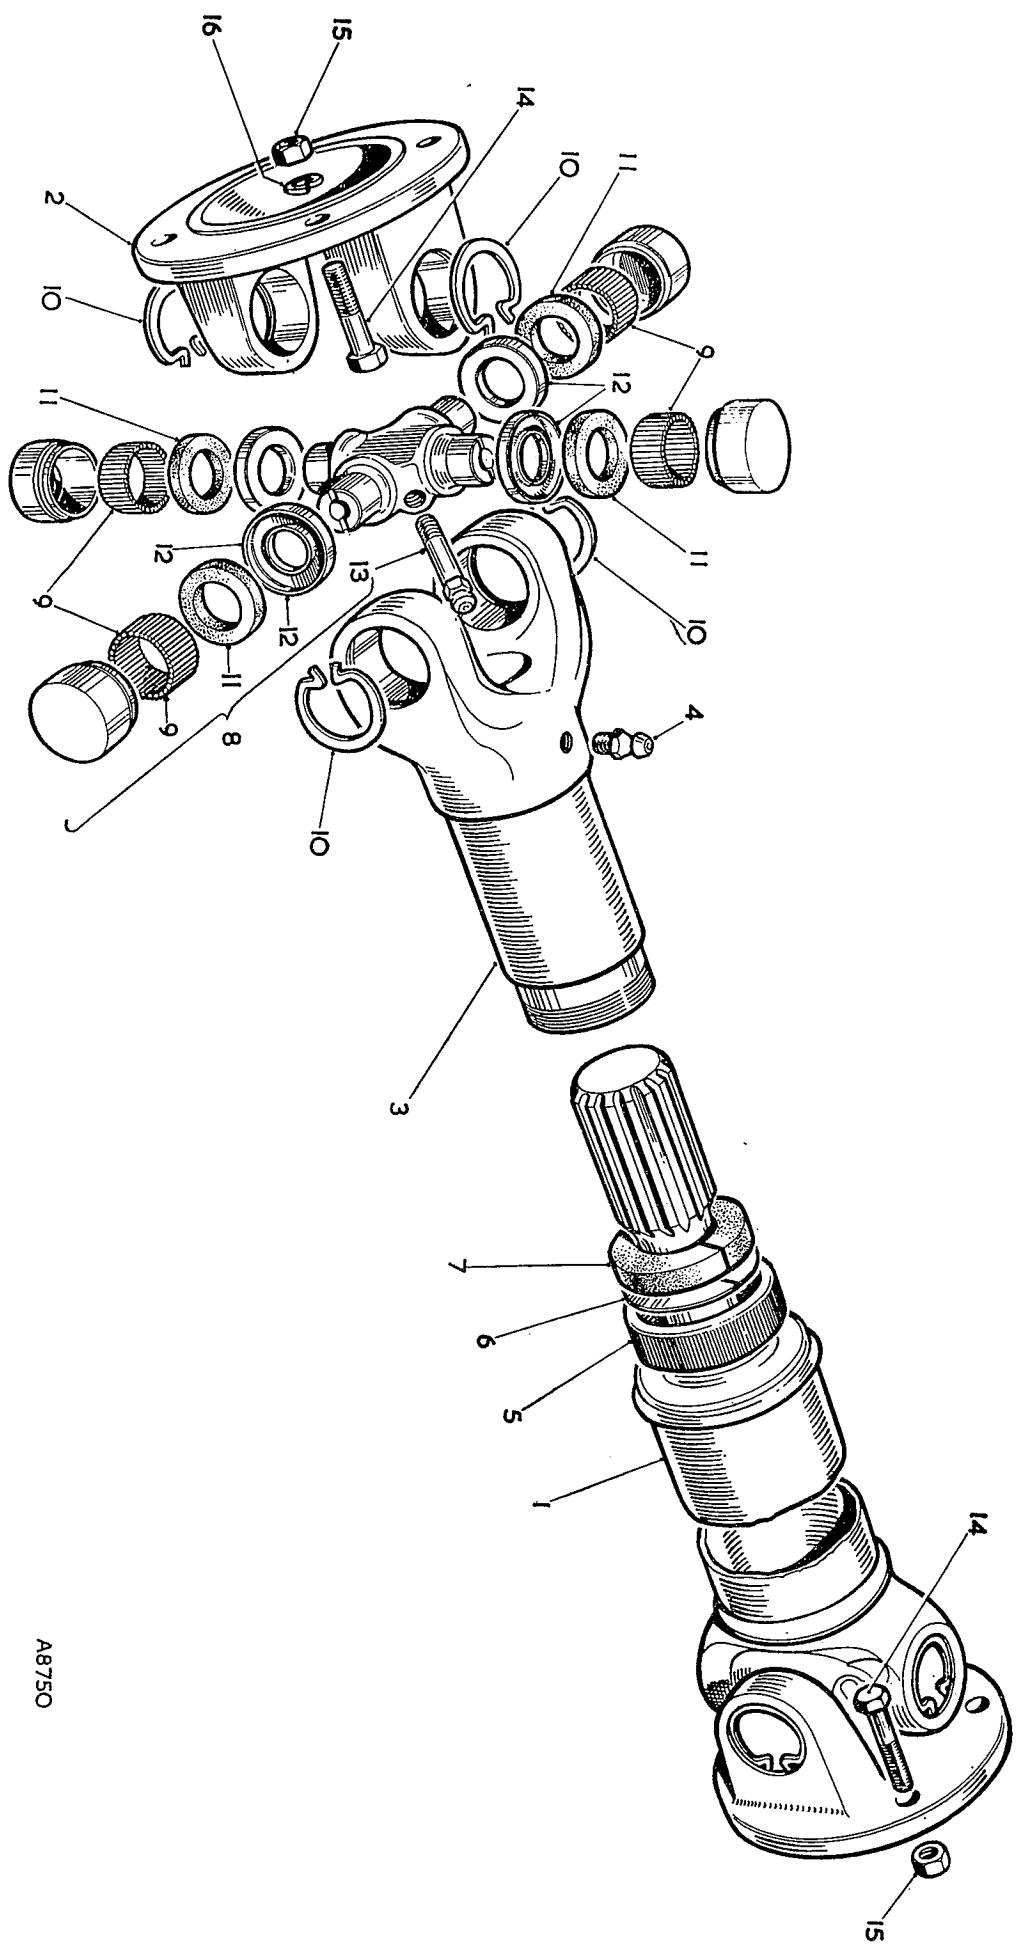

A8750

To face page G.1

SERVICE PARTS LIST


THE MGB

ITEM No.	DESCRIPTION	COMMENCING (C) GHN8/101	MODIFICATIONS			REMARKS			
			Part Number	Oty. per Illus. No.	New Part Number				
TRANSMISSION									
PROPELLER SHAFT									
1	Shaft assembly—propeller	AHH6481	1	1		Standard			
2	Shaft assembly—tubular	NSP 7H3868	1	2					
3	Flange—yoke	7H3868	2	2					
4	Sleeve assembly—yoke	7H3865	3	1					
5	Lubricator	UHN400	4	1					
6	Cap—dust	7H3878	5	1					
7	Washer—dust cap (steel)	7H3879	6	1					
8	Washer—dust cap (cork)	7H3880	7	1					
9	Journal assembly	8GB183	8	2					
10	Journal	NSP	2						
11	Bearing assembly—needle	17H3955	9	8					
12	Circlip	7H3877	10	8					
13	Gasket	17H38818	11	8					
14	Retainer—gasket	17H38819	12	8					
15	Lubricator—journal	7H3858	13	2					
16	Bolt—shaft to pinion flange (front and rear)	18H398	14	8					
17	Nut—bolt	LNZ105	15	8					
18	Washer—spring—front bolt	LWZ205	16	4					

SERVICE PARTS LIST

PLATE H

THE MGB

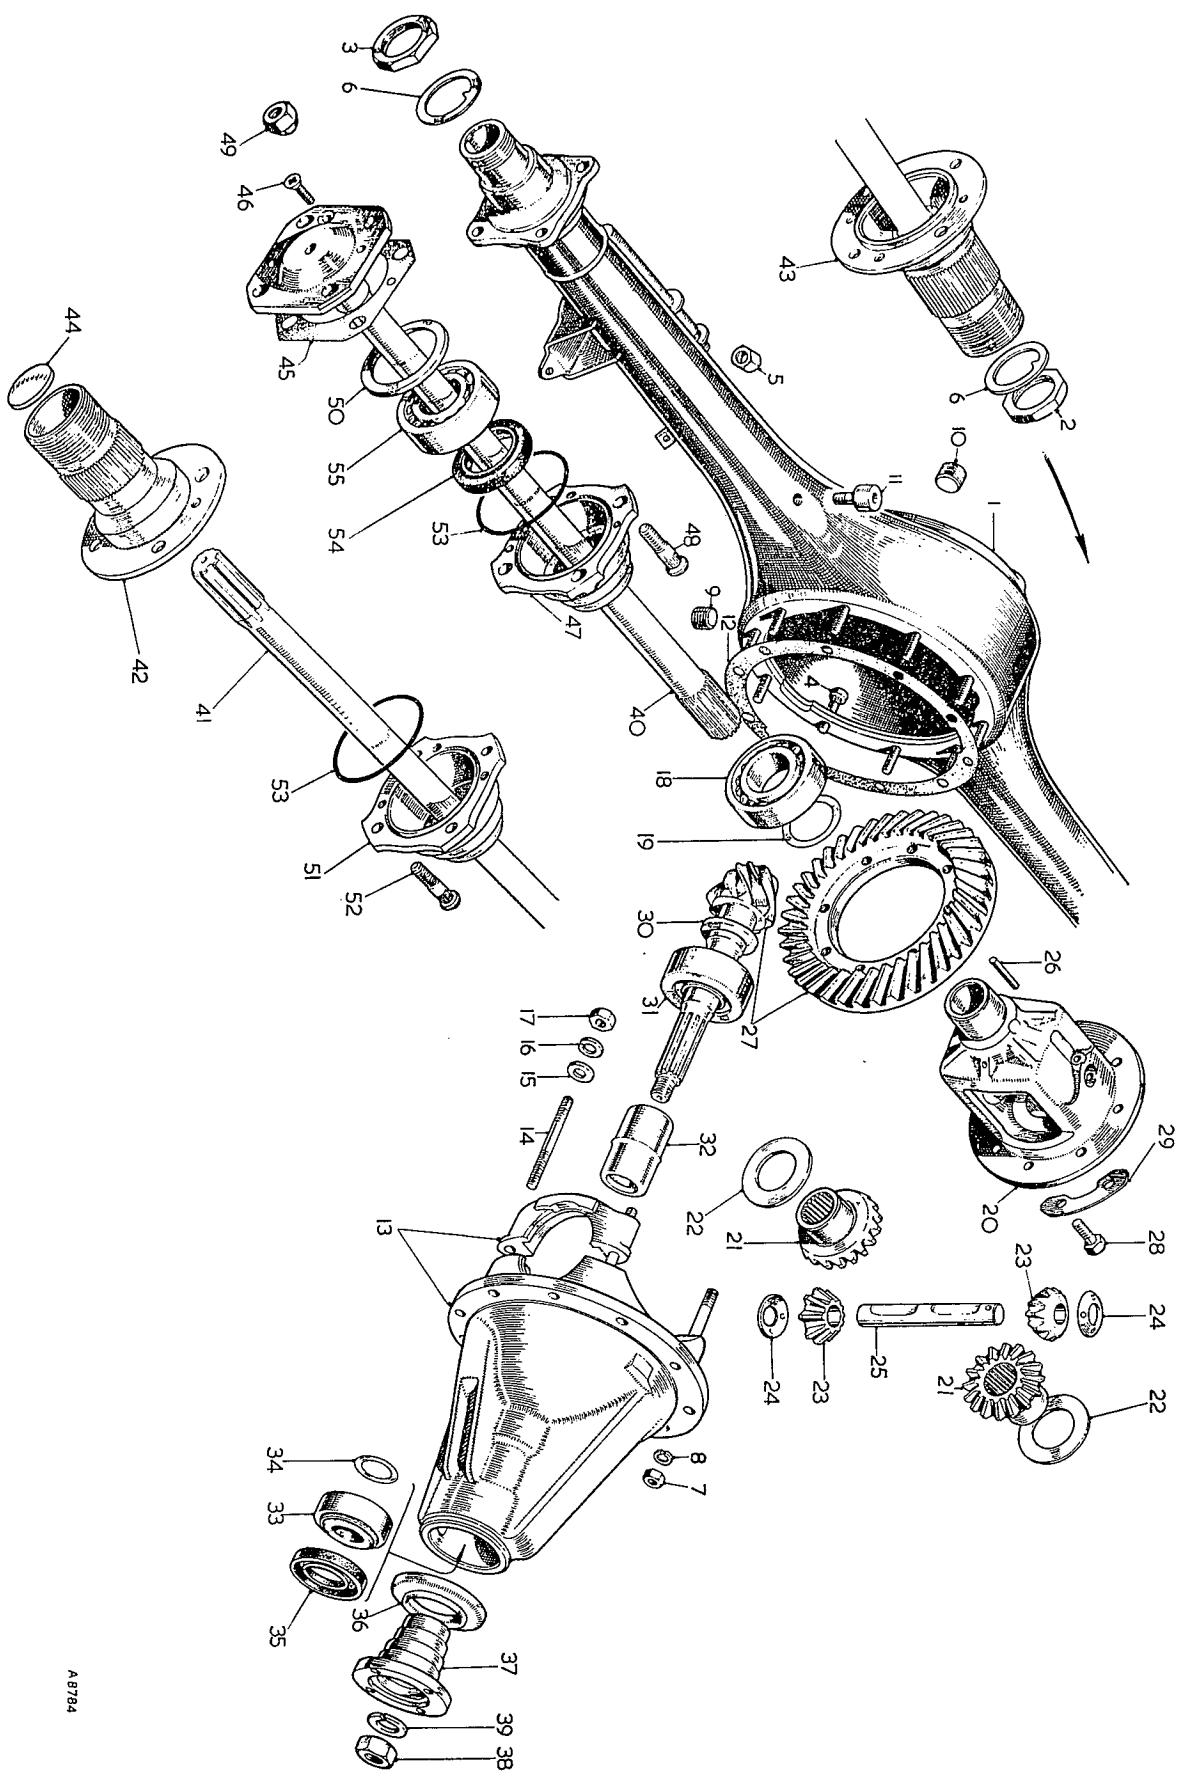

To face page H.1

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (C) G.H.N3/101	PART NUMBER	QTY. PER VEH.	MODIFICATIONS		REMARKS
				ILLUS. NO.	NEW PART NUMBER	
REAR AXLE AND SUSPENSION						
Axle assembly.....	NSP		1			
Case assembly	BTE533	1	1			
Case assembly	BTE534	1	1			
Nut—bearing retaining—RHT	IG7448	2	1			
Nut—bearing retaining—IHT	IG7582	3	1			
Stud—gear carrier	2A7226	4	10			
Nut—rebound spindle	FNZ106	5	2			
Washer—bearing retaining nut	IG7584	6	2			
Nut—gear carrier to axle case	FNZ105	7	10			
Washer—spring—nut	LWZ205	8	10			
Plug—drain	6K449	9	1			
Plug—filter	6K449	10	1			
Breather assembly	IH3264	11	1			
Joint—gear carrier to axle case	IG7465	12	1			
Differential assembly—11/43	BTB114	1				
Carrier assembly	ATB781	13	1			
Stud—bearing cap	51R886	14	4			
Washer—plain—bearing cap	ATC7084	15	4			
Washer—spring—bearing cap	LWN307	16	4			
Nut—stud	FNH107	17	4			
Bearing—differential	2KG544	18	2			
Washer—bearing packing—.002" (.051 mm)	2K9938	19	2			
Washer—bearing packing—.003" (.067 mm)	2K7993	19	A/R			
Washer—bearing packing—.004" (.102 mm)	ATB7289		A/R			
Washer—bearing packing—.006" (.152 mm)	2K7435		A/R			
Washer—bearing packing—.010" (.254 mm)	6K903		A/R			
Cage—differential	IG7600		1			
Wheel—differential	BTB328		20			
Washer—thrust—differential wheel	BTB150	21	2			
Pinion—differential	ATB7072	22	2			
Washer—thrust—differential pinion	ATB7123	23	2			
Pin—pinion	1G7445	24	2			
Peg—pinion pin	1G7444	25	1			
Crown wheel and pinion 11/43	6K842	26	1			
Bolt—crown wheel to differential cage	BTB314	27	1			
Lock washer—bolt	ATA7043	28	8			
Lock washer—bolt	6K875	29	4			

Disc wheels only
Wire wheels only

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHNB101	Part Number	MODIFICATIONS		REMARKS
				Qty. per Ven.	New Part Number	
1	Rear Axle and Suspension—continued					
2	Washer—pinion thrust—126" (3-20 mm.)	ATB7064	30	1		
3	Washer—pinion thrust—124" (3-15 mm.)	ATB7065		1		
4	Washer—pinion thrust—122" (3-10 mm.)	ATB7066		1		
5	Washer—pinion thrust—120" (3-05 mm.)	ATB7067		1		
6	Washer—pinion thrust—118" (3-00 mm.)	ATB7068		1		
7	Washer—pinion thrust—116" (2-95 mm.)	ATB7069		1		
8	Washer—pinion thrust—114" (2-90 mm.)	ATB7070		1		
9	Washer—pinion thrust—112" (2-85 mm.)	ATB7071		1		
10	Bearing—pinion—inner	6K287	31	1		
11	Spacer—bearing	1B7240	32	1		
12	Bearing—pinion—outer	2A7213	33	1		
13	Shim—outer bearing—.004" (.102 mm.)	ATB7102	34	1		
14	Shim—outer bearing—.006" (.152 mm.)	ATB7103		1		
15	Shim—outer bearing—.008" (.203 mm.)	ATB7104		1		
16	Shim—outer bearing—.010" (.245 mm.)	ATB7105		1		
17	Shim—outer bearing—.012" (.304 mm.)	ATB7106		1		
18	Shim—outer bearing—.020" (.508 mm.)	ATB7107		1		
19	Seal—oil	ATA7047	35	1		
20	Cover—dust	IG7439	36	1		
21	Flange—universal joint	ATB7059	37	1		
22	Nut—pinion	FNZ612	38	1		
23	Washer—spring—nut	LWZ212	39	1		
24	Shaft—axle	BTB336	40	2		
25	Shaft—axle	BTB153	41	2		
26	Hub extension—RH	BTB332	42	1		
27	Hub extension—LH	BTB333	43	1		
28	Plug—welch—hub extension	2K8160	44	2		
29	Joint—shaft to hub	BTB337	45	2		
30	Screw—countersunk—shaft to hub	CMZ0410	46	2		
31	Hub assembly	BTB334	47	2		
32	Stud—wheel	BTB207	48	8		
33	Nut—wheel stud	BTB354	49	8		
34	Spacer—bearing	1G7436	50	2		
35	Hub assembly	BTB335	51	2		
36	Stud—wheel	BTB258	52	8		
37	Ring—oil seal	ATB7354	53	2		
38	Seal—oil	8G555	54	2		
39	Bearing—hub	2K7477	55	2		


Disc wheels only

Wire wheels only

SERVICE PARTS LIST

PLATE H

THE MGB

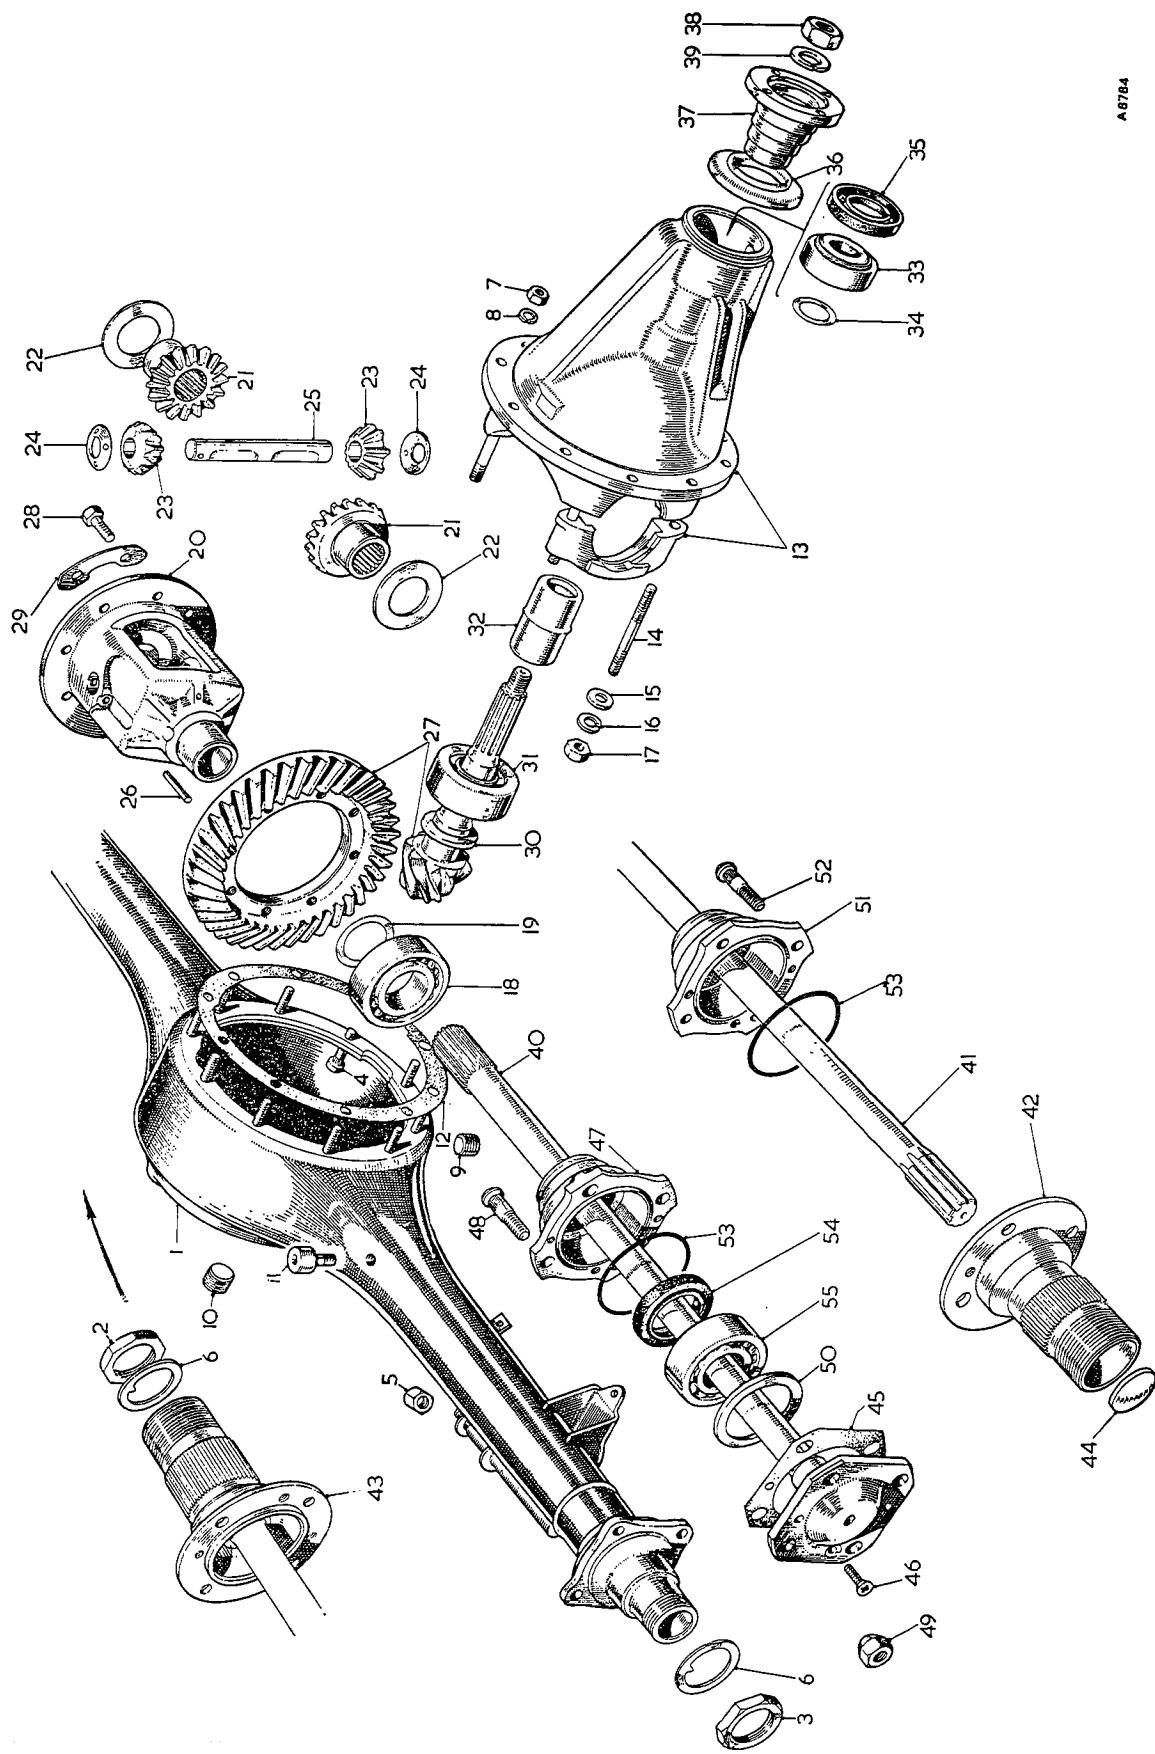


To face page H.2

SERVICE PARTS LIST

PLATE HA

THE MGB

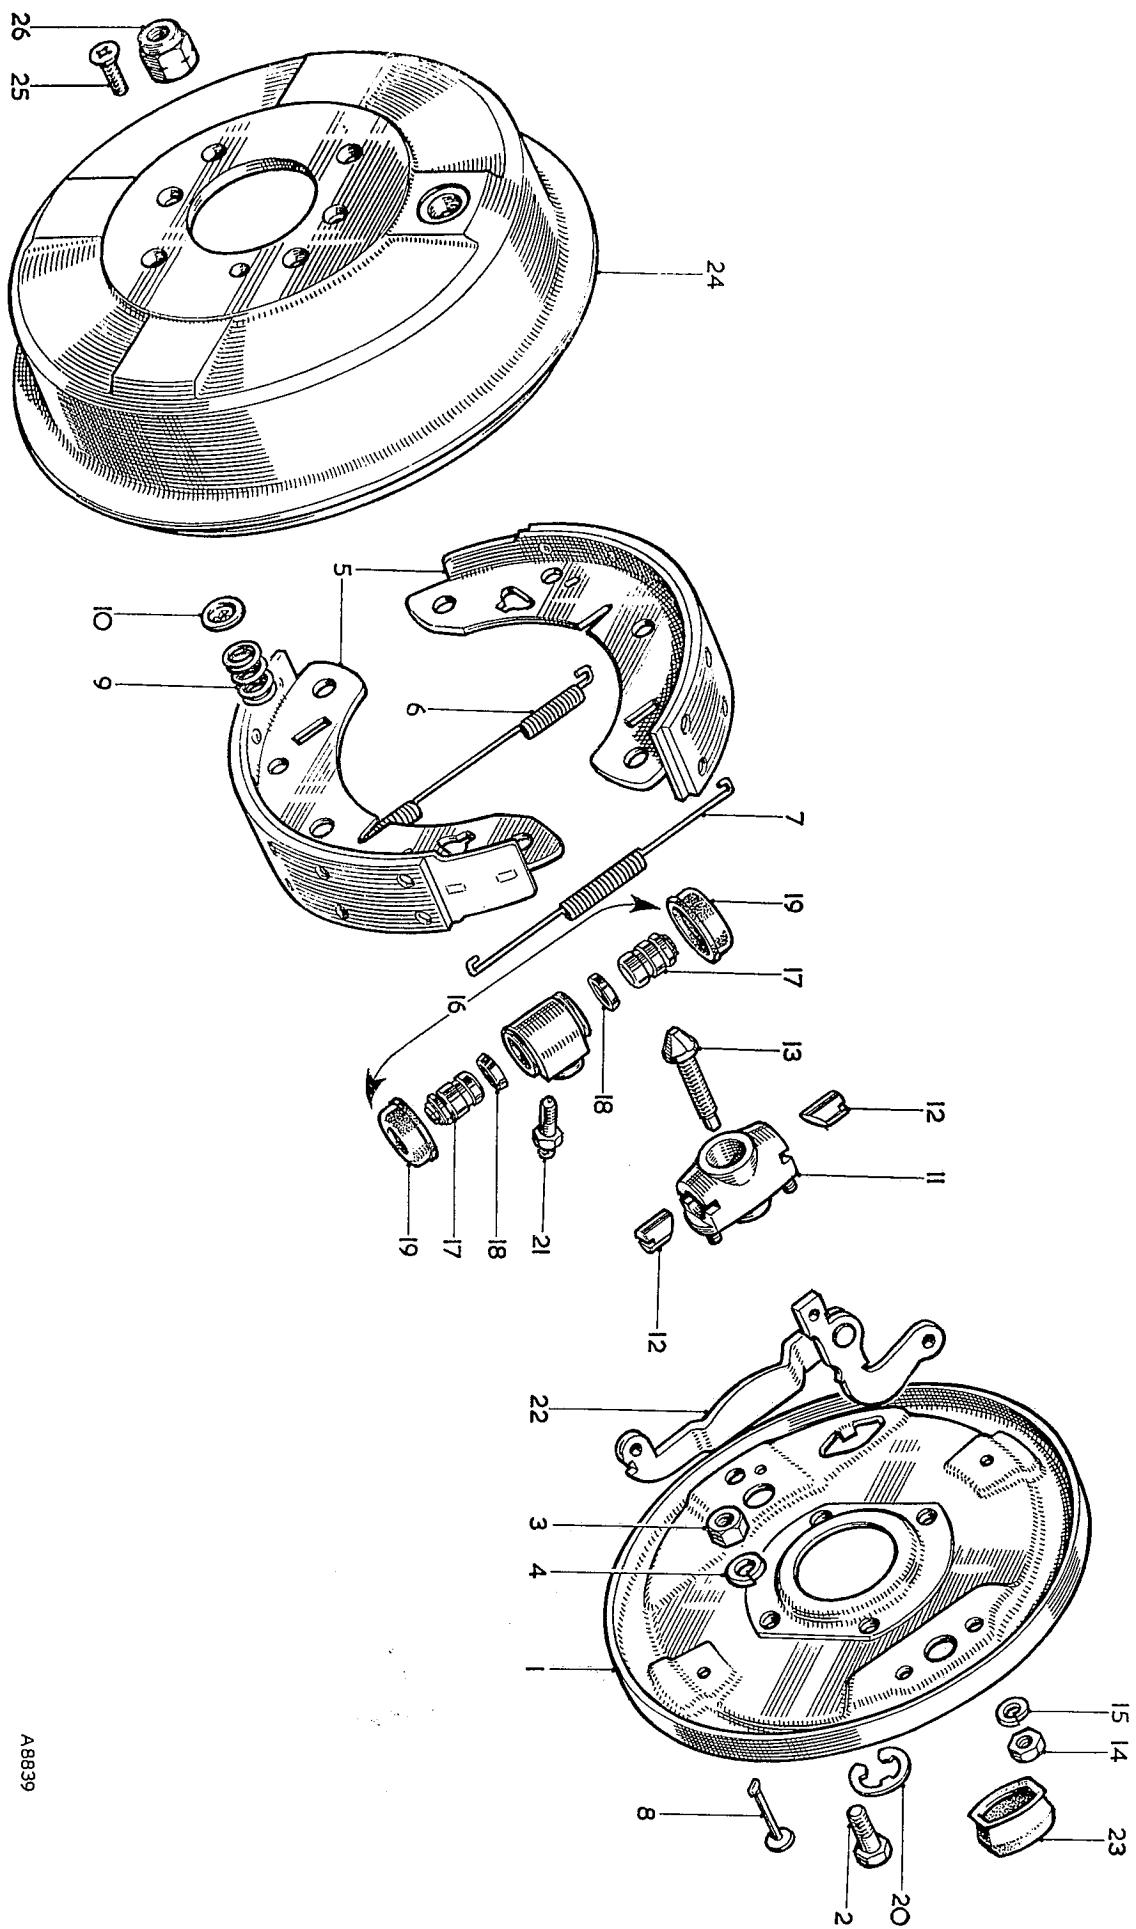

To face page H.3

A8839

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	MODIFICATIONS		REMARKS
		Commencing (C) GHN3101	New Part Number	
		Part Number	Qty. per Veh.	Illus. No.
REAR BRAKES				
1	Plate—brake—RH	BTB366	1	1
2	Plate—brake—LH	BTB367	1	1
3	Bolt—brake-plate to axle case	51KC1380	2	8
4	Nut—bolt	FNZ106	3	8
5	Washer—spring—nut	LWZ206	4	8
6	Shoe assembly—brake	8G8675	5	2 sets
7	Lining with rivets	8G83307	1 box	
8	Rivet	7HT398	.48	
9	Spring—pull-off—cylinder end—RH	17HT994	6	1
10	Spring—pull-off—cylinder end—LH	17HT995	1	
11	Spring—pull-off—adjuster end	17HT996	7	2
12	Pin—brake-shoe steady	17HT998	8	4
13	Spring—brake-shoe steady	17HT969	9	4
14	Spring—brake-shoe steady spring	17HT971	10	4
15	Adjuster assembly	17H974	11	2
16	Body	NSP	2	
17	Tappet	17HT972	.12	4
18	Wedge	17HT973	13	2
19	Nut—adjuster to brake-plate	FNZ104	.14	4
20	Washer—spring—nut	LWZ204	15	4
21	Cylinder assembly—wheel	17H7986	16	2
22	Body	NSP	2	
23	Piston	17HT998	.17	4
24	Seal—piston	7HT504	18	4
25	Boot	17HT511	.19	4
26	Clip—spring—wheel cylinder retaining	17HT949	20	2
27	Screw—bleeder	17HT623	.21	2
28	Lever—hand brake—RH	17HT991		1
29	Lever—hand brake—LH	17HT992		1
30	Boot—hand brake lever	17HT997		2
31	Drum—brake	BTB338	24	2
32	Screw—drum to hub	CMZ0410	25	4
33	Nut—drum retaining	B1CB157	26	8
34	Kit—wheel cylinder repair	8G8674	2	4
35	Seal			
36	Boot			
37	Boot—hand brake lever			

Disc wheels only
Wire wheels only

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3/101

MODIFICATIONS

REMARKS

Spring assembly—main

AHH6453
AHH6454

Part
Number

Illus.
No.


Qty.
per
Veh.

New
Part
Number

Change Point

REMARKS

1	Leaf—second	AHH6454	2			
2	Bush	AHH6446	1	2		
3	Distance piece	AHH6456	3	2		
4	Bolt—locating	AHH6463	4	2		
5	Nut—bolt	ACAA5000	5	2		
6	Locknut—bolt	FNZ105	6	2		
7	Clip—third leaf	FNZ205	7	2		
8	Clip—fourth leaf	AHH5467	8	4		
9	Plate—shackle and pins	AHH5470	9	4		
10	Plate—shackle	AHH5018	10	2		
11	Bush—shackle plate (rubber)	AHH5019	11	2		
12	Nut—shackle plate pin	AHH5016	12	8		
13	Washer—spring—nut	FNZ106	13	4		
14	Clip—“U”—rear spring	LWZ206	14	4		
15	Nut—“U”-clip	AHH6452	15	4		
16	Pedestal—bump rubber	FNZ106	16	16		
17	Plate—spring locating	AHH6053	17	2		
18	Pad—spring seating	ACG5001	18	4		
19	Bracket—shock absorber to rear spring—RH	ACG5002	19	4		
20	Bracket—shock absorber to rear spring—LH	AHH5067	20	1		
21	Bolt—spring—front end	AHH5068	21	2		
22	Nut—bolt	HBZ0724	22	2		
23	Washer—spring—nut	FNZ107	23	2		
24	Strap—rebound	LWZ207	23	2		
25	Distance tube—rebound strap	AHH6355	24	2		
26	Nut—rebound strap to axle	AHH6162	25	2		
27	Washer—plain—nut	FNZ106	26	2		
28	Washer—spring—nut	PWZ206	27	2		
29	Bolt—strap to bracket	LWZ206	28	2		
30	Nut—bolt	HBZ0514	29	2		
31	Washer—spring—nut	FNZ105	30	2		
32	Bump rubber	LWZ205	31	2		
33		AHH6147	32	2		

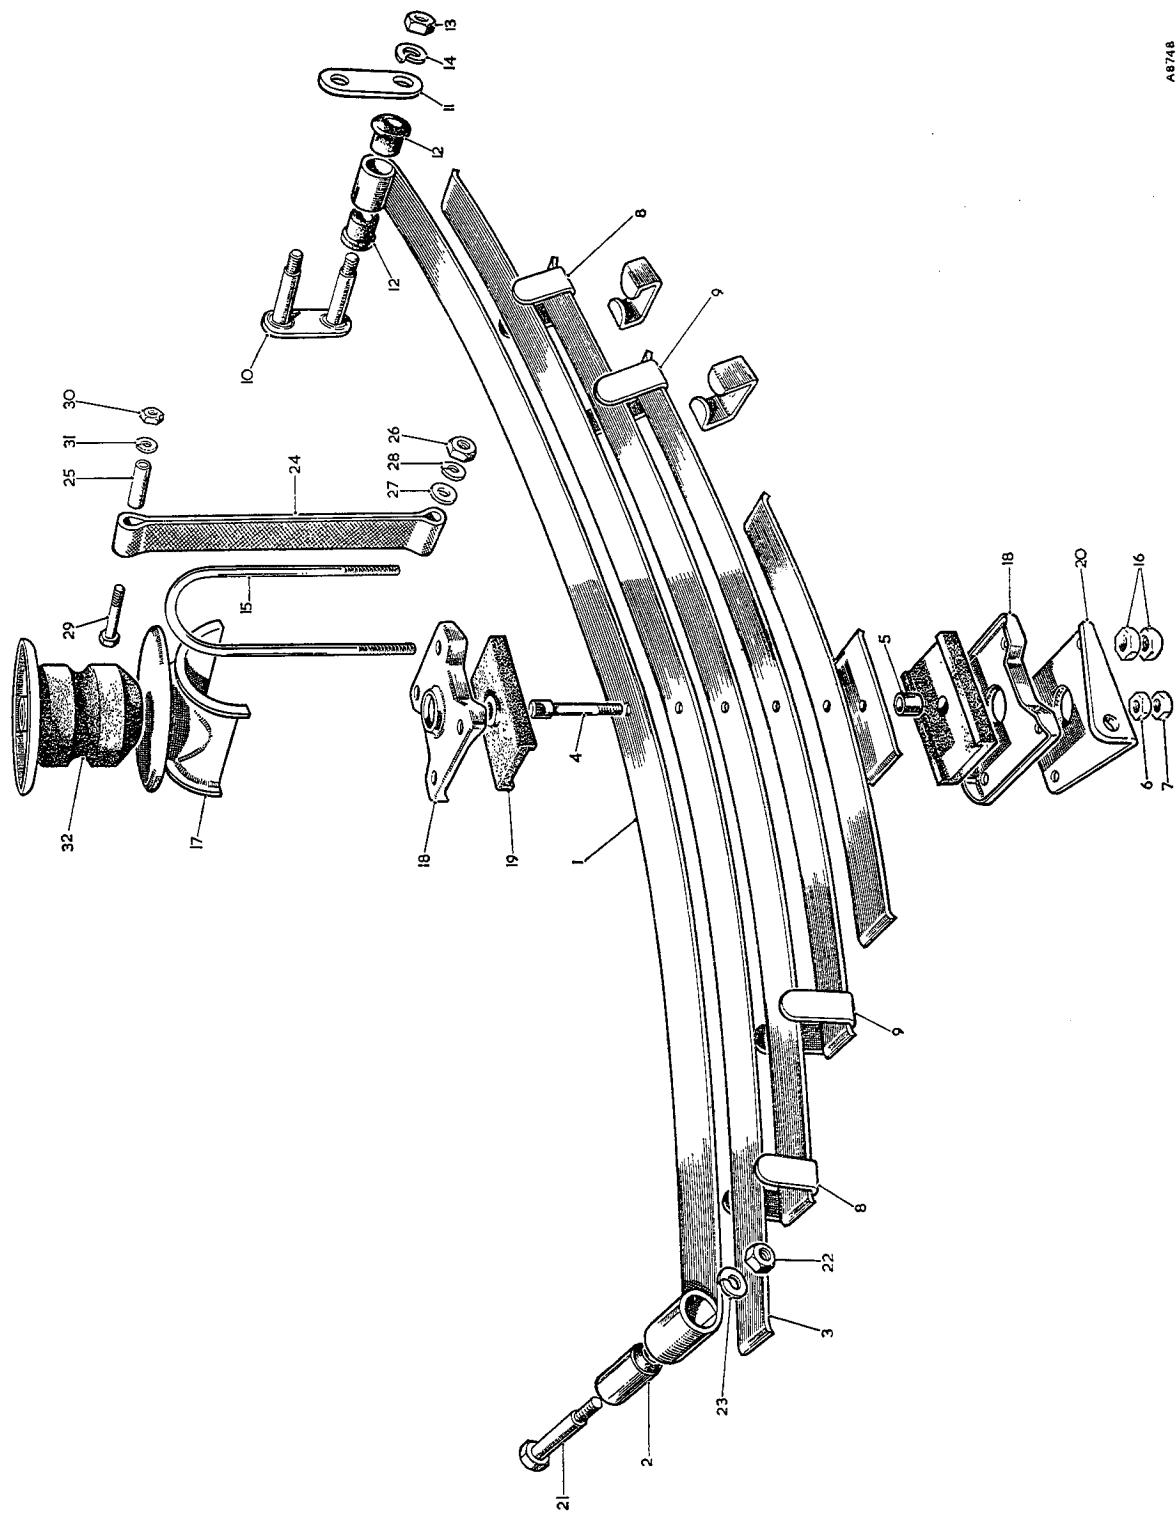


A8748

To face page H.4

SERVICE PARTS LIST

PLATE J

THE MGB

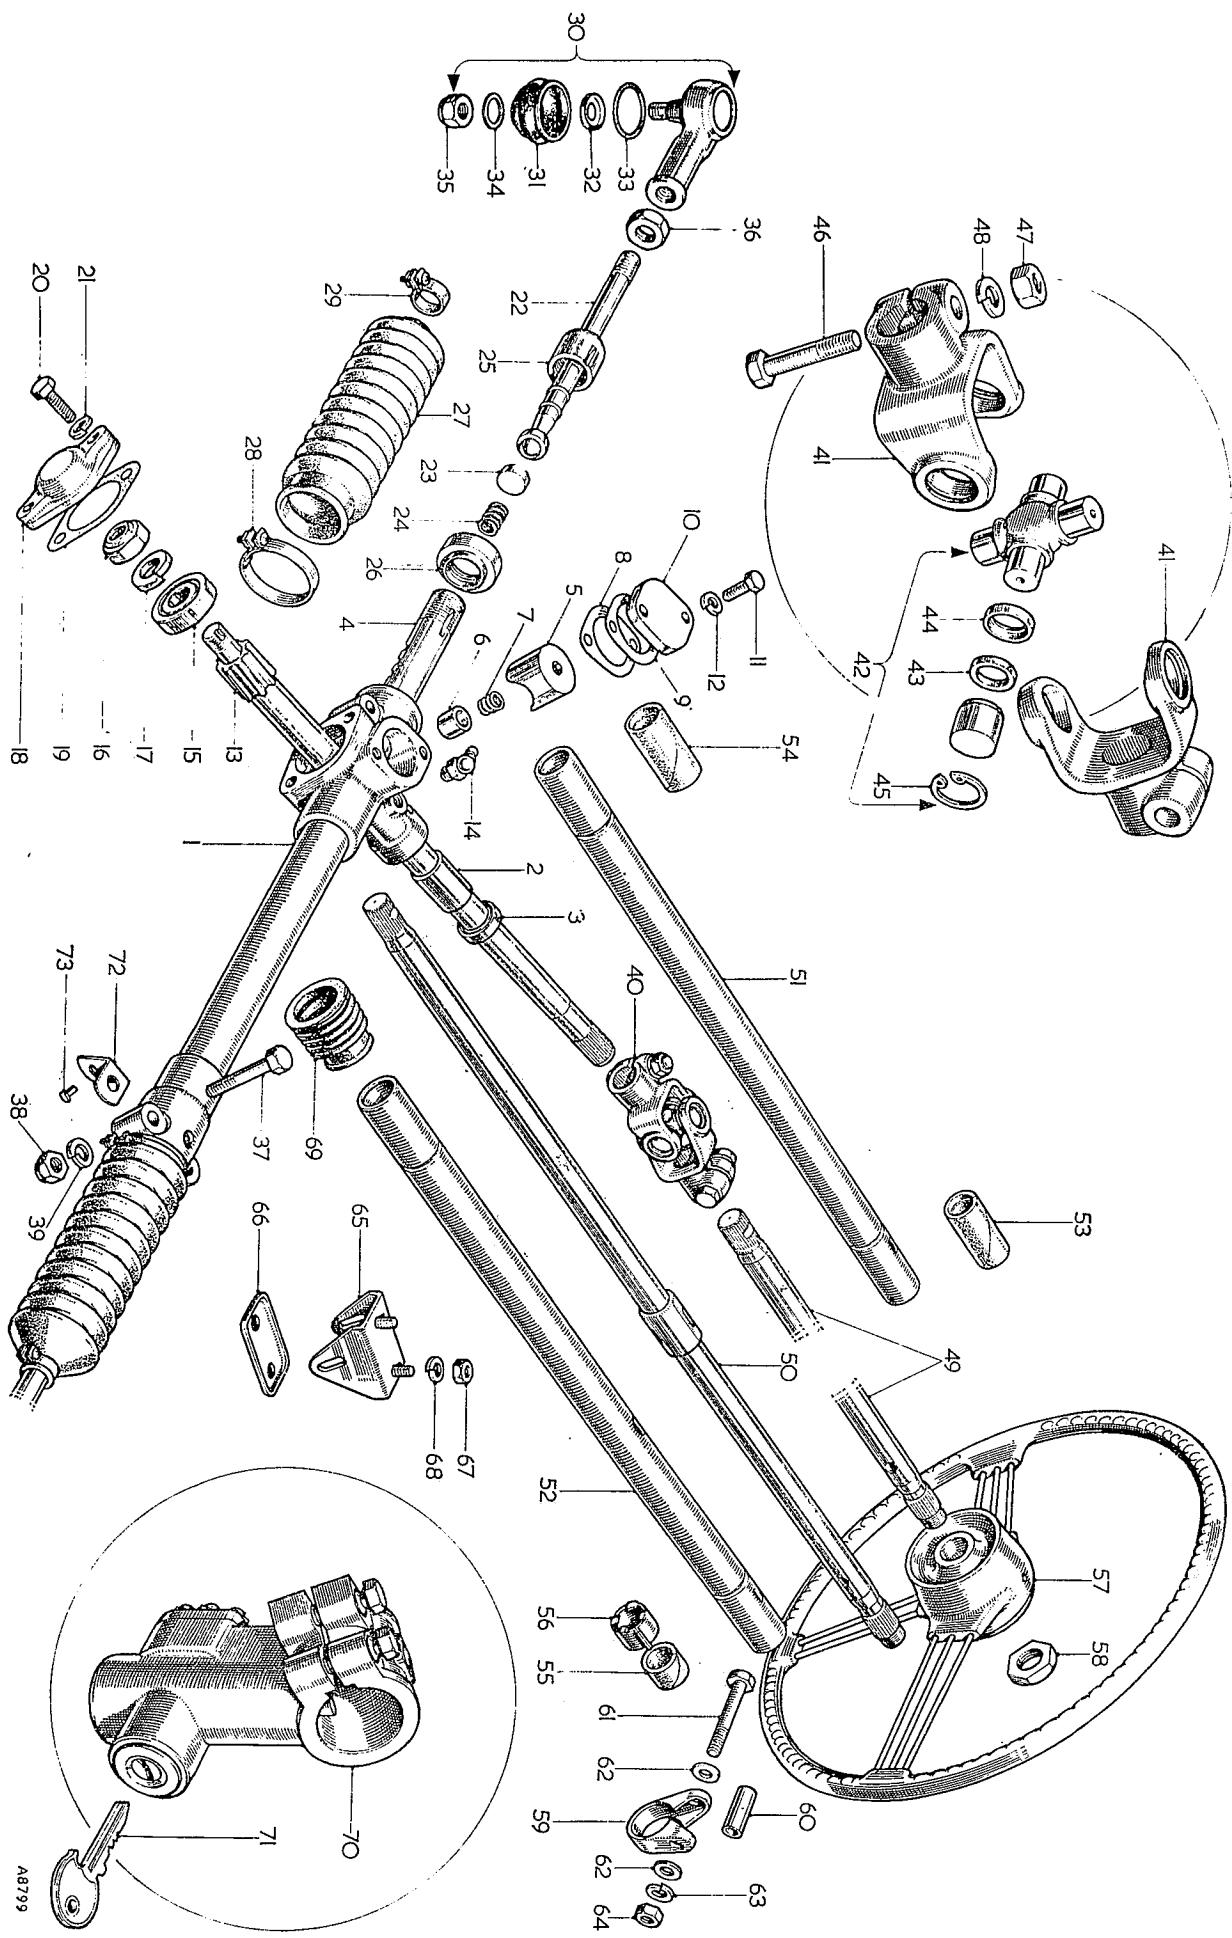

To face page J.1

A8799

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN8/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Qty. per Veh.	
STEERING						
1	Rack assembly	RHD	AHH6091		1	
2	Rack assembly	LHD	AHH6121		1	
3	Housing assembly	RHD	17H6588		1	
4	Bush—pinion	LHD	17H6589		2	
5	Seal—oil		17H6570		3	
6	Rack		17H6570		4	
7	Yoke—track support		17H6582		5	
8	Pad—damper		ACA5244		6	
9	Spring—damper pad		17H6583		7	
10	Shim—cover plate .0024" (.0609 mm.)		17H6566		8	
11	Shim—cover plate .005" (.127 mm.)		17H6567		A/R	
12	Shim—cover plate .010" (.254 mm.)		17H6568		A/R	
13	Joint—cover plate		17H6584		9	
14	Plate—cover—yoke		17H6580		10	
15	Bolt—cover plate		ZCS0807		11	
16	Washer—spring—bolt		LWZ205		12	
17			17H6575	13	1	
18	Pinion		UHN805		14	
19	Lubricator—pinion shaft		17H6561		15	
20	Bearing—ball—pinion		17H6562		16	
21	Nut—pinion—bearing		LWZ210		17	
22	Washer—spring—nut		17H6563		18	
23	Cover—end		17H6564		19	
24	Joint—end cover		HZC0510		20	
25	Bolt—end cover		LWZ205		21	
26	Washer—spring—bolt		17H6572		22	
27	Rod—tie		17H6571		23	
28	Seat—ball		17H6290		24	
29	Spring—thrust—ball seat		17H6373		25	
30	Housing—ball		17H6374		26	
31	Locknut—ball housing		17H6569		27	
32	Seal—rack		ADG1682		28	
33	Clip—inner—seal		21K5568		29	
34	Clip outer—seal		17H3500	30	2	
35	Socket assembly—ball		17H3501		31	
36	Boot		17H3502		32	
37	Retainer—boot		17H3503		33	
38	Spring—garter		17H3513		34	
39	Washer—boot		17H7983		35	
40	Nut—ball pin		31K5558		36	
41	Locknut					

SERVICE PARTS LIST

THE MGB

Item No.

(C) GHNB101

MODIFICATIONS

DESCRIPTION

Part Number

New Part Number

Change Point

REMARKS

Steering—continued

Bolt—rack to bracket

Nut—bolt

Washer—spring

LWZ205

Joint—universal

Yoke
Journal assembly

Joint—journal

Retainer—joint

Circlip

Bolt—universal joint

Nut—bolt

Washer—spring—nut

Column assembly—inner

	Commencing (C) GHNB101	Part Number	Illus. No.	Qty. per Veh.	New Part Number	MODIFICATIONS	REMARKS
1	HBZ0516	37		4			
2	LNZ205	38		2			
3	LWZ205	39		4			
4	AHH6000	40		1			
5	17H8025	41		2			
6	17H3073	42		1			
7	17H8874	43		4			
8	17H8875	44		4			
9	CCN212	45		4			
10	HBZ0518	46		2			
11	FNZ105	47		2			
12	LWZ205	48		2			
13	17H8577	49		1			
14	RHD	50		1			
15	LHD	51		1			
16	TH6972	52		1			
17	TH6978	53		1			
18	RHD	54		1			
19	LHD	55		1			
20	21A979	56		1			
21	17H8565	57		1			
22	18H569	58		1			
23	18H568	59		1			
24	AHH6310	60		2			
25	ACHH6001	61		2			
26	AHH6005	62		4			
27	AHH6006	63		2			
28	HBZ0518	64		2			
29	PWZ105	65		2			
30	LWZ205	66		2			
31	FNZ105	67		2			
32	AHH6311	68		1			
33	AHH6312	69		1			
34	FNZ105	70		2			
35	LWZ205	71		2			
36	AHA5485	72		1			
37	ACK425	73		2			
	97F2797	74		2			

Lock assembly—steering and ignition


Key

Always quote car or key number

SERVICE PARTS LIST

PLATE J

THE MGB

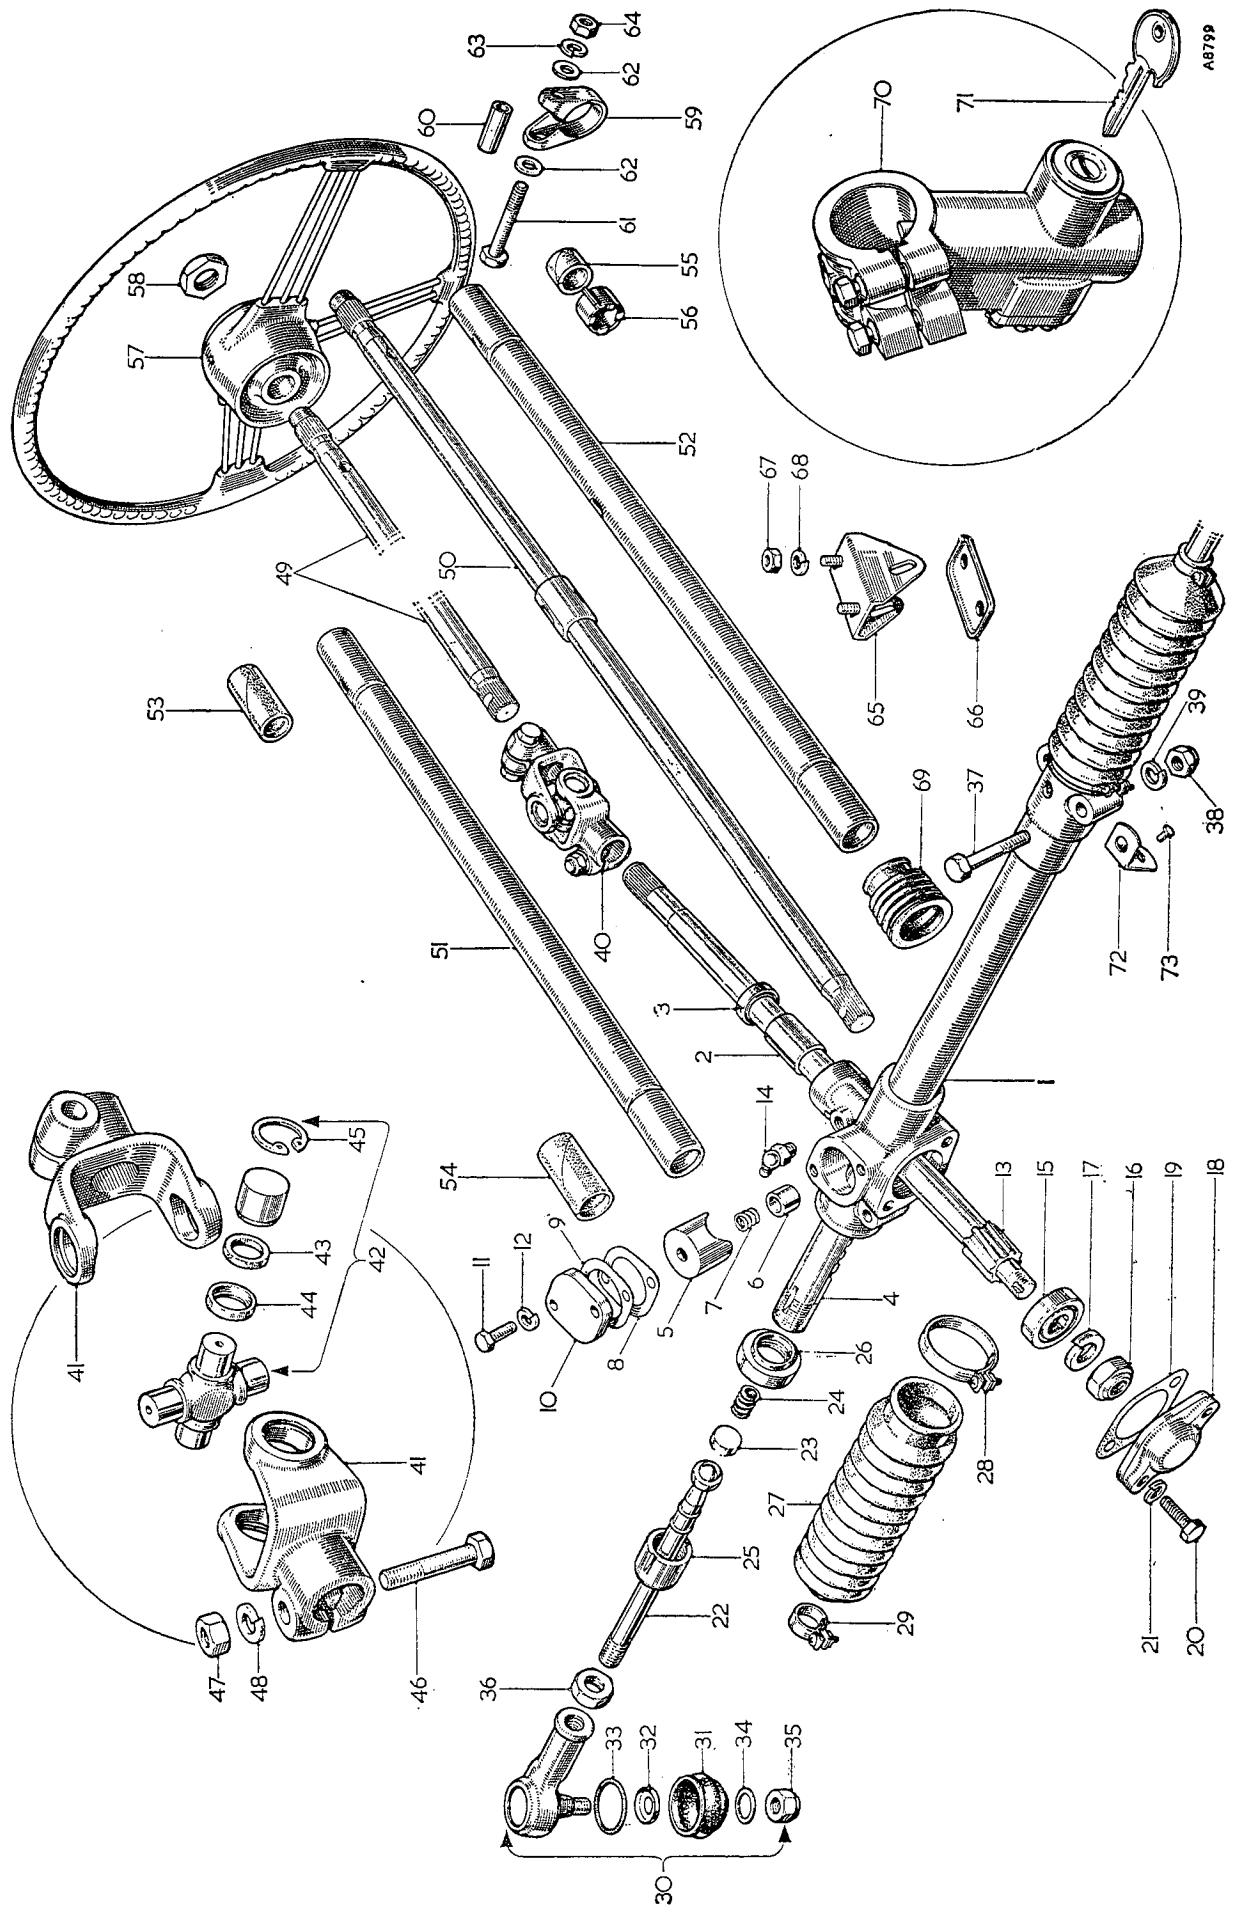


To face page J.2

A8799

SERVICE PARTS LIST

PLATE K

THE MGB

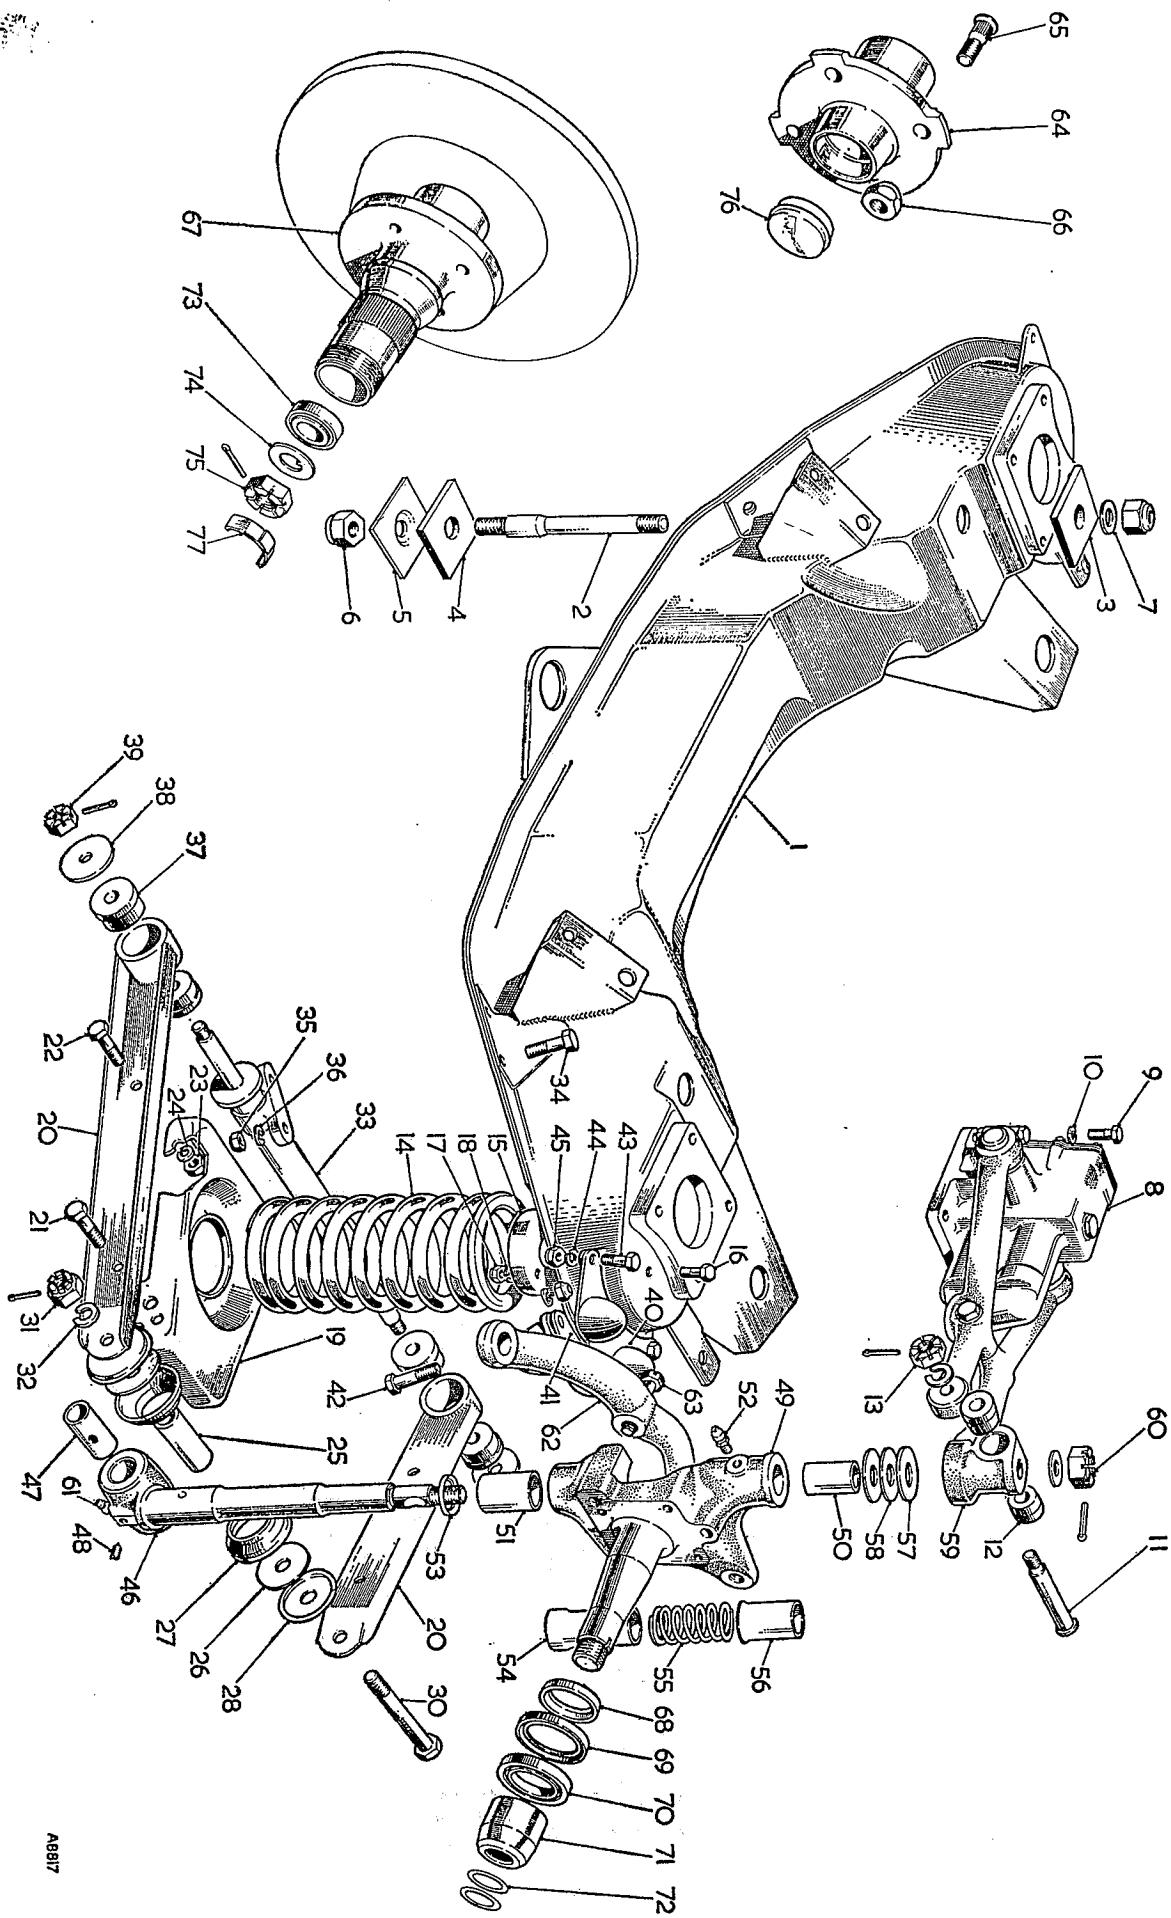

40817

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Qty. per Veh.	New Part Number	
FRONT SUSPENSION						
1	Cross-member	AHH6195	1	1		
2	Bolt—cross-member to body	AHH6204	2	4		
3	Pad—mounting—upper (rubber)	AHH6205	3	4		
4	Pad—mounting—lower (rubber)	AHH6206	4	4		
5	Plate—clamp	AHH6207	5	4		
6	Nut—mounting bolt	LNZ108	6	8		
7	Washer—plain—nut	PWZ108	7	4		
8	Absorber—shock	AHH6124	8	2		
9	Screw—shock absorber to cross-member	53K1025	9	8		
10	Washer—screw—spring	LWZ306	10	8		
11	Pin—fulcrum—top link to shock absorber arm	IG4349	11	2		
12	Bearing—link	8C621	12	4		
13	Nut—fulcrum pin	FNZ407	13	2		
14	Spring—coil	AHH6451	14	2		
15	Spigot—spring	AHH5897	15	2		
16	Screw—spigot to cross-member	HZS0405	16	4		
17	Nut—screw	FNZ104	17	4		
18	Washer—spring—nut	LWZ204	18	4		
19	Pan assembly—spring	AHH5925	19	2		
20	Wishbone assembly—bottom	126908	20	4		
21	Screw—spring—pan to wishbone	HZS0507	21	4		
22	Screw—spring—pan to wishbone	HZS0508	22	4		
23	Nut—screw	FNZ105	23	8		
24	Washer—spring—nut	LWZ205	24	8		
25	Tube—distance—link	126900	25	2		
26	Washer—thrust—link	127657	26	4		
27	Seal—link	126902	27	4		
28	Support—link—seal	126903	28	4		
29	Nut—wishbone pivot	FNZ408	29	4		
30	Bolt—wishbone to link	AHH4001	30	2		
31	Nut—bolt	FNZ308	31	2		
32	Washer—spring—nut	LWZ208	32	2		

SERVICE PARTS LIST

THE MGB

No. Item

DESCRIPTION

Commencing
(C) GHNG101

Part
Number

Illus.
No.

Qty.
per
Veh.

New
Part
Number

MODIFICATIONS
REMARKS

Change
Point


Front Suspension—continued

1	Pivot—wishbone	AHH4003	.83	2		
2	Bolt—pivot to member	ACB5255	.84	8		
3	Nut—bolt	LNZ106	.85	8		
4		LWZ206	.86	8		
5	Bush—wishbone	126914	.87	8		
6	Washer—wishbone pivot	126915	.88	4		
7	Nut—wishbone pivot	FNZ408	.89	4		
8	Buffer—rebound	AHH6514	.40	2		
9	Distance piece	500823	.41	2		
10	Bolt—rebound buffer to cross-member	HBZ0512	.42	4		
11	Screw—rebound buffer to cross-member	HZS0506	.43	4		
12	Washer—spring	LWZ205	.44	8		
13	Nut	FNZ105	.45	8		
14		NSP	1			
15	Front suspension assembly—RH	BTB411	.46	2		
16	Pin—swivel	ACG6005	.47	2		
17	Bush—swivel pin	BTB350	.48	2		
18	Screw—grub—swivel pin	BTB392	.49	1		
19	Axle assembly—swivel—RH	BTB393	.50	1		
20	Axle assembly—swivel—LH	ATC4246	.51	2		
21	Bush—swivel—top	ATC4247	.52	2		
22	Bush—swivel—bottom	UHN400	.53	2		
23	Lubricator—swivel bush	ATC4248	.54	2		
24	Ring—swivel axle pin (cork)	ATC4240	.55	2		
25	Tube—dust excluder—bottom	2K8951	.55	2		
26	Spring—dust excluder	1G4271	.56	2		
27	Tube—dust excluder—top	ATC4264	.57	2		
28	Washer—thrust	A1C4261	.58	A/R		
29	Washer—floating thrust .053 to .057" (1.32 to 1.44 mm.)	A1C4262		A/R		
30	Washer—floating thrust .064 to .069" (1.62 to 1.75 mm.)	A1C4263		A/R		

SERVICE PARTS LIST

PLATE K

THE MGB

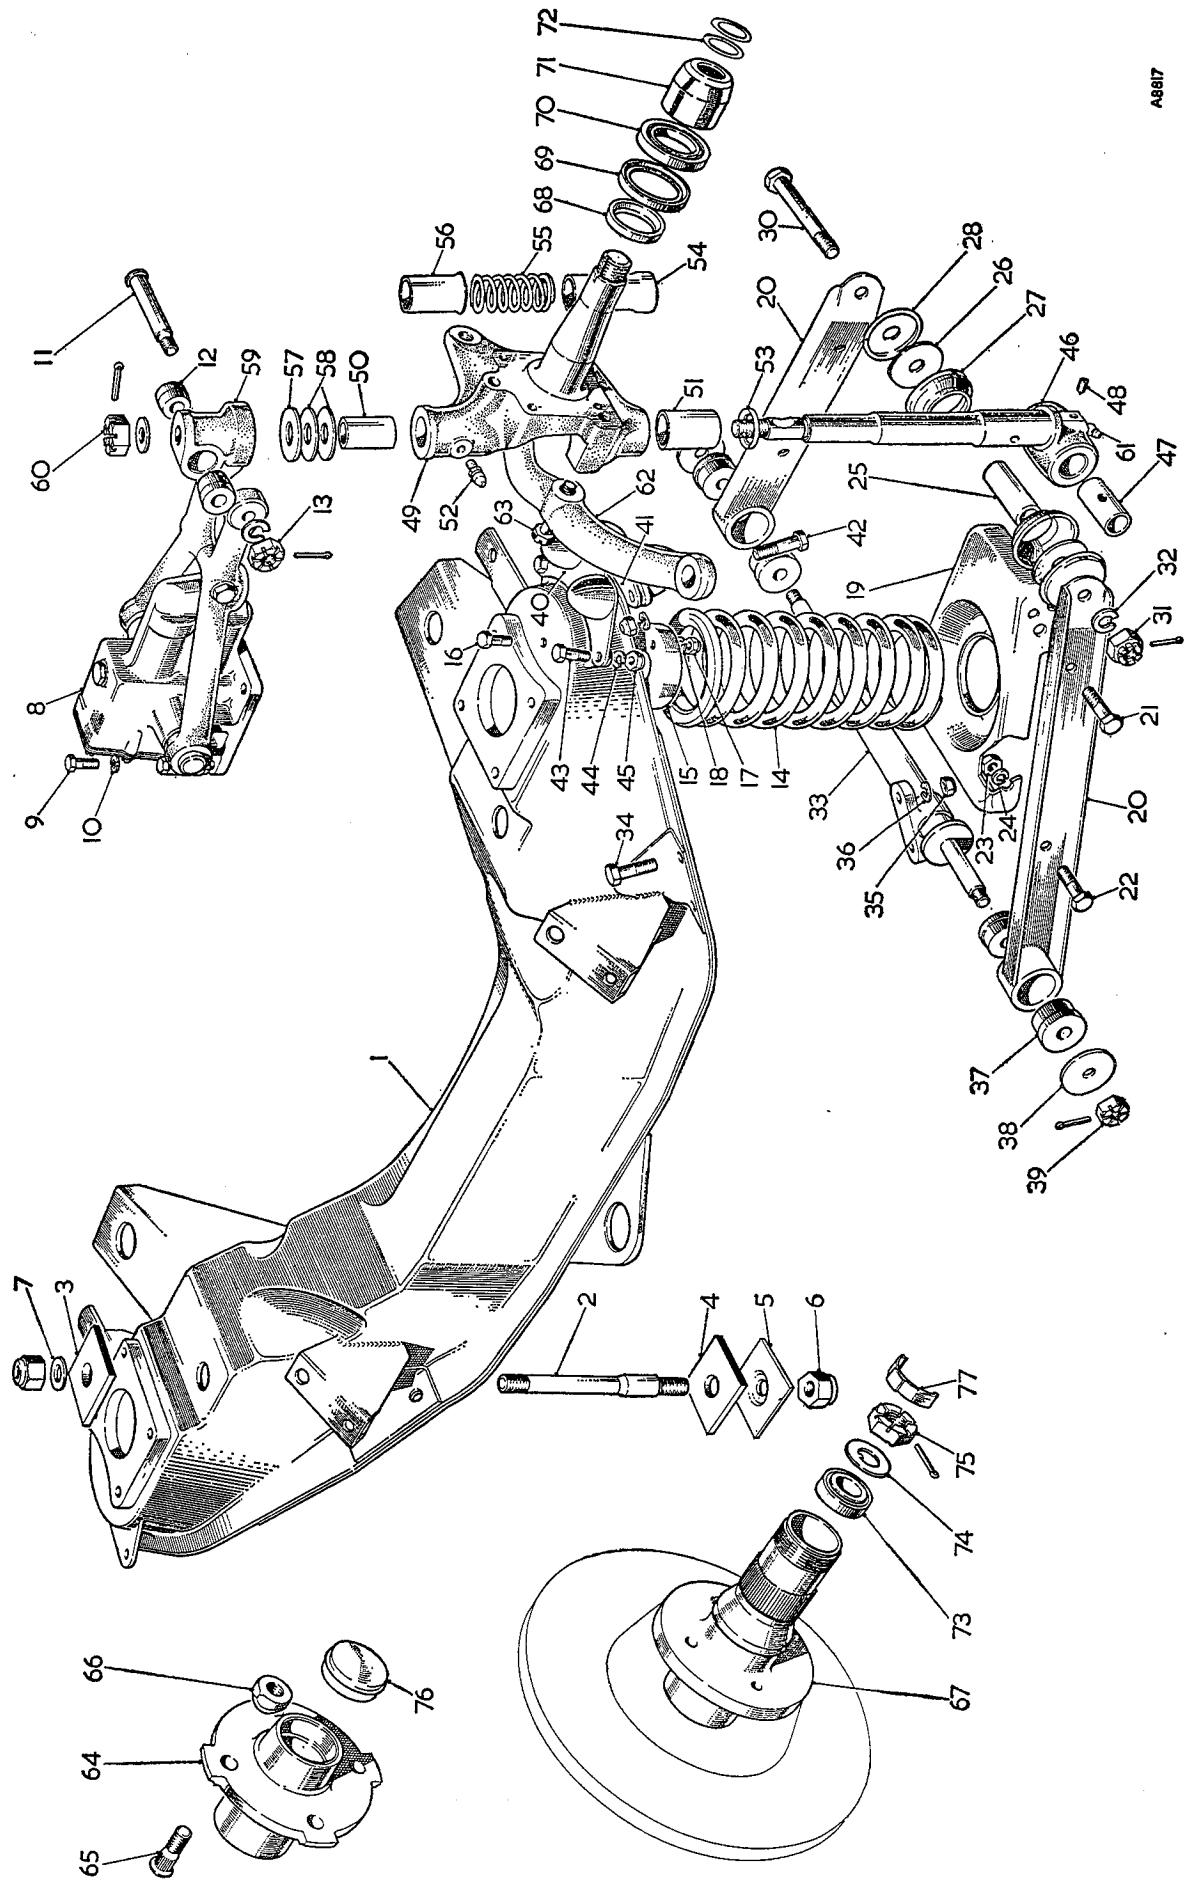


To face page K.2

SERVICE PARTS LIST

PLATE K

THE MGB

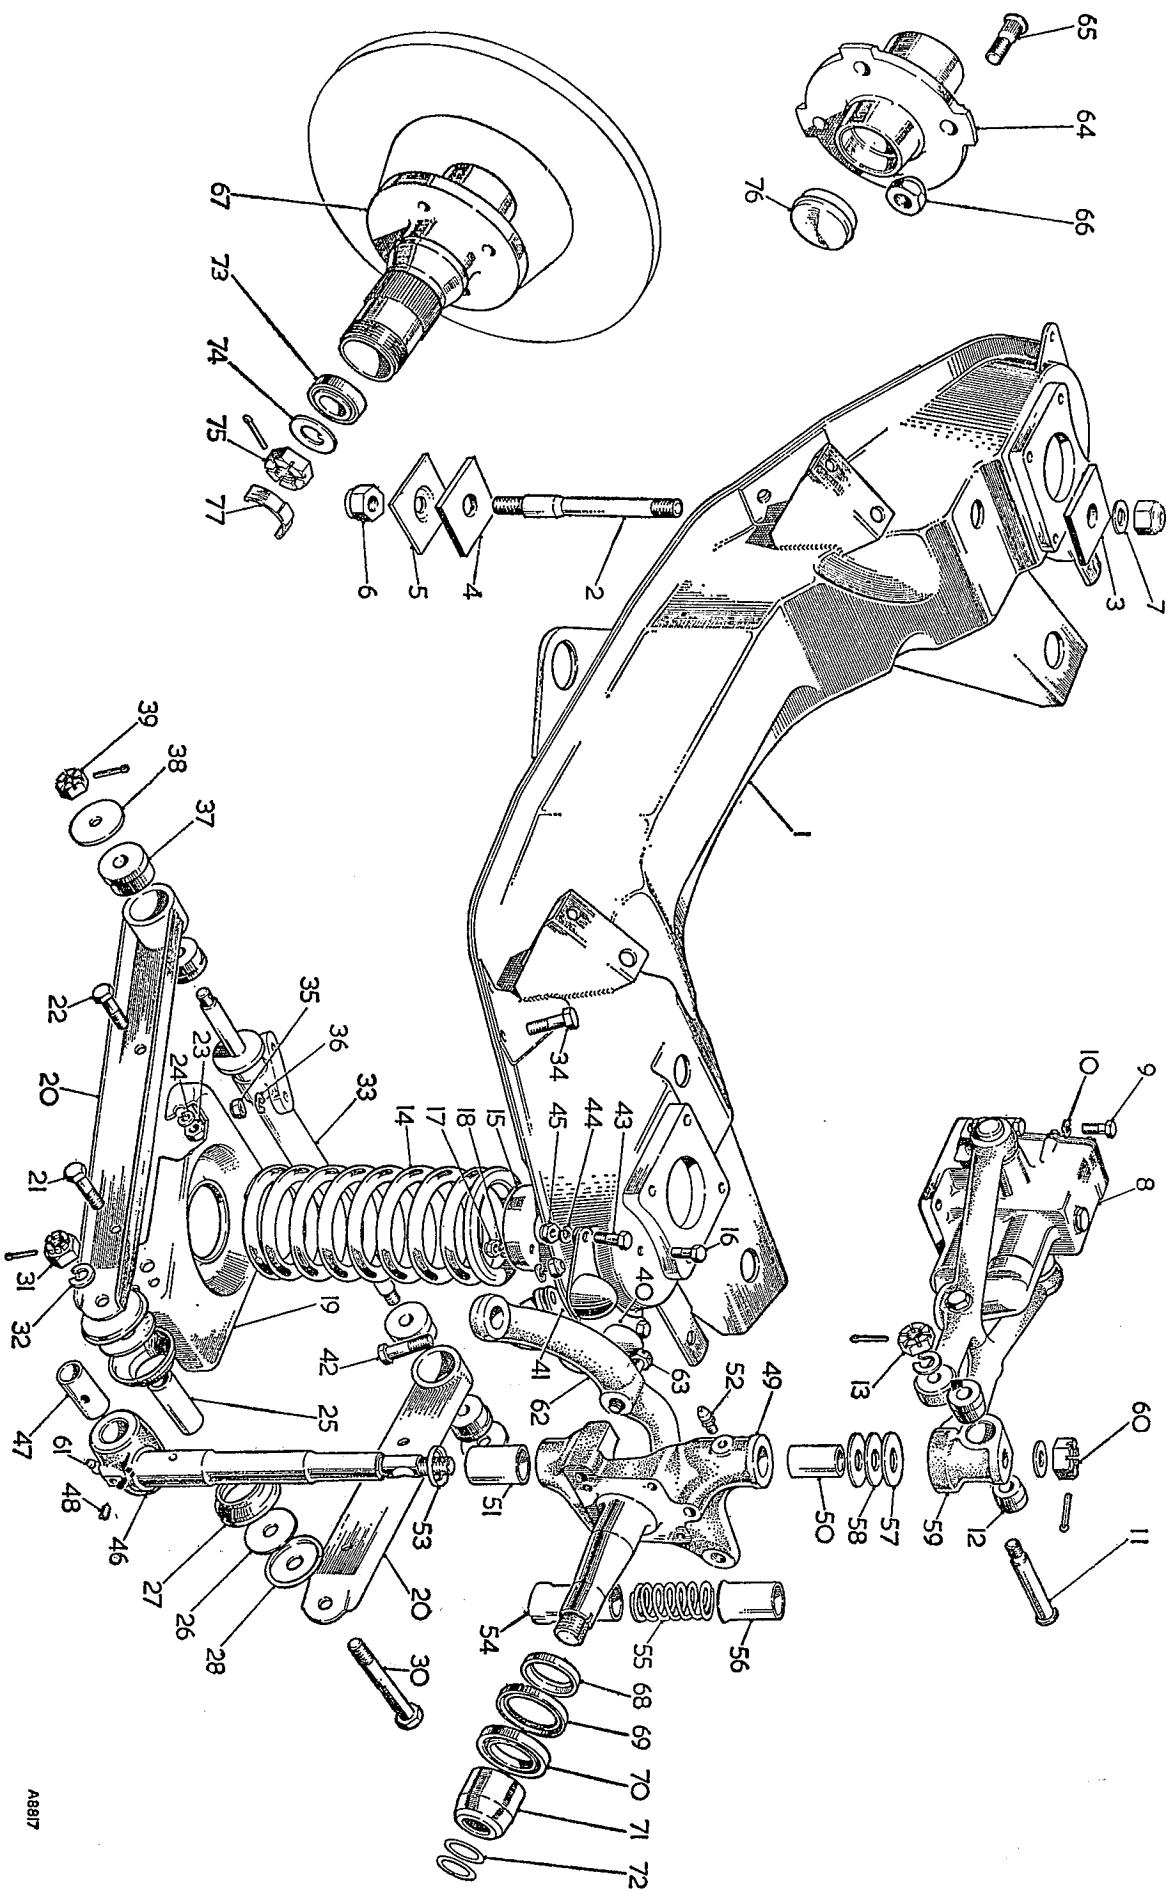

To face page K.3

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101			MODIFICATIONS	
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point
Front Suspension—continued						
1	Trunnion—suspension link	A/TC4240	59	2		
2	Nut—swivel axle pin	A/TC4265	60	2		
3	Lubricator—swivel pin	U/HN445	61	2		
4	Lever—steering—RH	B/TB396	62	1		
5	Lever—steering—LH	B/TB410	63	4		
6	Bolt—steering lever to swivel axle	B/TB361	64	2		
7	Hub assembly...	B/TB187	65	8		
8	Stud—wheel	B/TB354	66	8		
9	Hub assembly—RH	B/TB346	67	1		
10	Hub assembly—LH	B/TB347	1			
11	Collar—oil seal	B/TB183	68	2		
12	Seal—oil	I/HI106	69	2		
13	Bearing for hub—inner	B/TC280	70	2		
14	Spacer—bearing	A/TB4239	71	2		
15	Shim—.003" (.076 mm.)	A/TB4240	72	A/R A/R		
16	Shim—.005" (.127 mm.)	A/TB4241				
17	Shim—.010" (.254 mm.)	A/TB4242				
18	Bearing—hub—outer	A/TB4238	73	2		
19	Washer—bearing retaining	I/A4742	74	2		
20	Nut—bearing retaining	51KB330	75	2		
21	Cup—grease retaining	2A4087	76	2		
22	Cup—grease retaining	A/TB4131	77	2		
23						
Disc wheels only						
Wire wheels only						

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3/01

MODIFICATIONS

REMARKS

Front Suspension—continued

Disc—brake

Bolt—disc to hub

Washer—spring—bolt

Nut—bolt

Cover—dust—brake disc—RH

Cover—dust—brake disc—LH

Bolt—dust cover to swivel axle

Washer—spring—bolt

Caliper unit assembly—RH

Caliper unit assembly—LH

Caliper—RH

Caliper—LH

Piston

Seal—inner

Seal—dust—with retainer

Pad assembly

Pad

Clip—pad retaining

Plug

Screw—bleeder

Bolt—camper to swivel axle


Washer—tab—bolt

Kit—caliper repair

Seal—inner

Seal—dust—with retainer

DESCRIPTION	Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point	REMARKS
Disc—brake						
Bolt—disc to hub	BTB387	1	2			
Washer—spring—bolt	BTB198	2	8			
Nut—bolt	LWZ206	3	8			
Cover—dust—brake disc—RH	BNZ306	4	8			
Cover—dust—brake disc—LH	BTB412	5	1			
Bolt—dust cover to swivel axle	BTB413	6	8			
Washer—spring—bolt	HZS0504	7	8			
Caliper unit assembly—RH	BTB370	1	1			
Caliper—RH	BTB371	1	1			
Caliper—LH	17H7987	8	1			
Piston	17H7988	1	1			
Seal—inner	17H7989	9	4			
Seal—dust—with retainer	17H7729	10	4			
Pad assembly	17H7926	11	4			
Pad	8G8707	12	1 set			
Clip—pad retaining	NSP	4	4			
Plug	17H7990	13	2			
Screw—bleeder	17H7917	14	2			
Bolt—camper to swivel axle	3H2428	15	2			
Washer—tab—bolt	A1TB4074	16	4			
Kit—caliper repair	BTCC14	17	4			
Seal—inner	8G8641	2	2			
Seal—dust—with retainer		2	2			

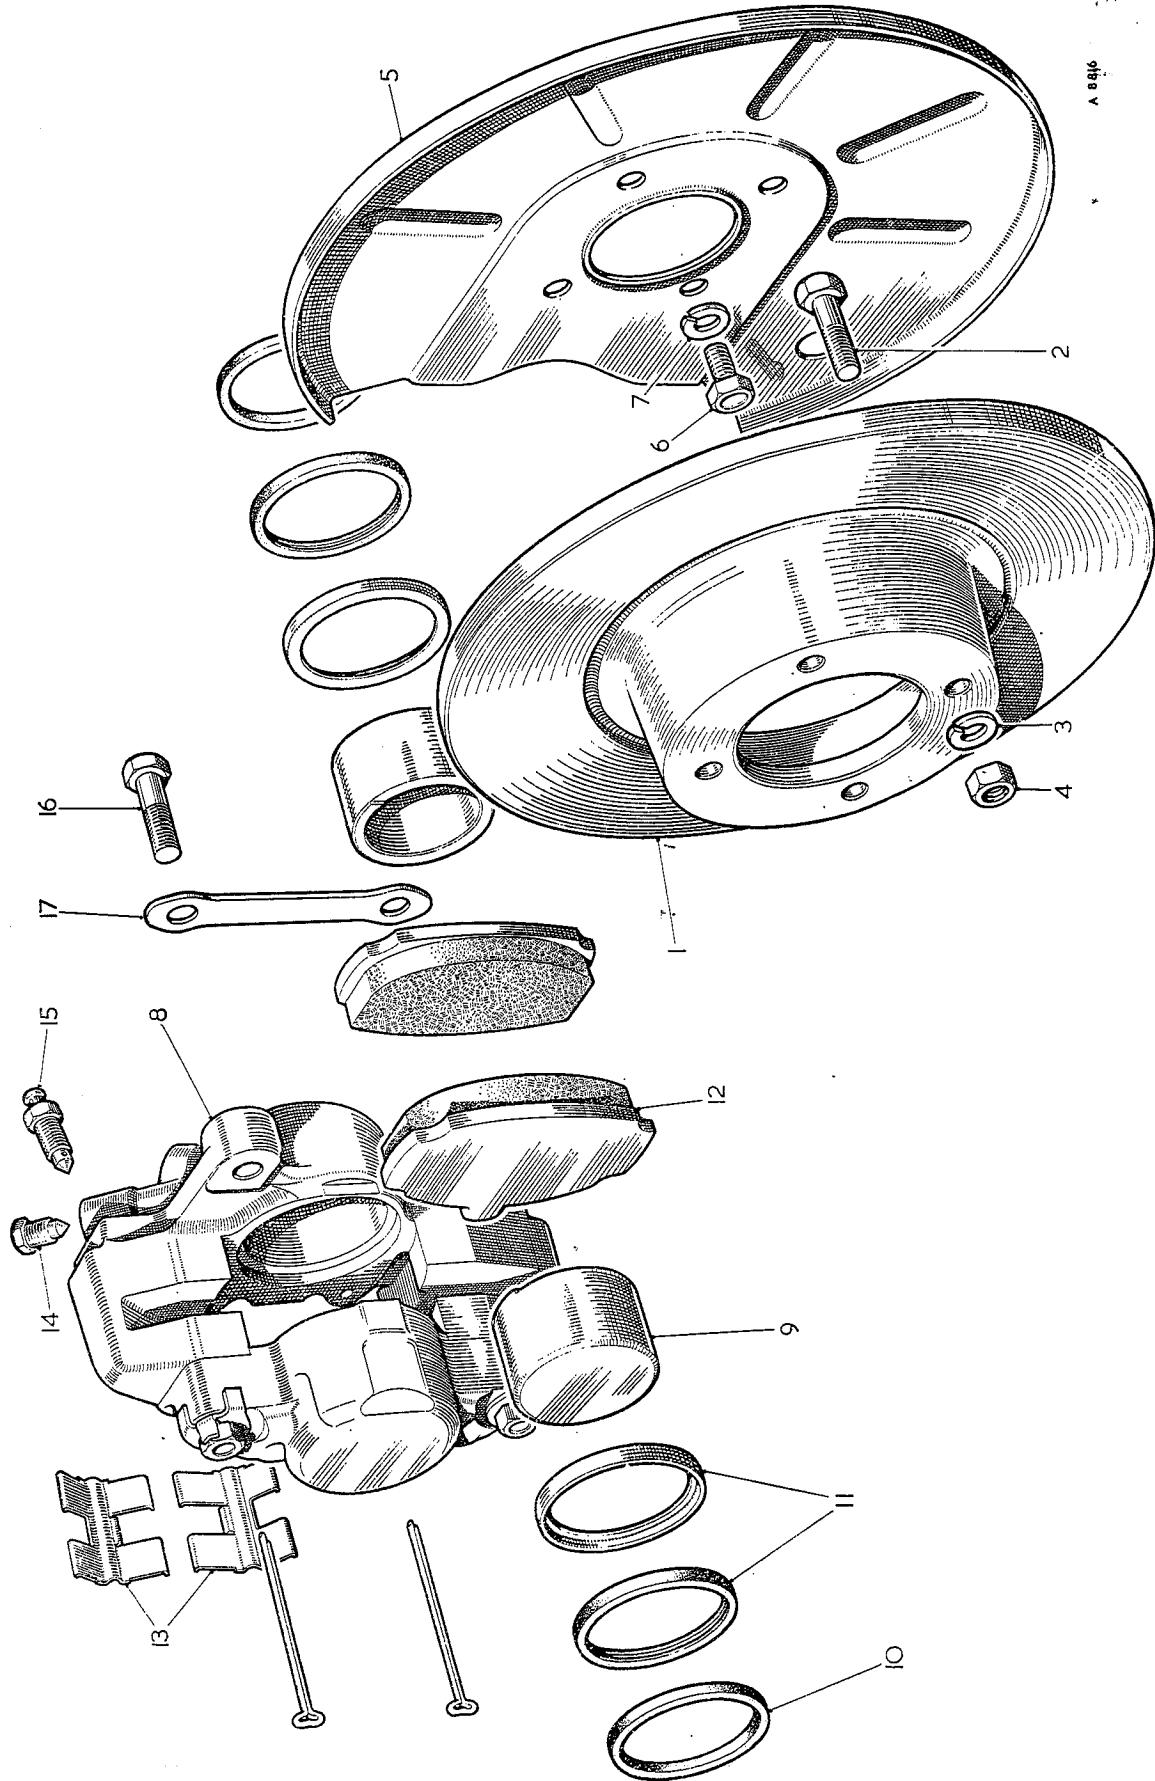


To face page K.4

SERVICE PARTS LIST

PLATE KB

THE MGB

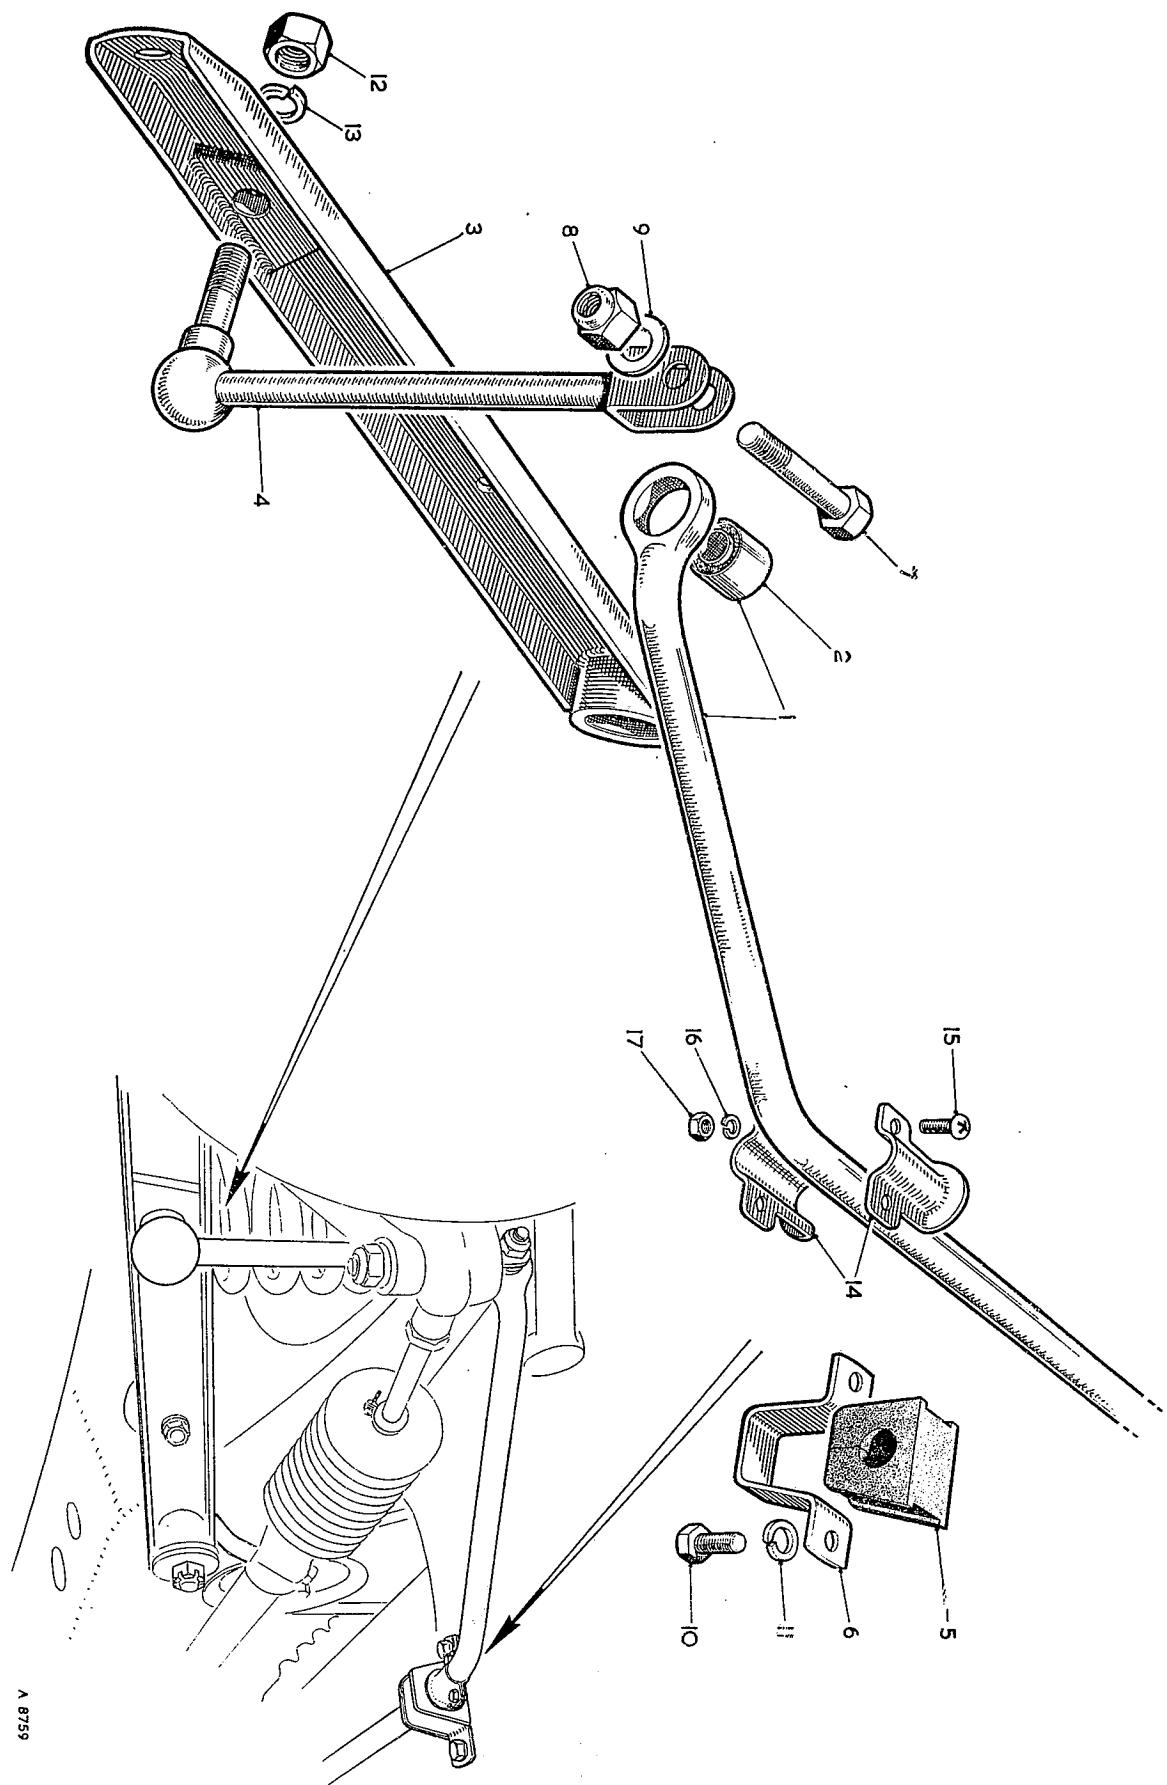

To face page K.5


A 8759

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (C) GHN3/101	MODIFICATIONS		REMARKS
		Part Number	New Part Number	
ANTI-ROLL BAR				
Bar assembly—anti-roll	AHH6542	1	1	
2 Bush	AHH5939	2	2	
3 Wishbone assembly bottom—RH	AHH5927	3	1	
4 Wishbone assembly bottom—LH	AHH5928	1		
5 Link—anti-roll bar—RH	AHH6543	4	1	
6 Link—anti-roll bar—LH	AHH6544	1		
7 Bearing—anti-roll bar	AETH6541	5	2	
8 Strap—bearing	IB7396	6	2	
9 Bolt—clamping—anti-roll bar to link	AHH5941	7	2	
10 Nut—bolt	LNZ107	8	2	
Washer—plain—nut	PWZ107	9	2	
11 Screw—strap to side-member	HZS0505	10	4	
12 Washer—spring—screw	LWZ205	11	4	
13 Nut—bottom wishbone to link	FNZ108	12	2	
14 Washer—spring—nut	LWZ208	13	2	
15 End—location stop	AHH6546	14	4	
16 Screw—location stop to anti-roll bar	PMK0808	15	4	
17 Washer—spring—screwy	LWZ203	16	4	
18 Nut—screw	FNZ103	17	4	
Optional extra				



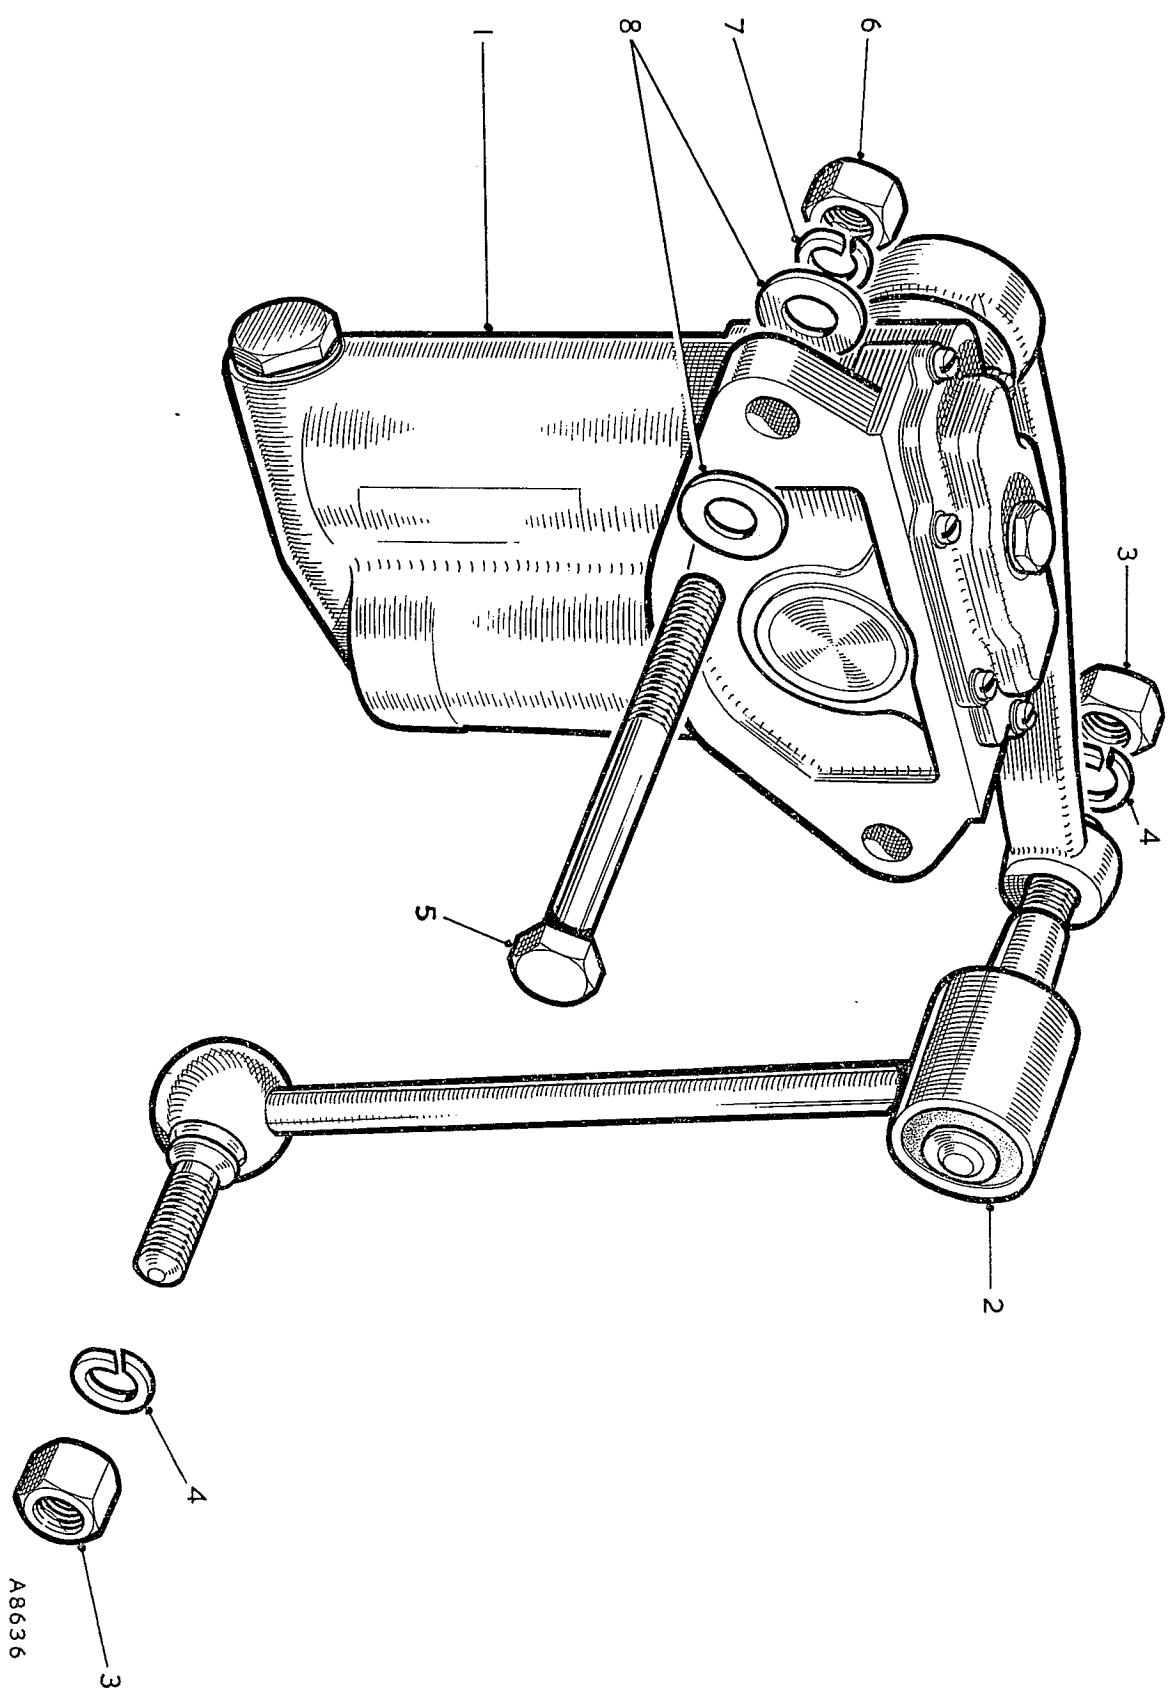

To face page L.1

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (C) GH/N3/101	MODIFICATIONS		REMARKS
		Part Number	New Part Number	
SHOCK ABSORBERS				
1 Shock absorber—front	AHH6047		1	
2 Shock absorber—rear—RH	AHH6048	1	1	
3 Shock absorber—rear—LH	97E12031	2	2	
4 Link—shock absorber				
5 Nut—link to bracket	FNZ108	3	4	
6 Washer—spring—nut	LWZ208	4	4	
7 Bolt—shock absorber to frame	HIZ0726	5	4	
8 Nut—bolt	FNZ107	6	4	
9 Washer—spring—nut	LWZ207	7	4	
10 Washer—plain—nut	PWZ107	8	8	

See Section K


L.1



SERVICE PARTS LIST

PLATE M

THE MGB

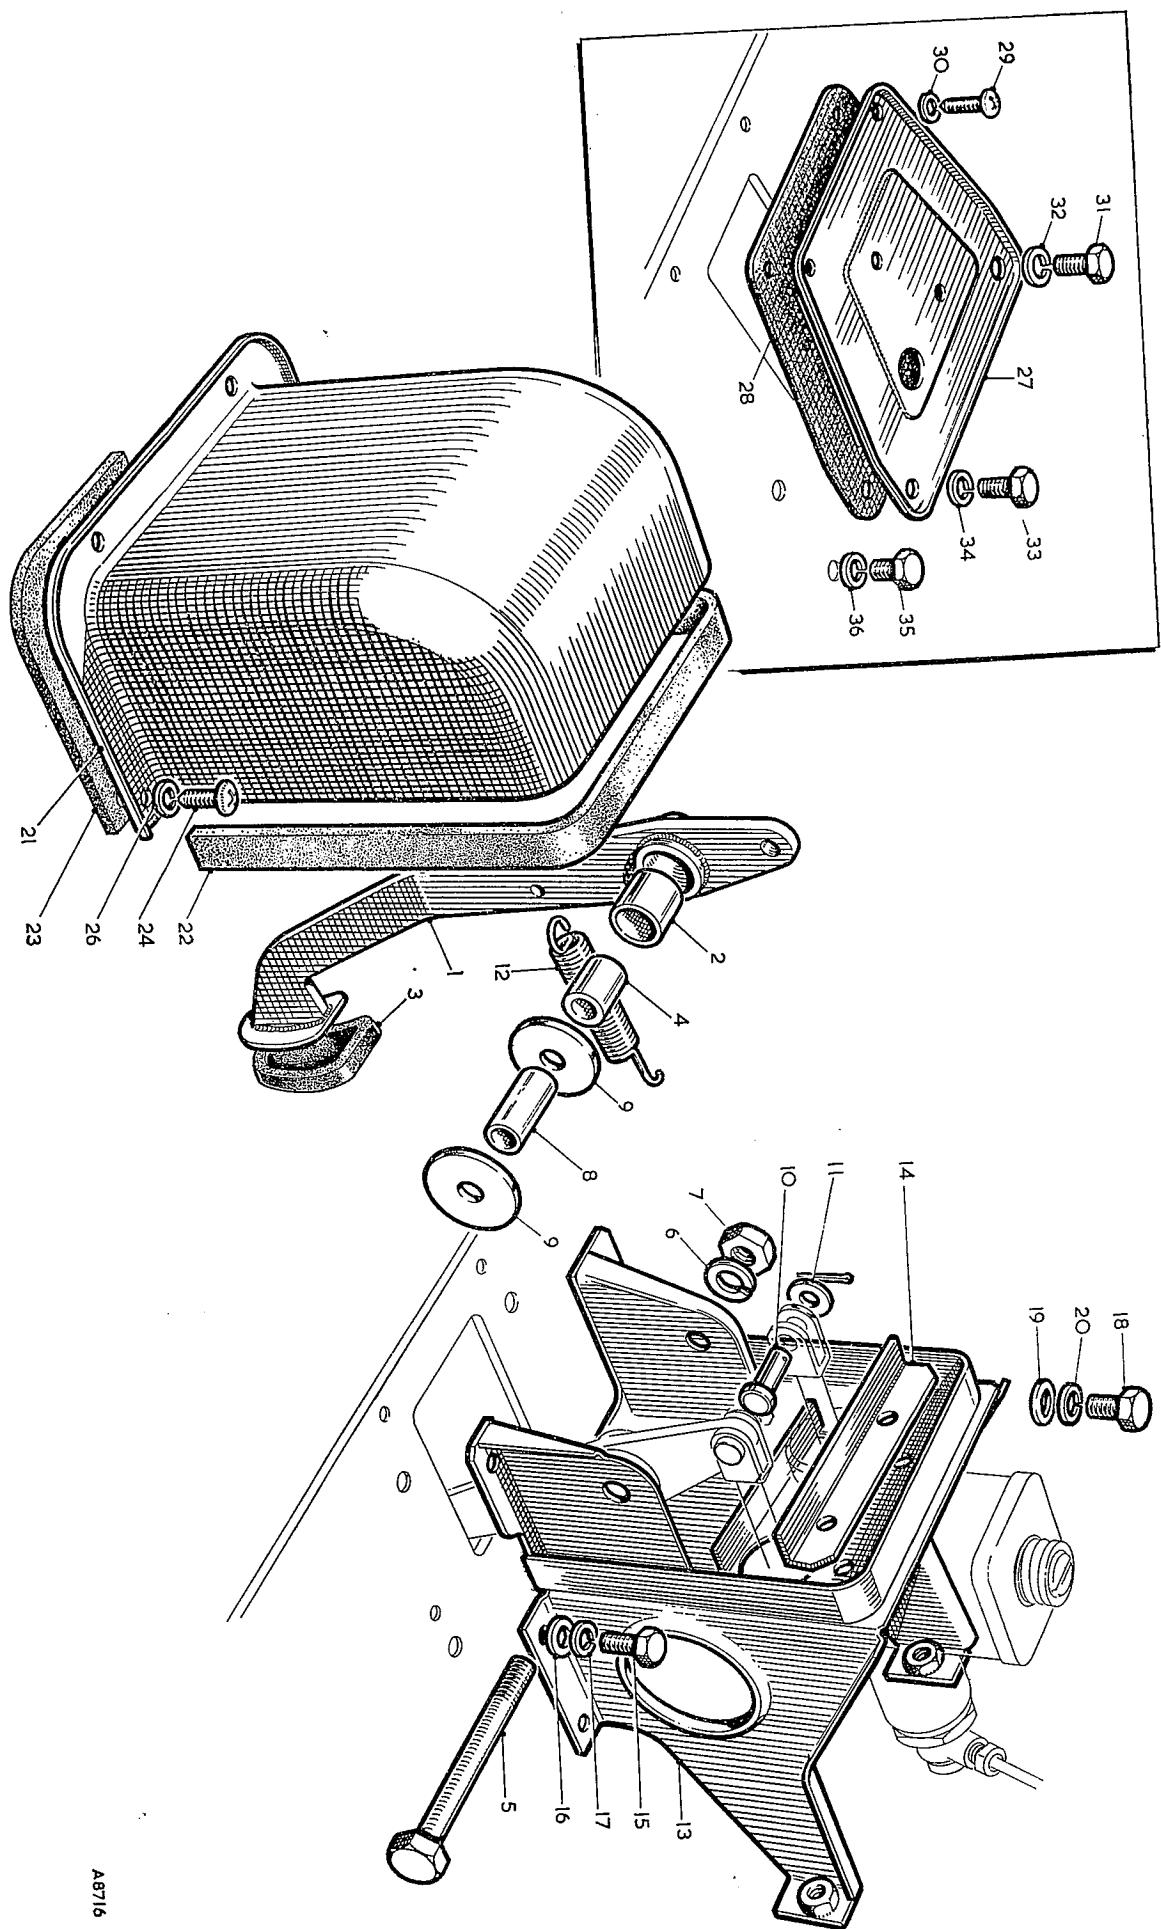

To face page M.1

A8716

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
BRAKE CONTROLS						
1	Pedal—brake	RHD	AHH6153	1	1	
2	Petal—brake	LHD	AHH6506	1	1	
3	Bush		185794	2	1	
4	Pad—pedal (rubber)		AHH5100	3	1	
5	Tube—distance—brake pedal		185795	4	1	
6	Bolt—fulcrum—pedal to bracket		HBZ0632	5	1	
7	Washer—spring—bolt		LWZ206	6	1	
8	Nut—bolt		FNZ106	7	1	
9	Spacer—pedal fulcrum		AHH6063	8	1	
10	Washer—plain		PWZ206	9	2	
11	Pin—clevis—fork end to pedal		CLZ0514	10	1	
12	Washer—plain—pin		PWZ105	11	1	
13	Spring—pull-off		130154	12	1	
14	Box assembly—master cylinder	RHD	AHH6065	13	1	
15	Stiffener—master cylinder box		AHH6163	14	1	
16	Screw—box to bulkhead and platform		HZS0405	15	7	
17	Washer—plain—screw		PWZ104	16	7	
18	Washer—spring—screw		LWZ204	17	7	
19	Screw—box to bulkhead and platform		HZS0505	18	1	
20	Washer—plain—screw		PWZ105	19	1	
21	Washer—spring—screw		LWZ205	20	1	
22	Cover—master cylinder box		AHH6019	21	1	
23	Seal—cover		AHH6156	22	1	
24	Seal—cover—bottom		AHH6155	23	2	
25	Screw—cover to bulkhead		PMZ0308	24	3	
26	Screw—cover to bulkhead		PMZ0312	25	4	
27	Washer—spring		LWZ203	26	4	
28	Plate—blanking—master cylinder hole cover		AHH6510	27	1	
29	Seal—blanking plate		AHH6511	28	1	
30	Screw—blanking plate and seal to bulkhead		PMZ0308	29	2	
31	Washer—spring		LWZ203	30	2	
32	Screw—blanking plate and seal to bulkhead		HZS0505	31	1	
33	Washer—spring		LWZ205	32	1	
34	Screw—blanking plate and seal to bulkhead		HZS0405	33	1	
35	Washer—spring		LWZ204	34	1	
36	Screw—blanking master cylinder box fixing holes		HZS0403	35	2	
37	Washer—spring		LWZ204	36	2	

M.1

SERVICE PARTS LIST

THE MGB


Item No.

DESCRIPTION		MODIFICATIONS		REMARKS	
	Part Number	Illus. No.	New Part Number	Change Point	
1	BRAKE MASTER CYLINDER				
2	Barrel and tank				
3	Cap—filler	NSP	1	1	
4	Seal—cap	17H7407	2	1	
5	Valve assembly	17H7408	3	1	
6	Spring—piston return	17H7629	4	1	
7	Retainer—spring	17H7981	5	1	
8	Cup—main	17H7554	6	1	
9	Washer—piston	17H7122	7	1	
10	Piston	17H7984	8	1	
11	Cup—secondary	17H7860	9	1	
12	Rod—push	17H7123	10	1	
13	Clip	17H7985	11	1	
14	Boot	17H7560	12	1	
15	Screw—cylinder to box	17H7411	13	1	
16	Screw—cylinder and stiffener to box	HZS0507	14	1	
17	Washer—spring—for screw	HZS0508	15	1	
18	Nut—screw	LWZ205	16	2	
19	Banjo—master cylinder	FNZ105	17	2	
20	Bolt—banjo	7H7851	18	1	
21	Gasket—banjo connection	11D5264	19	1	
22	Gasket—banjo connection	3H2287	20	1	
23	Kit—brake master cylinder repair	8H550	21	1	
24	Valve assembly	8G2258	1	1	
25	Cup—main				
26	Washer—piston				
27	Boot				
28					

SERVICE PARTS LIST

PLATE MA

THE MGB

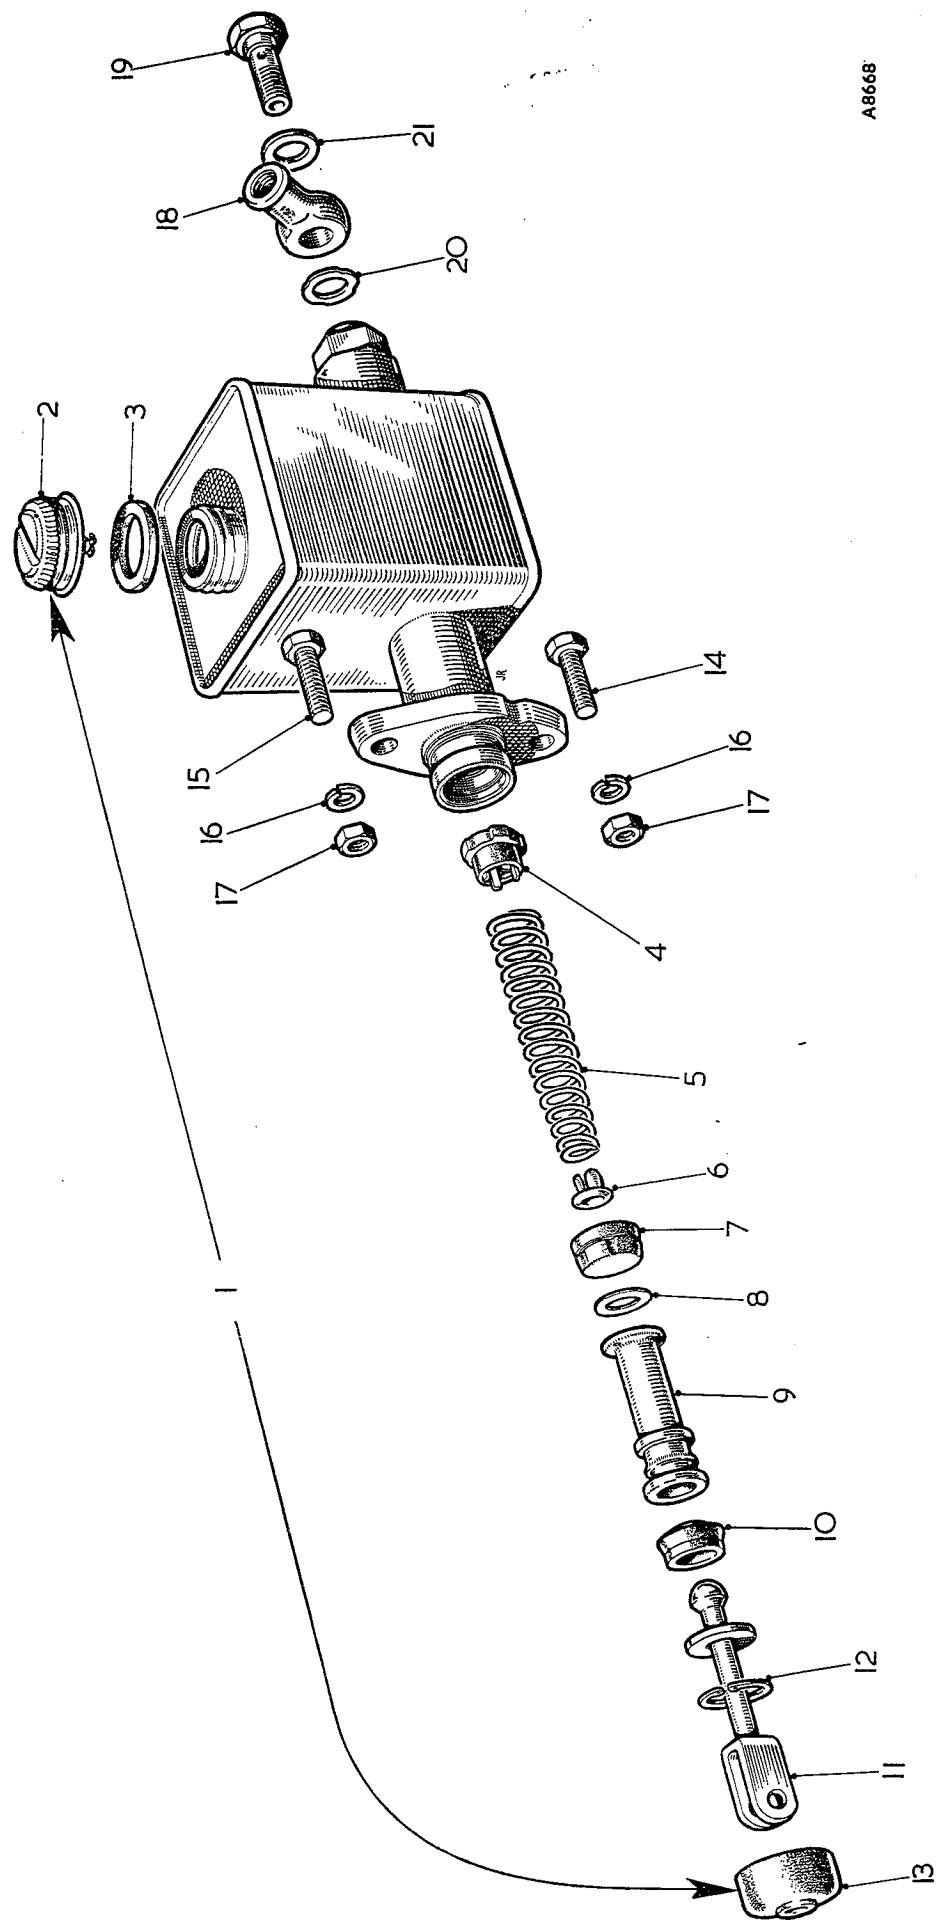

A8668


To face page M.2

SERVICE PARTS LIST

PLATE MB

THE MGB

To face page M-3

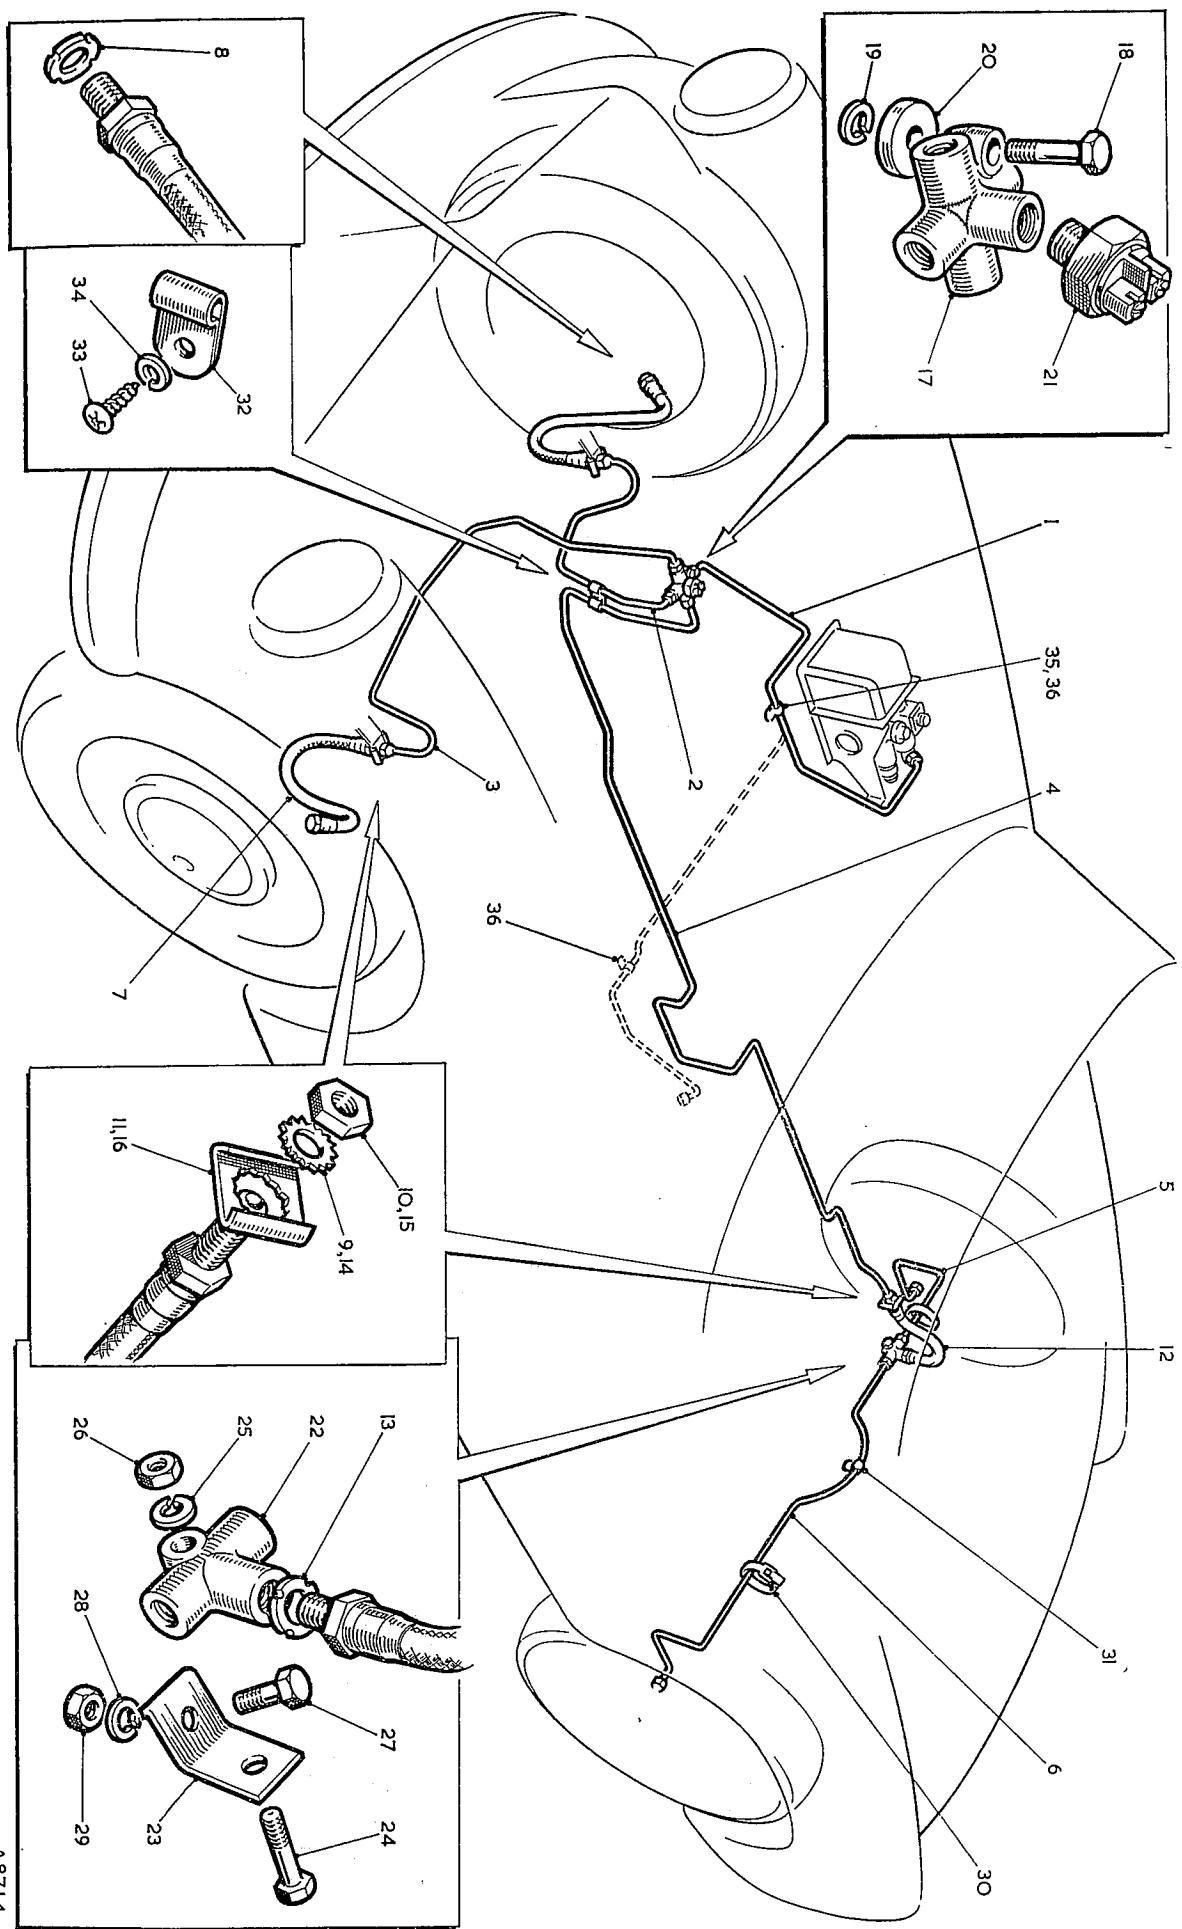

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Oty. per Veh.	New Part Number	
HYDRAULIC PIPES AND FITTINGS						
1	Pipe—master cylinder to 4-way—25" (63.5 cm.)	RHD	AHH6364	1	1	
2	Pipe—master cylinder to 4-way—46" (116.8 cm.)	LHD	AHH6365	1	1	
3	Pipe—4-way to front hose RH—22" (55.8 cm.)		AHH6367	2	1	
4	Pipe—4-way to front hose LH—51" (129.5 cm.)		AHH6366	3	1	
5	Pipe—4-way to rear hose—93" (236.2 cm.)		AHH6370	4	1	
6	Pipe—3-way to rear wheel cylinder—16" (40.6 cm.)		AHH6368	5	1	
7	Pipe—3-way to rear wheel cylinder—43" (109.2 cm.)		21A42	6	1	
8	Hose—front brake		BKA4031	7	2	
9	Gasket—front brake hose		3H2287	8	2	
10	Lock washer		17H7141	9	2	
11	Lock nut		FNZ206	10	2	
12	Plate—locking—front hose		IG9198	11	2	
13	Hose—rear brake		BKA4297	12	1	
14	Gasket—rear brake hose		3H2287	13	1	
15	Lock washer		17H7141	14	1	
16	Locknut		FNZ206	15	1	
17	Plate—locking—rear hose		IG9198	16	1	
18	4-way connection		17H7108	17	1	
19	Screw—4-way to wheel arch		HZS0410	18	1	
20	Washer—spring		LWZ204	19	1	
21	Spacer—4-way		AHH6247	20	1	
22	Switch—stop lamp		2A5740	21	1	
23	3-way connection		3H2424	22	1	
24	Bracket—3-way connection		AHH6752	23		
25	Bolt—3-way connection to bracket		HBZ0408	24	1	
26	Washer—spring		LWZ204	25	1	
27	Nut—bolt		FNZ104	26	1	
28	Screw—bracket—3-way connection to bracket on rear axle		HZS0805	27	1	
29	Washer—spring		LWZ105	28	1	
30	Nut—screw		ACH8650	29	1	
31	Clip—brake pipe to rear axle		PCR0311	30	2	
32	Clip—LH rear brake pipe to differential case bolt		PCR0307	31	1	
33	Clip—brake pipe to front side-member		RTZ1004	32	2	
34	Screw—clip to side-member		LWZ203	33	1	
35	Washer—spring		PCR0311	34	1	
36	Clip—brake pipe to bulkhead		PCR0311	35	1	
37	Clip—brake pipe to bulkhead		PCR0311	36	2	

SERVICE PARTS LIST



THE MGB

Item No.	DESCRIPTION (C) Commencing GHN8/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
HAND BRAKE MECHANISM					
1	Hand brake assembly	AHH6220	1	1	
2	Handle assembly	AHH6221	2	1	
3	Grip—handle	AHH6228	3	1	
4	Knob—pawl rod	AHH6281	4	1	
5	Spring—pawl rod	AHH6280	5	1	
6	Rod—pawl	AHH6229	6	1	
7	Pawl	AHH6232	7	1	
8	Washer—plain—pawl spindle	PWZ104	8	1	
9	Plate—ratchet and stop	PWZ104	9	1	
10	Washer—hand brake spindle	AHH6283	10	2	
11	Lever—operating—hand brake	AHH6284	11	1	
12	Nut—hand brake spindle	FNZ106	12	1	
13	Washer—spring—nut	LWZ506	13	1	
14	Screw—hand brake to gearbox cover	IB8859	14	3	
15	fulcrum—hand brake compensator	AHH5025	15	1	
16	Nut—fulcrum to axle	LNZ106	16	1	
17	Nut—compensator to fulcrum	LNZ105	17	1	
18	Washer—plain compensator to fulcrum	PWZ205	18	1	
19	Lever—compensating—inner	AHH5203	19	1	
20	Lever—compensating—outer	AHH5101	20	1	
21	Bush—compensating lever	AHH5225	21	1	
22	Washer—anti-rattle—compensating lever	AHH5224	22	1	
23	Washer—plain—compensating lever	PWZ107	23	2	
24	Screw—compensating lever	HZ50405	24	1	
25	Washer—spring—screw	LWZ204	25	1	
26	Nut—screw	FNZ104	26	1	
27	Cable—hand brake	AHH5227	27	1	
28	Cable—hand brake	AHH5228	28	1	
29	Trunnion—cable	AHH5322	29	1	
30	Nut—adjuster	ACH5104	30	1	
31	Spring—cable	ACH5804	31	1	
32	Washer—plain—cable spring—rear	PWZ104	32	1	
33	Washer—plain—cable spring—front	PWZ204	33	2	
34	Pin—clevis	ACE8715	34	1	
35	Nut—abutment	FNZ105	35	1	
36	Washer—spring—abutment	LWZ205	36	1	
37	Clamp—cable—hand brake	AHH6286	37	1	
38	Nut—clamp	53K1420	38	1	
39	Herrule—hand brake cable	AC118529			


SERVICE PARTS LIST

PLATE MC

THE MGB

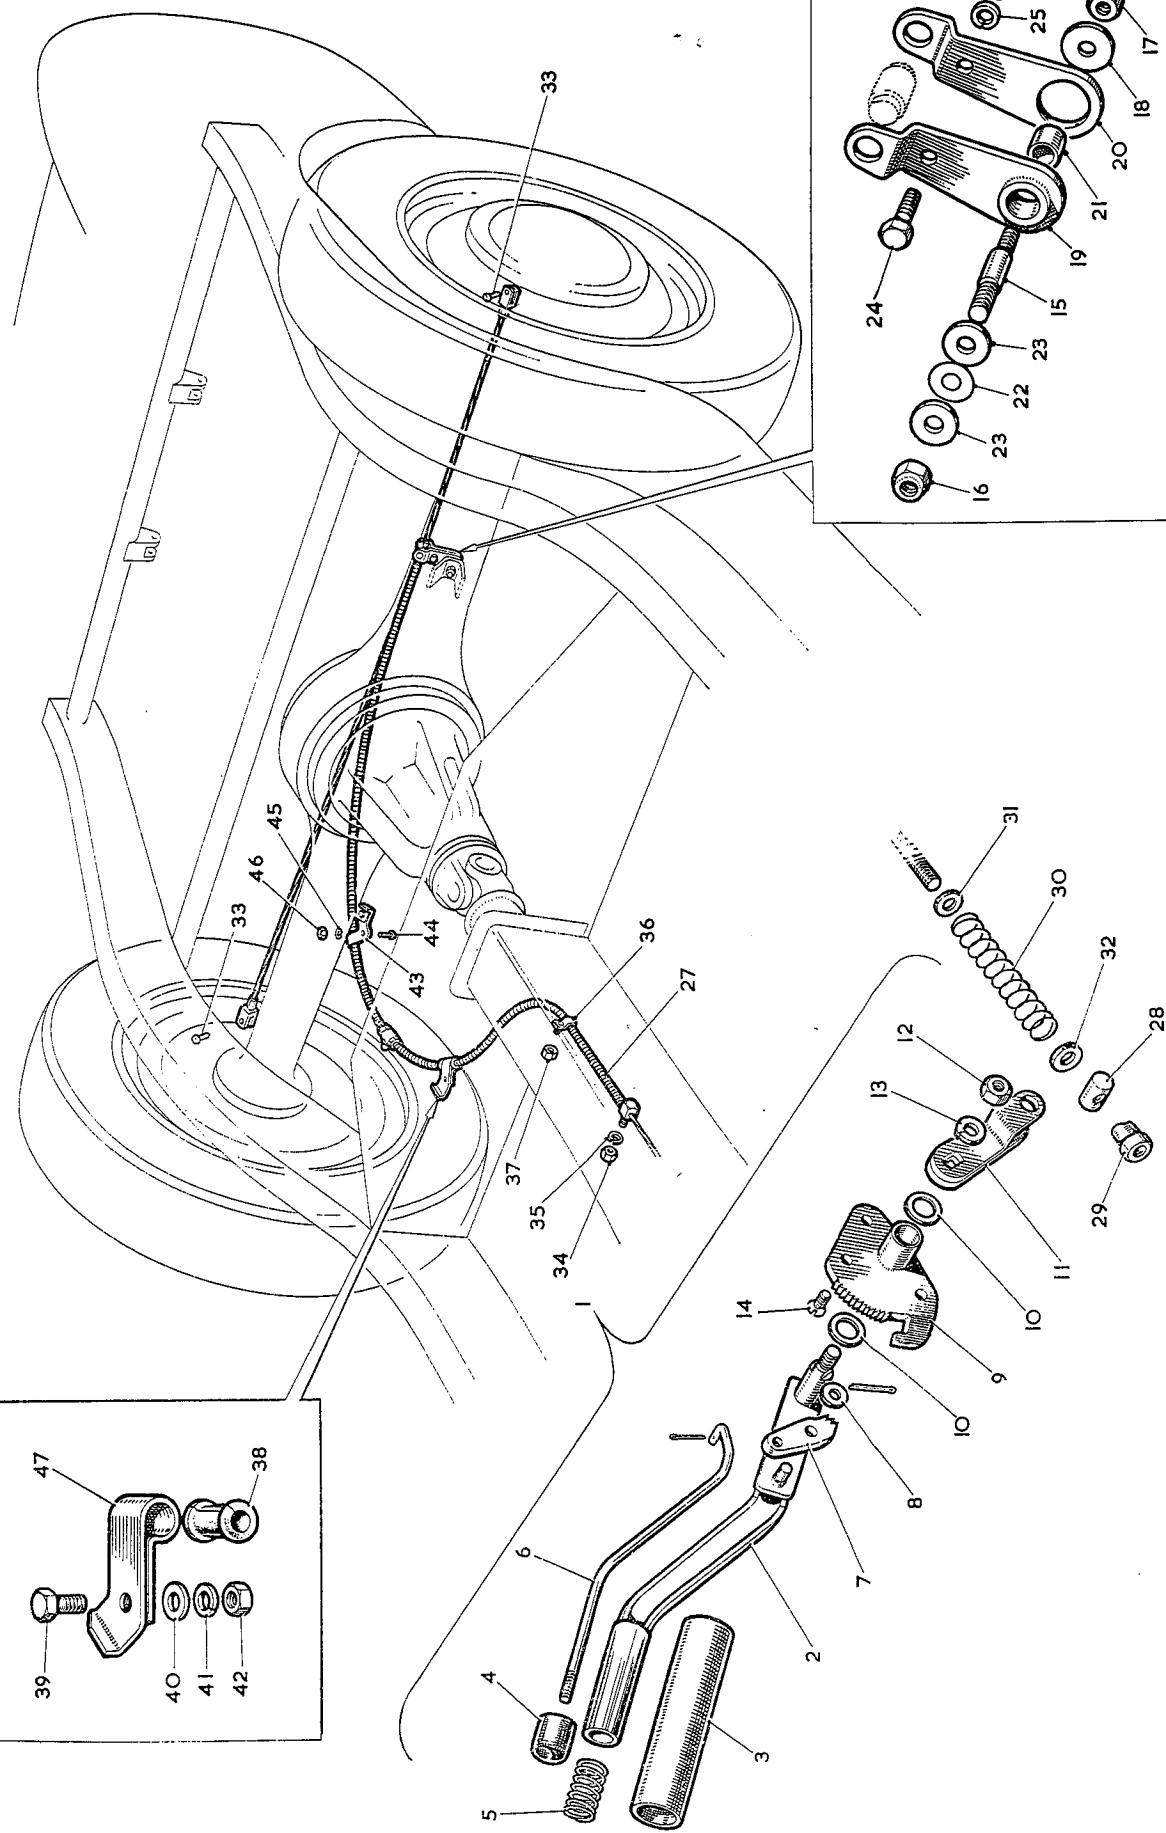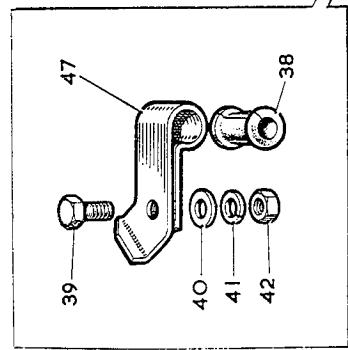


To face page M.4

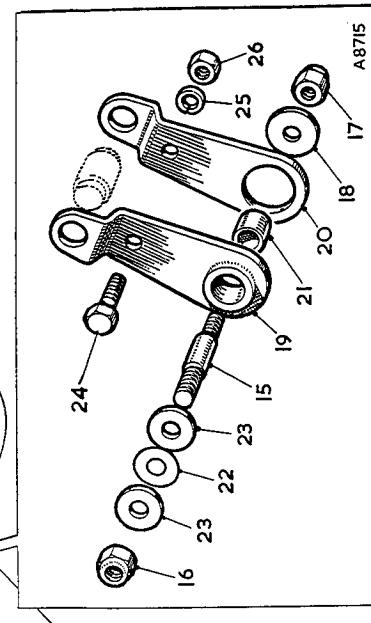


SERVICE PARTS LIST

PLATE MC

THE MGB

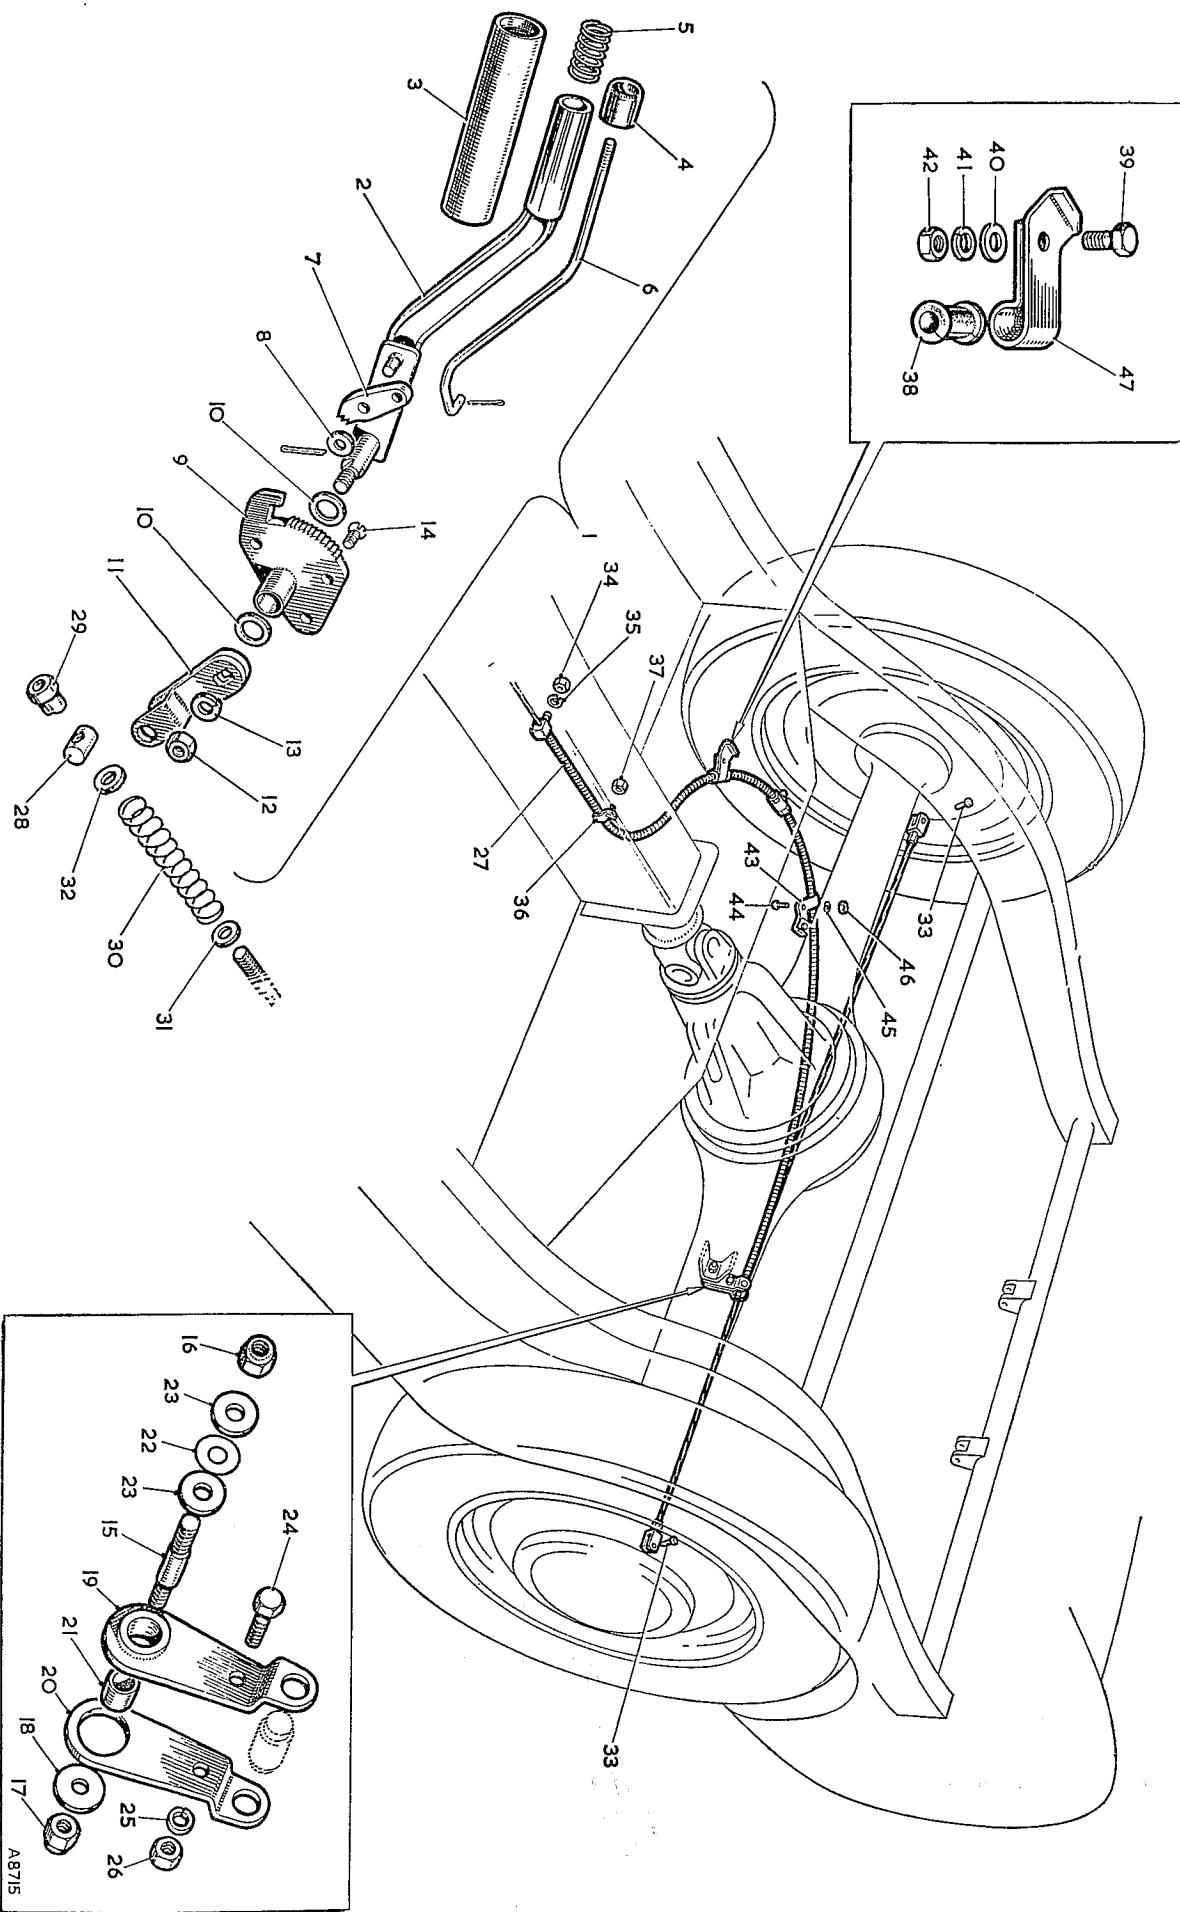

To face page III.5

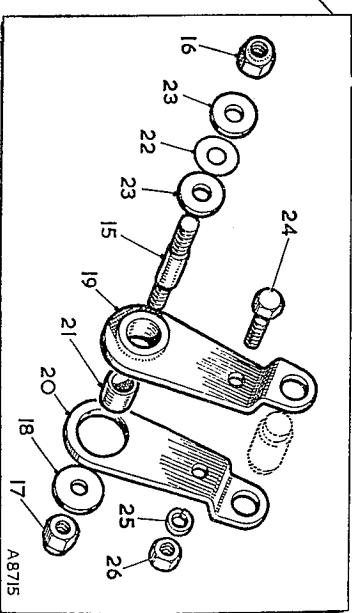

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHNS/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
1	Clip—hand brake cable	AHH6237		38		
2	Screw—clip	HZS0404		39		
3	Washer—plain—screw	PWZ104		40		
4	Washer—spring—screw	LWZ204		41		
5	Nut—screw	FNZ104		42		
6	Clip—cable to 3-way connection	AHH5295		43		
7	Screw—clip to 3-way connection	PMZ0306		44		
8	Washer—spring—screw	LWZ203		45		
9	Nut—screw	FNZ103		46		






SERVICE PARTS LIST

PLATE N

THE MGB

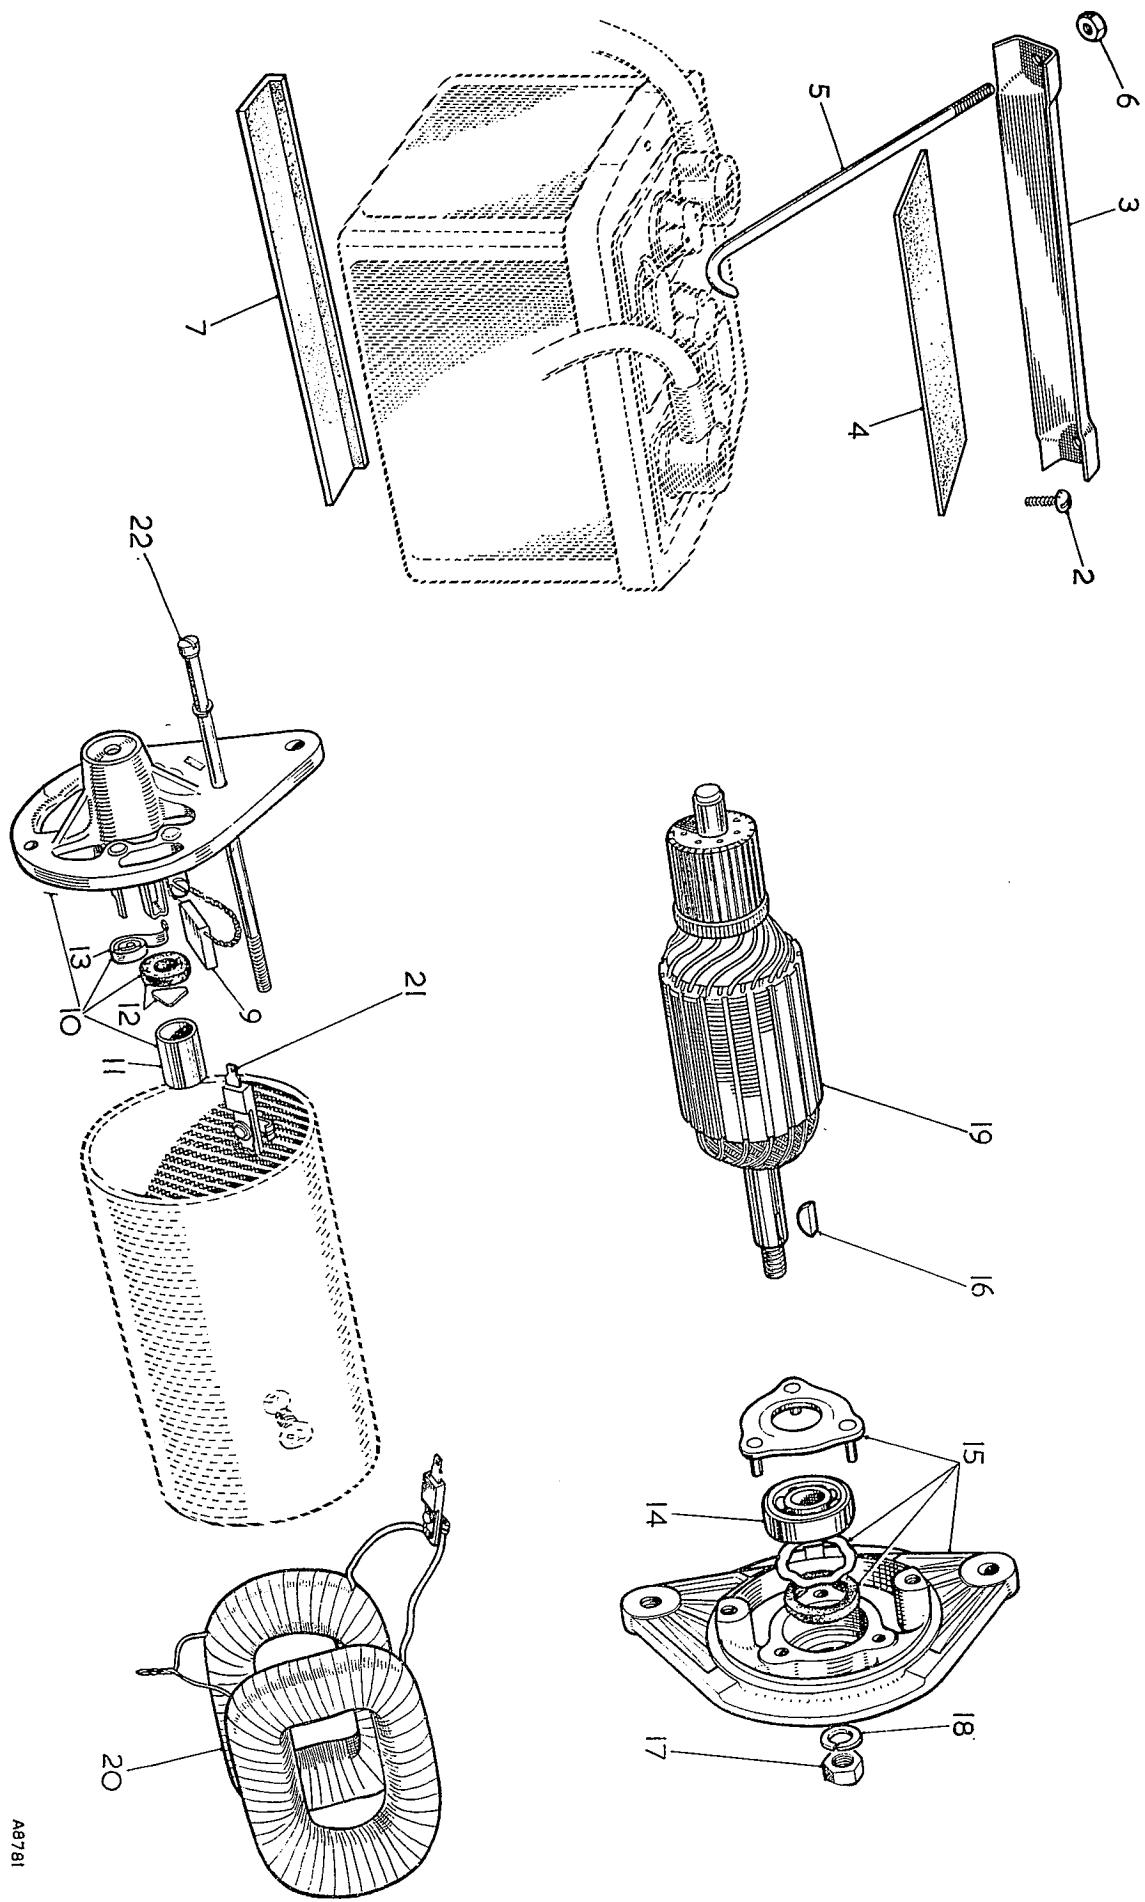

To face page N.1

SERVICE PARTS LIST

THE MGB

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	MODIFICATIONS				REMARKS
		Commencing (C) GHN3/101	Part Number	Illus. No.	Qty. per Veh.	
1	Starter	13H628	1	1		
2	Brush	7H5002	2	1 set		
3	Band—cover	7H5000	3	1		
4	Drive assembly	7H6938	4	1		
5	Sleeve—screwed with control nut	7H6939	5	1		
6	Pinion and barrel assembly	7H6940	6	1		
7	Ring—barrel retaining	7H6919	7			
8	Cap—shaft	7H5001	8	1		
9	Bracket—commutator end	7H6948	9	1		
10	Bush—commutator end	7H5004	10	1		
11	Spring—brush tension	7H5005	11	1 set		
12	Bracket—driving end	7H6910	12	1		
13	Bush—driving end	7H5011	13	1		
14	Armature	7H6942	14	1		
15	Field coils	7H5013	15	1 set		
16	Bolt—end covers	7H5339	16	2		
17	Key—shaft	7H6941	17	1		
18	Sundry parts	7H5156	18	1 set		
19	Screw—starter to gearbox	58K149	19	2		
20	Washer—spring—screw	LWN306	20	2		

SERVICE PARTS LIST

PLATE NA

THE MGB

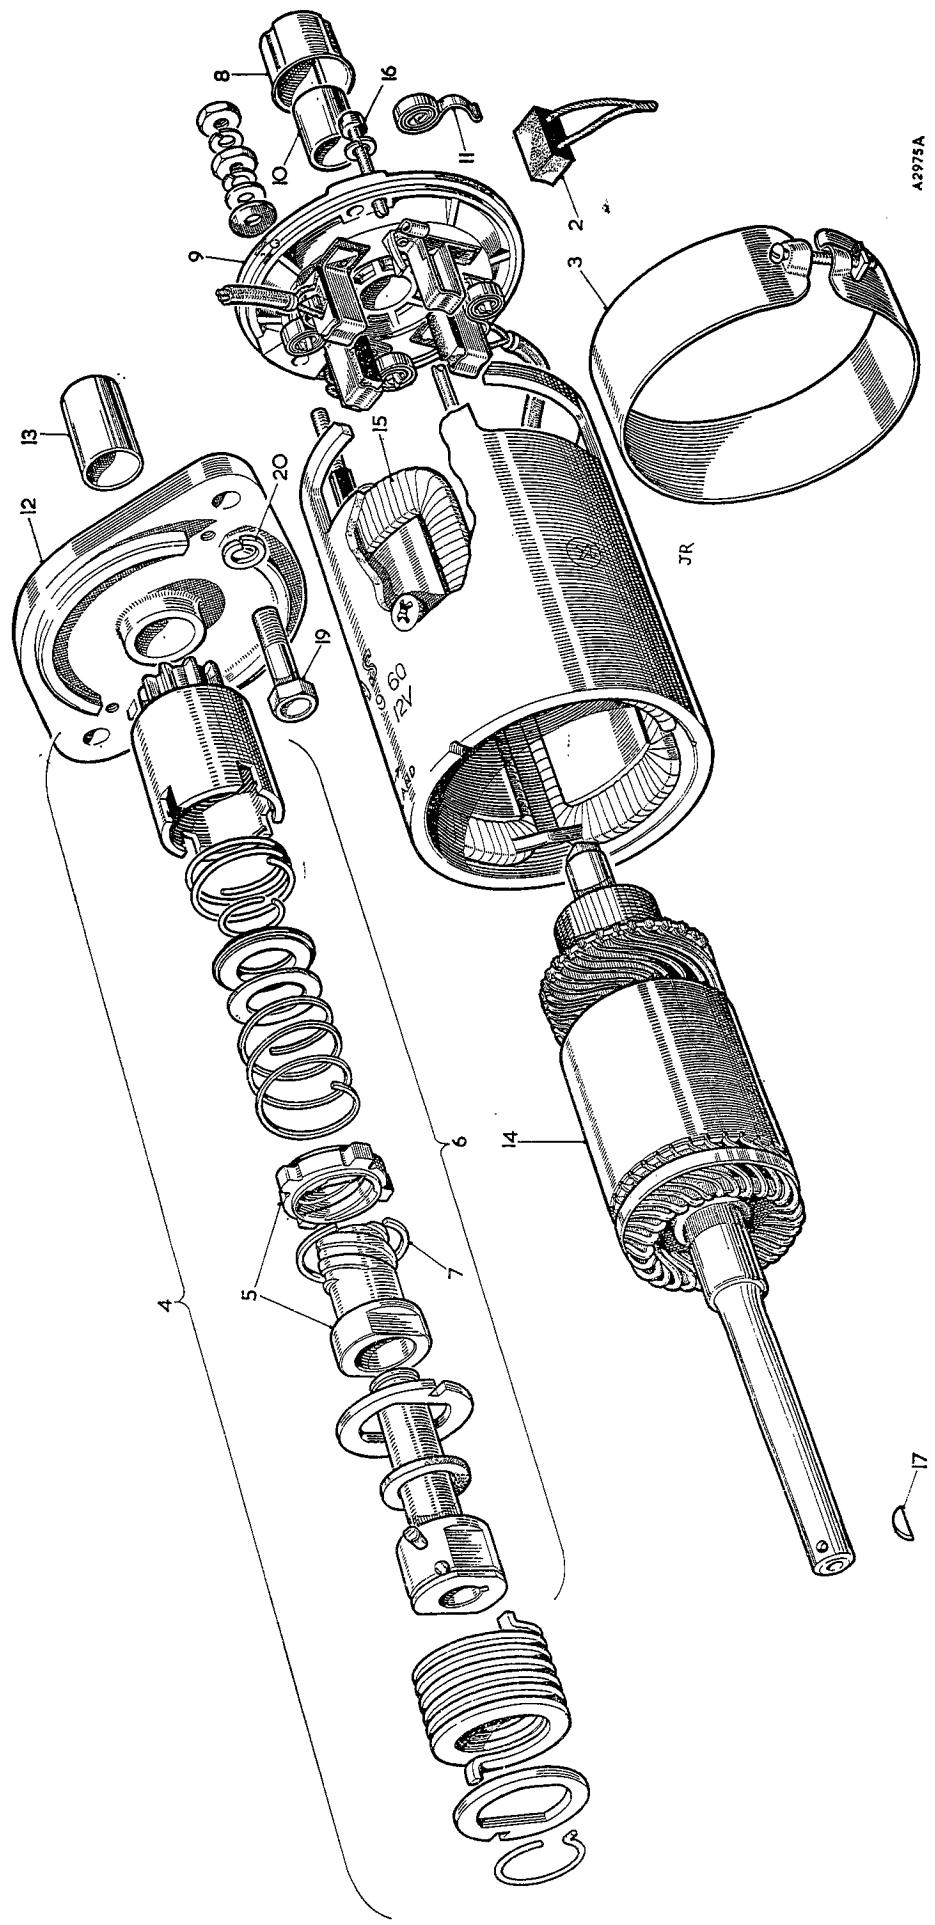


To face page N.2

SERVICE PARTS LIST

PLATE NB

THE MGB

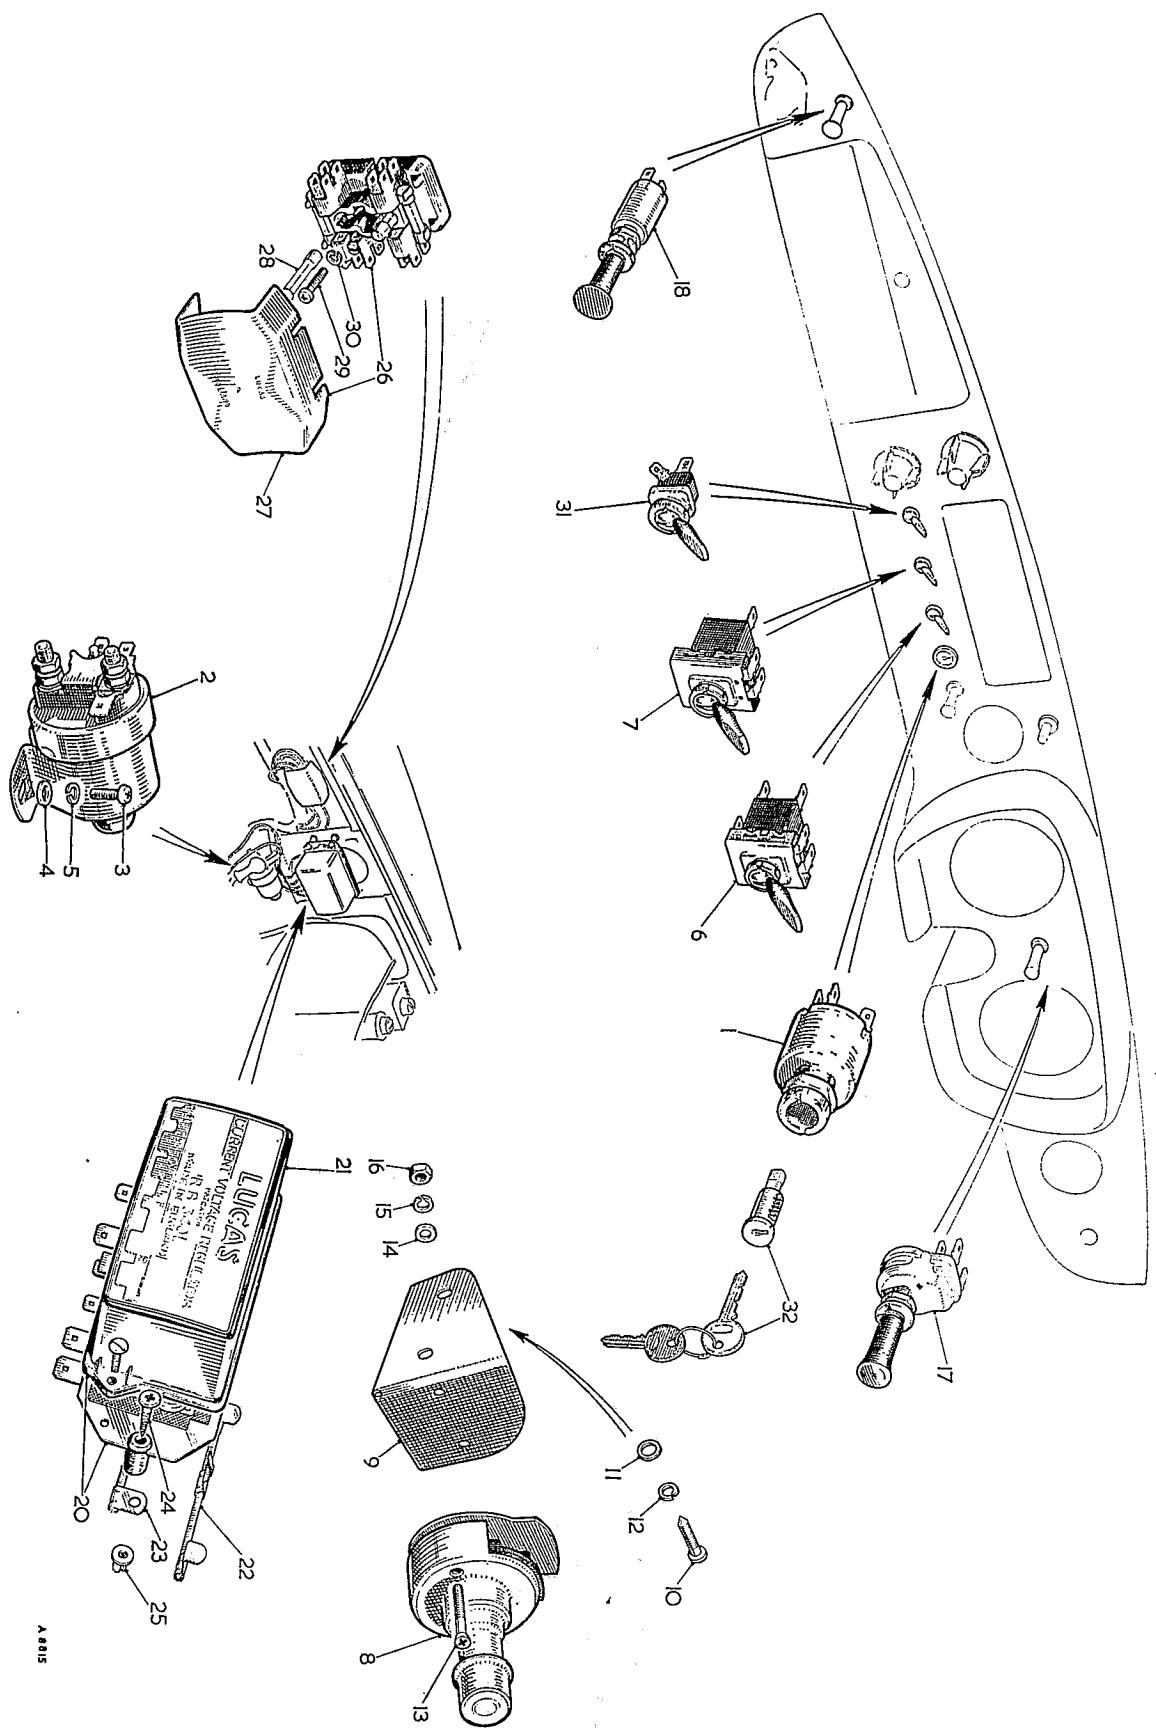

To face page N.3

A.8815

SERVICE PARTS LIST

THE MGB

No. Item No.	DESCRIPTION	COMMENCING (C) GHN3/101			MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Oty. per Veh.	New Part Number	Change Point	
SWITCHES							
1	Switch—starter and ignition	13H337	1	1			
2	Switch—starter solenoid	BGA4501	2	1			
3	Screw—starter solenoid switch	PMZ0306	3	2			
4	Washer—plain	PWZ103	4	2			
5	Washer—spring	LWZ203	5	2			
6	Switch—light	BGA4294	6	1			
7	Switch—windscreen wiper	13H176	7	1			
8	Switch—headlamp dipper	BHA4237	8	1			
9	Bracket—dipper switch	AHH6272	9	1			
10	Screw—bracket to centre panel pedal box	PPZ0410	10	2			
11	Washer—plain	PWZ104	11	2			
12	Washer—spring	LWZ204	12	2			
13	Screw—dipper switch to bracket	CMZ0318	13	2			
14	Washer—plain	PWZ103	14	2			
15	Washer—spring	LWZ203	15	2			
16	Nut—screw	FNZ103	16	2			
17	Screw—dipper switch to LH pedal box	CMZ0318	17	2			
18	Switch—panel light	BHA4278	18	1			
19	Switch—map light	BHA4280	19	1			
20	Switch—headlamp flasher	BHA4116	19	1			
21	Box—control	BMW735	20	1			
22	Cover	57H15398	21	1			
23	Resistance—swamp—55 ohms	57H15396	22	1			
24	Resistance—points—60 ohms	57H15395	23	1			
25	Screw—control box to support bracket	PTZ810	24	3			
26	Nut—screw	13H226	25	3			
27	Fusebox	13H452	26	1			
28	Cover	47H15212	27	1			
29	Fuse—35-amp.	7H5067	28	4			
30	Screw—fusebox to RH wheel arch	PMZ0310	29	1			
31	Nut—screw	LWZ203	30	1			
32	Switch—heater	BGA4312	31	1			
33	Lock—ignition	2H4185	34	1			
34*	Key	ANK4646		2			

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	MODIFICATIONS			REMARKS	
		(C) GHN83101 Commencing Part Number	Illus. No.	Qty. per Veh.		
1	Headlamp					
2	Body assembly					
3	Plate—light unit retaining	NSP 7H8335	1	2		
4	Screw—retaining plate	57H5292	2	2		
5	Adaptor and cable	BHA4235 47H5126	4	2		
6	Adaptor	47H5126	5	2		
7	Sleeve—terminal	37H5271	6	6		
8	Sleeve—terminal	7H5532	7	6		
9	Spring—unit seating	67H5025	8	4		
10	Screw—beam—adjustment	57H5296	9	2		
11	Rim	13H406	10	2		
12	Light unit—sealed beam	13H505	11	2		
13	Gasket—body	NSP 17H2088	12	2		
14	Headlamp Except Europe and N. America, LHD	Bulb holder and cable Bulb holder	17H5145 17H5306	13	2	
15		Sleeve—terminal	37H5271	6	2	
16		Sleeve—terminal	7H5532	7	2	
17		Screw—beam adjustment	17H5094	14	6	
18		Spring—screw	17H5231	15	6	
19		Sleeve—sealing	27H2253	16	6	
20		Rim	57H5296	9	2	
21	Plate—light unit retaining					
22	Screw—unit rim	17H5205	17	2		
23	Light unit	37H5192	8	6		
24	Bulb—right dip	17H375	18	2		
25	Gasket—body	BFS355 7H8388	19	2		
26	Headlamp N. AMERICA, LHD	NSP 7H8335	20	2		
27		7H8335	1	2		
28		57H5292	2	2		
29		37H5192	3	6		
30		BHA4235	4	2		
31		47H5126	5	2		
32		37H5271	6	6		
33		7H5532	6	6		
34	Adaptor and cable					
35		Sleeve—terminal	7H5582	6	6	
36		Sleeve—terminal	67H5026	7	2	
37		Spring—unit seating	67H5025	8	4	
38		Screw—beam—adjustment	57H5296	9	2	
39		Rim	13H665	11	2	
40		Gasket—body	PMZ0810 LWZ08 FNZ108	8	8	
41	Screw—headlamp to wing	PMZ0810 LWZ08 FNZ108	8	8		
42	Washer—spring					
43	Nut—screw					

SERVICE PARTS LIST

PLATE NO

THE MGB

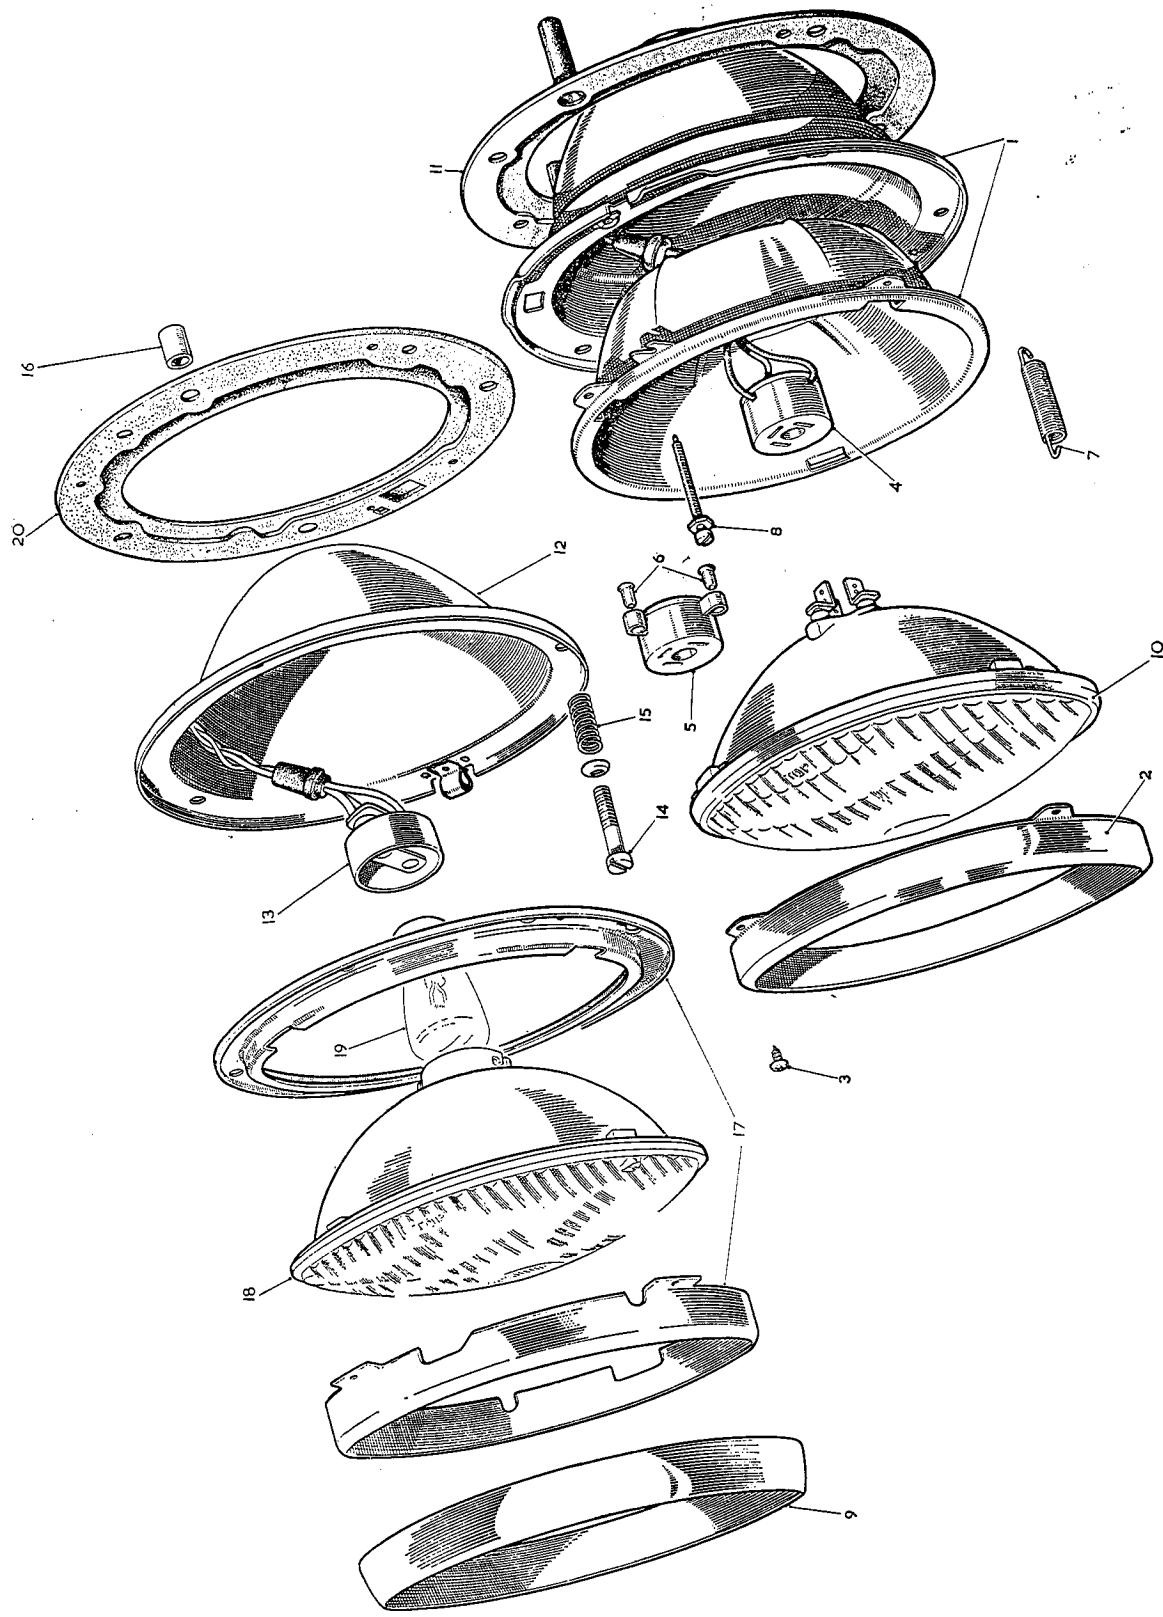


A8883

To face page N.4

SERVICE PARTS LIST

PLATE ND

THE MGB

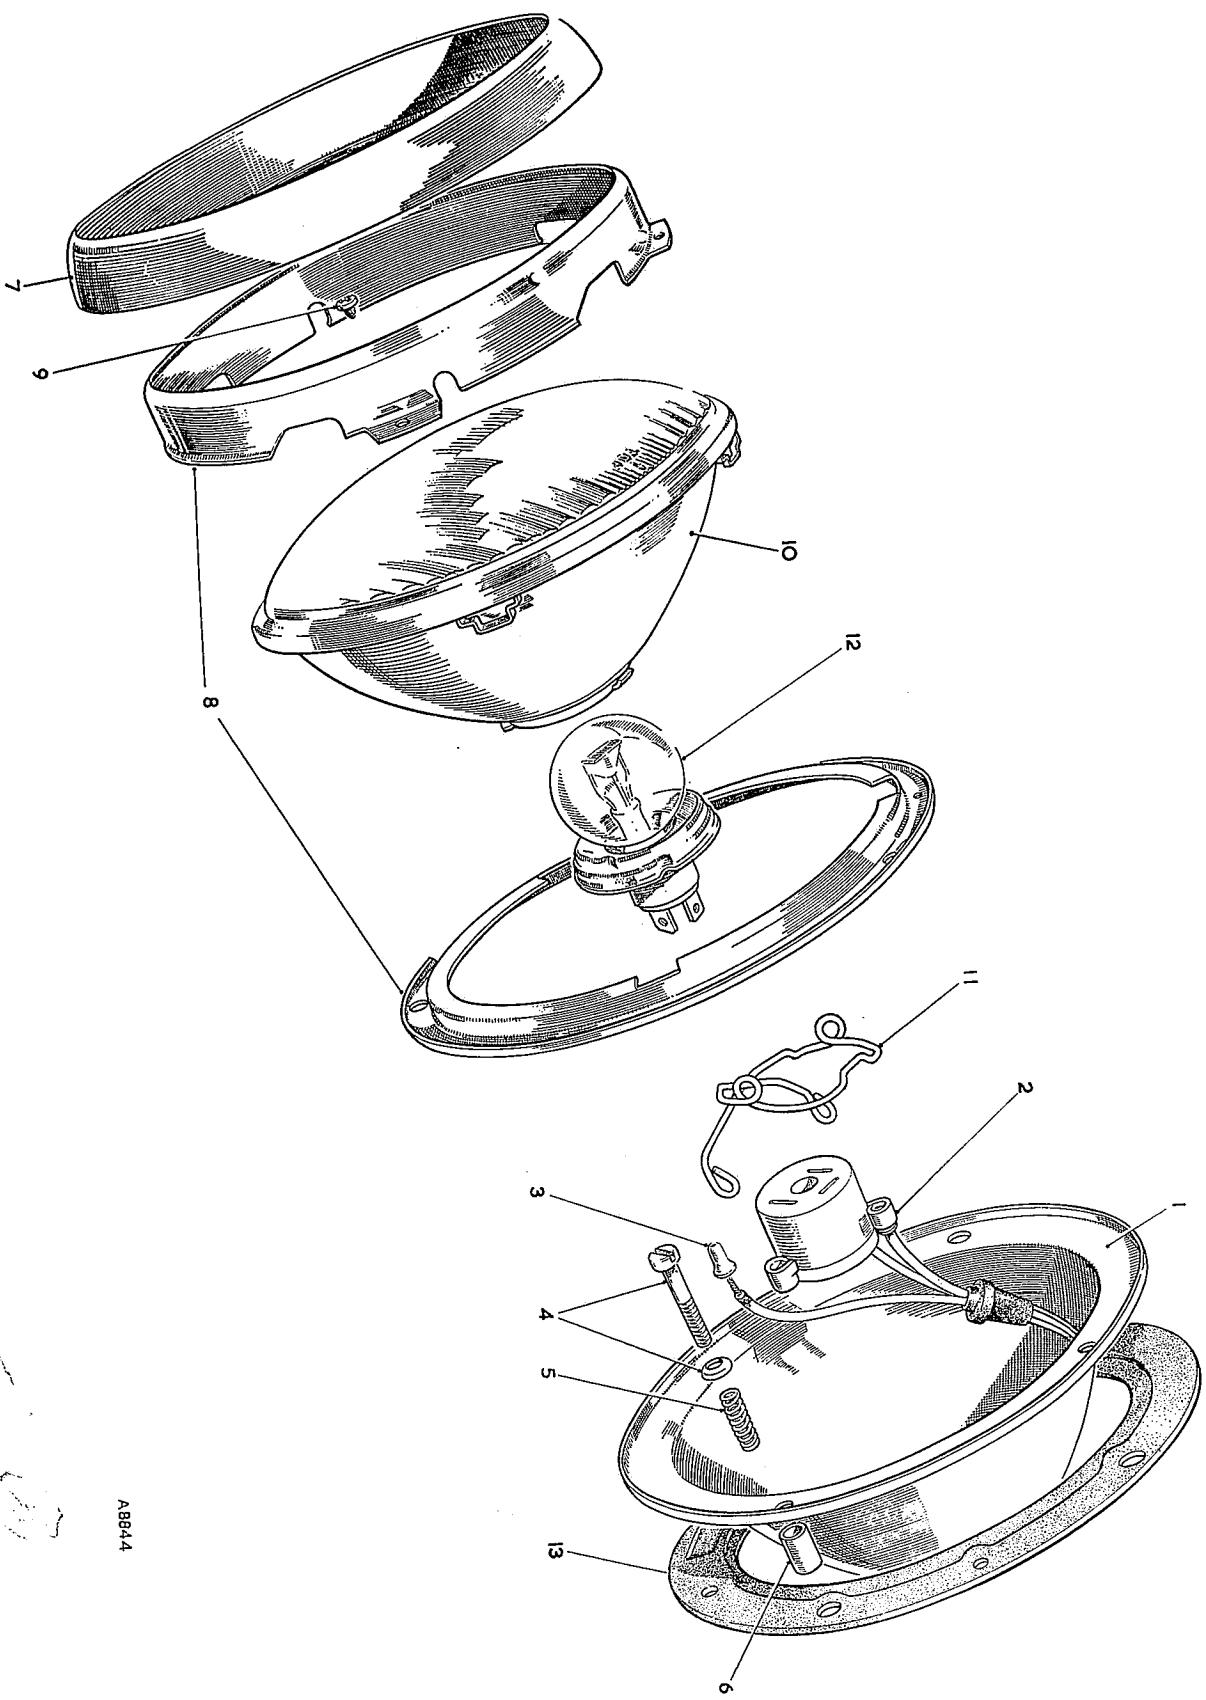

To face page N.5

A.BB44

SERVICE PARTS LIST

THE MGB

Part No.	DESCRIPTION	COMMENCING (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Qty. Illus. No.	New Part Number	Change Point	
Lamps (Road)—continued						
1 Headlamp						
2 Body assembly						
3 Adaptor and cable						
4 Adaptor	Sleeve—terminal	NSP 67H5035	1	2		
5	Sleeve—beam adjustment	BHA4235 47H5126	2	2		
6	Screw—screw	37H5271	3	6		
7	Sleeve—sealing	7H5582	6			
8	Rim	17H5394	4	6		
9	Plate—light unit retaining	17H5231	5	6		
10	Screw—unit rim	27H5253	6	6		
11	Light unit	57H5296	7	2		
12	Spring—bulb retaining	17H5205	8	2		
13	Bulb—vertical (yellow)	37H5192	9	6		
14	Gasket—body	47H5124	10	2		
15		47H5125	11	2		
16		BFS410	12	2		
17 Headlamp		7H8338	13	2		
18 Body assembly		NSP 67H5035	1	2		
19 Adaptor and cable		BHA4235 47H5126	2	2		
20 Adaptor	Sleeve—terminal	37H5271	3	6		
21	Sleeve—beam adjustment	7H5582	6			
22	Screw—screw	17H5394	4	6		
23	Sleeve—sealing	17H5231	5	6		
24	Rim	27H5253	6	6		
25	Plate—light unit retaining	57H5296	7	2		
26	Screw—unit rim	17H5205	8	2		
27	Light unit	37H5192	9	6		
28	Spring—bulb retaining	47H5528	2			
29	Bulb—vertical dip	47H5125	11	2		
30	Gasket—body	BFS410	12			
31		7H8338	13	2		
32		NSP 67H5035	1	2		
33 Headlamp		BHA4235 47H5126	2	2		
34 Body assembly		37H5271	3	6		
35 Adaptor and cable	Sleeve—terminal	7H5582	6			
36 Adaptor	Sleeve—beam adjustment	17H5394	4	6		
37	Screw—screw	17H5231	5	6		
38	Sleeve—sealing	27H5253	6	6		
39	Rim	57H5296	7	2		
40	Plate—light unit retaining	17H5205	8	2		
41	Screw—unit rim	37H5192	9	6		
42	Light unit	47H5124	10	2		
43	Spring—bulb retaining	47H5125	11	2		
44	Bulb—vertical dip	BFS410	12			
45	Gasket—body	7H8338	13	2		
46						
47						
48						


SERVICE PARTS LIST

THE MGB

SERVICE PARTS LIST

PLATE NF

THE MGB

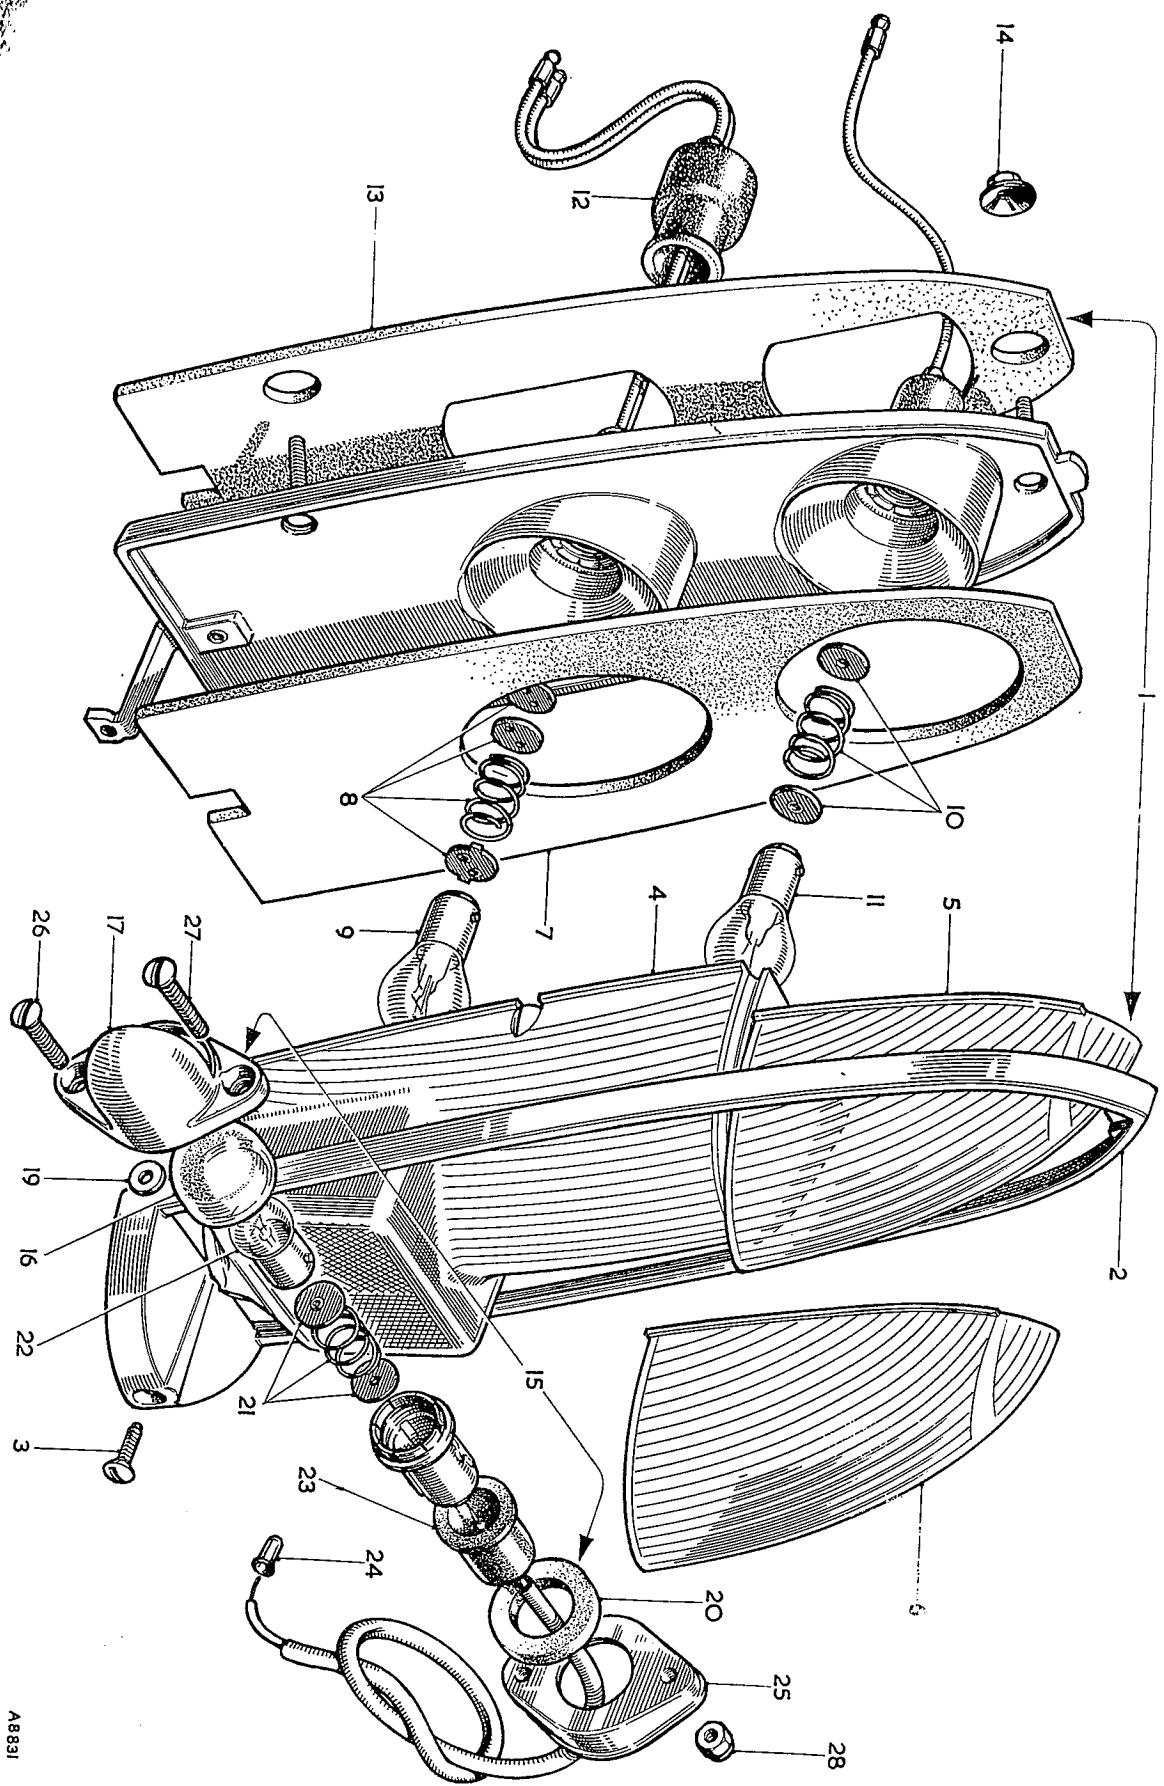

To face page N.7

A883I

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	(C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	New Part Number	Change Point	
1	Lamp (Road)—continued					
2	Lamp—stop/tail/flasher and reflex—amber	BHA4175	.1	.2		
3	Lamp—stop/tail/flasher and reflex—red	LHD LHD BHA4176	.2	.2		
4	Rim	57H5355	.2			
5	Screw—fixing rim	17H5425	.3			
6	Lens—stop/tail	57H5357	.4			
7	Lens—flasher—amber	57H5354	.5			
8	Lens—flasher—red	57H5355	.6			
9	Gasket—lens seating	37H5456	.7			
10	Interior—bulb holder—stop/tail	37H5459	.8			
11	Bulb—stop/tail	BFS380	.9			
12	Interior—bulb holder flasher	37H5452	.10			
13	Bulb—flasher	BFS382	.11			
14	Grommet—cable	37H5525	.12			
15	Gasket—lamp seating	57H5358	.13			
16	Dotloc—earthing type—lamp to body	BHA4242	.14			
17	Lamp—number-plate	BHA4283	.15			
18	Glass	17H5301	.16			
19	Cover	37H5426	.17			
20	Screw—fixing cover	57H5579	.18			
21	Washer—retaining screw	21G9057	.19			
22	Gasket—lens seating	17H5302	.20			
23	Interior—bulb holder	37H5452	.21			
24	Bulb	BFS207	.22			
25	Grommet—cable	17H5216	.23			
26	Sleeve—terminal	7H5582	.24			
27	Plinth—number-plate lamp—RH	AHH6398	.25			
28	Plinth—number-plate lamp—LH	AHH6399	.1			
29	Screw—number-plate lamp and plinth to over-riders	RMP0314	.26			
30	Screw—number-plate lamp and plinth to over-riders	RMP0316	.27			
	Nut—screw		.28	.4		

SERVICE PARTS LIST

THE MGB


Item No.	DESCRIPTION	COMMENCING (C) GHN3/I/01			MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point	
FLASHER, HORN AND CONTROLS							
1	Switch—direction indicator	AHH6318	1	1			
2	Contact assembly	67H5021	2	1			
3	Cowling—direction indicator switch—top	AHH6314	3	1			
4	Cowling—direction indicator switch—bottom	RHD LHD	4	1			
5	Cowling—direction indicator switch—top	AHH6316	1	1			
6	Cowling—direction indicator switch—bottom	AHH6315	1	1			
7	Screw—cowling	AHH6317	5	4			
8	Stud—indicator switch trip	RMP0214	6	1			
9	Nut—std	2IG6050	7	1			
10	Unit—flasher	FNZ108	13H110	8	1		
11	Bracket—bulb holder—flasher warning light	AHH6275	9	1			
12	Shield—flasher warning light	AHH6322	10	2			
13	Window—flasher warning light (plastic)	AHH6334	11	2			
14	Tube—lamp	AHH6333	12	2			
15	Horn—high note	13H472	13	1			
16	Bracket	57H5309	14	1			
17	Sundry parts	57H5310	15	1 set			
18	Screw—horn to bonnet lock platform—RH side	PMZ0408	16	2			
19	Washer—spring—screw	LWZ204	17	2			
20	Washer—plain—screw	PWZ104	18	2			
21	Nut—screw	FNZ104	19	2			
22	Horn—low note	13H473	1	1			
23	Bracket	57H5309	1	1			
24	Sundry parts	57H5310	1	1 set			
25	Screw—horn to bonnet lock platform—LH side	PMZ0408	2	2			
26	Washer—spring—screw	LWZ204	2	2			
27	Washer—plain—screw	PWZ104	2	2			
28	Nut—screw	FNZ104	2	2			
29	Horn-push assembly	AHH6319	20	1			
30	Contact—bezel and upper	37H5579	21	1			
31	Spring—horn push	57H5595	22	3			
32	Plate—retaining and lower contact	47H5408	23	1			
33	Nut—plate	47H5469	24	3			
34	Sundry parts	37H5581	25	1			
35	Cover and motif	57H5594	26	1			
36	Screw—horn push	53K618	27	8			
37	Slip-ring and horn contact assembly	AGA9685	28	1			
38	Rotor (top and bottom) complete with cable	7H6903	29	1			
39	Contact	7H6904	30	1			
40	Spring	7H6902	31	1			
41	Slip-ring	2H5401	32	1			

] Optional extra

SERVICE PARTS LIST

PLATE NG

THE MGB

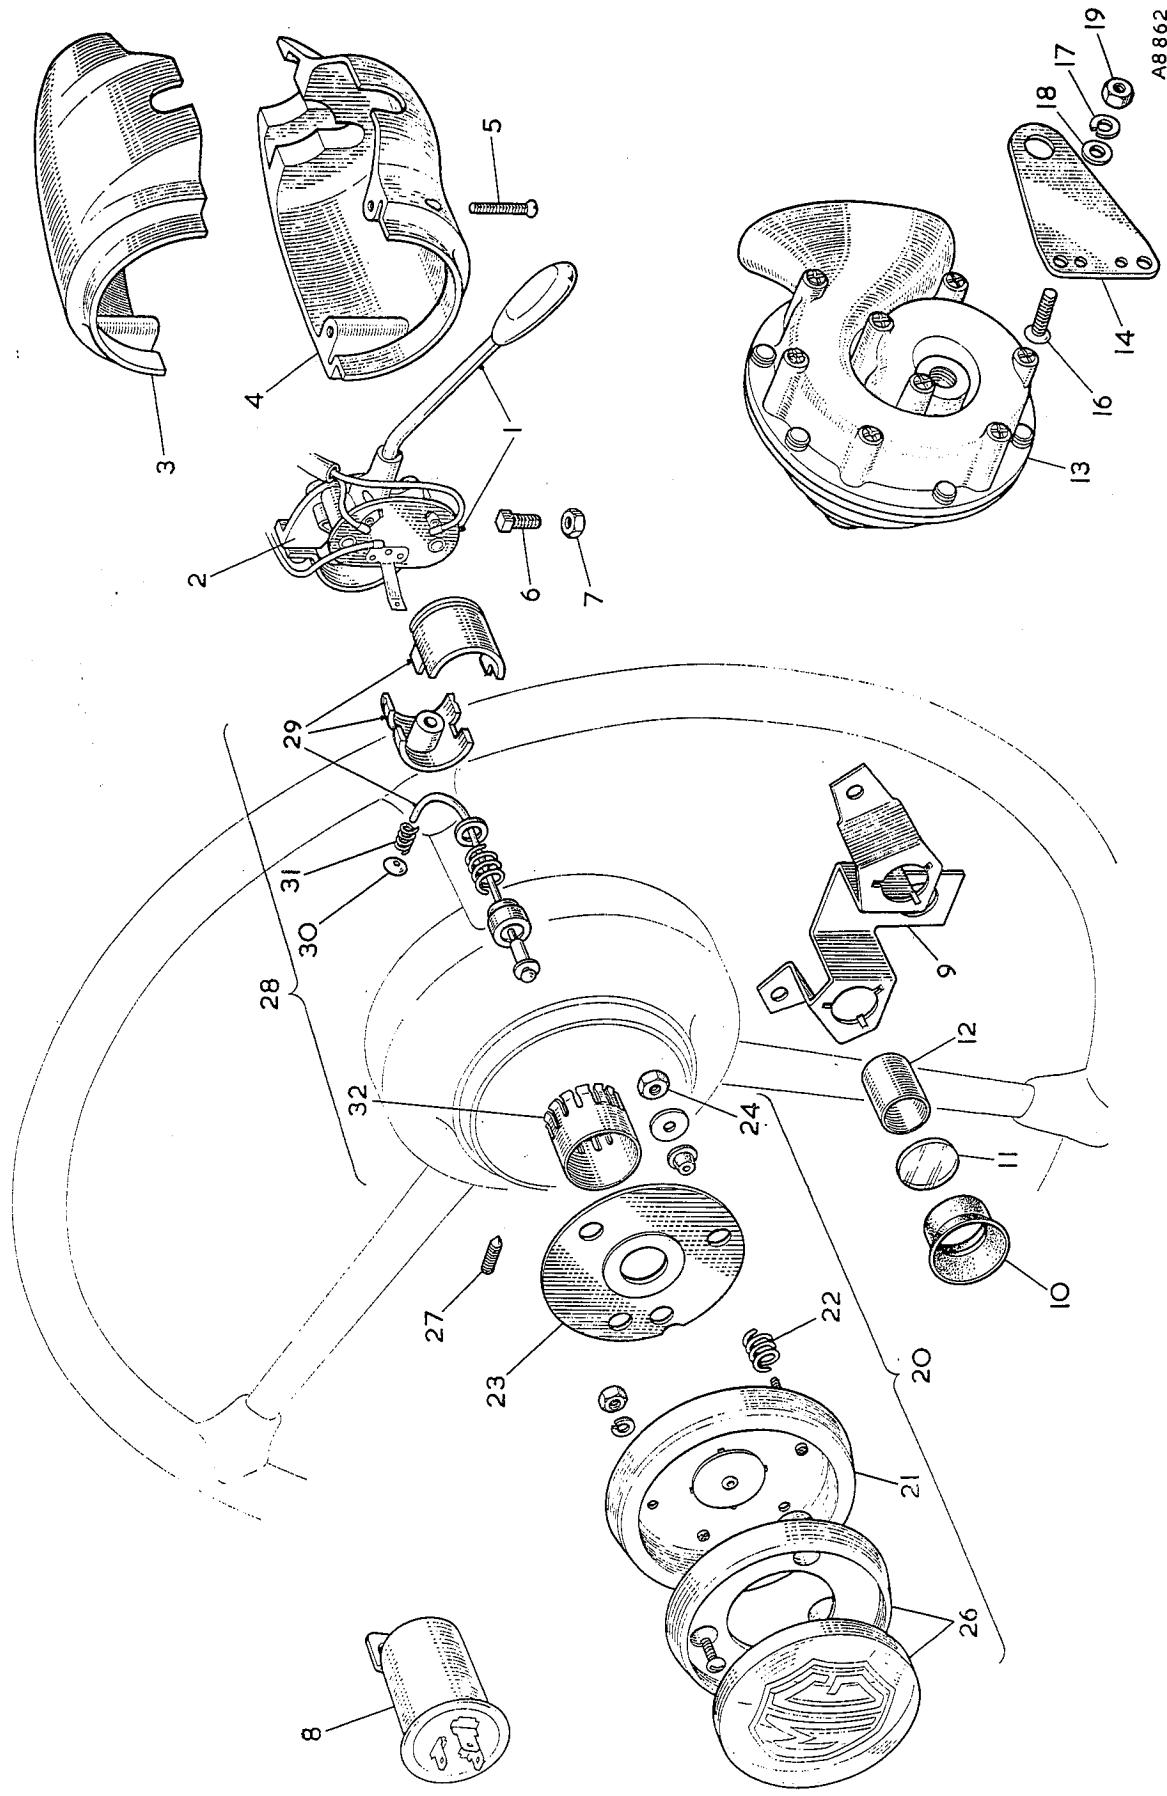


To face page N.8

SERVICE PARTS LIST

PLATE NH

THE MGB

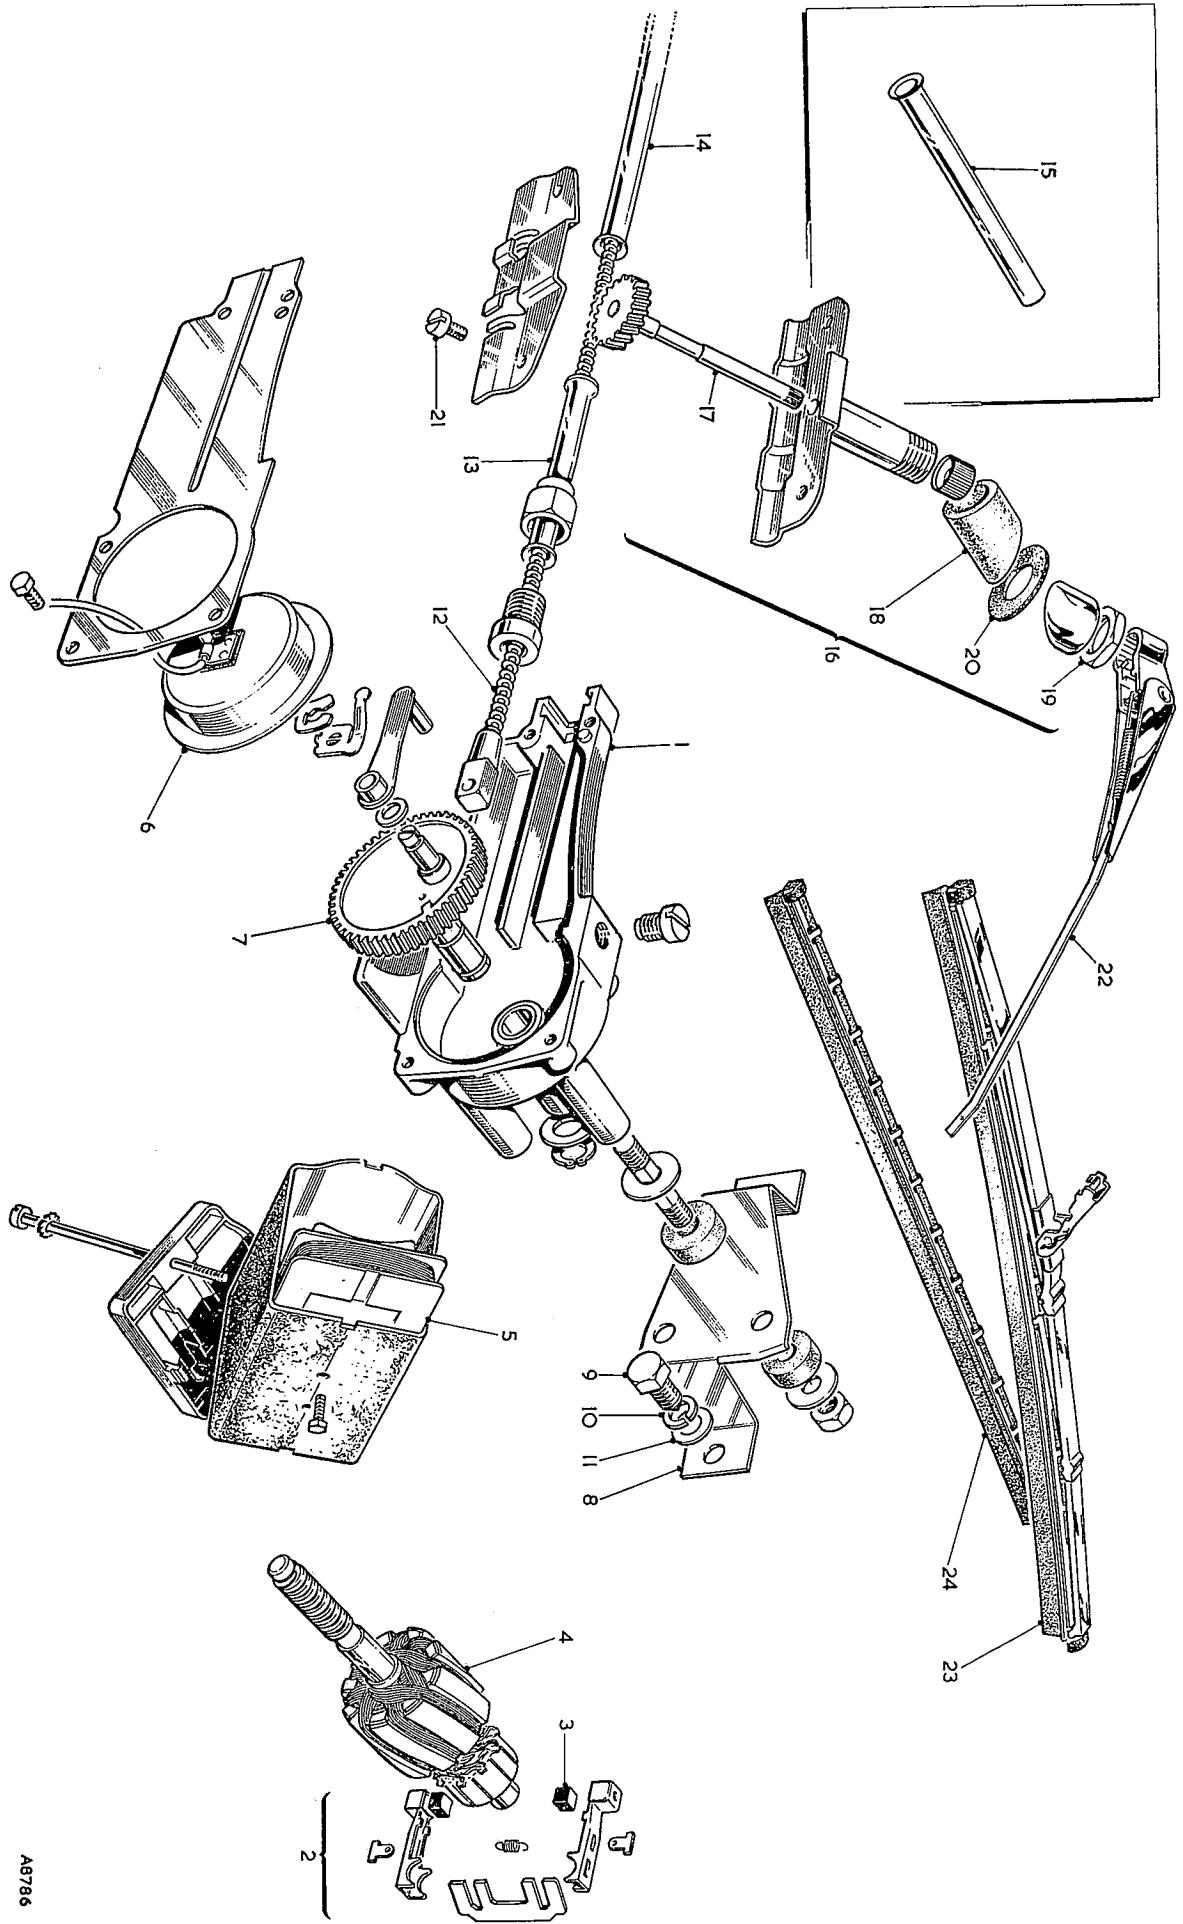

To face page N.9

A6786

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS		REMARKS
			Part Number	Illus. No.	
WINDSCREEN WIPERS					
1	Motor—windscreen wiper	17H2013	1	1	
2	Brush gear	17H5396	2	1	
3	Brush	7H5130	3	1 set	
4	Armature	27H5374	4	1	
5	Coil—field	57H5558	5	1	
6	Fixing parts	17H5431	6	1 set	
7	Switch—parking	57H5559	7	1	
8	Shaft and gear	57H5312	7	1	
9	Sundry parts	17H5441	8	1 set	
10	Bracket—wiper motor	HZA126	8	1	
11	Screw—bracket to bulkhead	HZS0405	9	3	
12	Washer—spring	LWZ204	10	3	
13	Washer—plain	PWZ204	11	3	
14	Cross-head and rack	37H5169	12	1	
15	Casing—motor to wheelbox	BHA4322	13	1	
16	Casing—wheelbox to wheelbox	BHA4323	14	1	
17	Casing—wheelbox to extension	14G3722	15	1	
18	Wheelbox	BHA4324	16	2	
19	Spindle and gear	AJH5079	17	2	
20	Tube—spindle (rubber)	ANK3458	18	2	
21	Nut—wheelbox	185925	19	2	
22	Washer (rubber)	ADC560	20	2	
23	Screw—cover	17H5390	21	4	
24	Arm—wiper	RHD	22	2	
25	Arm—wiper	LHD	22	2	
26	Blade—wiper	13H469	23	2	
27	Rubber	57H5311	24	2	

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHNS/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
GABLES AND CONNECTIONS						
1	Harness—main	BHA4344	1	1		
2	Holder—bulb—main beam	37H5181	2	1		
3	Holder—bulb—flasher warning light	47H5166	3	2		
4	Holder—bulb—ignition warning light	47H5166	4	1		
5	Bulb	37H5181	5	5		
6	Connector—snap—map light	BS987	6	A/R		
7	Connector—snap—single	2H3406	7	A/R		
8	Connector—snap—2-way	2H2617	8	A/R		
9	Connector—snap—3-way	2H4992	9	A/R		
10	Plug—snap connector	2H2704	10	A/R		
11	Connector—Lucar—female (35-amp.)	47H5419	11	A/R		
12	Insulator—connector	47H5418	12	A/R		
13	Connector—Lucar—female (14-amp.)	47H5496	13	A/R		
14	Insulator—connector	47H5417	14	A/R		
15	Clip—main harness	PCR0607	15	1		
16	Clip—starter cable and harness	AHH6690	16	1		
17	Screw—clips to RH front wheel arch	PMZ0808	17	1		
18	Washer—plain	PWZ103	18	1		
19	Washer—spring	LWZ203	19	1		
20	Clip—main harness—RH side	PZR1007	20	1		
21	Clip—main harness—LH side	PCR0607	21	2		
22	Screw—clips to bonnet	PMZ0806	22	4		
23	Washer—spring	LWZ203	23	4		
24	Washer—plain	PWZ103	24	4		
25	Nut—screw	FNZ103	25	2		
26	Clip—main harness to bulkhead	PCR1009	26	1		
27	Clip—dip switch lead to bulkhead	PCR0509	27	1		
28	Clip—dip switch lead to bulkhead	PCR0507	28	1		
29	Washer—spring	LWZ203	29	1		
30	Nut	FNZ103	30	1		
31	Grommet—headlamp and sidelamp lead through wheel arch	RFN306	31	2		
32	Clip—tank unit lead to edge of tank	BHA4130	32	16	3	
33	Harness—body and boot	BHA4345	33	17	1	
34	Connector—Lucar—female (14-amp.)	47H5496	34	18	4	
35	Insulator—connector	47H5417	35	19	4	
36	Connector—snap—single	2H3406	36	20	5	
37	Connector—snap—2-way	2H2617	37	21	3	
38	Plug—snap connector	2H2704	38	22	17	
39	Sleeve (P.V.C.) fitted over cable clips in boot	5L64	39	23	5	
40	Grommet—cable through boot floor and rear lower panel	RFN303	40	24	3	
41	Grommet—tank lead through RH outer panel	RFN503	41	25	1	
42	Clip—tail lamp harness	PCR0407	42	2		

SERVICE PARTS LIST

PLATE NJ

THE MGB

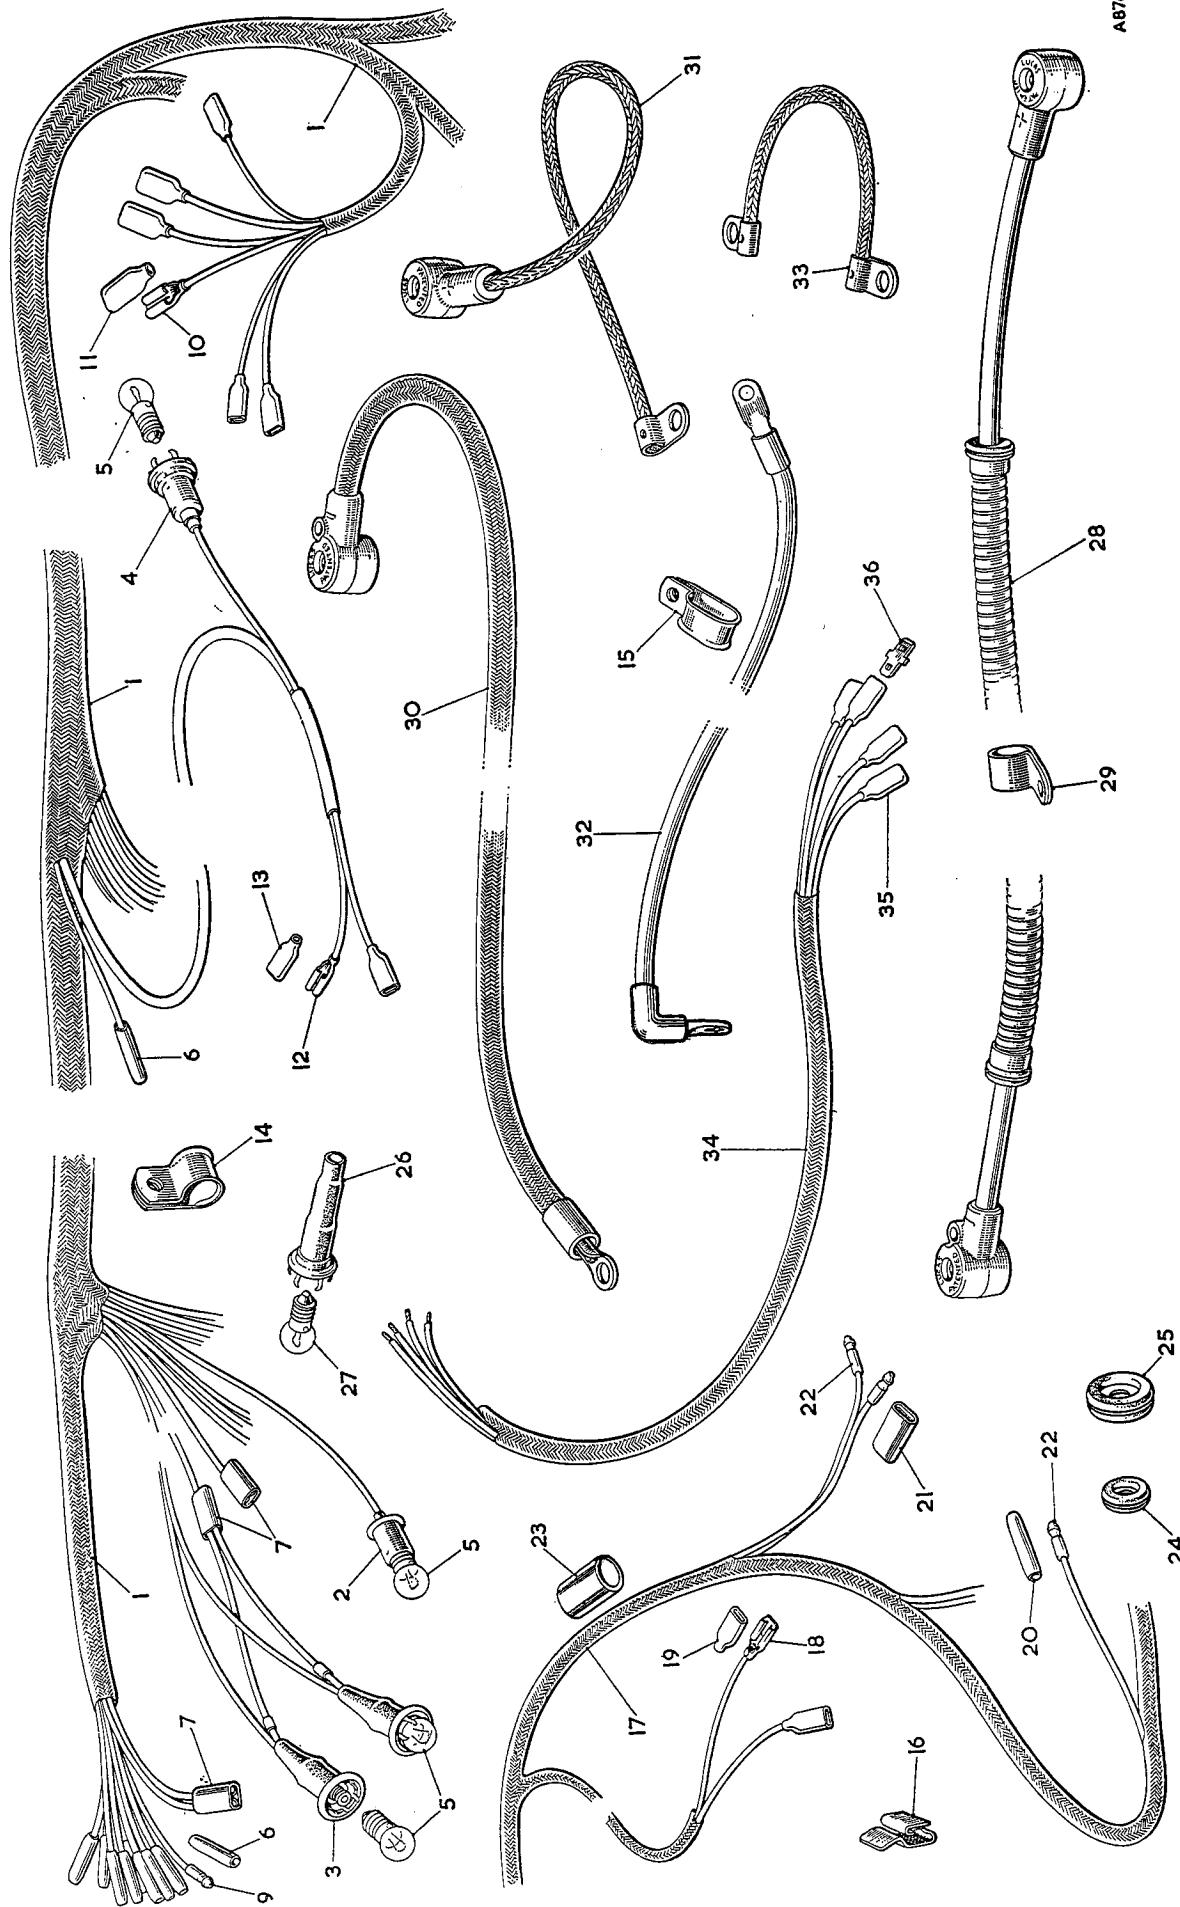


To face page N.10

SERVICE PARTS LIST

PLATE NJ

THE MGB

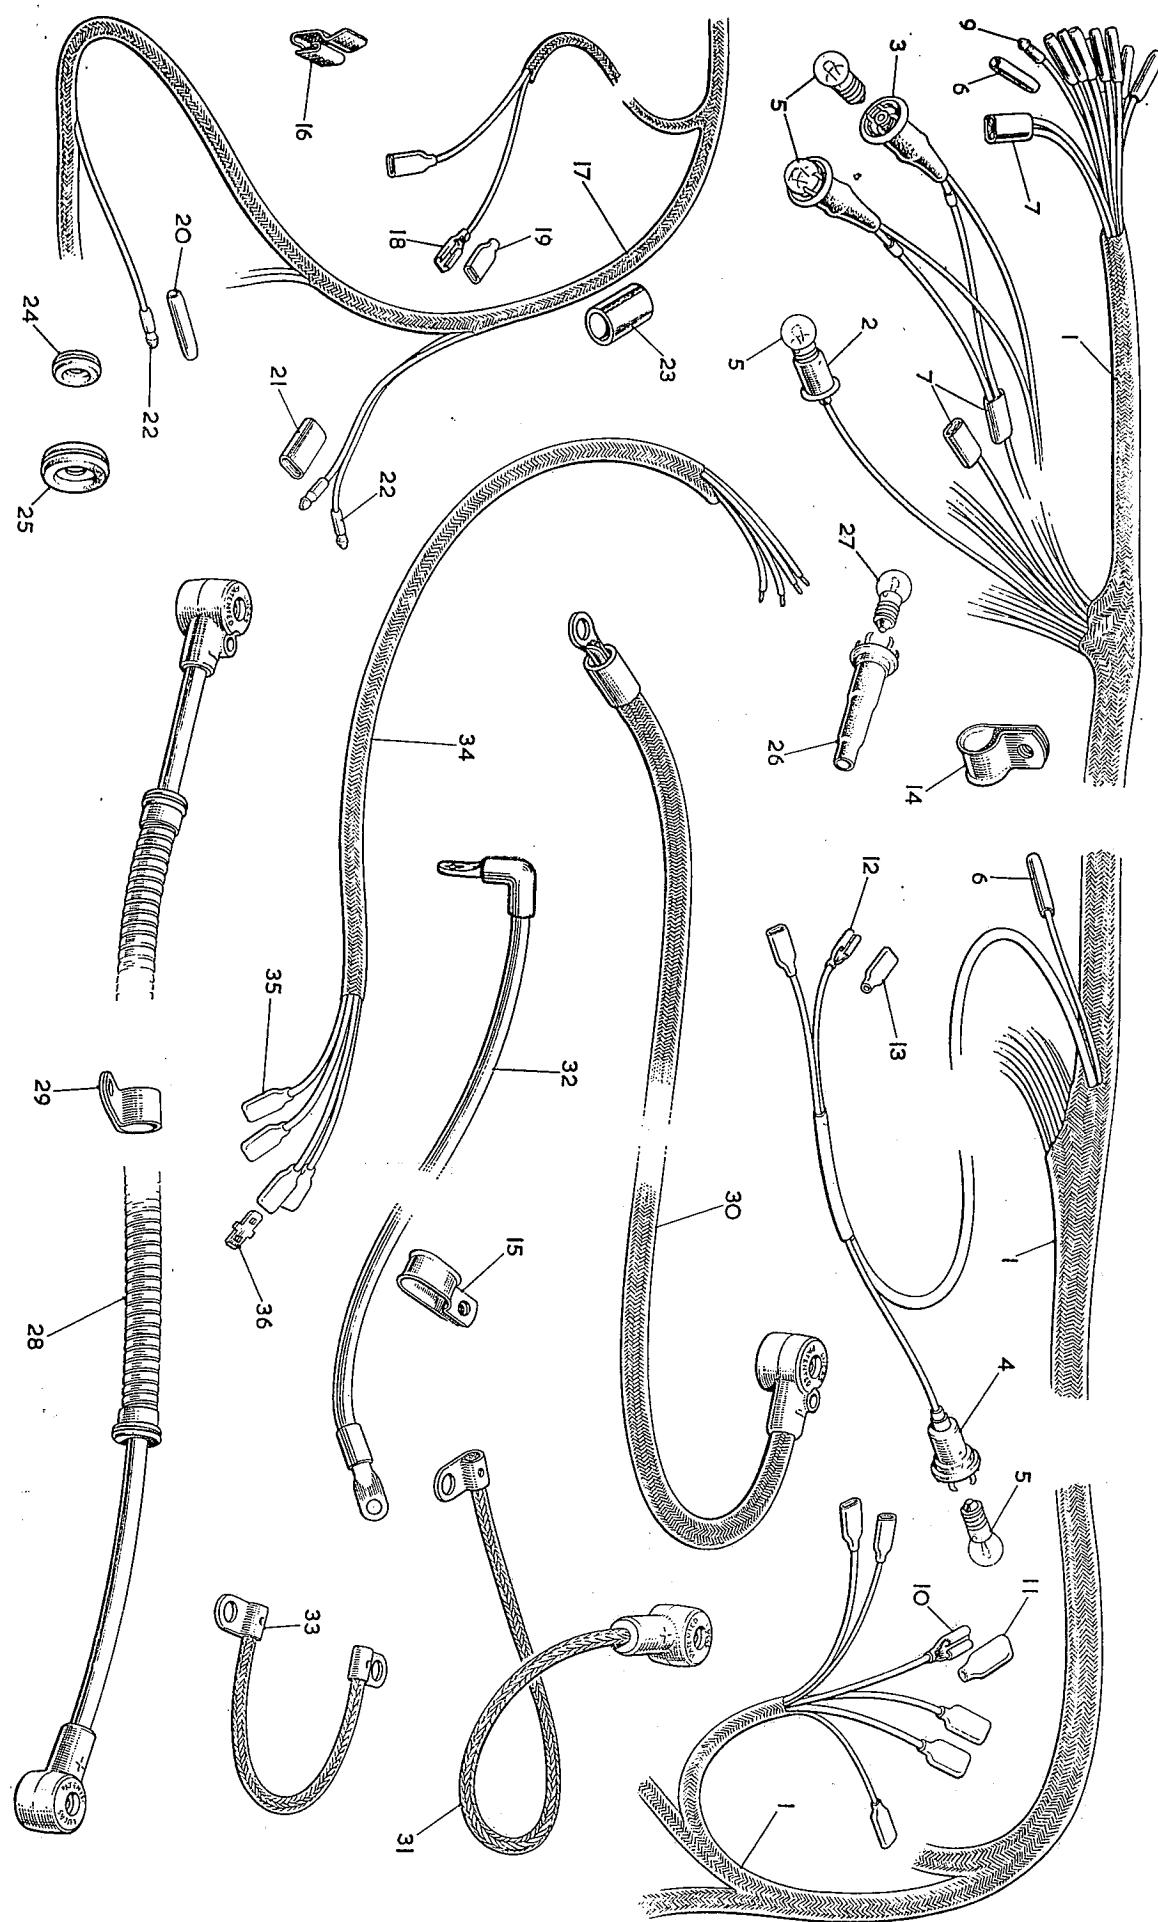

To face page N.11

SERVICE PARTS LIST

THE MGB


DESCRIPTION	Part Number	Qty. per Veh.	New Part Number	MODIFICATIONS		REMARKS
				Commencing (C) GHN3/101	Change Point	
Cables and Connections—continued						
Holder—bulb—instrument illumination	37H15181	26				
Bulb—instrument illumination	BFS887	27				
Harness—dip switch	BHA4349	1				
Connector—Lucar—female (14-amp.)	47H15496	3				
Insulator—connector	47H15417	3				
Plug—strap connector	2H2704	3				
Link—battery positive to negative	BHA4348	28				
Clip—battery link cable	AHH6354	29				
Screw—clip to heelboard stiffener	HZS0404	1				
Washer—spring	LWZ204	1				
Sleeve—clip (P.V.C.)	5L64	1				
Cable—battery negative to solenoid	AHH5449	30				
Cable—battery positive to earth	AHH5448	31				
Cable—solenoid to starter	AHA6280	32				
Strip—engine to earth	AHH5452	33				
Harness—horn extension	BHA4347	1				
Connector—Lucar—female (14-amp.)	47H15496	4				
Insulator—connector	47H15417	4				
Harness—steering column switch	BHA4356	34				
Connector—Lucar—female (14-amp.)	47H15496	35				
Blade—Lucar (14-amp.)	17H2132	36				
						[When steering lock is fitted]
17						
18						
19						
20						
21						



SERVICE PARTS LIST

PLATE O

THE MGB

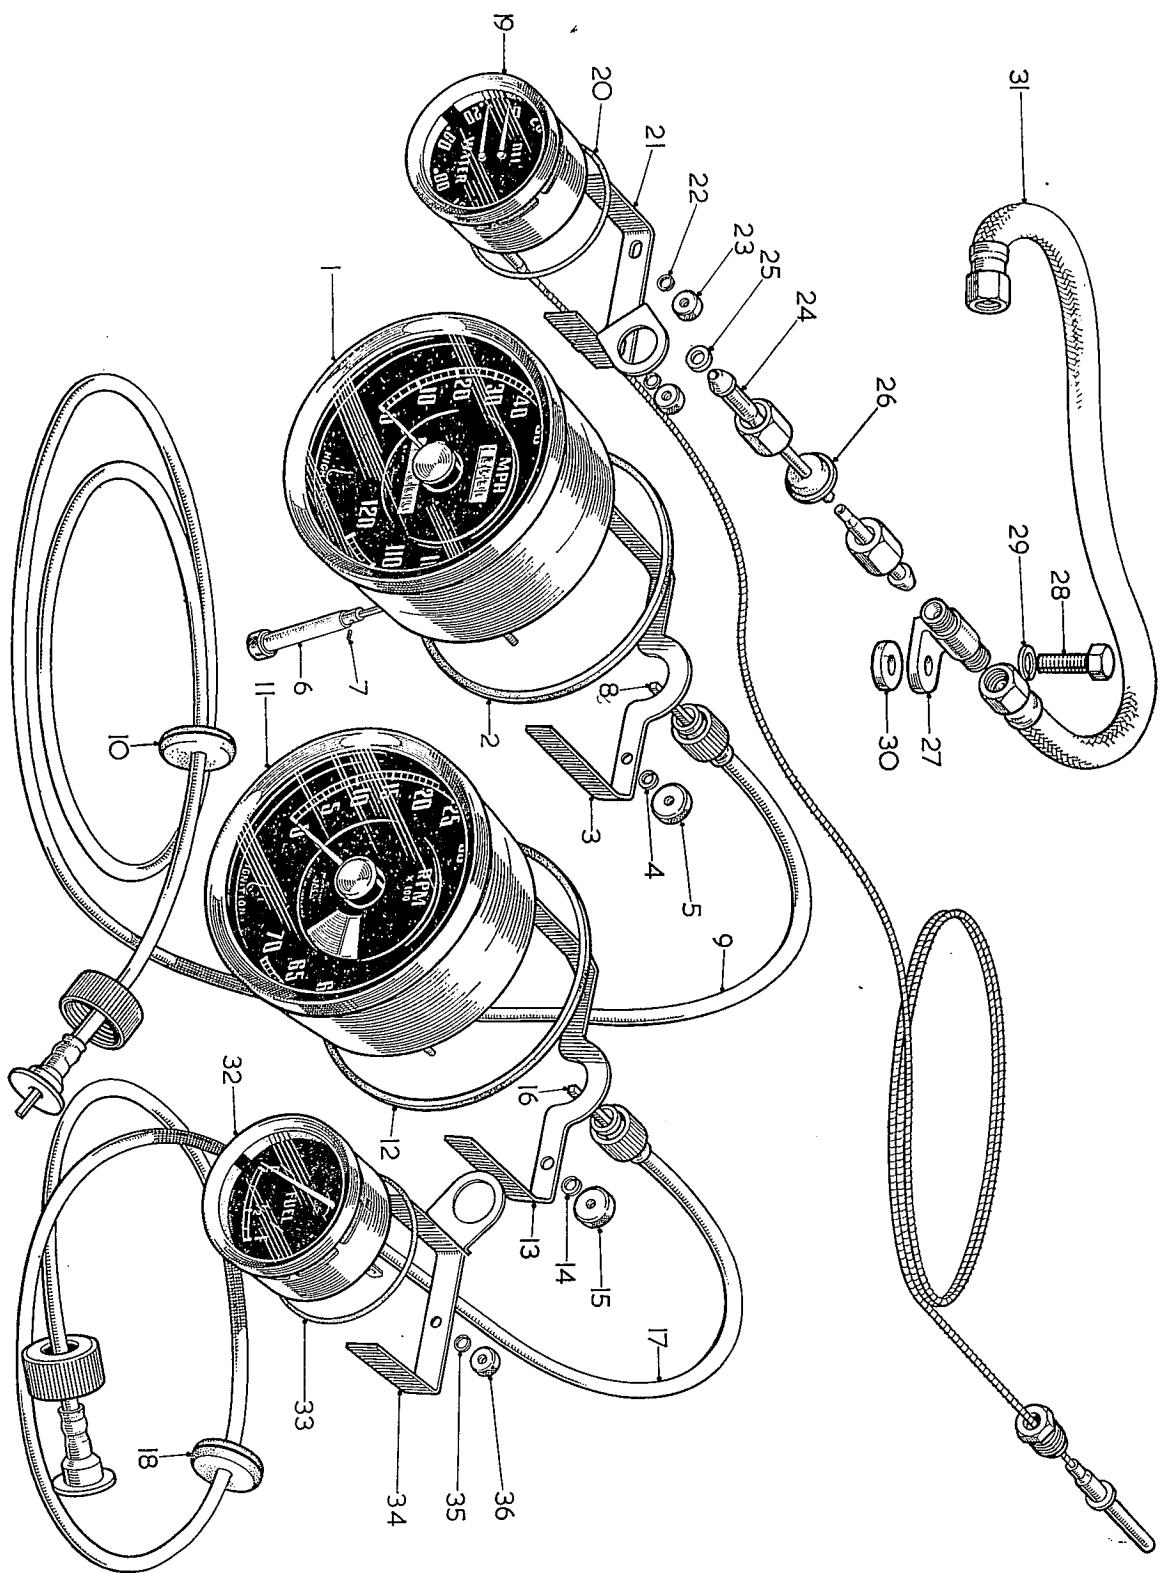

To face page O.1

A8783

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS			
			Part Number	Qty. per Veh.	New Part Number				
INSTRUMENTS									
[Standard]									
1	Speedometer (miles) 11/43 axle ratio	BHA4286	1	1					
2	Speedometer (kilometres) 11/43 axle ratio	BHA4287	1	1					
3	Ring (rubber) ...	A1H5178	2						
4	Strap—fixing	A1H5176	3	1					
5	Washer—shakeproof.	2K1369	4	2					
6	Nut—thumb ...	17H1304	5	2					
7	Trip stem assembly	37H640	6						
8	Screw—trip stem assembly	17H1658	7	1					
9	Cable assembly—speedometer (3' 9" [114.3 cm.])	ACCB856	1						
10	Cable—inner ...	17H961	8	1					
11	Cable—outer ...	17H962	9	1					
12	Grommet—speedometer cable	ACCB8474	10	1					
13	Revolution counter	BHA4212	11	1					
14	Ring (rubber) ...	A1H5178	12	1					
15	Strap—fixing	A1H5176	13	1					
16	Washer—shakeproof.	2K1369	14	2					
17	Nut—thumb ...	17H1304	15	2					
18	Cable assembly—revolution counter (3' 6" [106.68 cm.])	BHA4291	1						
19	Cable—inner ...	37H1204	16	1					
20	Cable—outer ...	37H1205	17	1					
21	Cable assembly—revolution counter (2' 3" [68.58 cm.])	BHA4314	1						
22	Cable—inner ...	7H8853	1						
23	Cable—outer ...	7H8852	1						
24	Grommet—revolution counter cable	ACCB8474	18	1					

SERVICE PARTS LIST

THE MGB

Item No.


DESCRIPTION

Commencing
(C) GHN8101

MODIFICATIONS

REMARKS

Item No.	DESCRIPTION	Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point	REMARKS
Instruments—continued							
1	Gauge—oil pressure and temperature (Fahrenheit)	BHA4295	.19	1			
2	Gauge—oil pressure and temperature (Centigrade)	BHA4296	.20	1			
3	Ring (rubber)	27FH972					
4	Strap—fixing	AJH5186	.21	1			
5	Washer—spring	27FH887	.22	2			
6	Nut—thumb	17H932	.23	2			
7	Pipe assembly—oil gauge	AHH6678	.24	1			
8	Nipple	ACAA5422					
9	Nut	ACAA5421					
10	Union	51K2824	1	1			
11	Nut	11K2037	1	1			
12	Washer—oil pipe to oil gauge (leather)	2K4986	.25	1			
13	Ferrule—oil gauge pipe	84138	.26	1			
14	Connector—oil gauge pipe	88875	.27	1			
15	Screw—connector to bulkhead	HZS0408	.28	1			
16	Washer—spring screw	LWZ204	.29	1			
17	Spacer—connector screw	AHH6247	.30	1			
18	Pipe—oil gauge—flexible	AHH6554	.31	1			
19	Gauge—fuel	BHA4214	.32	1			
20	Ring (rubber)	17H1042	.33	1			
21	Strap—fixing—and lamp holder (complete)	AJH5185	.34	1			
22	Washer—spring	27FH887	.35	1			
23	Nut—thumb	17H932	.36	1			

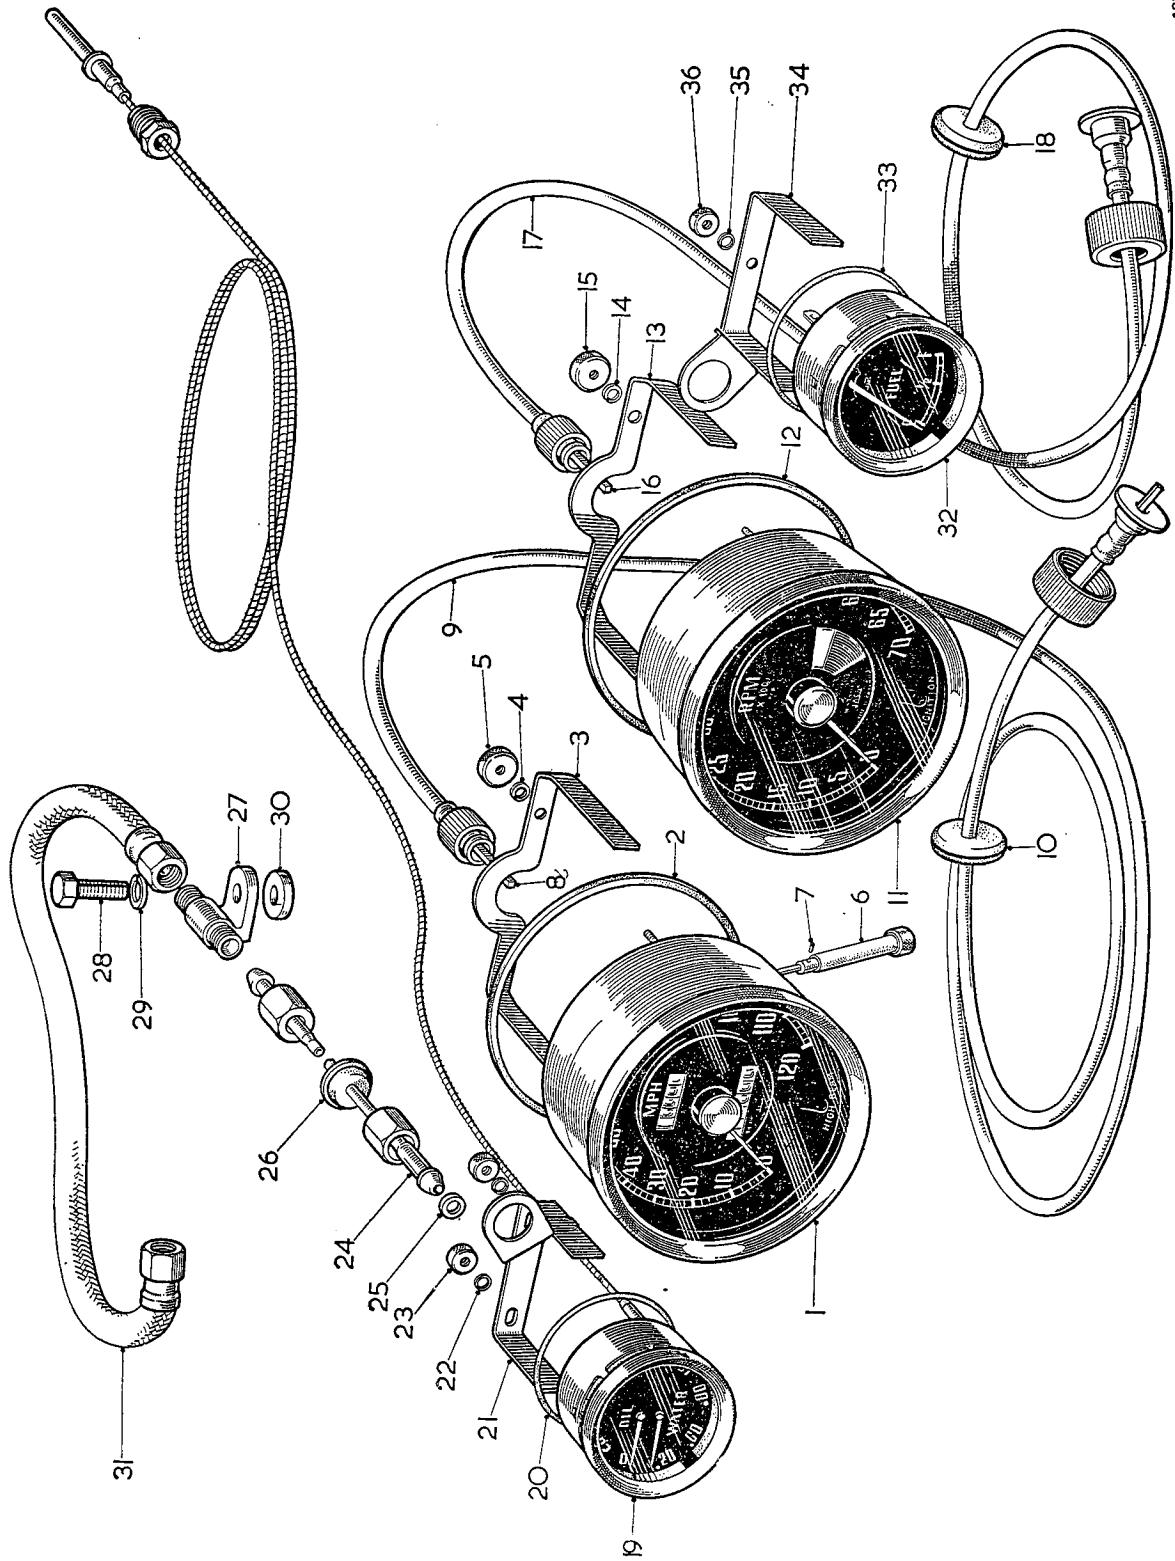


A9783

To face page 0.2

SERVICE PARTS LIST

PLATE P

THE MGB

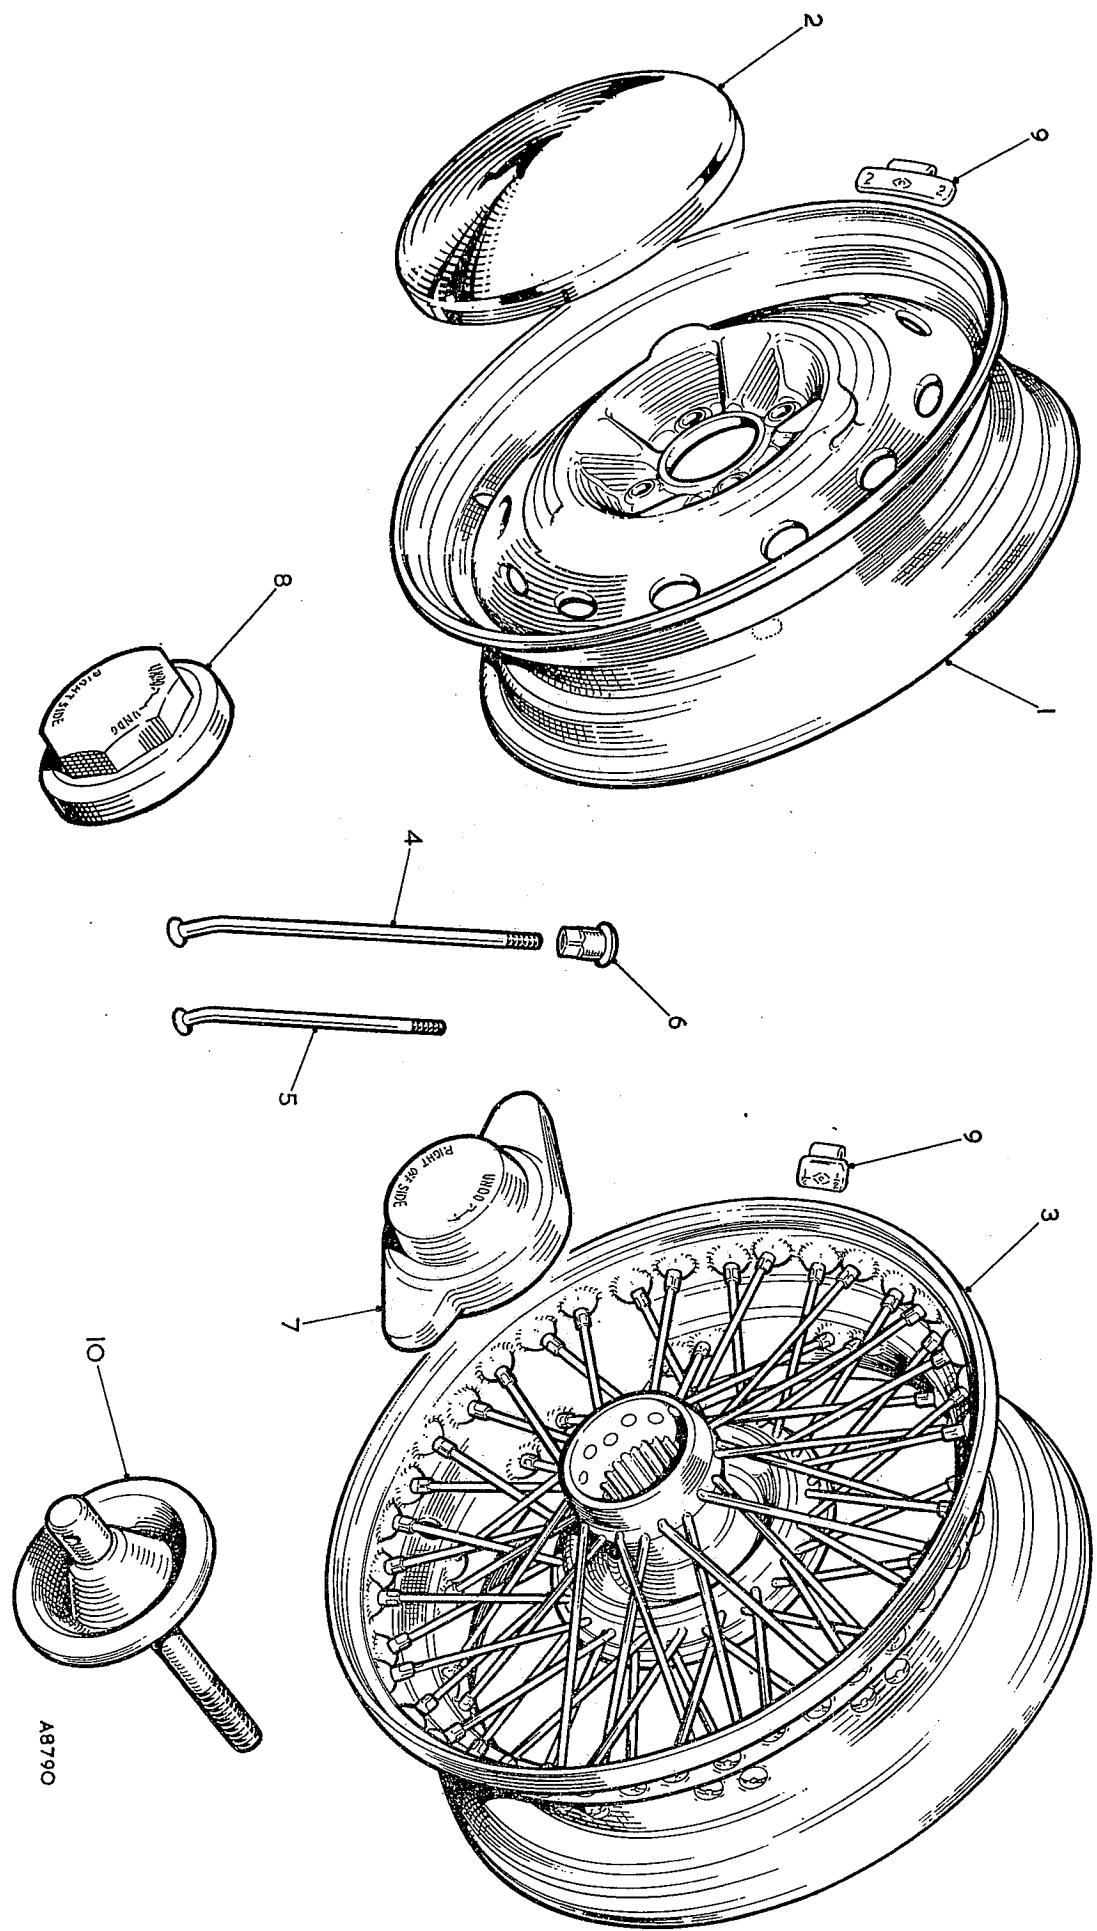


To face page P.1

A8790

SERVICE PARTS LIST

THE MGB


Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	New Part Number	
WHEELS						
1	Wheel—disc	AHH6132	1	5.		
2	Cap—hub—disc wheel	AHH6297	2	4.		
3	Wheel—wire	AHH6487	3	5.		
4	Spoke—long	17H2078	4	100		
5	Spoke—short	17H2077	5	200		
6	Nipple for spoke	7H1709	6	300		
7	Cap—hub—wire wheel RH side (L.H.T.)	1B8077	7	2.		
8	Cap—hub—wire wheel LH side (R.H.T.)	1B8078	2			
9	Cap—hub—wire wheel RH side	AHH8008	8	2.		
10	Cap—hub—wire wheel L.H. side	AHH8009	7	2.		
11	Weight—wheel balance $\frac{1}{2}$ oz. (14.17 gr.)	1B8036	9	A/R		
12	Weight—wheel balance 1 oz. (28.35 gr.)	1B8037		A/R		
13	Weight—wheel balance $1\frac{1}{2}$ oz. (42.52 gr.)	1B8038		A/R		
14	Weight—wheel balance 2 oz. (56.70 gr.)	1B8039		A/R		
15	Plate assembly—clamping—spare wheel mounting	AHH6488	10	1		

 

SERVICE PARTS LIST

PLATE R

THE MGB

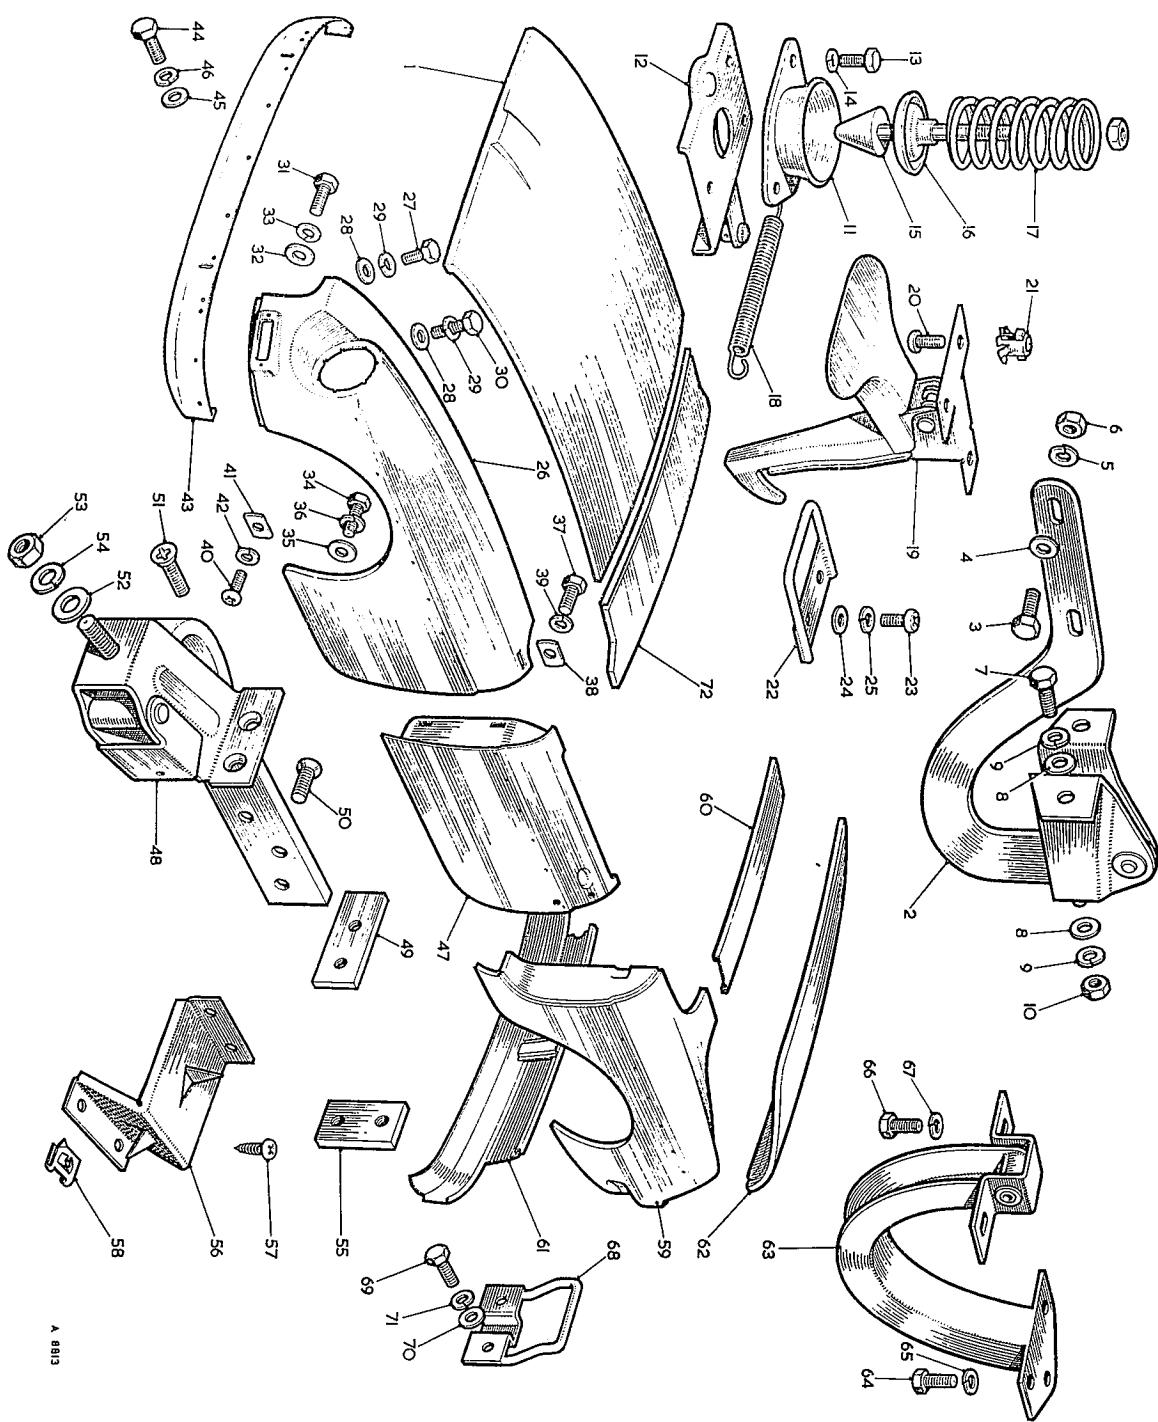

To face page R.1

A 8913

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN8/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Oty. per Veh.	
BODY SHELL						
1	Shell—body	AHH6089	1	1		
2	Bonnet assembly—bonnet	HZA401	2	2		
3	Hinge—hinge to lid	HZA364	3	4		
4	Screw—hinge to lid	HZS0406	4	4		
5	Washer—plain	PWZ204	5	4		
6	Washer—spring	LWZ204	5	4		
7	Nut	FNZ104	6	4		
8	Screw—hinge to bulkhead	HZS0405	7	4		
9	Washer—plain	PWZ204	8	6		
10	Washer—spring	LWZ204	9	6		
11	Nut	FNZ104	10	2		
12	Cup—lock locating	AHA5548	11	1		
13	Plate assembly—catch	4G3035	12	1		
14	Screw—cup and plate to body	HZS0404	13	3		
15	Washer—spring	LWZ204	14	3		
16	Pin—bonnet lock	14G4444	15	1		
17	Thimble—bonnet lock	4G3676	16	1		
18	Spring—bonnet lock	4G1588	17	1		
19	Spring—catch plate return	4G2494	18	1		
20	Catch assembly—safety	HZA332	19	1		
21	Screw—catch to bonnet	PMZ0308	20	3		
22	Nut—anchor	BHA4338	21	3		
23	Bracket—safety catch	AHA5617	22	1		
24	Screw—bracket to body	PMZ0808	23	2		
25	Washer—plain	PWZ203	24	2		
26	Washer—spring	LWZ203	25	2		
27	Wing assembly—front RH	HZA409	26	1		
28	Wing assembly—front LH	HZA410				
29	Screw—wing top	HZS0505	27	16		
30	Washer—plain	PWZ205	28	18		
31	Washer—spring	LWZ205	29	18		
32	Screw—wing top	HZS0508	30	2		
33	Screw—wing front lower	HZS0405	31	4		
34	Washer—plain	PWZ204	32	4		
35	Washer—spring	LWZ204	33	4		
36	Screw—wing rear	HZS0406	34	8		
37	Washer—plain	PWZ204	35	8		
38	Washer—spring	LWZ204	36	8		
39	Screw—wing top inner	HZS0508	37	6		
40	Plate—washer	AFH2627	38	6		
41	Washer—spring	LWZ205	39	6		
42	Screw—wing to sill	PMZ0308	40	6		
43	Plate—washer	AFH2546	41	6		
44	Washer—spring	LWZ203	42	6		

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	Commencing (C) GHNG8101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. Per Ven.	New Part Number	
Body Shell—continued						
1	Panel—front fairing	HZA132	43	1		
2	Screw—fairing panel to body	HZS0404	44	12		
3	Washer—plain	PWZ204	45	12		
4	Washer—spring	LWZ204	46	12		
5	Door assembly—RH	HZA407	47	1		
6	Door assembly—LH	HZA408	47	1		
7	Hinge assembly—RH	HZA366	48	2		
8	Hinge assembly—LH	HZA367	48	2		
9	Plate—tapping—hinge	HZA350	49	8		
10	Screw—hinge to door	CMZ0520	50	12		
11	Screw—hinge to body	CMZ0512	51	16		
12	Washer—plain	PWZ207	52	4		
13	Nut	FNZ107	53	4		
14	Washer—spring	LWZ207	54	4		
15	Plate—tapping—striker	HZA368	55	2		
16	Bracket—glass stop RH	HZA318	56	1		
17	Bracket—glass stop LH	HZA319	56	1		
18	Screw—bracket to door	PTZ1004	57	8		
19	Nut—spire	PFS410	58	8		
20	Wing assembly—rear RH	HZA411	59	1		
21	Wing assembly—rear LH	HZA412	59	1		
22	Panel—rear decking	HZA138	60	1		
23	Panel assembly—body rear lower	HZA548	61	1		
24	Lid assembly—boot	HZA419	62	1		
25	Hinge assembly—boot lid RH	AHA6314	63	1		
26	Hinge assembly—boot lid LH	AHA6315	63	1		
27	Screw—hinge to lid	HZS0405	64	6		
28	Washer—spring	LWZ204	65	6		
29	Screw—hinge to body	HZS0405	66	6		
30	Washer—spring	LWZ204	67	6		
31	Striker assembly—boot lid lock	HZA356	68	1		
32	Screw—striker to body	HZS0406	69	2		
33	Washer—plain	PWZ104	70	2		
34	Washer—spring	LWZ204	71	2		
35	Diaphragm assembly—radiator		1			
36	Panel assembly—shroud	HZA480	72	1		
						See Section C

SERVICE PARTS LIST

PLATE R

THE MGB

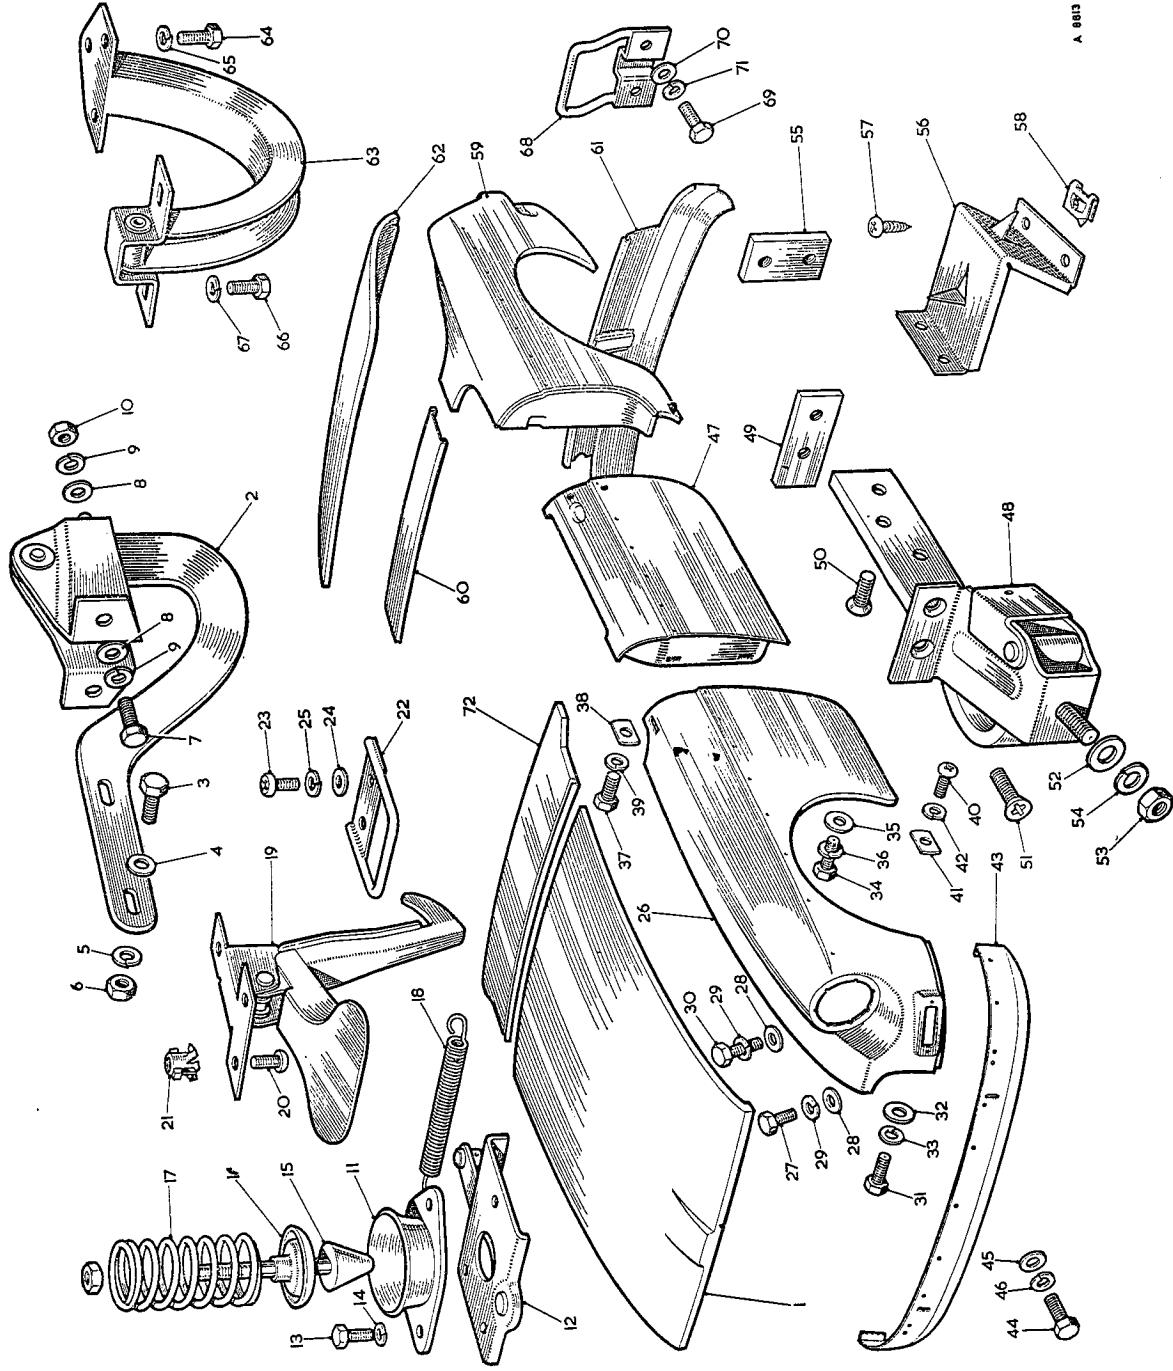


To face page R.2

A 9813

SERVICE PARTS LIST

PLATE RA

THE MGB

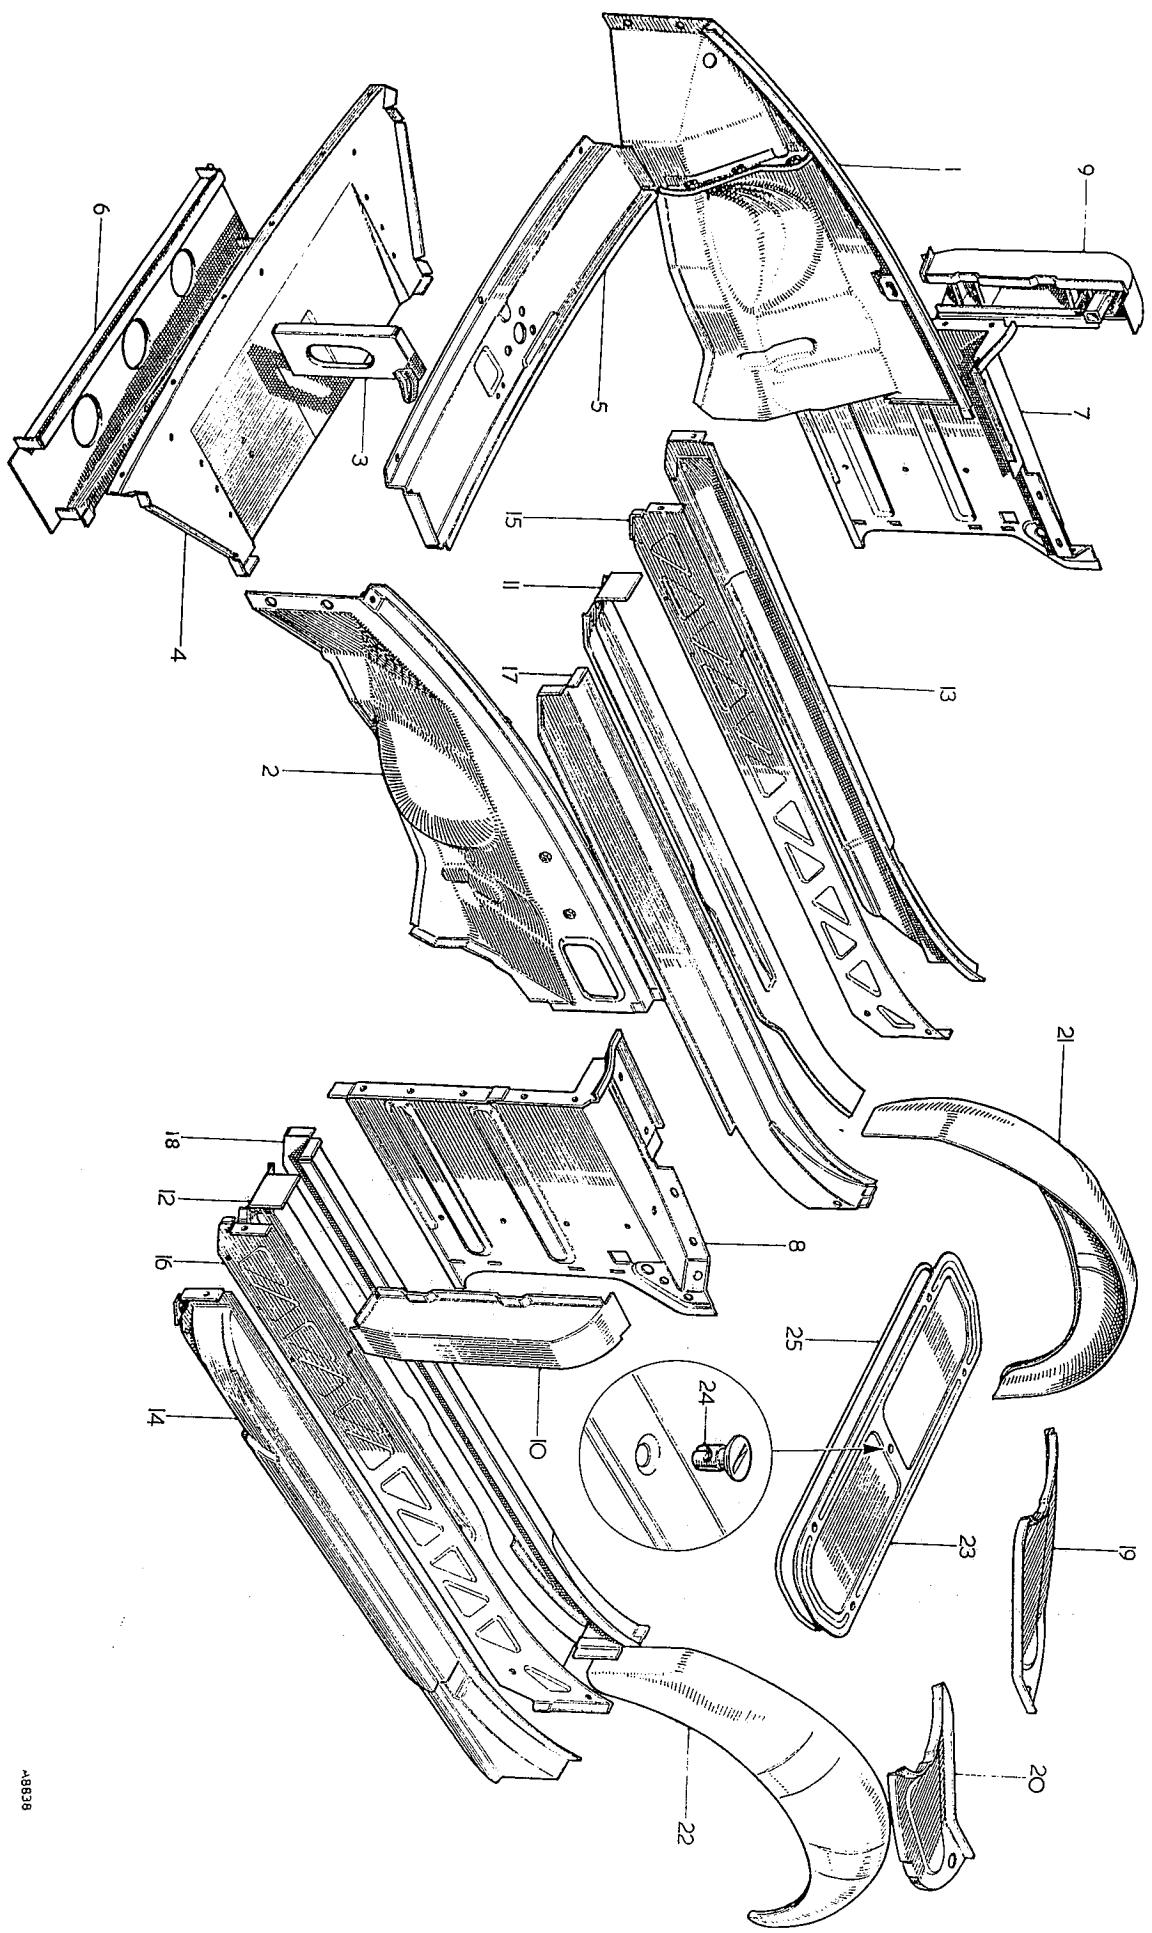

To face page R.3

A8838

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	New Part Number	Change Point	
1	Body Shell—continued					
2	Underframe assembly	NSP		1		
2	Wheel arch assembly—RH	HZA420		1	1	
2	Wheel arch assembly—LH	HZA421		2	1	
3	Bracket—reinforcement—bonnet lock platform	HZA461		3	1	
4	Panel—radiator duct assembly	HZA465		4	1	
5	Platform assembly—bonnet locking	HZA388		5	1	
6	Channel support—radiator duct	HZA171		6	1	
7	Panel—dash side assembly RH	HZA403		7	1	
8	Panel—dash side assembly LH	HZA404		8	1	
9	Panel—'A' post assembly RH	HZA442		9	1	
10	Panel—'A' post assembly LH	HZA443		10	1	
11	Side-member assembly—bottom RH	HZA482		11	1	
12	Side-member assembly—bottom LH	HZA483		12	1	
13	Panel assembly—sill outer RH	HZA496		13	1	
14	Panel assembly—sill outer LH	HZA497		14	1	
15	Panel—sill closing RH	HZA188		15	1	
16	Panel—sill closing LH	HZA189		16	1	
17	Side-member—inner RH	HZA236		17	1	
18	Side-member—inner LH	HZA237		18	1	
19	Panel—trunk floor outer RH	HZA160		19	1	
20	Panel—trunk floor outer LH	HZA161		20	1	
21	Panel—wheel arch rear outer RH	HZA138		21	1	
22	Panel—wheel arch rear outer LH	HZA139		22	1	
23	Panel—battery access	AHH6716		23	1	
24	Fastener—Dzus	AHH6845		24	5	
25	Rubber sealing—battery access panel	AHH6352		25	1	
26						

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101			MODIFICATIONS	REMARKS
		Part Number	Illus. No.	Qty per Veh.	New Part Number	
BONNET FITTINGS						
1	Cable and knob—bonnet pull control	AHH6426	1	1		
2	Stay—bonnet	AHH6325	2	1		
3	Washer—spring—stay to bonnet	AJD7782	3	1		
4	Washer—plain—stay to bonnet	PVZ105	4	1		
5	Clip—bonnet stay	AHH5460	5	1		
6	Screw—clip to bonnet	PTZ1004	6	2		
7	Seal—bonnet—rear	AHH6548	7	1		
8	Grille—air intake	AHH6102	8	1		
9	Push-on fix—grille to scuttle panel	BHA4082	9	5		
10	Buffer—side—bonnet (rubber)	AHH6238	10	4		
11	Screw—buffer to wing channel	PWZ0306	11	8		
12	Washer—spring—screw	LWZ208	12	8		
13	Nut—screw	FNZ108	13	8		
14	Pad assembly—sound deadening—front—bonnet top	AHH6761	14	1		
15	Pad assembly—sound deadening—rear—bonnet top	AHH6762	15	1		

SERVICE PARTS LIST

PLATE RB

THE MGB

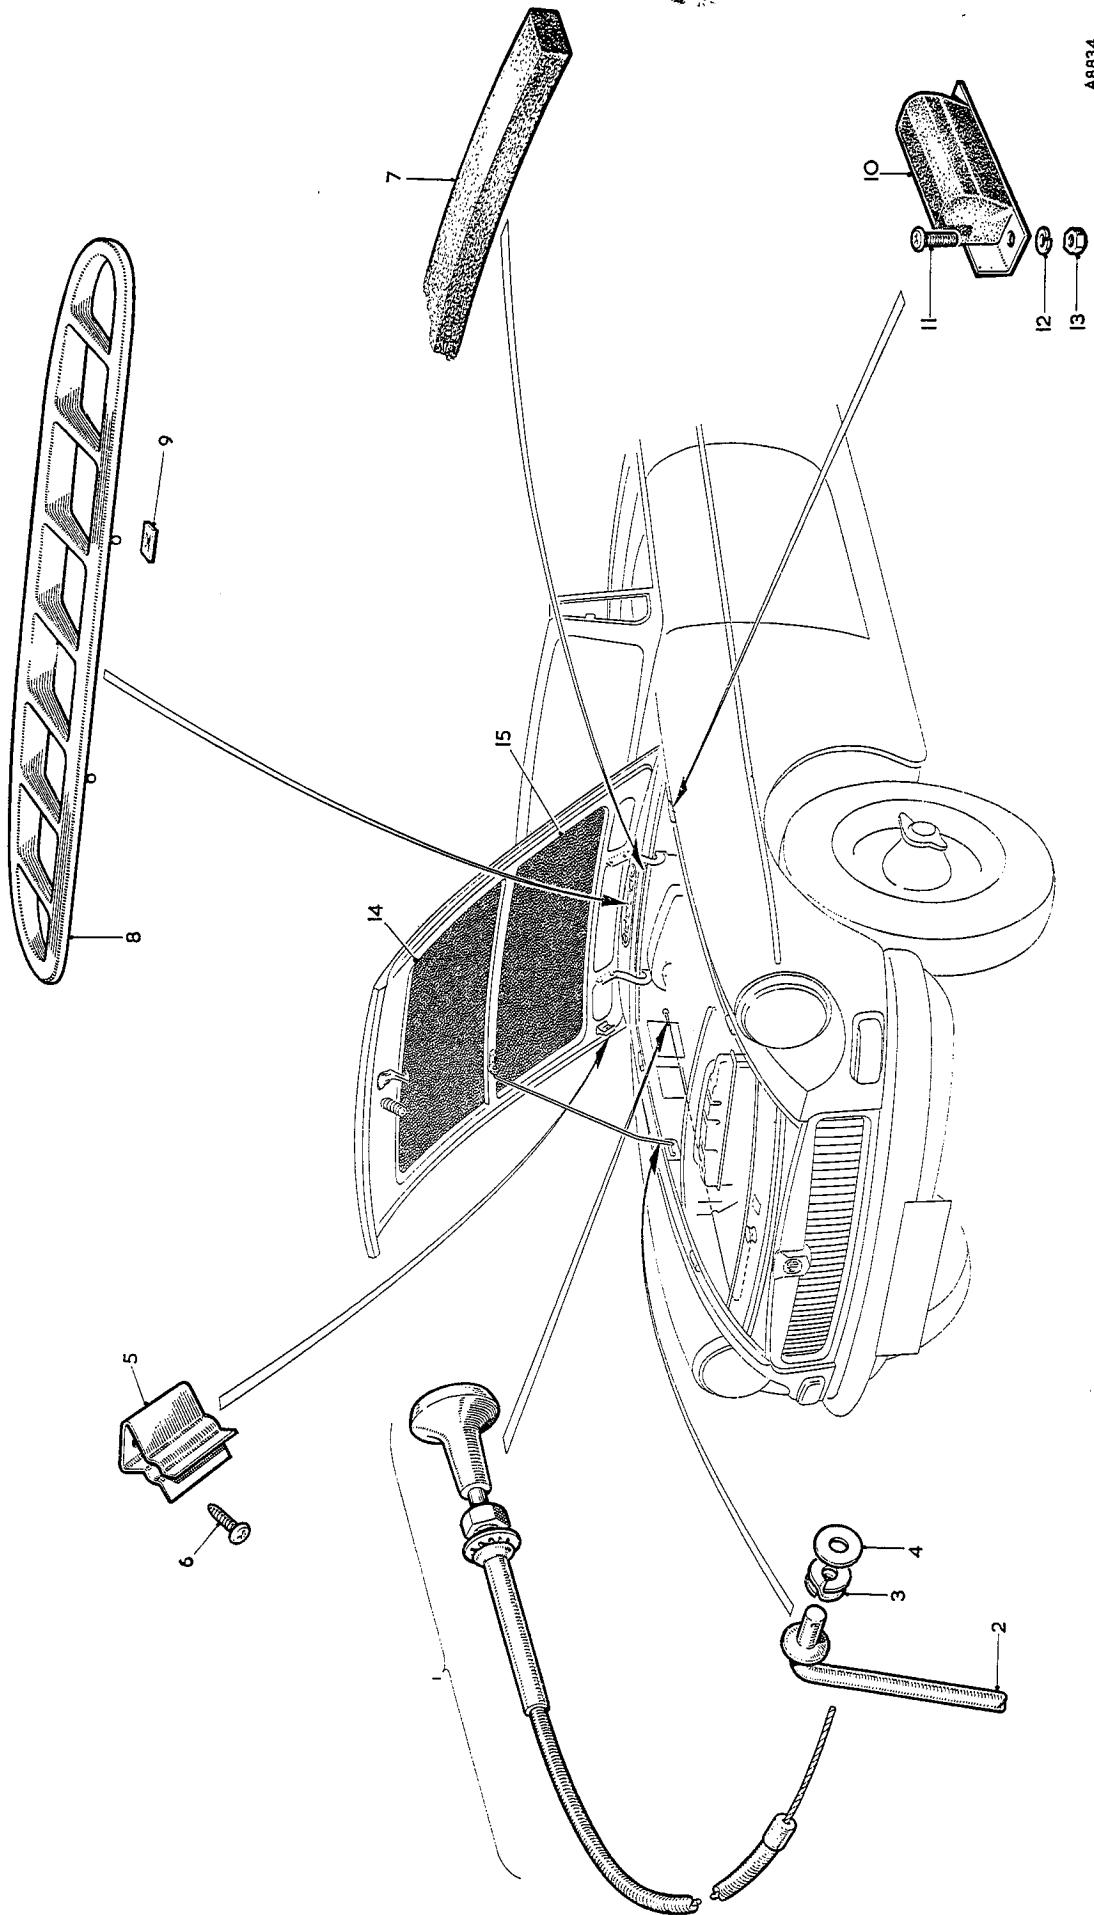


To face page R.4

SERVICE PARTS LIST

PLATE RC

THE -MGB

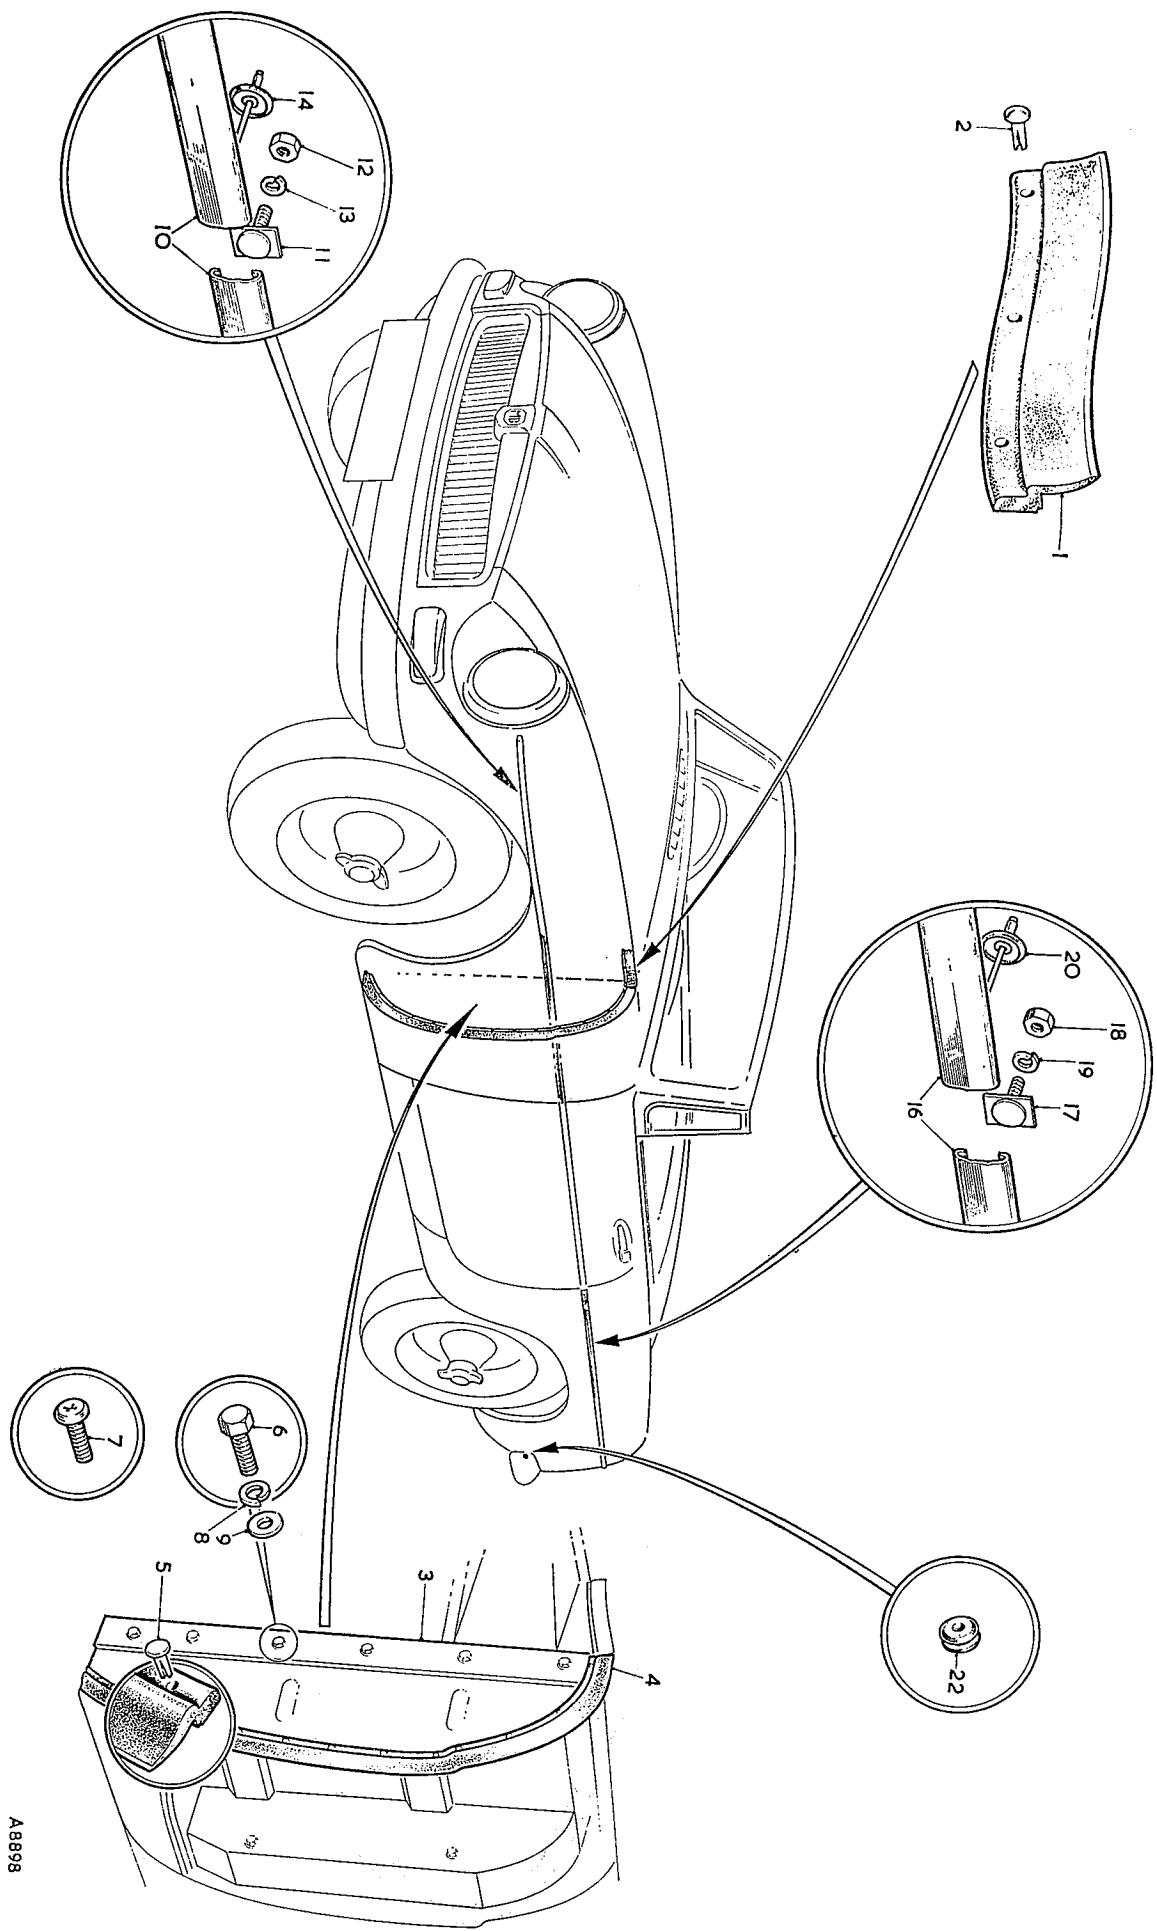

To face page R.5

A8898

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	MODIFICATIONS			REMARKS
		Commencing (C) GHN3/101	Part Number	New Part Number	
1	WINGS				
2	Seal—RH front splash plate extension (rubber)	AHH6245	1	1	
2	Seal—LH front splash plate extension (rubber)	AHH6246	1	1	
3	Rivet—seal to body	BRP006	2	6	
4	Panel assembly—baffle—front wing RH	AHH6718	1		
5	Panel assembly—baffle—front wing LH	AHH6719	3		
6	Seal—baffle—front wing RH	AHH6241	1	1	
7	Seal—baffle—front wing LH	AHH6242	4	1	
8	Rivet—seal to baffle	BRP006	5	28	
9	Screw—panel to body	H2S0405	6	12	
10	Screw—panel to body	PM0410	7	2	
11	Washer—spring	LWZ204	8	14	
12	Washer—plain	PWZ204	9	14	
13	Moulding—front wing—RH	AHH6103	1		
14	Moulding—front wing—LH	AHH6104	10	1	
15	Plate—stud—moulding	AHH6380	11	2	
16	Nut—stud plate	FNZ103	12	2	
17	Washer—spring	LWZ203	13	2	
18	Clip—moulding	AHH6361	14	16	
19	Rivet—clip	DMP0721	15	16	
20	Moulding—rear wing—RH	AHH6107	1		
21	Moulding—rear wing—LH	AHH6103	16	1	
22	Plate—stud—moulding	AHH6380	17	2	
23	Nut—stud plate	FNZ103	18	2	
24	Washer—spring	LWZ203	19	2	
25	Clip—moulding	AHH6361	20	14	
26	Rivet—clip	DMP0721	21	14	
27	Grommet—blanking—rear wing outer filter panel	RTN204	22	2	

SERVICE PARTS LIST

THE MGB

Item No.

MODIFICATIONS

DESCRIPTION

(C) GHN3/101

REMARKS


BOOT LID FITTINGS

	Part Number	Commencing Illus. No.	Qty. per Veh.	New Part Number	Change Point	
1 Push-button assembly—boot lid lock	AHH6179	1	1			
2 Key	ANKA646	1	2			
3 Nut—lock	ADA5698	2	1			
4 Washer—seating—push-button assembly	AHH6180	3	1			
5 Latch assembly—boot lid lock	AHH6181	4	1			
6 Screw—latch to boot lid	PWZ0808	5	4			
7 Washer—plain—screw	PWZ108	6	4			
8 Washer—spring—screw	LWZ208	7	4			
9 Stay—boot lid	AHH6326	8	1			
10 Washer—spring—stay	AJD7722	9	1			
11 Washer—plain	PWZ104	10	2			
12 Clip—spring—stay	128978	11	1			
13 Screw—clip to boot lid	PTZ603	12	2			
14 Rubber—sealing—boot lid	AHH6385	13	1			
15 Motif—'MGB'	AHH8079	14	1			
16 Push-on fix—motif to boot lid	BHA4082	15	2			
17 Surround—boot lid badge	AHH5261	16	1			
18 Letter 'M'	ADH2475	17	1			
19 Letter 'G'	ADH2476	18	1			
20 Nut—Spire—surround and badge	PFS103	19	13			

SERVICE PARTS LIST

PLATE RD

THE MGB

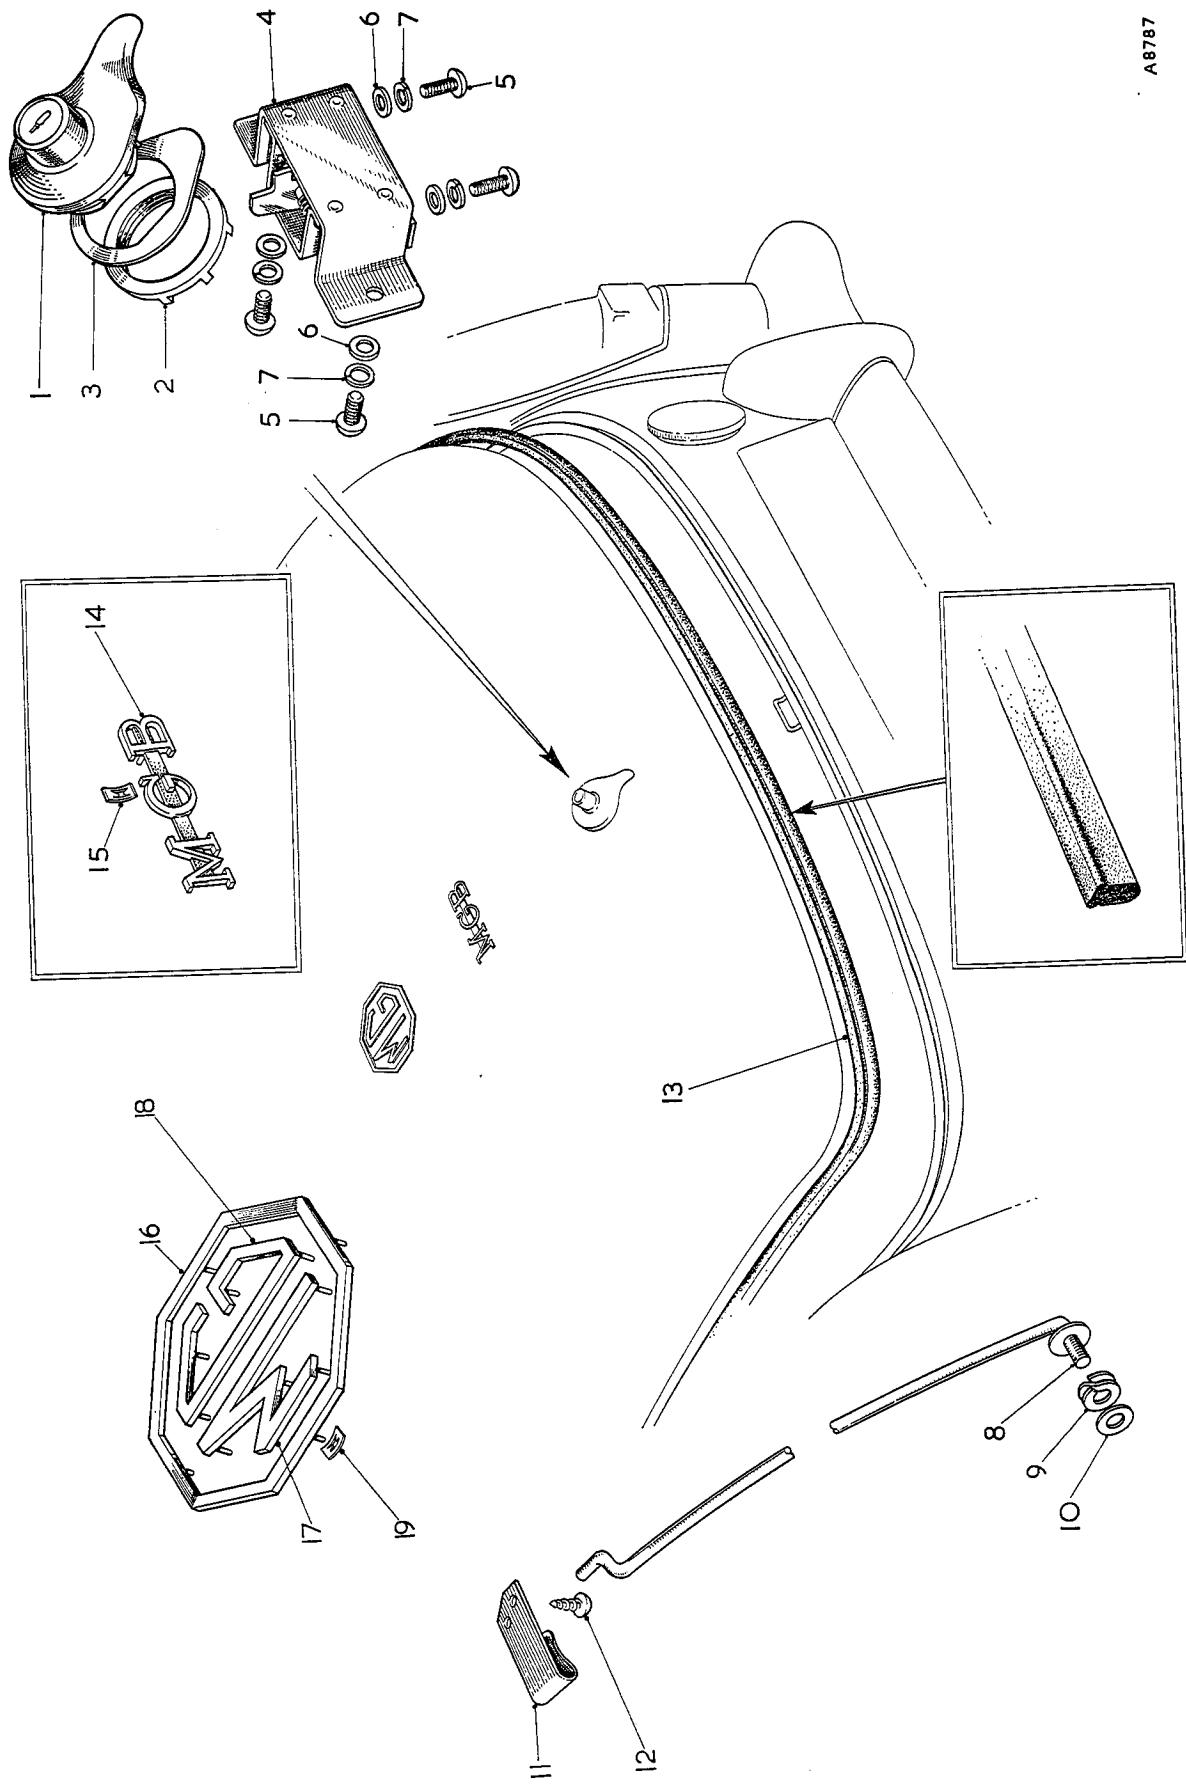


To face page R.6

SERVICE PARTS LIST

PLATE RE

THE MGB

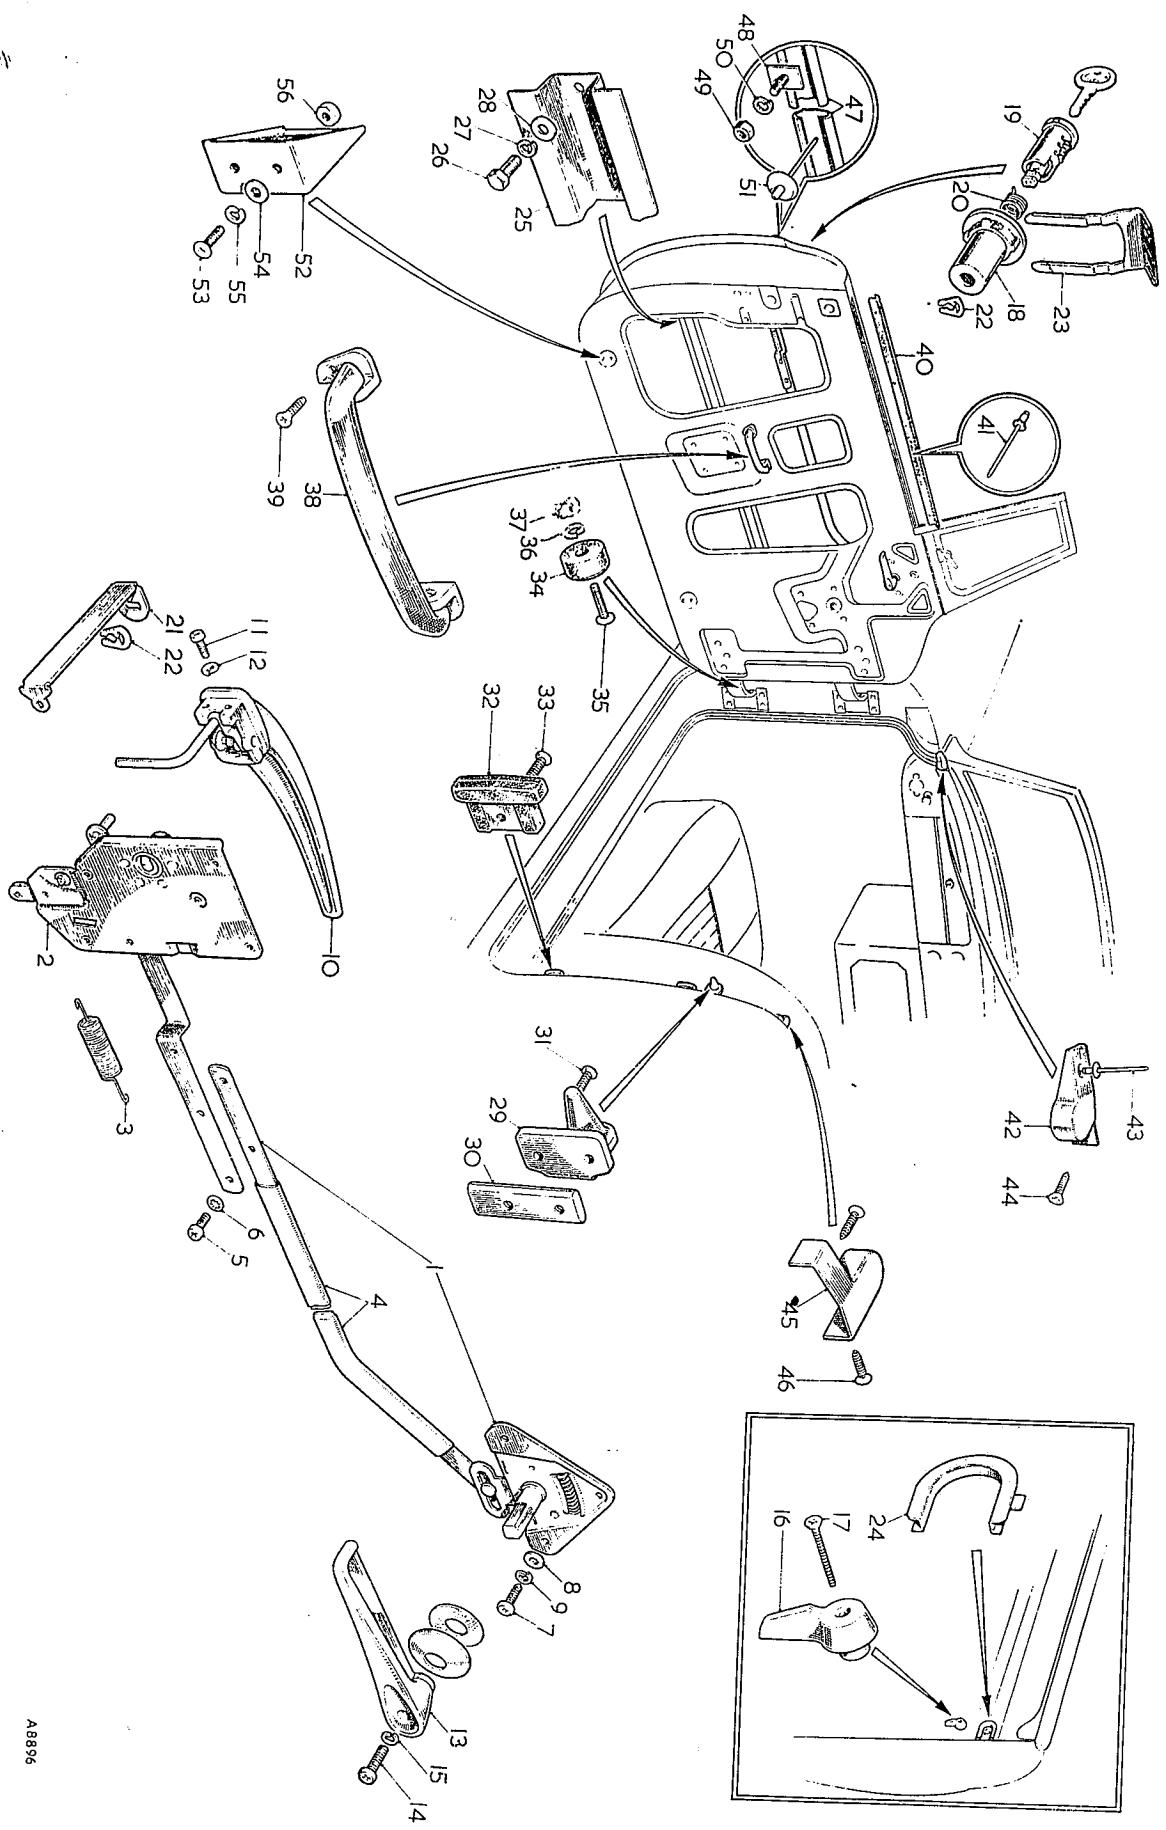

To face page R.7

A8896

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS		REMARKS
			Part Number	Illus. No.	
DOOR FITTINGS					
1	Mechanism assembly—remote control RH	AHH6666	1	1	
2	Mechanism assembly—remote control LH	AHH6667	1	1	
3	Lock assembly—slam—RH	AHH6668	2	1	
4	Lock assembly—slam—LH	AHH6669	3	2	
5	Spring—tension—remote control link	AHH6670	4	2	
6	Sleeve—anti-rattle—remote control link	AHH6671	5	4	
7	Screw—remote control to slam lock assembly	PMZ0306	6	4	
8	Washer—shakeproof	LWZ403	7	14	
9	Screw—lock and remote control to door	PMZ0308	8	14	
10	Washer—plain	PWZ203	9	14	
11	Washer—spring	LWZ203	9	14	
12	Handle—door RH	AHH6661	10	1	
13	Handle—door LH	AHH6662	11	4	
14	Screw—handle to door	PMF0306	12	4	
15	Washer—spring	LWZ203	14	4	
16	Handle—remote control	AD5668	13	2	
17	Screw—handle to remote control	ADH834	14	4	
18	Washer—spring	LWZ203	15	4	
19	Knob—inside locking	AHH6513	16	1	
20	Screw—knob to lock	RMF0212	17	1	
21	Housing—private lock	AHH6672	18	2	
22	Locking device	AHH6673	19	2	
23	Key	ANK4646	20	4	
24	Spring—self centre	AHH6674	20	2	
25	Link—operating	AHH6675	21	2	
26	Clip—Anderton	AHH6676	22	4	
27	Clip—retaining—private lock	AHH6249	23	2	
28	Finisher—lock	AHH6547	24	2	
29	Stiffener—longitudinal	HZA383	25	2	
30	Screw—stiffener to door	HZS0404	26	4	
31	Washer—spring	LWZ204	27	4	
32	Washer—plain	PWZ104	28	4	
33	Striker	AHH1684	29	2	
34	Plate—lapping	HZA368	30	2	
35	Screw—striker to body	CMZ0412	31	4	
36	Buffer assembly—door	AHH6273	32	4	
37	Screw—buffer to door	RMZ0808	33	4	
38	Buffer—rubber	AHH6745	34	4	
39	Screw—buffer to door hinge	PMZ0208	35	4	
40	Washer—spring	LWZ202	36	4	
41	Nut—screw	CNZ102	37	4	

]
Passenger door

Always quote key number

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	MODIFICATIONS			REMARKS
		Commencing (C) GHN8/101	Part Number	Illus. No.	
Door Fittings—continued					
1	Pull assembly—door	ADA5874	38	2	
2	Screw—pull to door	RMZ0808	39	4	
3	Seal—waist—door—RH (rubber)	AHH6848	40	1	
4	Seal—waist—door—LH (rubber)	AHH6849	41	1	
5	Rivet—seal to outer door panel	DMP0819	41	8	
6	Finisher—door seal—front—RH	AHH6870	42	1	
7	Finisher—door seal—front—LH	AHH6871	42	1	
8	Rivet—pop	DAP0820	43	2	
9	Screw—finisher	CTP604	44	2	
10	Finisher—door seal—rear—RH	AHH6823	44	1	
11	Finisher—door seal—rear—LH	AHH6824	45	1	
12	Screw—finisher	CTP604	46	4	
13	Moulding—side—door—RH	AHH6105	47	1	
14	Moulding—side—door—LH	AHH6106	47	1	
15	Plate—stud—moulding	AHH6860	48	2	
16	Nut—stud plate	FNZ103	49	2	
17	Washer—spring	LWZ203	50	2	
18	Clip—moulding	AHH6361	51	12	
19	Rivet—clip	DMP0721	52	12	

SERVICE PARTS LIST

PLATE RE

THE MGB

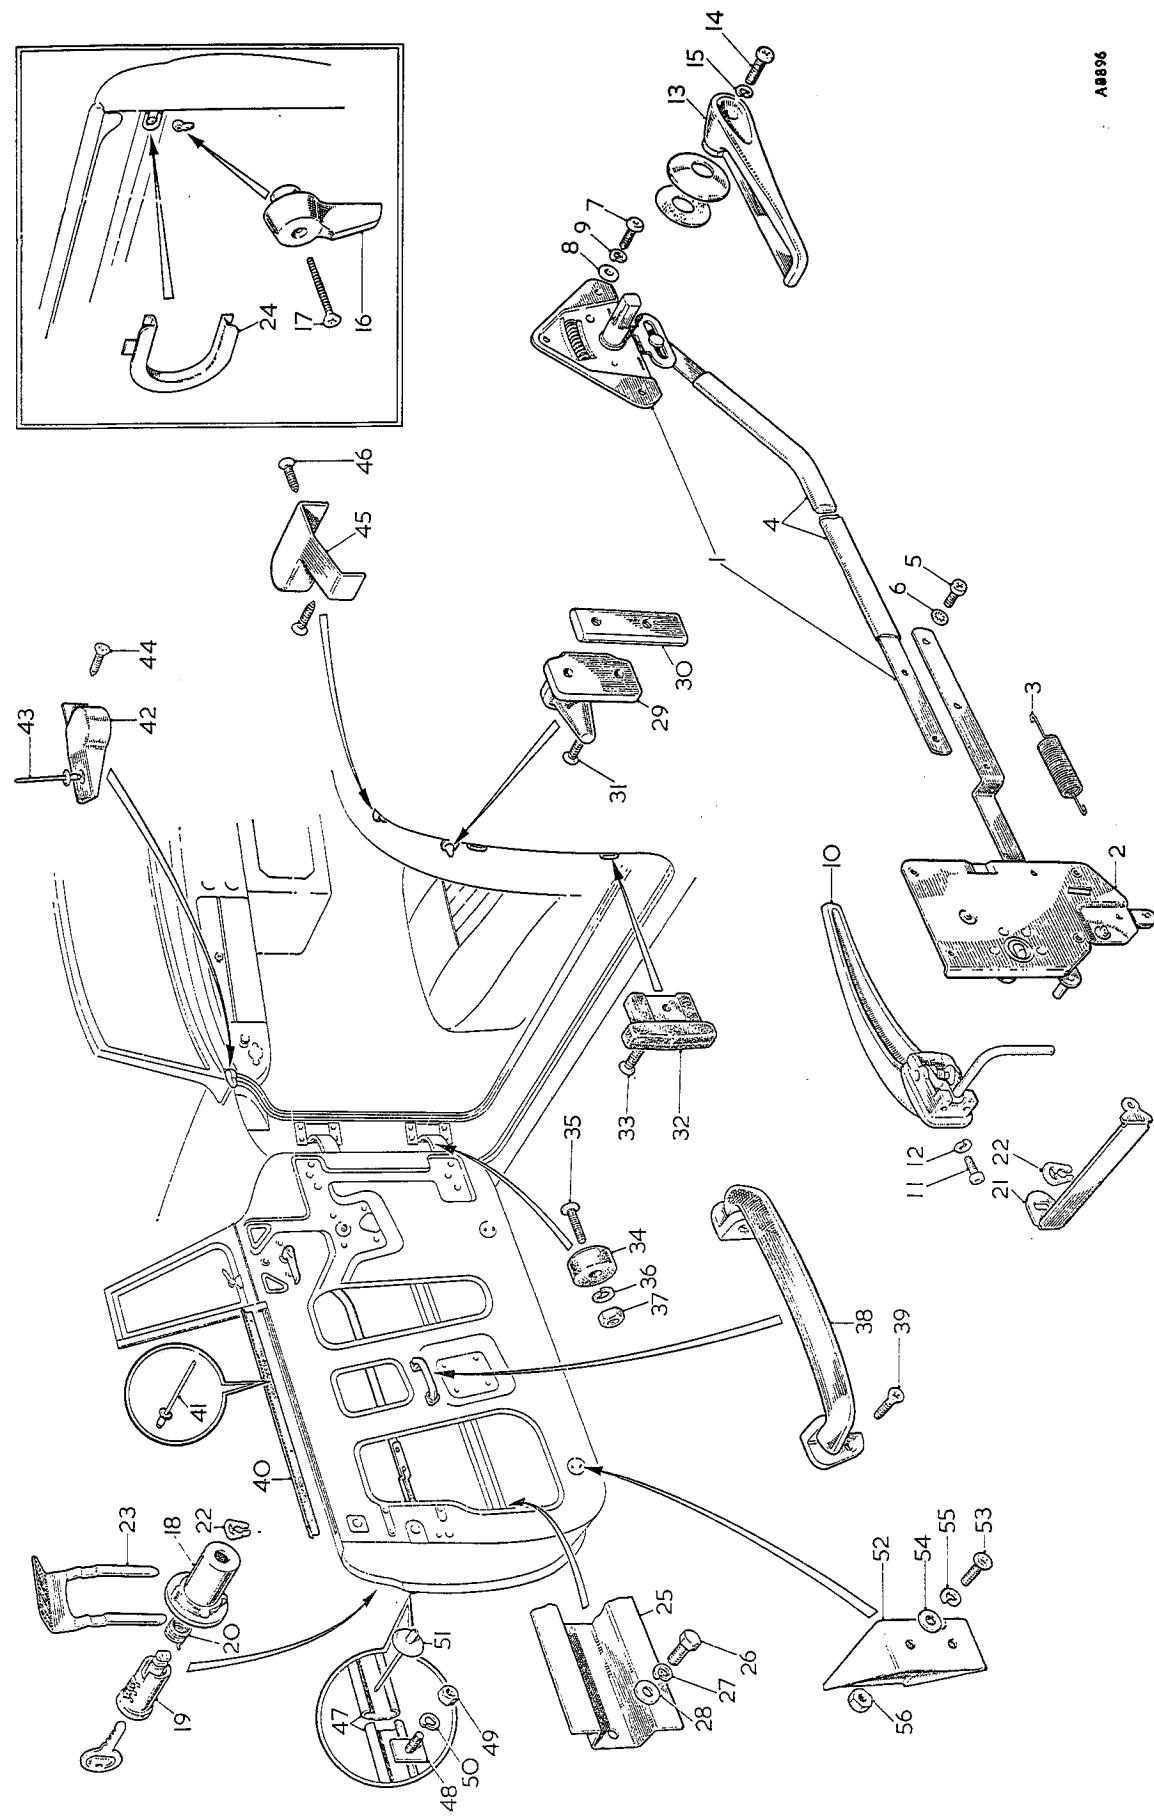


A9896

To face page R.8

SERVICE PARTS LIST

PLATE RF

THE MGB

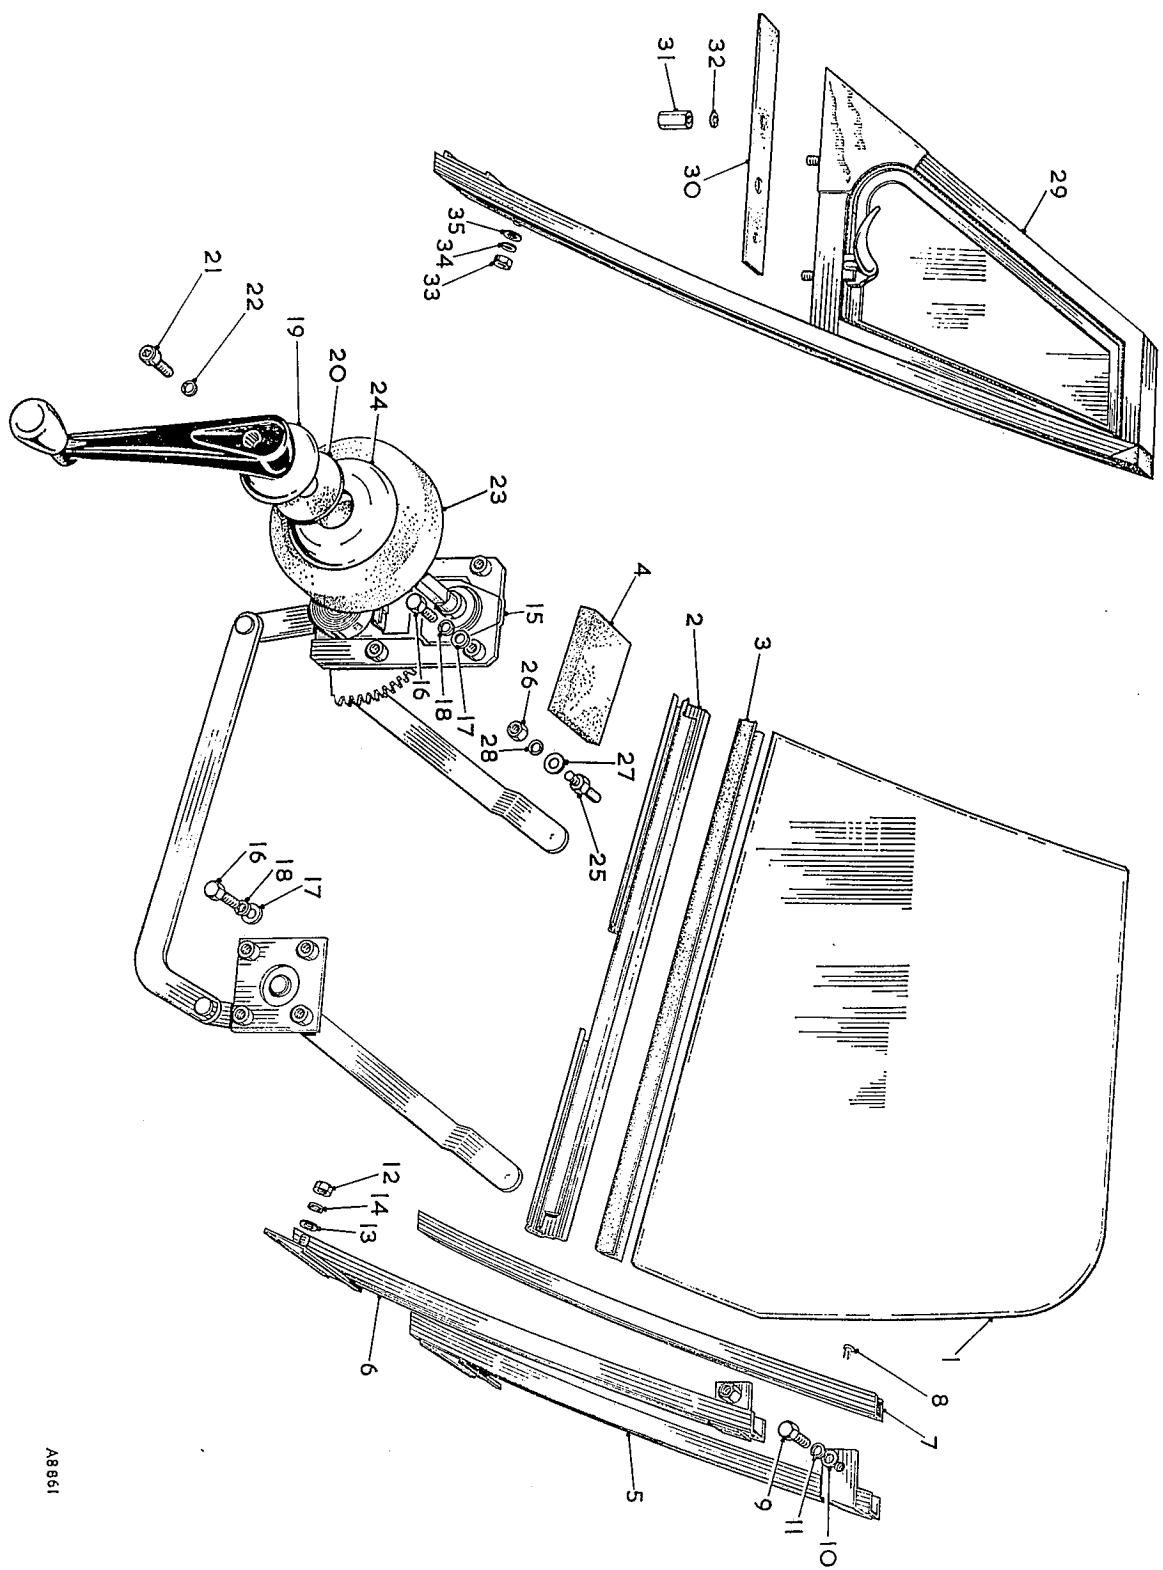

To face page R.9

A8861

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
DOOR WINDOWS AND WINDOW MECHANISM					
Glass—door—RH	AHH6380	1	1	1	
Glass—door—LH	AHH6381	1	1	1	
2 Channel—lower	AHH6346	2	2	2	
3 Channel—glazing	AHH6347	3	2	2	
4 Buffer—glass stop bracket	AHH6334	4	2	2	
5 Channel assembly—rear RH	AHH6303	5	1	1	
6 Channel assembly—rear LH	AHH6304	6	1	1	
7 Flexible run—rear—glass	AHH6350	7	2	2	
8 Rivet—glass run to channel	BRP104	8	8	8	
9 Screw—top fixing channel to door	PMZ0408	9	2	2	
10 Washer—plain	PWZ104	10	2	2	
11 Washer—plain	LWZ204	11	2	2	
12 Washer—spring	FNZ104	12	2	2	
13 Nut—lower fixing channel to door	PWZ104	13	2	2	
14 Washer—plain	PWZ204	14	2	2	
15 Washer—spring	HZA360	15	1	1	
16 Regulator assembly—window—RH	HZA361	16	16	16	
17 Screw—regulator to door	HZS0404	16	16	16	
18 Washer—plain	PWZ204	17	16	16	
19 Washer—spring	LWZ204	18	16	16	
20 Washer—spring	ADA867	19	2	2	
21 Handle—regulator	ADA5669	20	4	4	
Washer—handle (fibre)	ADH834	21	2	2	
Screw—handle to regulator	LWZ203	22	2	2	
23 Washer—spring	AHH6387	23	2	2	
24 Pad—regulator handle	AHH6386	24	2	2	
25 Escutcheon—regulator handle	AHH6289	25	2	2	
26 Stop—window regulator arm	FNZ205	26	2	2	
27 Nut—stop to door	PWZ205	27	2	2	
28 Washer—plain (large)	LWZ205	28	2	2	
29 Washer—spring	AHH6341	29	1	1	
30 Washer—spring	AHH6342	30	1	1	
31 Ventilator assembly—RH	AHH6342	31	4	4	
32 Ventilator assembly—LH	AHH6342	32	4	4	
33 Washer—seating—RH ventilator	AHH6344	33	2	2	
34 Washer—seating—LH ventilator	AHH6345	34	2	2	
35 Nut—ventilator to door	LWZ204	35	2	2	
36 Washer—spring	FNZ104	36	2	2	
37 Nut—lower fixing ventilator to door	LWZ204	37	2	2	
38 Washer—spring	PWZ104	38	2	2	
39 Washer—plain	PWZ104	39	2	2	

SERVICE PARTS LIST


THE "MGB"

Item No.	DESCRIPTION (C) GHNB/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty per Veh.	
WINDSCREEN					
1	Windscreens assembly	AHH6096	1	1	
2	Pillar—RH	AHH6384	2	1	
3	Pillar—LH	AHH6385	3	1	
4	Rail—top	AHH6316	4	1	
5	Rail—bottom	AHH6517	5	1	
6	Screw—pillar to top rail	CMP0308	6	4	
7	Screw—pillar to top rail	CMP0310	7	2	
8	Rod—windscreens—centre	AHH6411	8	1	
9	Nut—centre rod to top bracket	AHH6405	9	1	
10	Nut—centre rod	FNP108	10	1	
11	Washer—plain	PWP208	11	1	
12	Washer—spring	LWZ208	12	1	
13	Glass—windscreens—laminated	AHH6388	13	1	
14	Rubber—glazing	AHH6412	14	1	
15	Reinforcement—bottom RH corner	AHH6394	15	1	
16	Screw—bottom reinforcement to pillar	AHH6395	16	1	
17	Screw—bottom rail to reinforcement	CMZ0807	17	4	
18	Seal—windscreens to body	AHH63945	18	4	
19	Seal—windscreens to pillar—RH	AHH6402	19	1	
20	Seal—windscreens to pillar—LH	AHH6403	20	1	
21	Retainer—seal—pillar	AHH6404	21	1	
22	Rivet—seal retainer to pillar	AHH6409	22	2	
23	Fastener—dot	AHH6536	23	8	
24	Rivet—pop—fastener to pillar	7HH878	24	2	
25	Rivet—pop—fastener to pillar	DMP3040	25	2	
26	Washer—upper foot to body	AHH6393	26	4	
27	Washer—pillar foot to body	ZCS0610	27	2	
28	Washer—spring—screw	LWZ206	28	4	
29	Packing—outer—windscreens pillar	AHH6413	29	2	
30	Packing—inner—windscreens pillar	AHH6414	30	2	
31	Screw—packing to body	PPZ0316	31	2	
32	Washer—plain—screw	PWP208	32	2	
33	Washer—spring—screw	LWZ203	33	2	
34	Packing—centre fixing—windscreens	AHH6392	34	1	
35	Screw—centre fixing—windscreens to body	HPS0406	35	2	
36	Washer—plain—screw	PWP104	36	2	
37	Washer—spring—screw	LWZ204	37	2	
38	Grommet—seal—pillar foot—RH	AHH6407	38	1	
39	Grommet—seal—pillar foot—LH	AHH6408	39	1	

SERVICE PARTS LIST

PLATE RG

THE MGB

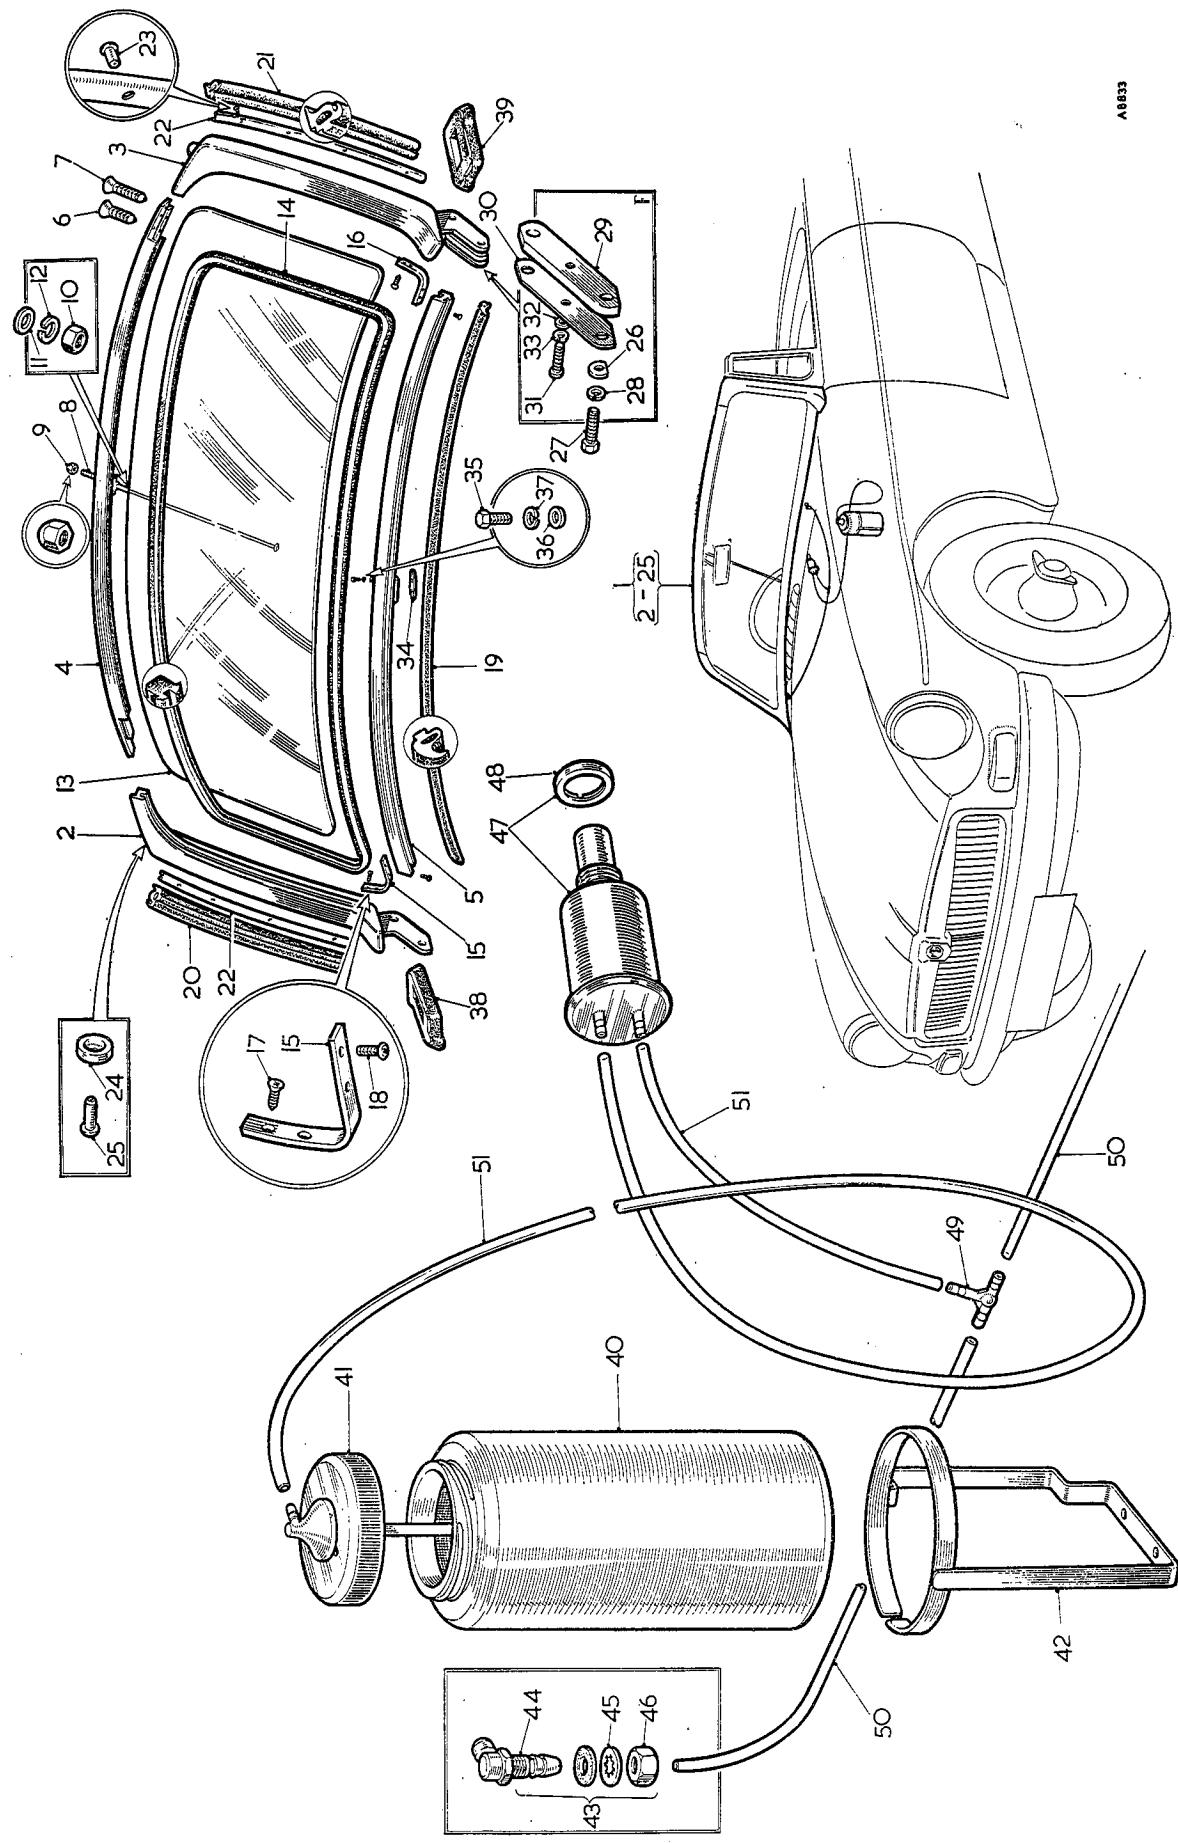


To face page R.10

SERVICE PARTS LIST

PLATE RG

THE MGB

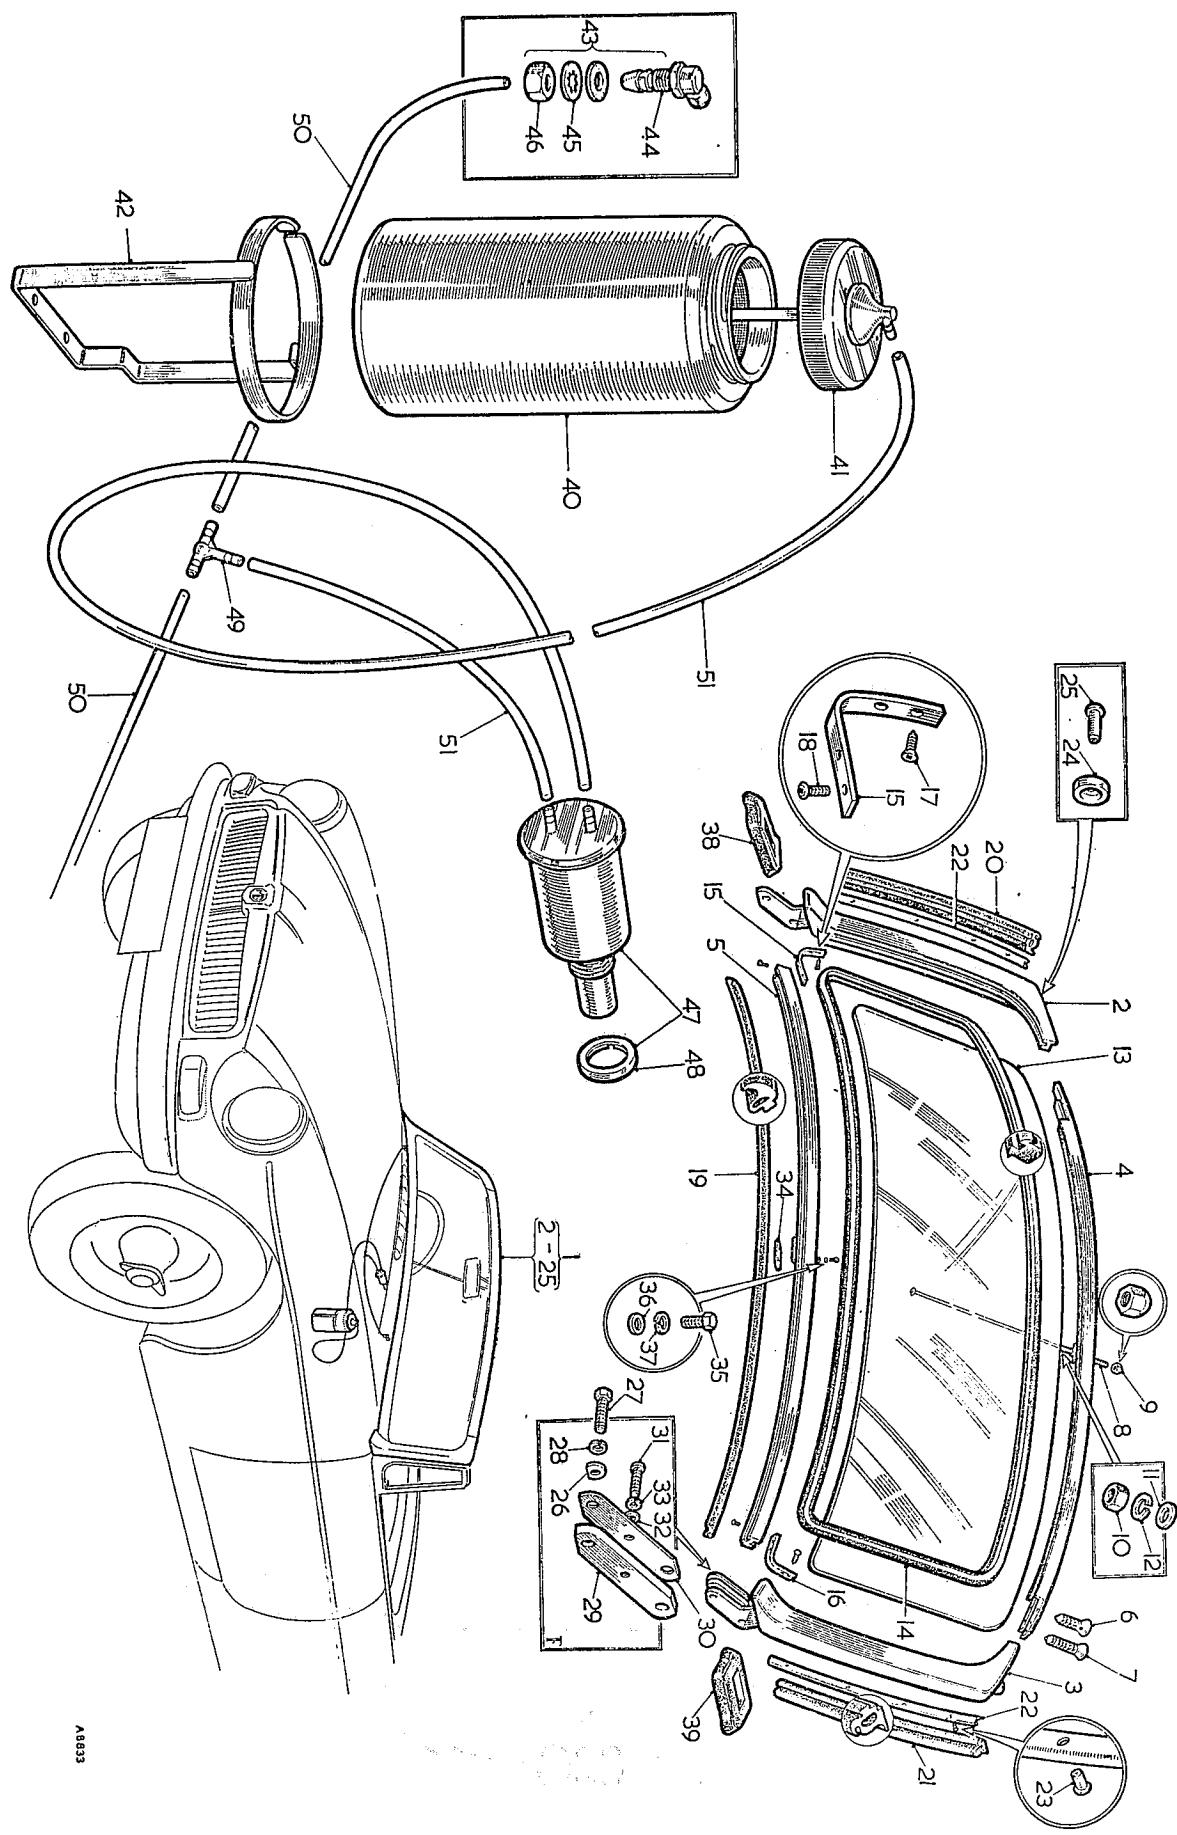

To face page R.11

A8833

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Oty. per Veh.	
WINDSCREEN WASHER						
1	Container				1	
2	Cap assembly				1	
3	Bracket				2	
4	Jet assembly				2	
5	Jet				2	
6	Washer (brass)				2	
7	Washer (rubber)				2	
8	Nut				1	
9	Control assembly				1	
10	Nut—control				1	
11	Washer—lock				1	
12	Nut—retaining				1	
13	Connection—3-way				A/R	
14	Tubing					
Only available in multiples of feet						

SERVICE PARTS LIST

THE MG

Item No.

DESCRIPTION

(C) GHN3/101

MODIFICATIONS

REMARKS

1

Cover assembly and header rail complete—Red

AHH6835

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1


1

</

SERVICE PARTS LIST

PLATE RH

THE MGB

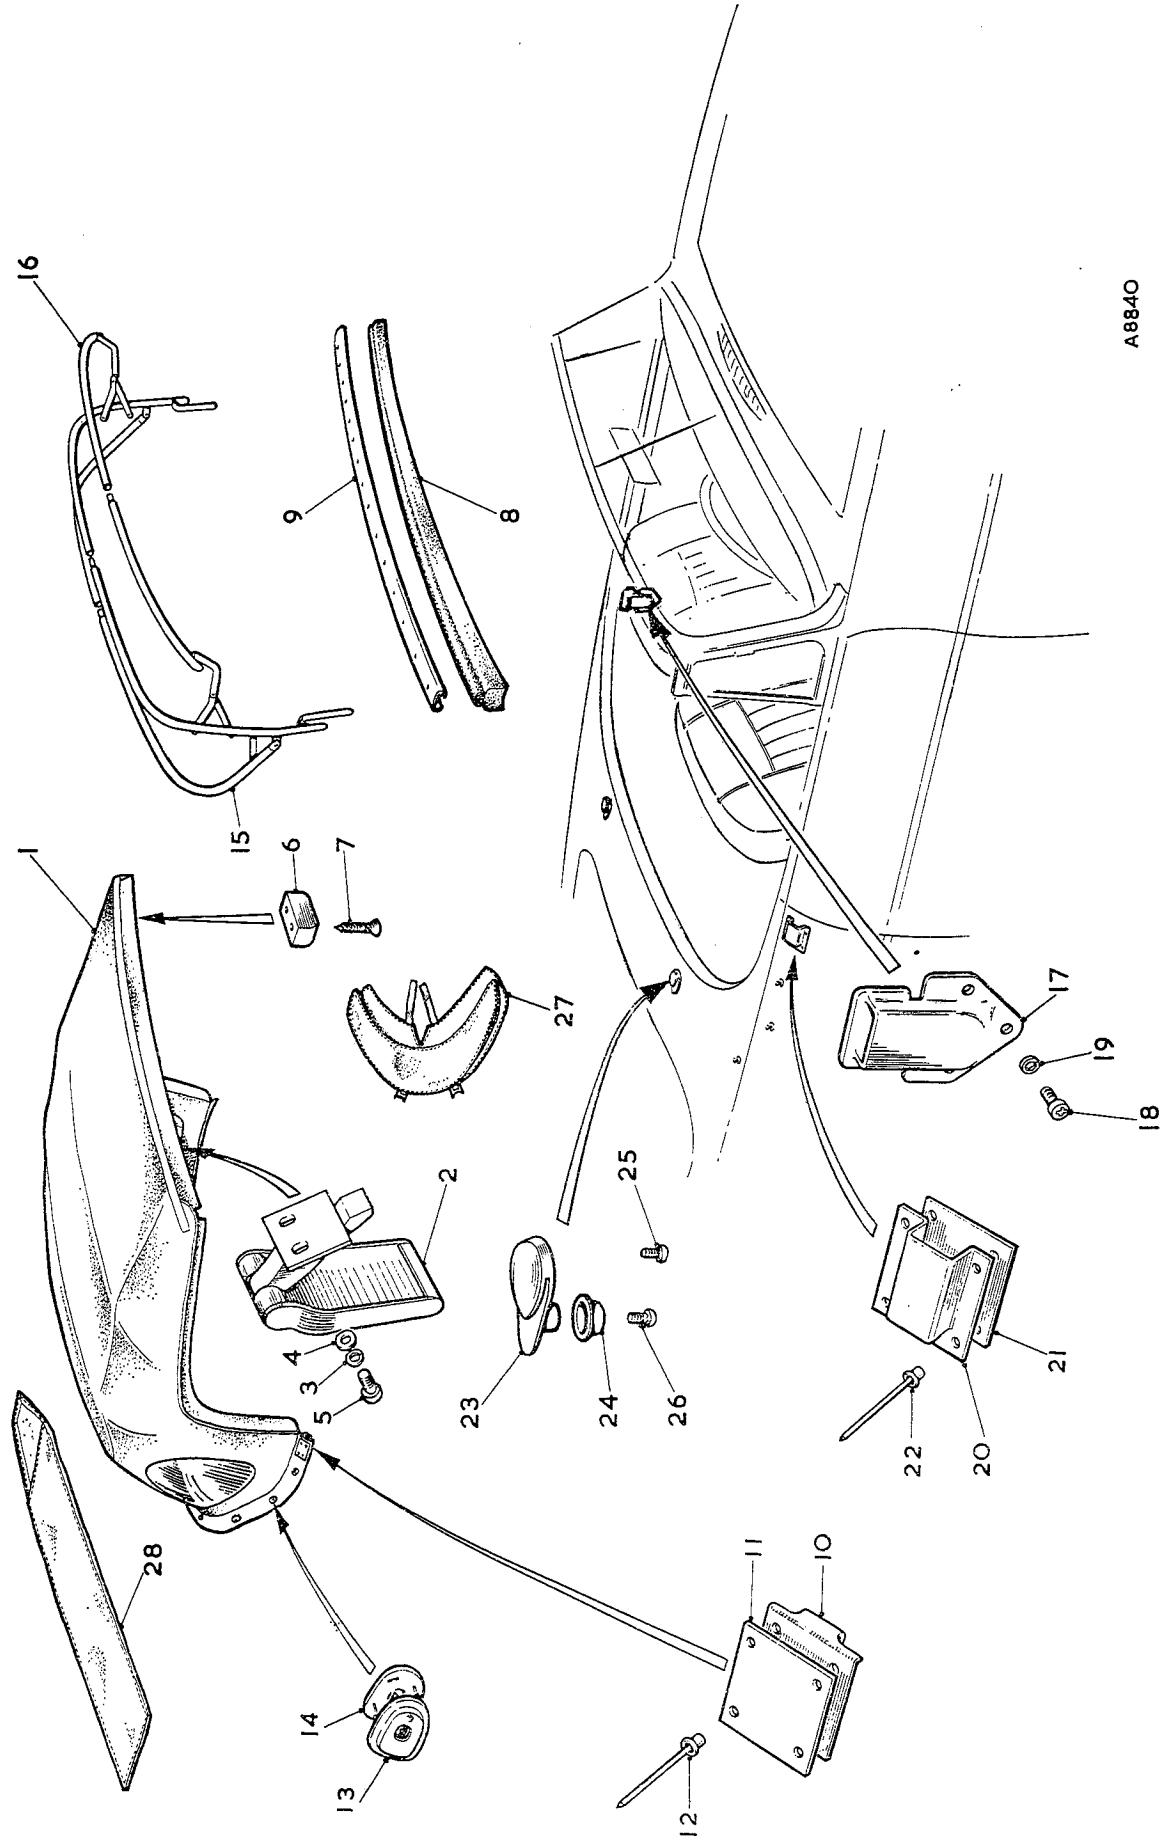


A8840

To face page R.12

SERVICE PARTS LIST

PLATE RJ

THE MGB

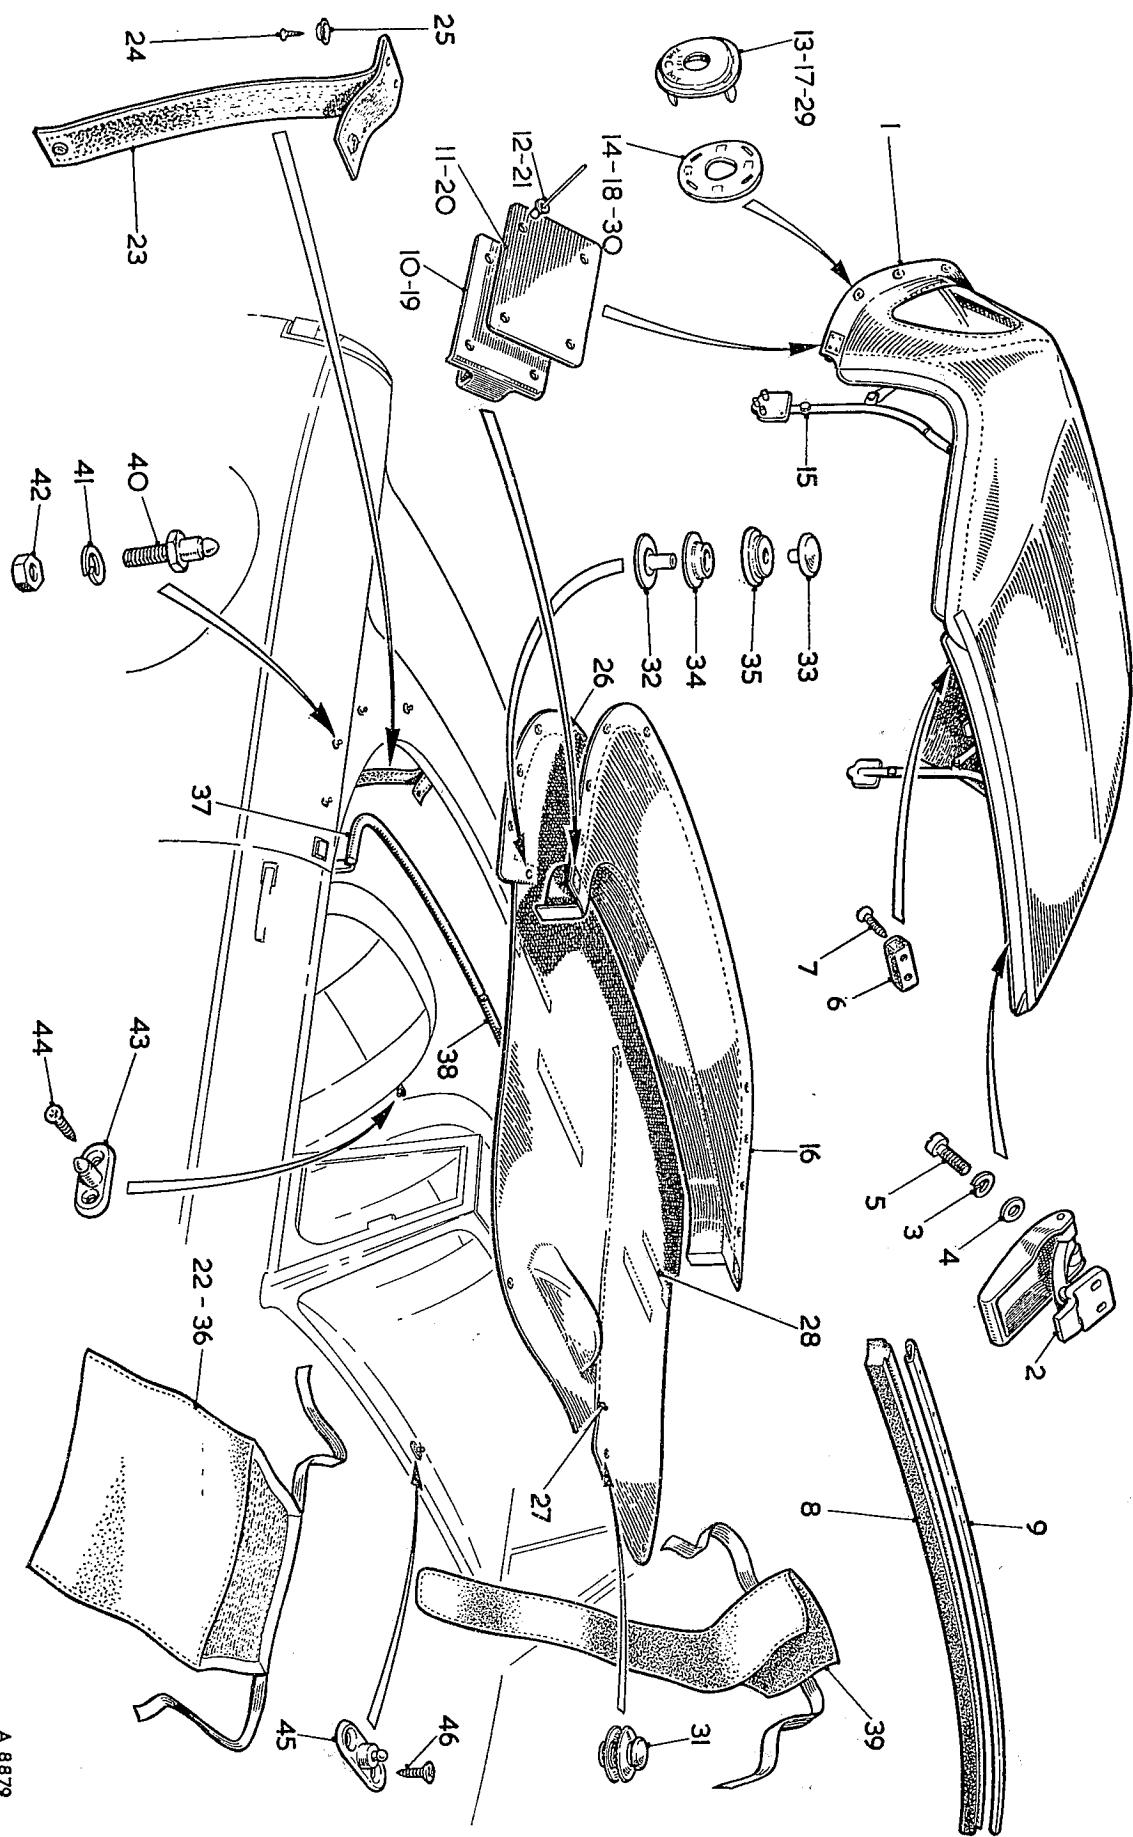

To face page R.13

A 8879

SERVICE PARTS LIST

THE MGB

2
8
93H

DESCRIPTION

FOLDING HOOD (Optional Extra)

	Commencing (C) GHN3/101	MODIFICATIONS		
	Part Number	Illus. No.	New Part Number	Change Point
1				
2	Hood assembly—folding—Red		AHH6838	1
3	Hood assembly—folding—Grey		AHH6839	1
4	Hood assembly—folding—Blue		AHH6840	1
5	Cover assembly—hood—Red		AKE4607	1
6	Cover assembly—hood—Grey		AKE4608	1
7	Cover assembly—hood—Blue		AKE4609	1
8	Fastener assembly—hood		AHH6262	2
9	Washer—spring		LWZ203	3
10	Washer—plain		PWZ203	4
11	Screw—fastener		PMZ0308	4
12	Pad—header rail		AHH6439	5
13	Screw—pad to header rail		CTZ604	6
14	Seal—header rail		AHH6438	7
15	Retainer—seal		AHH6440	8
16	Tongue—hood fastener		AHH6384	9
17	Back-plate—hood fastener		AHH6382	10
18	Rivet—tongue and back-plate to hood		DMP0829	11
19	Socket—fastener		LFS107	12
20	Washer—fastener socket		LFS100	13
21	Frame assembly—hood		AHH6385	14
22	Cover—compartment—folding hood—Red		AHH6924	16
23	Cover—compartment—folding hood—Blue		AHH6925	1
24	Cover—compartment—folding hood—Black		AHH6926	1
25	Socket—fastener		LFS107	17
26	Washer—fastener socket		LFS100	18
27	Tongue—fastener		AHH6384	19
28	Back-plate—tongue fastener		AHH6382	20
29	Rivet—tongue and back-plate to cover		DMP0829	21
30	Bag—hood cover—stowage		AHH6760	22
31	Strap—securing stowed hood		AHH6381	23
32	Screw—strap to boot reinforcement		RTZ804	24
33	Washer—cup		FWZ208	25
34	Rail assembly—support—tonneau—RH			1
35	Rail assembly—support—tonneau—LH			1
	Bag—tonneau rail—stowage			1

[See page R.14]

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

**TONNEAU COVER
(Optional Extra)**

RHD

LHD

Commencing
(C) GHN8/101

Part
Number

Illus.
No.

New
Part
Number

REMARKS


			MODIFICATIONS	
			Change Point	
1	Cover assembly—tonneau—Black	AHH6823	26.	1
2	Cover assembly—tonneau—Red	AHH6824	1	
3	Cover assembly—tonneau—Blue	AHH6825	1	
4	Cover assembly—tonneau—Black	AHH6826	1	
5	Cover assembly—tonneau—Blue	AHH6827	1	
6	Fastener—zip—42" (106-68 cm.)—Black	AHH6910	.27.	1
7	Fastener—zip—42" (106-68 cm.)—Red	AHH6911	1	
8	Fastener—zip—42" (106-68 cm.)—Blue	AHH6912	1	
9	Fastener—zip—12" (30-48 cm.)—Black	AHH6914	.28.	2
10	Fastener—zip—12" (30-48 cm.)—Red	AHH6913	2	
11	Fastener—zip—12" (30-48 cm.)—Blue	AHH6915	2	
12	Fastener—fastener	LFS107	.29.	12
13	Washer—fastener socket	LFS100	.30.	12
14	Socket—fastener	TPS100	.31.	3
15	Socket	TH9866	.32.	8
16	Button	TH9864	.33.	8
17	Stud	TH9867	.34.	8
18	Eyelet	TH9868	.35.	8
19	Bag—tonneau cover—stowage	AHH6760	.36.	1
20	Rail assembly—support—tonneau—RH	AHH6529	37.	1
21	Rail assembly—support—tonneau—LH	AHH6530	38.	1
22	Bag—tonneau rail—stowage	AHH6757	.39.	1
23	Peg—fastener	LFP1006	.40.	8
24	Peg—fastener	LWZZ208	.41.	8
25	Washer—spring	FNZ108	.42.	8
26	Nut—peg to body	LEP116	.43.	4
27	Peg—base plate fastener—tonneau cover	RIP604	.44.	8
28	Screw—peg to heelboard	TEP116	.45.	3
29	Peg—base plate fastener—tonneau cover	RIP608	.46.	6
30	Screw—peg to shroud panel			

[Also used with folding hood]

SERVICE PARTS LIST

PLATE RJ

THE MGB

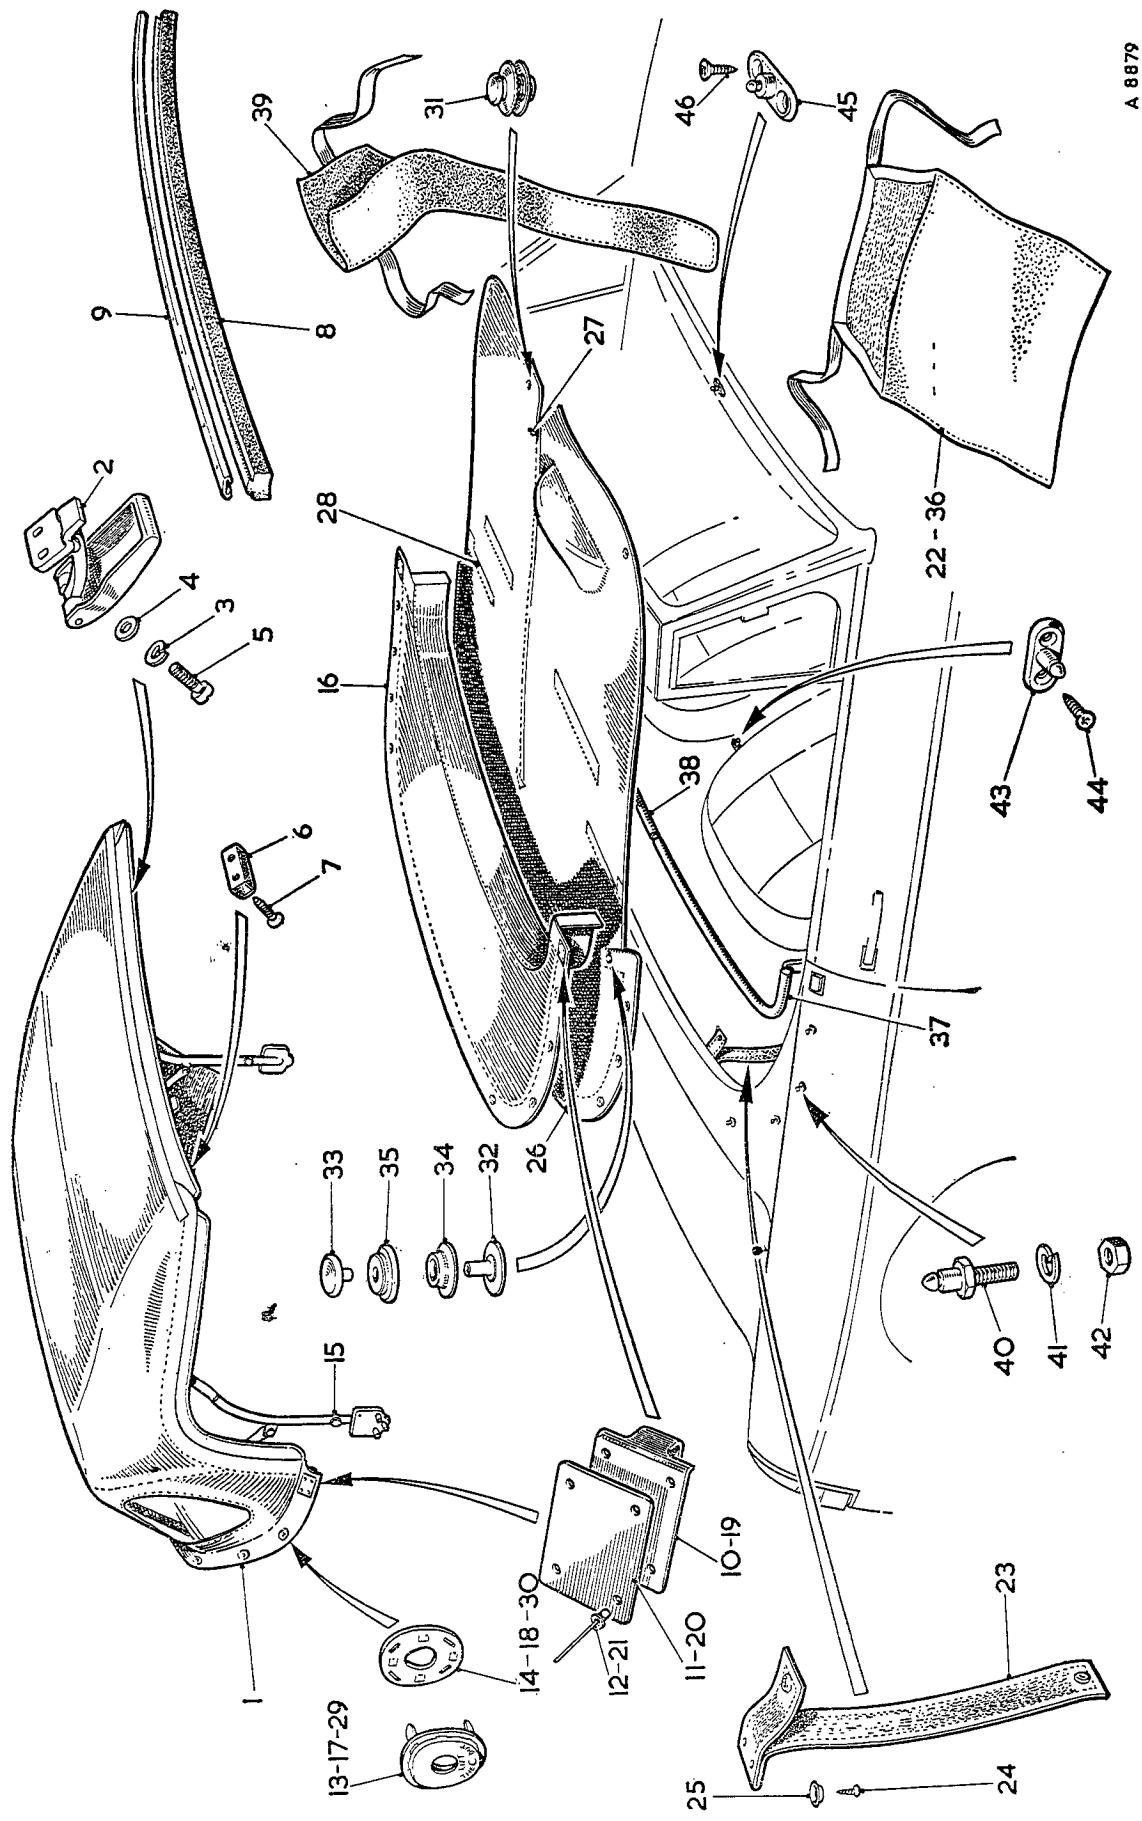


To face page R.14

SERVICE PARTS LIST

PLATE RK

THE MGB

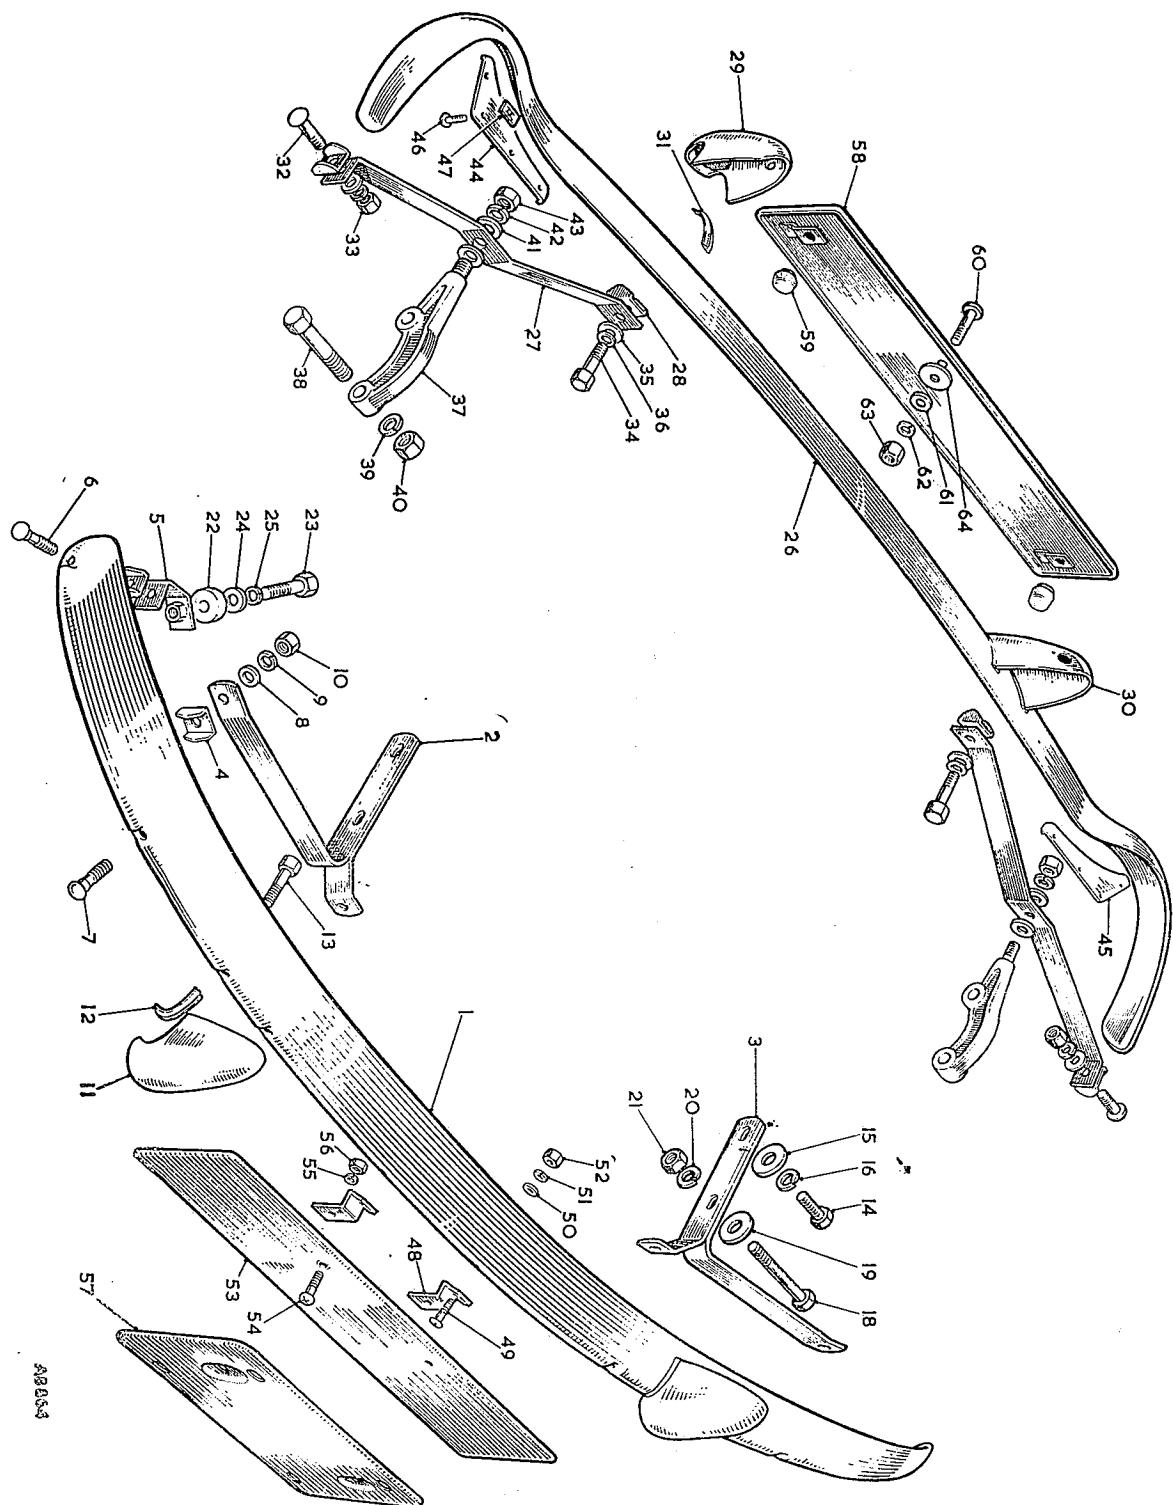

To face page R.15

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
BUMPERS AND NUMBER-PLATES						
1	Bumper assembly—front	NSP		1		
2	Bar—bumper	AHH6208		1	1	
3	Spring—bumper bar—RH	AHH6209		2	1	
4	Spring—bumper bar—LH	AHH6210		3	1	
5	Washer—distance	AHH6216		4	6	
6	Bracket—steady	AHH6215		5	2	
7	Bolt—bumper bar to steady bracket	AHH6218		6	4/2	Quantity reduced when over-rider fitted
8	Bolt—bumper bar to spring	AHH6219		7	4	
9	Washer—bolt	AJD7162		8	6	
10	Washer—spring	LWZ206		9	8	
11	Nut—bolts	FNZ106		10	8/6	Quantity reduced when over-rider fitted
12	Over-rider assembly—front	AHH6916	11	2		
13	Moulding—over-rider—4" (10-1 cm.)	37H9781	12	A/R		
14	Bolt—over-rider to bar	HZZ0612	13	2		
15	Screw—bumper bar spring to body	HFZ0710	14	2		
16	Washer—screw	2K6842	15	2		
17	Washer—spring	LWZ307	16	2		
18	Nut—screw	FNZ107	17	2		
19	Bolt—bumper bar spring to body	HEZ0728	18	2		
20	Washer—bolt	2K6842	19	2		
21	Washer—spring	LWZ307	20	2		
22	Nut—bolt	FNZ107	21	2		
23	Pad—steady bracket to body (rubber)	24G629	22	2		
24	Screw—steady bracket to body	HZZ0610	23	2		
25	Washer—screw	AJD7162	24	2		
26	Washer—spring—screw	LWZ206	25	2		
27	Bumper assembly—rear	NSP	1			
28	Bar—bumper	AHH6261	26	1		
29	Spring—bumper bar	AHH6250	27	2		
30	Washer—distance	AHH6216	28	4		
31	Over-rider assembly—RH	AHH6849	29	1		
32	Over-rider assembly—LH	AHH6890	30	1		
33	Moulding—over-rider—4" (10-1 cm.)	37H9781	31	A/R		
34	Bolt—bumper bar to spring	AHH6219	32	2		
35	Nut—bolt	FNZ106	33	2		
36	Bolt—over-rider and bumper bar to spring	HBZ0616	34	2		
37	Washer—bolt	AJD7162	35	4		
38	Washer—spring	LWZ206	36	4		

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHNSg101

Part
Number

Illus.
No.

Qty.
per
Veh.

New
Part
Number

Change
Point

MODIFICATIONS

REMARKS

Bumpers and Number-plates—continued

1	Bracket—bumper mounting	AHH6335	37	2	
2	Bolt—mounting bracket to frame	HEZ0780	38	4	
3	Washer—spring	LWZ307	39	4	
4	Nut—bolt	FNZ107	40	4	
5	Washer—plain—bumper to mounting bracket	PWZ208	41	4	
6	Washer—spring—bumper to mounting bracket	LWZ208	42	2	
7	Nut—bumper bar to mounting bracket	FNZ108	43	2	
8	Filler—bumper to body—RH	AHH6282	44	1	
9	Filler—bumper to body—LH	AHH6283	45	1	
10	Screw—filler to body	PZ208	46	8	
11	Nut—spring—screw	PS206	47	8	
12	Bracket—front number-plate	AHH6217	48	2	
13	Screw—bracket to bumper	PMZ0412	49	2	
14	Washer—plain	PWZ104	50	2	
15	Washer—plain	LWZ304	51	2	
16	Nut—screw	FNZ104	52	2	
17	Number-plate—front	ADG474	53	1	
18	Screw—number-plate to bracket	PMZ0410	54	2	
19	Washer—spring	LWZ204	55	2	
20	Nut—screw	FNZ104	56	2	
21	Support—front number-plate	AHA5211	57	1	
22	Number-plate—rear	AHA5791	58	1	
23	Buffer—rear number-plate	AHA5804	59	2	
24	Screw—number-plate to body	PMZ0412	60	2	
25	Washer—plain	PWZ104	61	2	
26	Washer—spring	LWZ204	62	2	
27	Nut—screw	FNZ104	63	2	
28	Washer—packing—rear number-plate to body	AHH5712	64	4	

LHD

Except North America


North America

Except North America

SERVICE PARTS LIST

PLATE RK

THE MGB

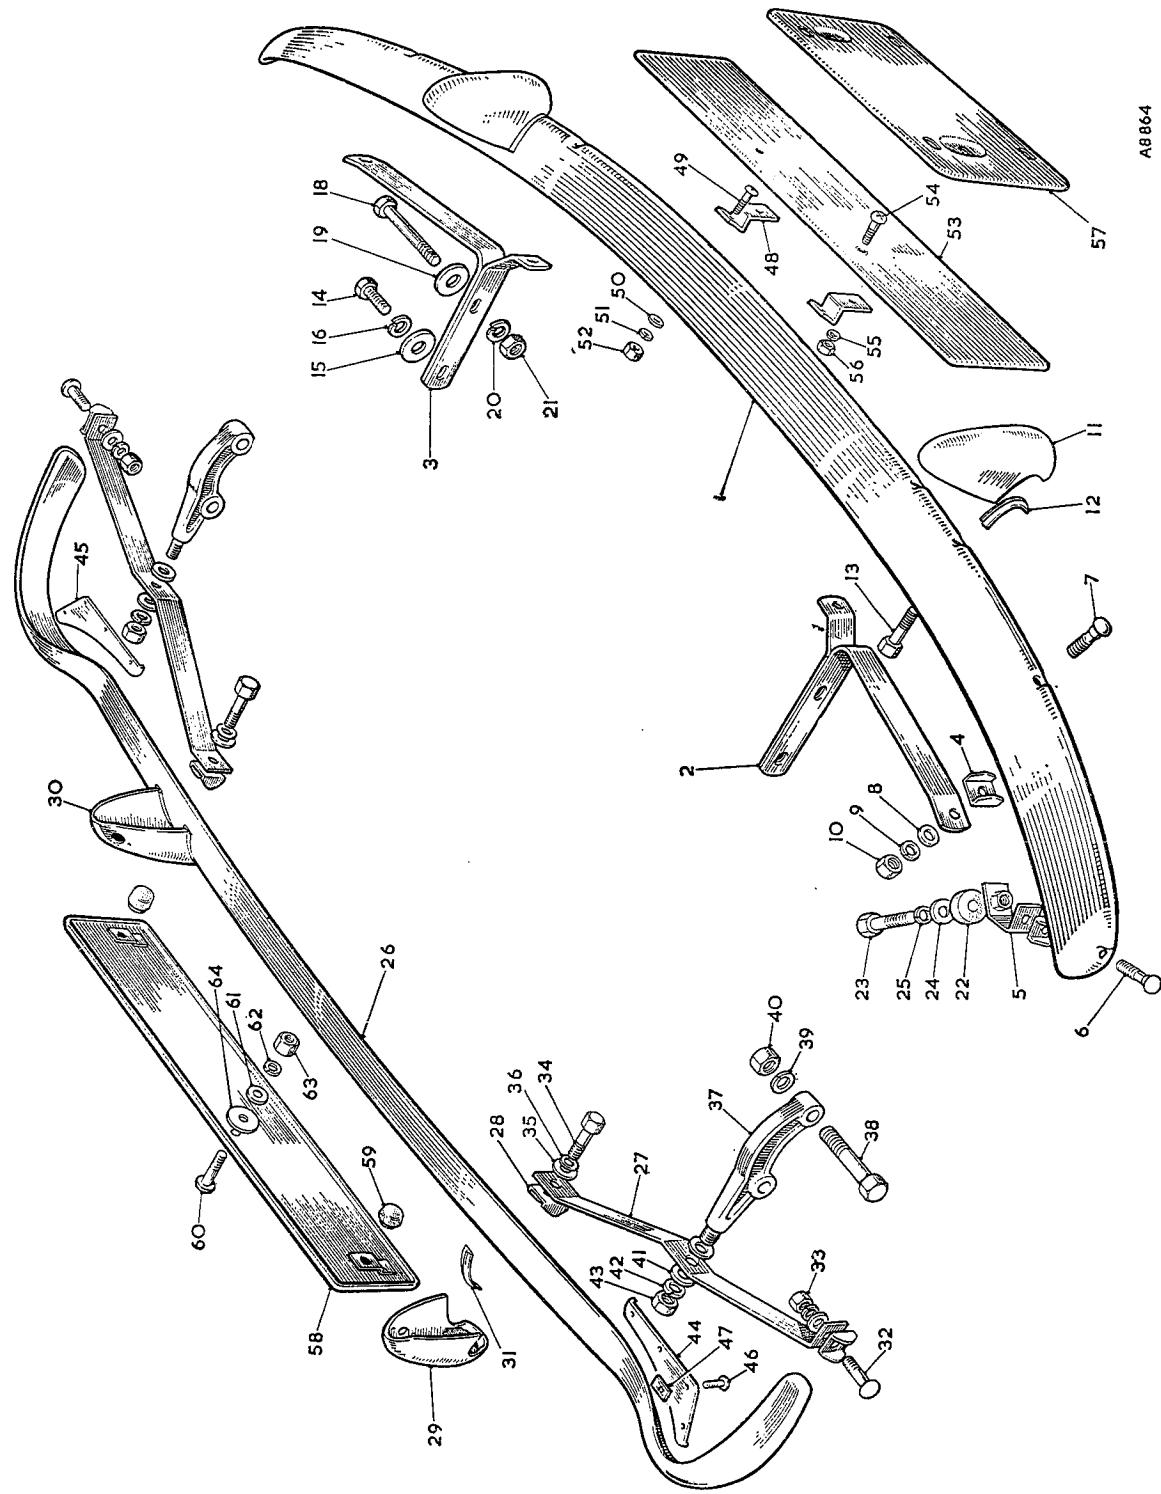


To face page R.16

SERVICE PARTS LIST

PLATE RL

THE MGB

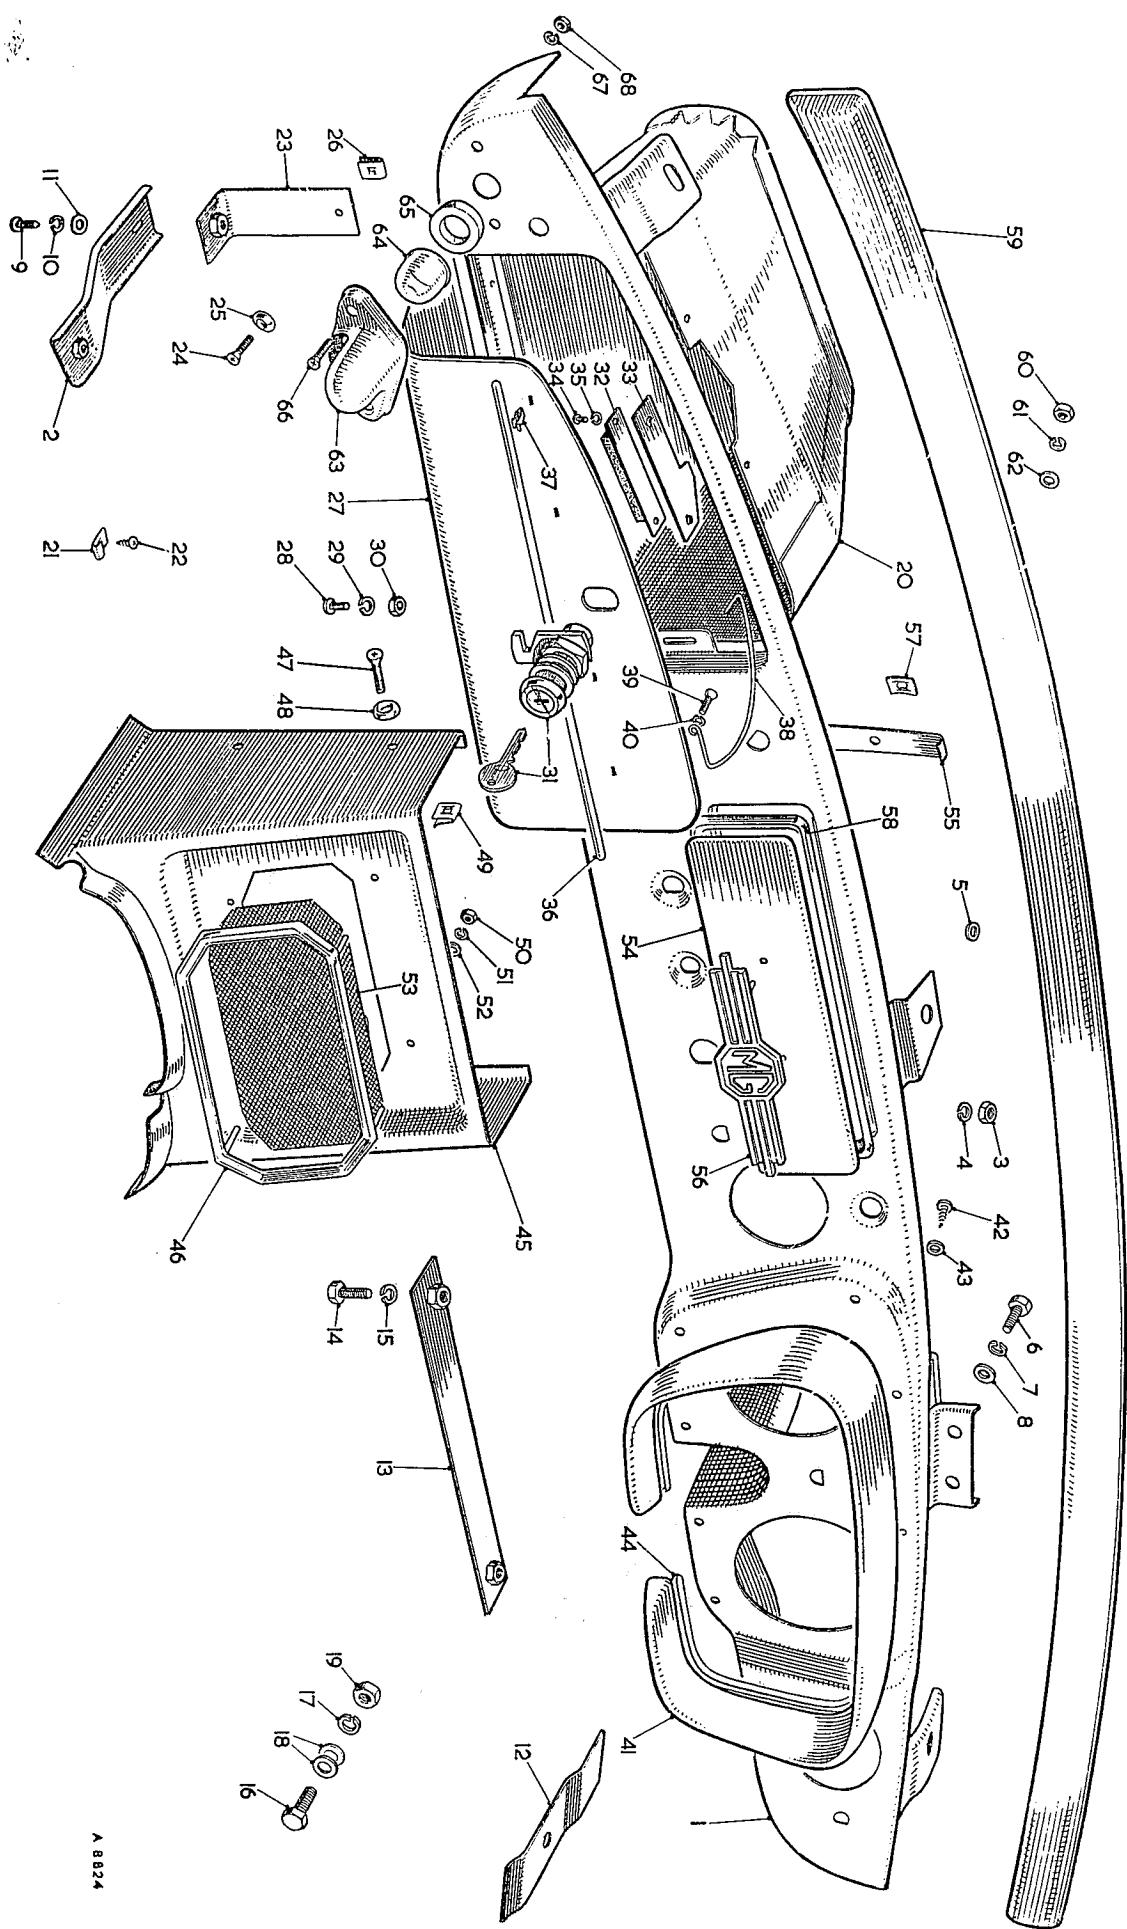

To face page R.17

A 8824

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS		REMARKS
		Part Number	New Part Number	
FASCIA				
1 Panel assembly—fascia	RHD	HZA452	1	
2 Panel assembly—fascia	LHD	HZA453	1	
3 Bracket—steady	RHD	HZA544	2	
4 Bracket—steady	LHD	HZA545	1	
5 Nut—fascia to body		FNZ105	3	
6 Washer—spring		LWZ205	4	
7 Washer—plain		PWZ205	5	
8 Screw—fascia to body		HZS0406	6	
9 Washer—spring		LWZ204	7	
10 Washer—plain		PWZ104	8	
11 Screw—steady bracket to fascia panel and attachment bracket		PMZ0308	9	
12 Washer—spring		LWZ203	10	
13 Washer—plain—attachment bracket to steady bracket		PWZ103	11	
14 Plate—washer—fascia fixing		AHH6293	12	
15 Plate assembly—fascia fixing		AHH6713	13	
16 Screw—fascia to centre reinforcement		HZS0404	14	
17 Washer—spring		LWZ204	15	
18 Screw—steering-column support bracket to cross-tube		HZS0506	16	
19 Washer—spring		LWZ205	17	
20 Washer—plain		PWZ105	18	
21 Nut—screw		FNZ105	19	
22 Box—glove	RHD	AHH6338	20	
23 Box—glove	LHD	AHH6339	1	
24 Nut—spring		PFS326	21	
25 Screw—glovebox to fascia		PTZ602	22	
26 Bracket—attachment—glovebox	RHD	HZA543	23	
27 Bracket—attachment—glovebox	LHD	HZA542	1	
28 Screw—attachment bracket to glovebox		RTP2804	24	
29 Washer—cup		FWP708	25	
30 Nut—spring		PHS308	26	
31 Lid assembly—glovebox	RHD	HZA454	27	
32 Lid assembly—glovebox	LHD	HZA455	1	
33 Screw—glovebox lid to fascia		PMZ0305	28	
34 Washer—spring		LWZ203	29	
35 Nut—screw		FNZ103	30	

Item
No.

SERVICE PARTS LIST

THE MGB

Item No.

MODIFICATIONS

REMARKS

(C) GHN8/101

DESCRIPTION

Part Number

Illus. No.

New Part Number

Change Point

Fascia—continued

Lock assembly—glovebox lid

Key

Buffer—glovebox lid

Catch—glovebox lock

Screw—catch and buffer to glovebox

Finisher—glovebox lid

Clip—finisher to glovebox

Arm—check—glovebox

Arm—check—glovebox

Screw—check arm to glovebox

Washer—spring

Panel—radio speaker

Hood—instrument

Screw—hood to fascia panel

Washer—plain

Finisher—instrument hood

Panel—radio speaker

Bezel—radio speaker panel

Screw—speaker panel fixing

Washer—cup

Nut—spring

Nut—bezel to speaker panel

Washer—spring

Washer—plain

Grille—radio speaker

Plate—blanking—radio aperture

Clip—blanking plate to fascia panel

Motif 'MG'

Nut—clip (Spire).

Bezel—radio aperture

Bezel—radio aperture

Roll assembly—crash—Black with Black piping

Roll assembly—crash—Black with Red piping

Roll assembly—crash—Black with White piping

Roll assembly—crash—Black with Pale Blue piping

Nut—crash roll fixing

Washer—spring

Washer—plain

Cover—map light

Glass—map light

Gasket—seating

Screw—map light to fascia panel

Washer—spring


Nut—screw

Fascia—continued	
Lock assembly—glovebox lid	
Key	AHH6331
Buffer—glovebox lid	ANK4646
Catch—glovebox lock	AHH6292
Screw—catch and buffer to glovebox	AHH6291
Finisher—glovebox lid	PMZ0204
Clip—finisher to glovebox	LWZ202
Arm—check—glovebox	BDH741
Arm—check—glovebox	14B934
Washer—check arm to glovebox	AHH6329
Washer—check arm to glovebox lid	AHH6330
Panel—radio speaker	RHD
Hood—instrument	LHD
Screw—hood to fascia panel	AHH6142
Washer—plain	AHH6164
Finisher—instrument hood	PWZ102
Panel—radio speaker	AHH6182
Bezel—radio speaker panel	AHH6169
Screw—speaker panel fixing	AHH6742
Washer—cup	RJP805
Nut—spring	FWP208
Nut—bezel to speaker panel	PFS308
Washer—spring	CNZ102
Washer—plain	LWZ202
Grille—radio speaker	PWZ202
Plate—blanking—radio aperture	AHH6753
Clip—blanking plate to fascia panel	AHH5256
Motif 'MG'	AHH5258
Nut—clip (Spire).	ADB509
Bezel—radio aperture	AHH5245
Bezel—radio aperture	AKE4517
Roll assembly—crash—Black with Black piping	
Roll assembly—crash—Black with Red piping	AKE4518
Roll assembly—crash—Black with White piping	AKE4519
Roll assembly—crash—Black with Pale Blue piping	AKE4520
Nut—crash roll fixing	FNZ103
Washer—spring	LWZ208
Washer—plain	PWZ103
Cover—map light	87H5426
Glass—map light	17H5301
Gasket—seating	17H5302
Screw—map light to fascia panel	RMP0810
Washer—spring	LWZ203
Nut—screw	FNZ103

SERVICE PARTS LIST

PLATE RL

THE MGB

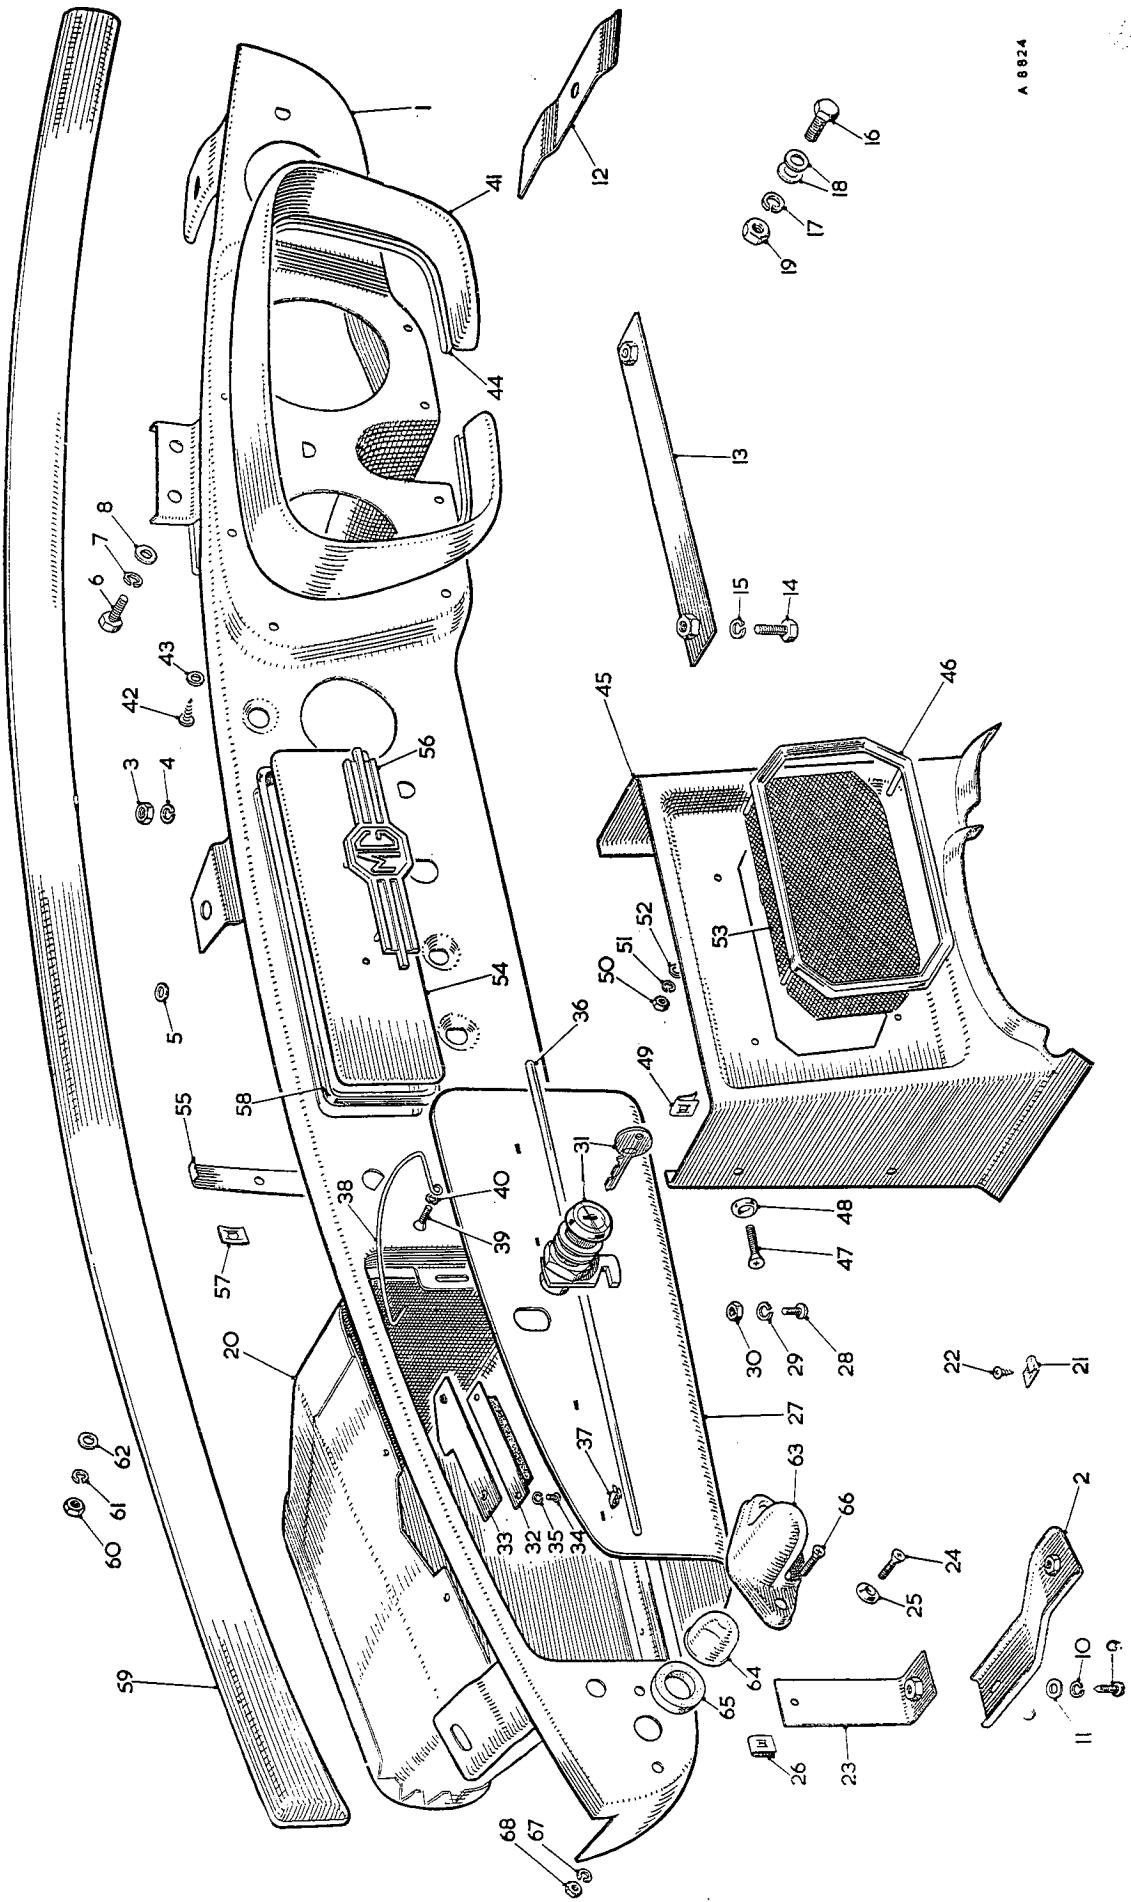


To face page R.18

SERVICE PARTS LIST

PLATE RM

THE MGB

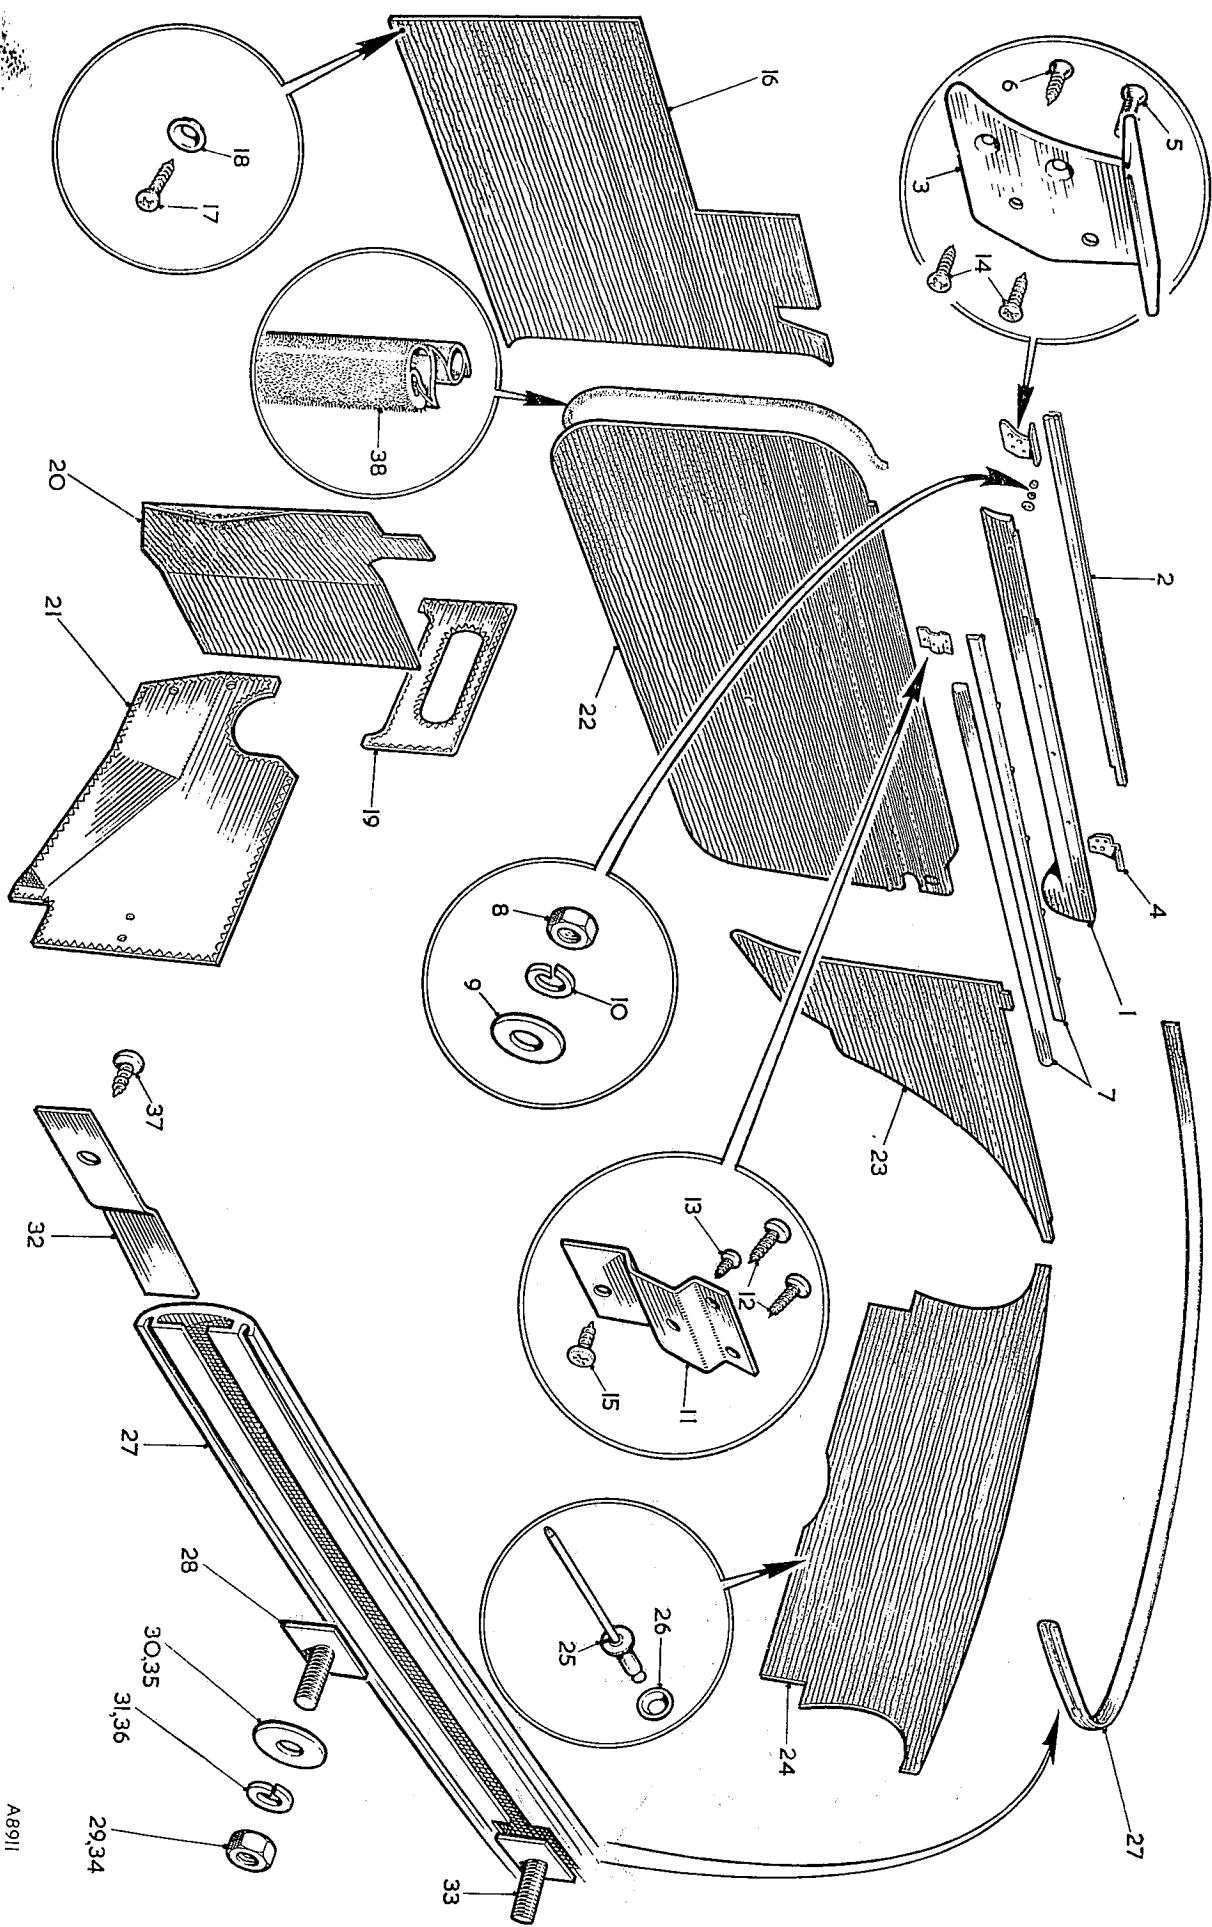

To face page R.19

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (C) GHN8/101.	MODIFICATIONS			REMARKS
		Part Number	Qty. per Veh.	New Part Number	
Capping assembly—waist rail—RH—Black		AKE4569	1	1	
1 Capping assembly—waist rail—LH—Black		AKE4570	1	AKE4570	
2 Weatherstrip—inner door—RH		AHH6308	2	AHH6308	
3 Weatherstrip—inner door—LH		AHH6509	1	AHH6509	
4 Finisher—waist rail—front—RH		AHH6422	3	AHH6422	
5 Finisher—waist rail—front—LH		AHH6423	1	AHH6423	
6 Finisher—waist rail—front—LH		AHH6424	4	AHH6424	
7 Finisher—waist rail—rear—RH		AHH6425	1	AHH6425	
8 Finisher—waist rail—rear—LH		CMZ0310	5	CMZ0310	
9 Screw—finisher to waist rail		CTZ804	6	CTZ804	
10 Screw—finisher to waist rail		AKE4479	7	1	
Trim roll assembly—waist rail door—RH—Black with Black piping		AKE4480	1	AKE4480	
11 Trim roll assembly—waist rail door—RH—Black with Red piping		AKE4481	1	AKE4481	
12 Trim roll assembly—waist rail door—RH—Black with White piping		AKE4482	1	AKE4482	
13 Trim roll assembly—waist rail door—RH—Black with Pale Blue					
14 Trim roll assembly—waist rail door—RH—Black with Pale Blue piping					
Trim roll assembly—waist rail door—LH—Black with Black piping		AKE4483	1	1	
15 Trim roll assembly—waist rail door—LH—Black with Red piping		AKE4484	1	AKE4484	
16 Trim roll assembly—waist rail door—LH—Black with White piping		AKE4485	1	AKE4485	
17 Trim roll assembly—waist rail door—LH—Black with Pale Blue piping		AKE4486	1	AKE4486	
18 Trim roll assembly—waist rail door—LH—Black with Pale Blue piping		FNZ7103	8	FNZ7103	
19 Nut—trim roll to capping		PWZ203	9	PWZ203	
20 Washer—plain		LWZ203	10	LWZ203	
21 Washer—spring		HZA230	11	HZA230	
22 Tab—finisher—waist rail		PTZ805	12	PTZ805	
23 Screw—tab to waist rail		PTZ802	13	PTZ802	
24 Screw—tab to waist rail		RTP804	14	RTP804	
25 Screw—waist rail to door		PTZ803	15	PTZ803	
26 Screw—waist rail to door					

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3/101

Part
Number

Illus.
No.

Qty.
per
Veh.

New
Part
Number

MODIFICATIONS

REMARKS

Trim—continued

Liner assembly—scuttle side—RH—Black

AKE4521

16

1

Liner assembly—scuttle side—RH—Red

AKE4522

1

1

Liner assembly—scuttle side—LH—Black

AKE4524

1

1

Liner assembly—scuttle side—LH—Red

AKE4525

1

1

Liner assembly—scuttle side—LH—Blue

AKE4526

1

1

Screw—liner assembly

RTP605

17

14

Washer—cup

AK9062

18

14

Trim pad assembly—air intake box—centre—Black

AKE4533

19

1

Trim pad assembly—air intake box—centre—Red

AKE4534

1

1

Trim pad assembly—air intake box—RH side—Black

AKE4535

1

1

Trim pad assembly—air intake box—RH side—Red

AKE4536

1

1

Trim pad assembly—air intake box—RH side—Blue

AKE4537

1

1

Trim pad assembly—air intake box—LH side—Black

AKE4539

20

1

Trim pad assembly—air intake box—LH side—Red

AKE4540

1

1

Trim pad assembly—air intake box—LH side—Blue

AKE4541

1

1

Screw—trim pad assembly

RTP605

10

10

Washer—cup

AK9062

6

10

Trim pad assembly—toeboard—RH—Black

AKE4527

1

1

Trim pad assembly—toeboard—RH—Blue

AKE4528

1

1

Trim pad assembly—toeboard—LH—Black

AKE4529

1

1

Trim pad assembly—toeboard—LH—Red

AKE4530

21

1

Trim pad assembly—toeboard—LH—Blue

AKE4531

1

1

Liner assembly—toeboard—LH—Blue

AKE4532

1

1

Liner assembly—door—RH—Black with Red piping

AKE4542

22

1

Liner assembly—door—RH—Black with White piping

AKE4543

1

1

Liner assembly—door—RH—Red with Black piping

AKE4544

1

1

Liner assembly—door—RH—Red with White piping

AKE4545

1

1

Liner assembly—door—RH—Blue with Pale Blue piping

AKE4546

1

1

Liner assembly—door—LH—Black with Red piping

AKE4547

1

1

Liner assembly—door—LH—Black with White piping

AKE4548

1

1

Liner assembly—door—LH—Black with Pale Blue piping

AKE4549

1

1

Liner assembly—door—LH—Red with Black piping

AKE4550

1

1

Liner assembly—door—LH—Red with White piping

AKE4551

1

1

Liner assembly—door—LH—Red with White piping

AKE4552

1

1

Screw—liner assembly—door—LH—Blue with Pale Blue piping

AKE4553

1

1

Screw—liner assembly to door

RTP605


26

26

SERVICE PARTS LIST

PLATE RM

THE MGB

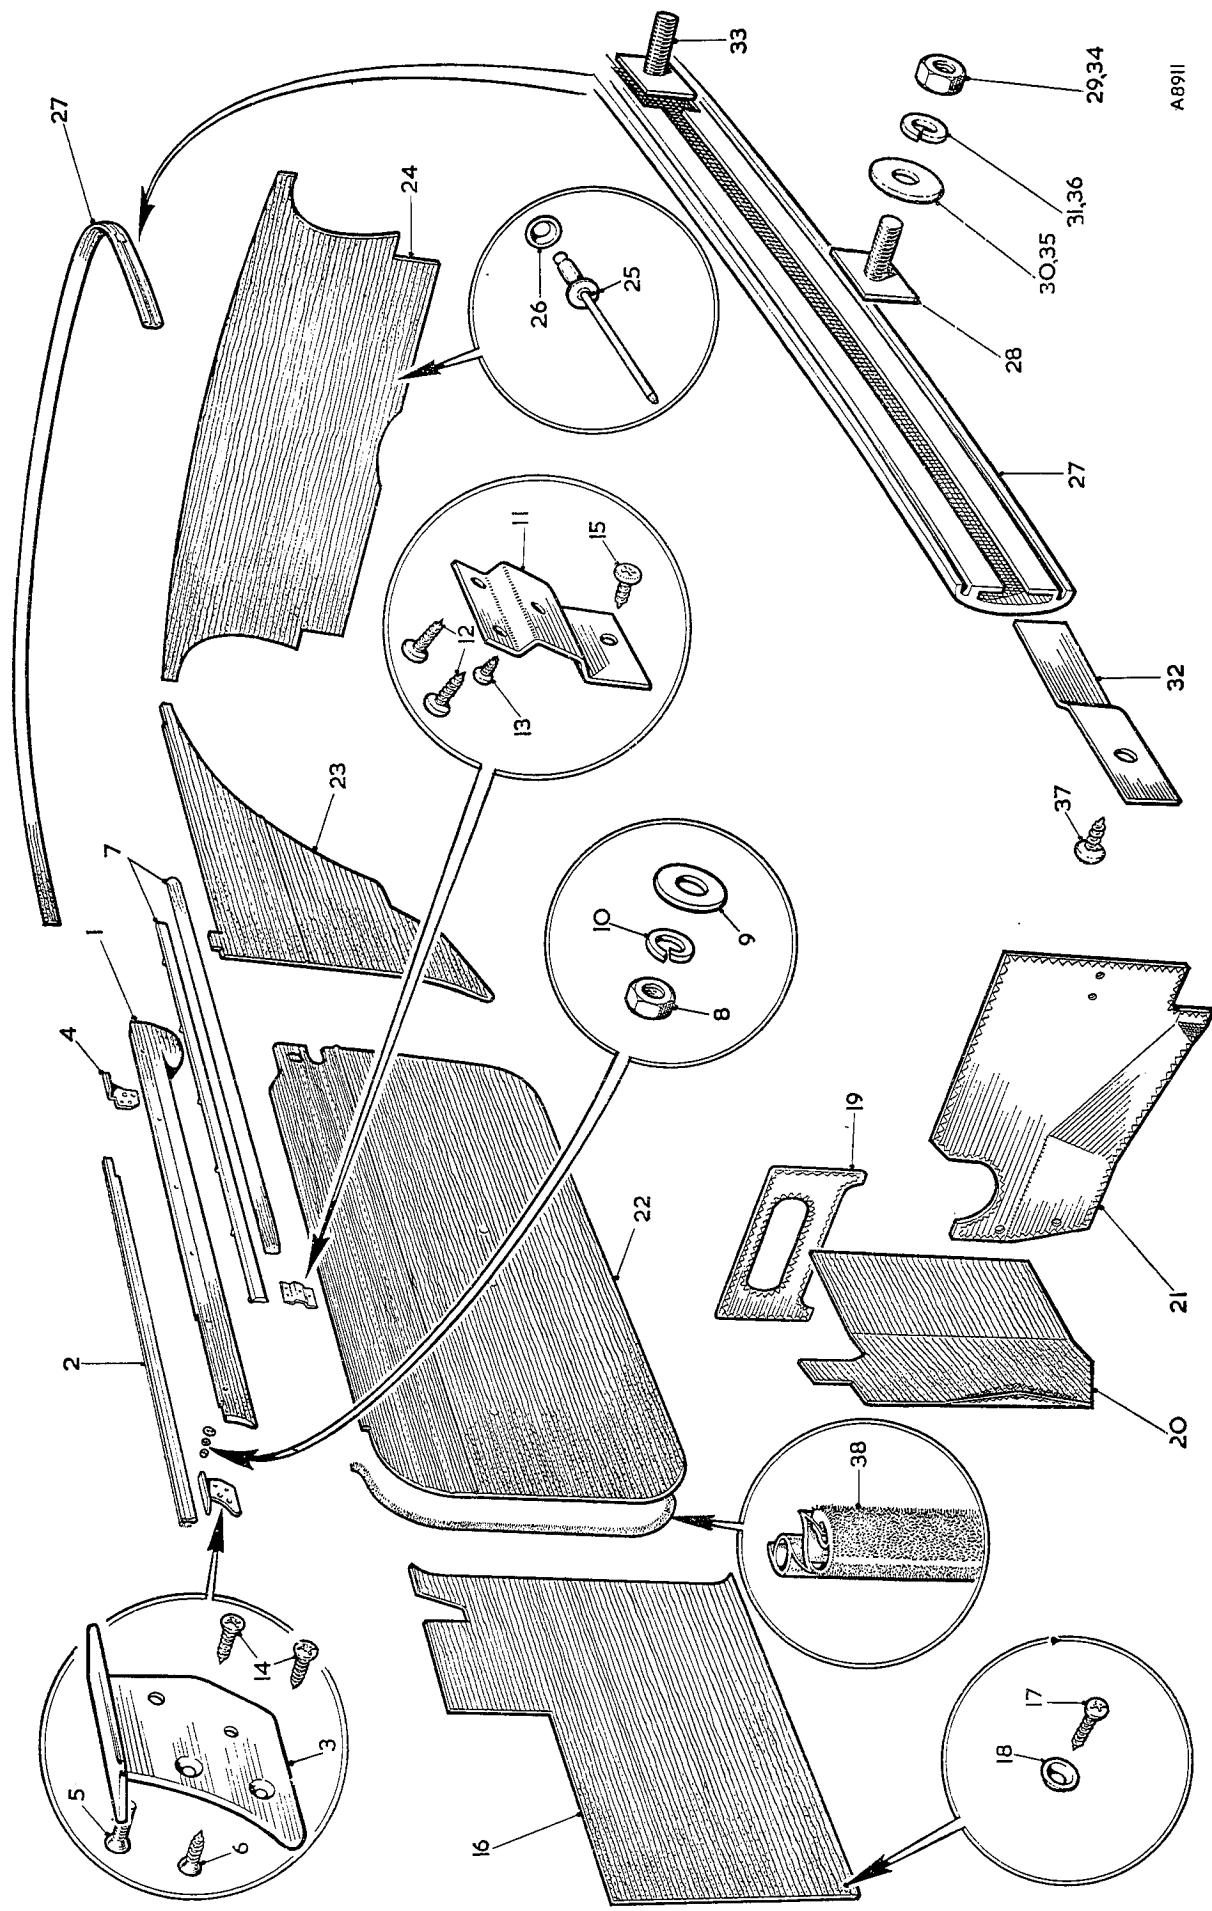


To face page R.20

A89II

SERVICE PARTS LIST

PLATE RM

THE MGB

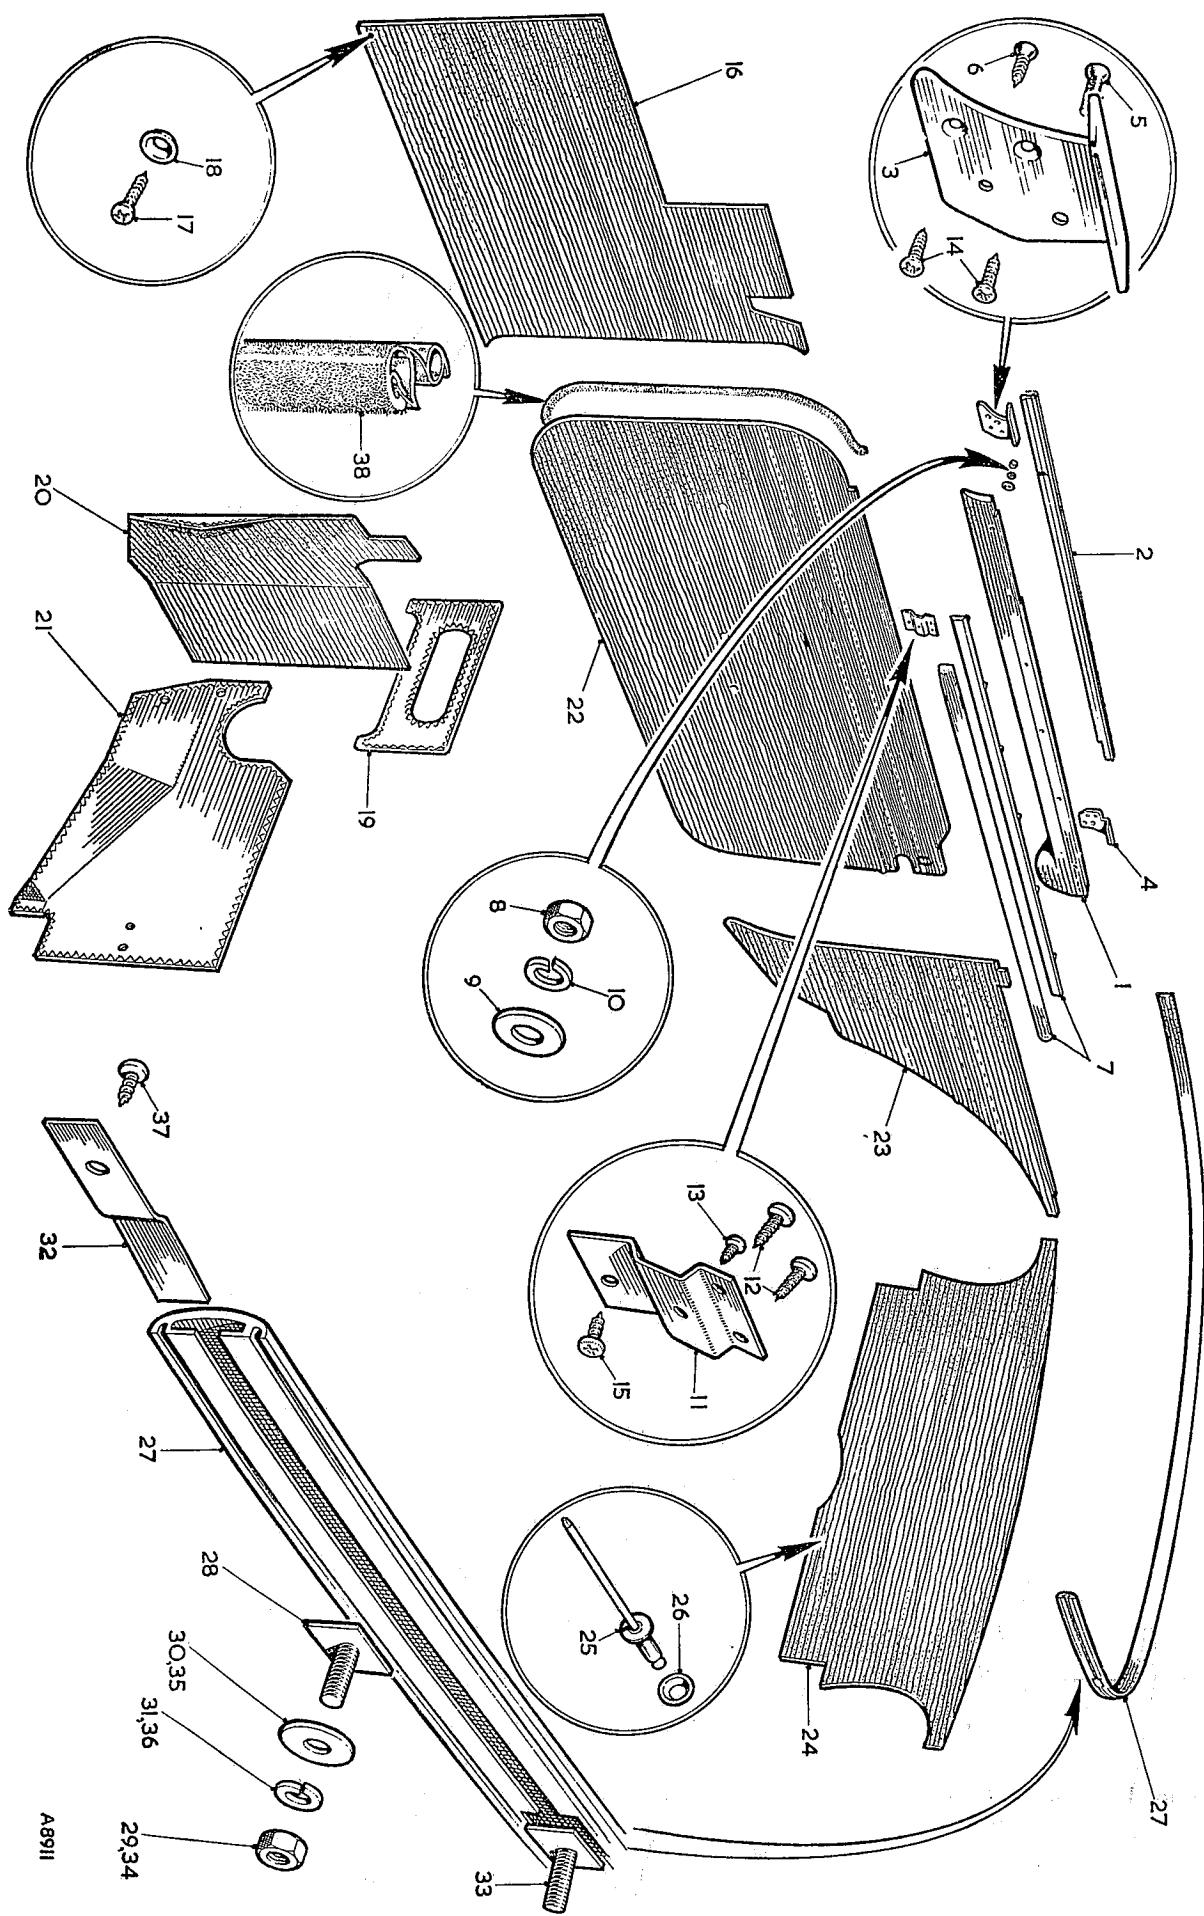

To face page R.21

A89II

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN8/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
Trim—continued						
1	Liner assembly—rear quarter—RH—Black with Red piping	AKE4554	23	1		
2	Liner assembly—rear quarter—RH—Black with White piping	AKE4555	1			
3	Liner assembly—rear quarter—RH—Black with Pale Blue piping	AKE4556	1			
4	Liner assembly—rear quarter—RH—Red with Black piping	AKE4557	1			
5	Liner assembly—rear quarter—RH—Red with White piping	AKE4558	1			
6	Liner assembly—rear quarter—RH—Blue with Pale Blue piping	AKE4559	1			
7	Liner assembly—rear quarter—LH—Black with Red piping	AKE4560	1			
8	Liner assembly—rear quarter—LH—Black with White piping	AKE4561	1			
9	Liner assembly—rear quarter—LH—Black with Pale Blue piping	AKE4562	1			
10	Liner assembly—rear quarter—LH—Red with Black piping	AKE4563	1			
11	Liner assembly—rear quarter—LH—Red with White piping	AKE4564	1			
12	Liner assembly—rear quarter—LH—Blue with Pale Blue piping	AKE4565	1			
13	Screw—liner assembly	RTP905	10			
14	Washer—cup	6K9062	10			
15	Liner assembly—rear bulkhead—Black	AKE4566	24	1		
16	Liner assembly—rear bulkhead—Red	AKE4567	1			
17	Liner assembly—rear bulkhead—Blue	AKE4568	1			
18	Rivet—liner assembly	DMP0829	25	8		
19	Washer—cup	6K9062	26	8		

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHN3/101

MODIFICATIONS

REMARKS

Trim—continued


Item No.	DESCRIPTION	Part Number	Illus. No.	Qty. Per Veh.	New Part Number	Change Point	REMARKS
1	Moulding—cockpit—rear	AHH6416	27	1			
2	Plate—stud—moulding	AHH6360	28	7			
3	Nut—stud plate	FNZ103	29	7			
4	Washer—plain	PWZ203	30	7			
5	Washer—spring	LWZ203	31	7			
6	Plate—end—cockpit moulding—rear	AHH6418	32	2			
7	Plate—stud—end plate	AHH6417	33	2			
8	Nut—stud plate	FNZ103	34	2			
9	Washer—plain	PWZ203	35	2			
10	Washer—spring	LWZ203	36	2			
11	Screw—end plate to body	PTZ803	37	2			
12	Seal—door Red 72" (182.8 cm.)	37H9956	38	A/R			
13	Seal—door—Black 72" (182.8 cm.)	37H9955		A/R			
14	Seal—door—Blue 72" (182.8 cm.)	37H9957		A/R			
15	Leathercloth 50" (127 cm.) wide—Red	AHA5937		A/R			
16	Leathercloth 50" (127 cm.) wide—Black	AHA5938		A/R			
17	Leathercloth 50" (127 cm.) wide—Blue	AHA5939		A/R			
18	Piping—cockpit moulding—Red	AFH1837		A/R			
19	Piping—cockpit moulding—Black	AHA5940		A/R			
20	Piping—cockpit moulding—White	AFH1840		A/R			
21	Piping—cockpit moulding—Pale Blue	AFH6665		A/R			
22	Piping—fascia crash roll—Red	AFH4835		A/R			
23	Piping—fascia crash roll—Black	AFH4839		A/R			
24	Piping—fascia crash roll—White	AFH4838		A/R			
25	Piping—fascia crash roll—Pale Blue	AFH6667		A/R			

] Available in multiples of feet/yards

SERVICE PARTS LIST

PLATE RM

THE MGB

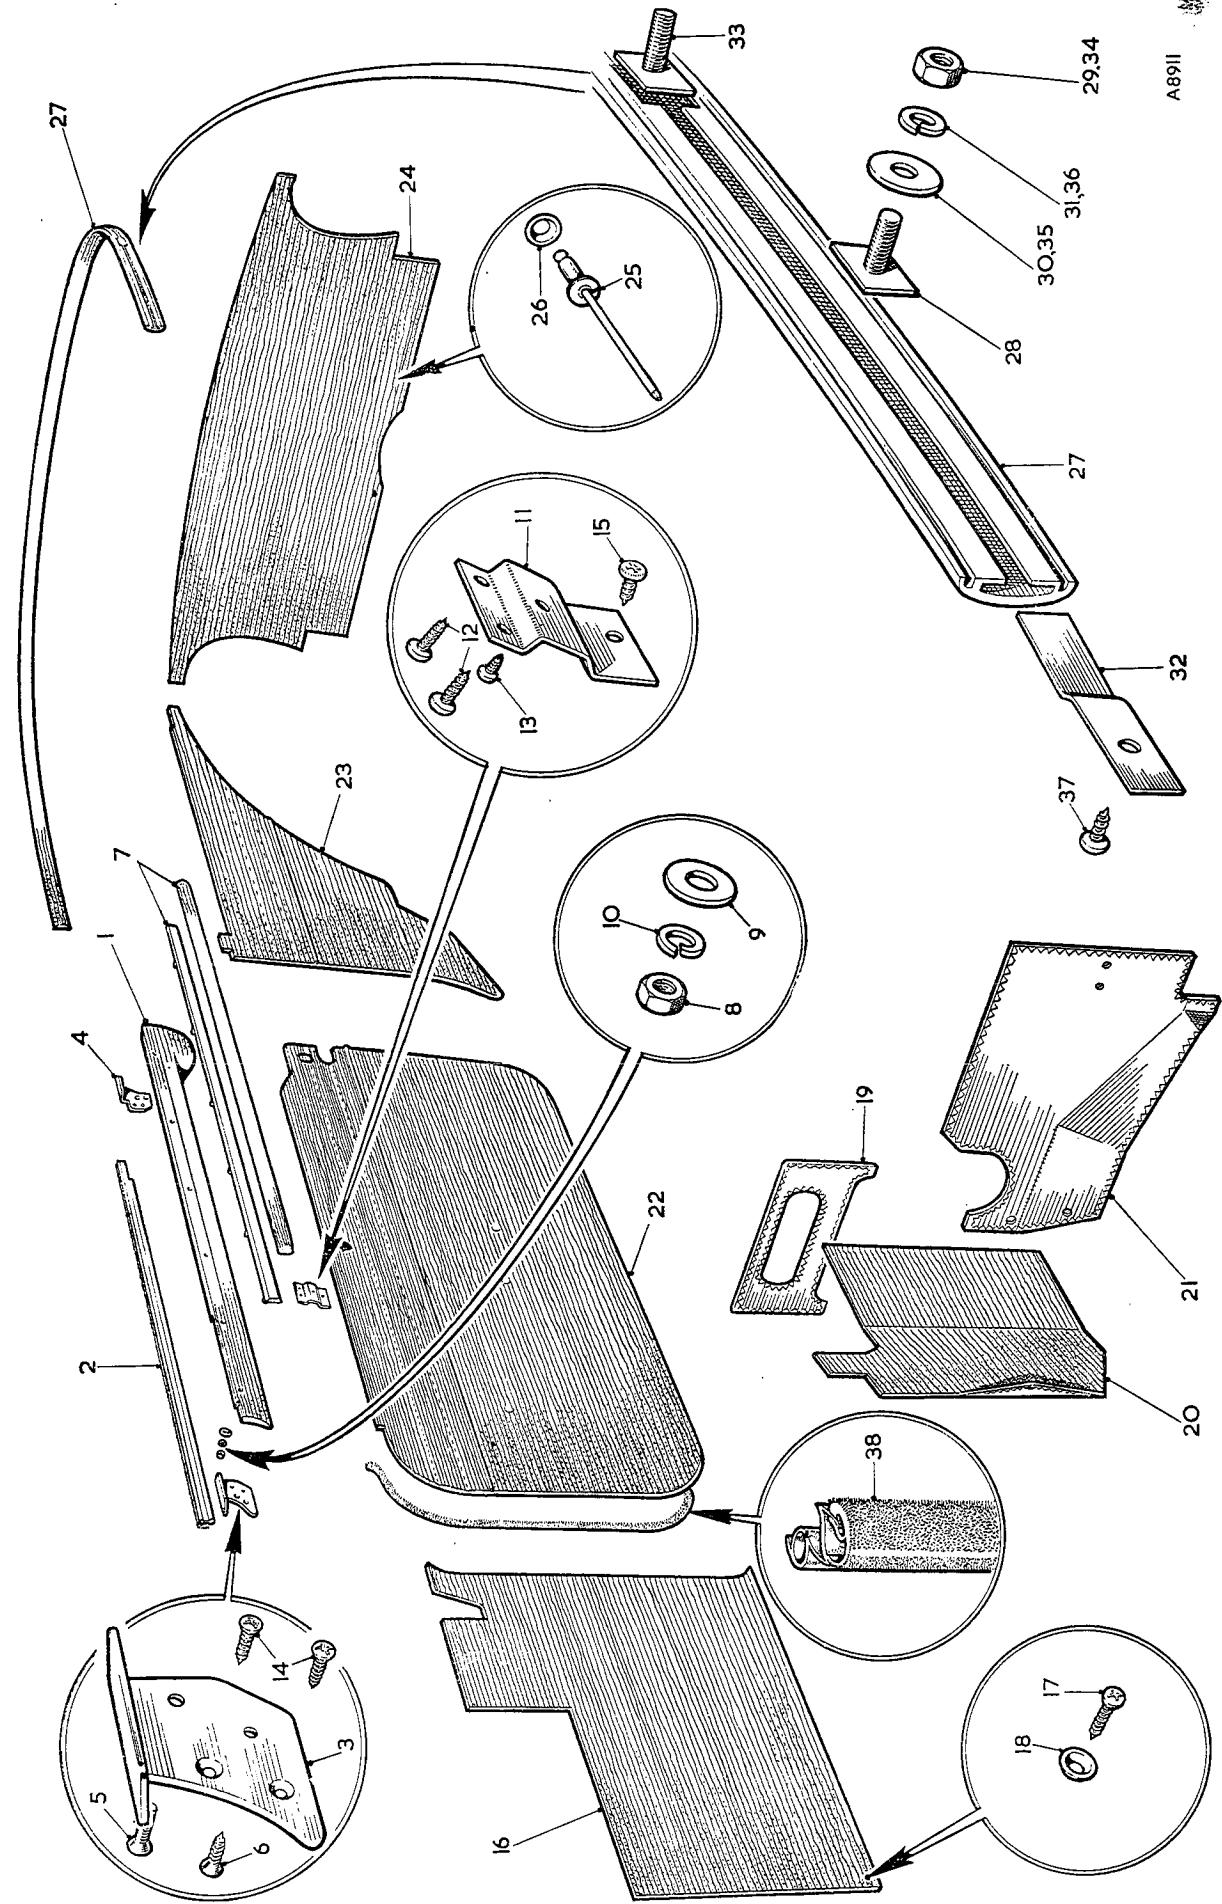


To face page R.22

A89II

SERVICE PARTS LIST

PLATE RN

THE MGB

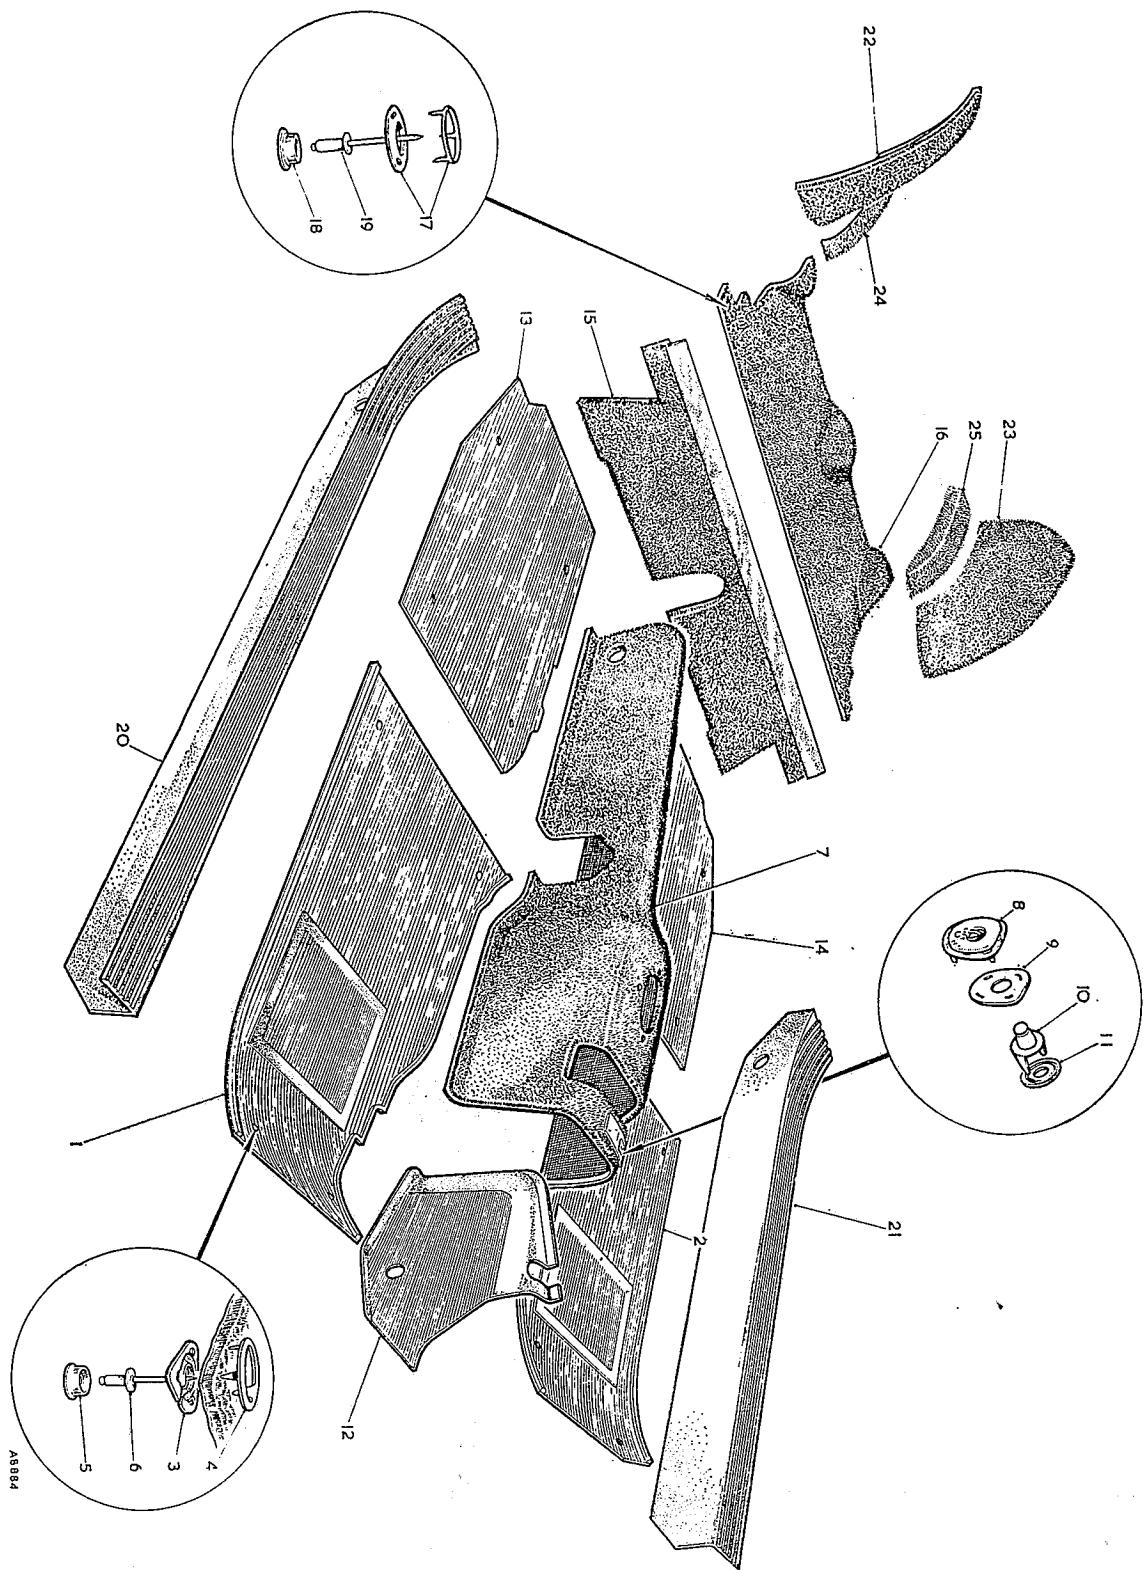

To face page R.23

A8884

SERVICE PARTS LIST

THE MGB

DESCRIPTION	Commencing (C) GHN8/101	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	Qty. per Veh.	
Trim—continued					
1 Mat—front—RH—Red	AHH6888	1	1	1	
Mat—front—RH—Black	AHH6886	1	1		
Mat—front—RH—Blue	AHH6890	1	1		
2 Mat—front—LH—Red	AHH6889	2	1		
Mat—front—LH—Black	AHH6887	1	1		
Mat—front—LH—Blue	AHH6891	1	1		
Socket—fastener	2H8445	3	8		
Ring—spiked	14G8736	4	8		
Fastener—dot	ADB4811	5	8		
Rivet—pop	DMP0835	6	8		
11 Carpet—gearbox and tunnel—Red	AHH6905	7	1		
Carpet—gearbox and tunnel—Black	AHH6904	1	1		
Carpet—gearbox and tunnel—Blue	AHH6906	1	1		
Socket—fastener	LFS107	8	1		
Washer—fastener socket	LFS100	9	1		
Stud—fastener	BHA4355	10	1		
Washer—fastener	LFP1500	11	1		
Moulding—foot-rest—starter motor cover	AHH6443	12	1		
18 Mat—rear—RH—Red	AHH6894	13	1		
Mat—rear—RH—Black	AHH6892	1	1		
Mat—rear—RH—Blue	AHH6896	14	1		
21 Mat—rear—LH—Red	AHH6895	15	1		
Mat—rear—LH—Black	AHH6893	1	1		
Mat—rear—LH—Blue	AHH6897	1	1		
24 Carpet—heelboard—Black	AHH6921	15	1		
Carpet—heelboard—Red	AHH6922	1	1		
Carpet—heelboard—Blue	AHH6923	1	1		
27 Carpet—rear compartment—Black	AHH6907	16	1		
Carpet—rear compartment—Red	AHH6908	1	1		
Carpet—rear compartment—Blue	AHH6909	1	1		
Fastener assembly—carpet	ADA2889	17	6		
Fastener—dot	ADB4811	18	6		
Rivet—pop	DMP0835	19	6		
33 Mat—sill—RH—Red	AHH6900	20	1		
Mat—sill—RH—Black	AHH6898	1	1		
Mat—sill—RH—Blue	AHH6902	1	1		
37 Mat—sill—LH—Red	AHH6901	21	1		
Mat—sill—LH—Black	AHH6899	1	1		
Mat—sill—LH—Blue	AHH6903	1	1		

SERVICE PARTS LIST


THE MGB

DESCRIPTION		MODIFICATIONS			REMARKS
	Part Number	Illus. No.	Qty. per Veh.	New Part Number	Change Point
Trim—continued					
Carpet—rear wheel arch—RH—20$\frac{3}{4}$" x 12" (52.7 x 30.48 cm.)—Black	22	A/R			
Carpet—rear wheel arch—RH—20 $\frac{3}{4}$ " x 12" (52.7 x 30.48 cm.)—Red		A/R			
Carpet—rear wheel arch—RH—20 $\frac{3}{4}$ " x 12" (52.7 x 30.48 cm.)—Blue		A/R			
Carpet—rear wheel arch—LH—20$\frac{3}{4}$" x 12" (52.7 x 30.48 cm.)—Black	23	A/R			
Carpet—rear wheel arch—LH—20 $\frac{3}{4}$ " x 12" (52.7 x 30.48 cm.)—Red		A/R			
Carpet—rear wheel arch—LH—20 $\frac{3}{4}$ " x 12" (52.7 x 30.48 cm.)—Blue		A/R			
Carpet—rear compartment end—RH—12$\frac{1}{4}$" x 5" (31.11 x 12.7 cm.)—Black	24	A/R			
Carpet—rear compartment end—RH—12 $\frac{1}{4}$ " x 5" (31.11 x 12.7 cm.)—Red		A/R			
Carpet—rear compartment end—RH—12 $\frac{1}{4}$ " x 5" (31.11 x 12.7 cm.)—Blue		A/R			
Carpet—rear compartment end—LH—12$\frac{1}{4}$" x 5" (31.11 x 12.7 cm.)—Black	25	A/R			
Carpet—rear compartment end—LH—12 $\frac{1}{4}$ " x 5" (31.11 x 12.7 cm.)—Red		A/R			
Carpet—rear compartment end—LH—12 $\frac{1}{4}$ " x 5" (31.11 x 12.7 cm.)—Blue		A/R			
Carpet material 40" (101.6 cm.) wide—Red	AHH6842				
Carpet material 40" (101.6 cm.) wide—Black	AHH6843				
Carpet material 40" (101.6 cm.) wide—Blue	AHH6844				
Use bulk supply—available in multiples of feet/yards					

SERVICE PARTS LIST

PLATE RN

THE MGB

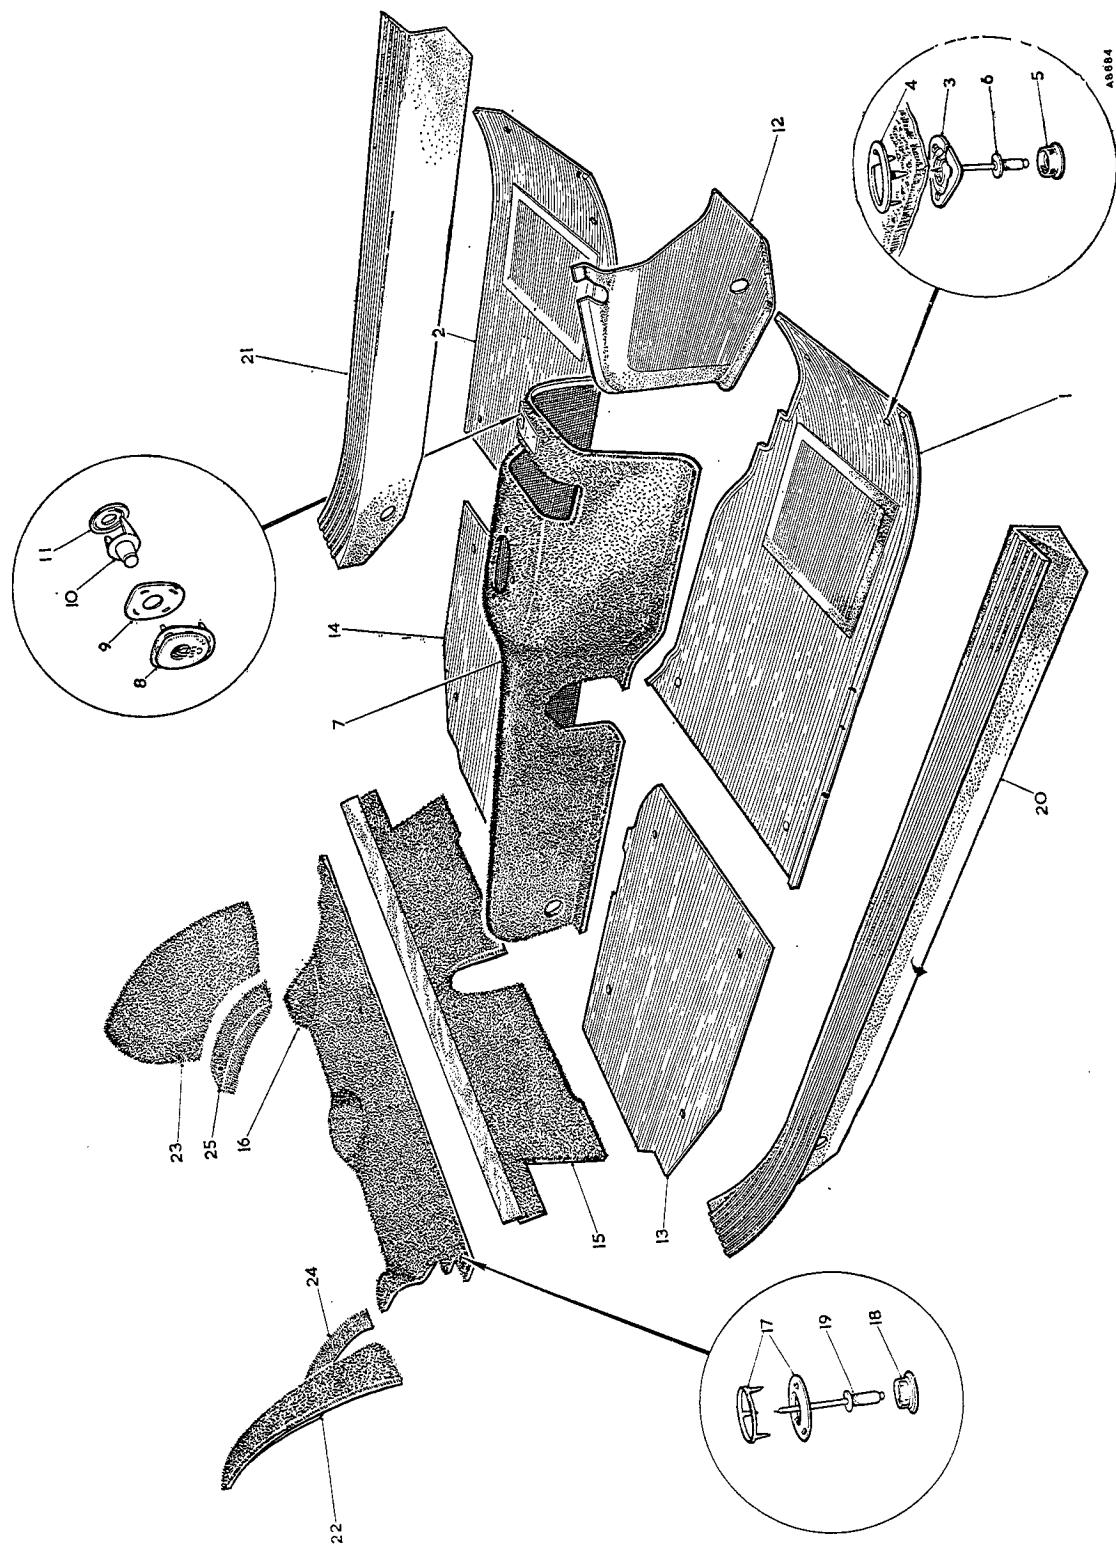


To face page R.24

SERVICE PARTS LIST

PLATE RO

THE MGB

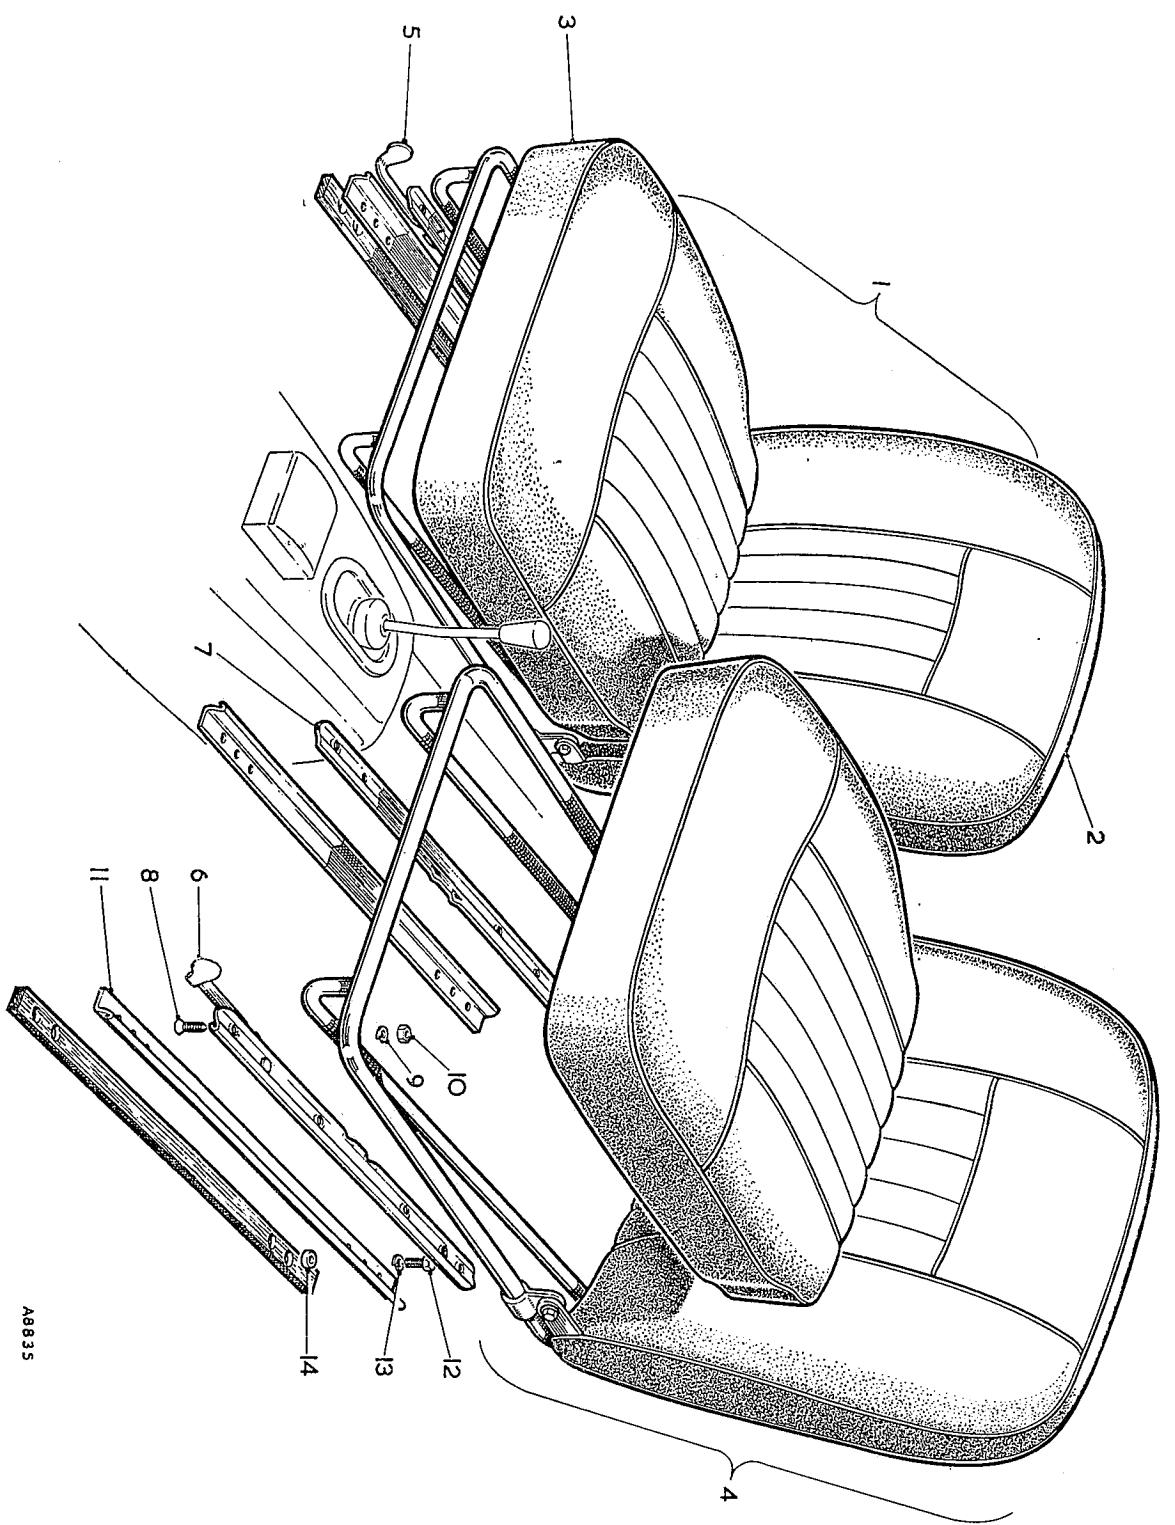

To face page R.25

A8835

SERVICE PARTS LIST

THE MGB

Item No.	DESCRIPTION	Commencing (C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
SEAT AND SEAT FITTINGS						
1	Seat assembly—bucket—RH—Black with Red piping	AKE4487	1	1		
2	Seat assembly—bucket—RH—Black with White piping	AKE4488		1		
3	Seat assembly—bucket—RH—Black with Pale Blue piping	AKE4489		1		
4	Seat assembly—bucket—RH—Red with Black piping	AKE4490		1		
5	Seat assembly—bucket—RH—Red with White piping	AKE4491		1		
6	Seat assembly—bucket—RH—Blue with Pale Blue piping	AKE4492		1		
7	Cover—bucket seat squab—Black with Red piping	AKE4511	2	1		
8	Cover—bucket seat squab—Black with White piping	AKE4512		1		
9	Cover—bucket seat squab—Black with Pale Blue piping	AKE4513		1		
10	Cover—bucket seat squab—Red with Black piping	AKE4514		1		
11	Cover—bucket seat squab—Red with White piping	AKE4515		1		
12	Cover—bucket seat squab—Blue with Pale Blue piping	AKE4516		1		
13	Cover—bucket seat cushion—RH—Black with Red piping	AKE4499	3	1		
14	Cover—bucket seat cushion—RH—Black with White piping	AKE4500		1		
15	Cover—bucket seat cushion—RH—Black with Pale Blue piping	AKE4501		1		
16	Cover—bucket seat cushion—RH—Red with Black piping	AKE4502		1		
17	Cover—bucket seat cushion—RH—Red with White piping	AKE4503		1		
18	Cover—bucket seat cushion—RH—Blue with Pale Blue piping	AKE4504		1		

SERVICE PARTS LIST

THE MGB

Item No.

DESCRIPTION

Commencing
(C) GHNB/101

Part
Number

Illus.
No.

Qty.
per
Veh.

MODIFICATIONS

REMARKS

Seat and Seat Fittings—continued

Seat assembly—bucket—LH—Black with Red piping

Seat assembly—bucket—LH—Black with White piping

Seat assembly—bucket—LH—Black with Pale Blue piping

Seat assembly—bucket—LH—Red with Black piping

Seat assembly—bucket—LH—Red with White piping

Seat assembly—bucket—LH—Blue with Pale Blue piping

Cover—bucket seat squab—Black with Red piping

Cover—bucket seat squab—Black with White piping

Cover—bucket seat squab—Black with Pale Blue piping

Cover—bucket seat squab—Red with Black piping

Cover—bucket seat squab—Red with White piping

Cover—bucket seat squab—Blue with Pale Blue piping

Cover—bucket seat cushion—LH—Black with Red piping

Cover—bucket seat cushion—LH—Black with White piping

Cover—bucket seat cushion—LH—Red with Black piping

Cover—bucket seat cushion—LH—Red with White piping

Cover—bucket seat cushion—LH—Blue with Pale Blue piping

Slide assembly—seat catch RH

Slide assembly—seat catch LH

Slide—seat catch

Screw—slide to seat

Washer—spring

Nut—screw

Rail—seat catch slide

Screw—rail to floor

Washer—spring

Spacer—seat rail

AKE4493 4 1

AKE4494 1

AKE4495 1

AKE4497 1

AKE4498 1

AKE4511 1

AKE4512 1

AKE4513 1

AKE4514 1

AKE4515 1

AKE4505 1

AKE4506 1

AKE4507 1

AKE4508 1

AKE4509 1

AKE4510 1

AHH5511 5 1

AHH5512 6 1

AHH5510 7 2

CMZ0418 8 8

LWZZ204 9

FNZ104 10 8

AHH6160 11 4

HZSD0406 12 8


LWZZ204 13 8

AHH6039 14 8

SERVICE PARTS LIST

PLATE RO

THE MGB

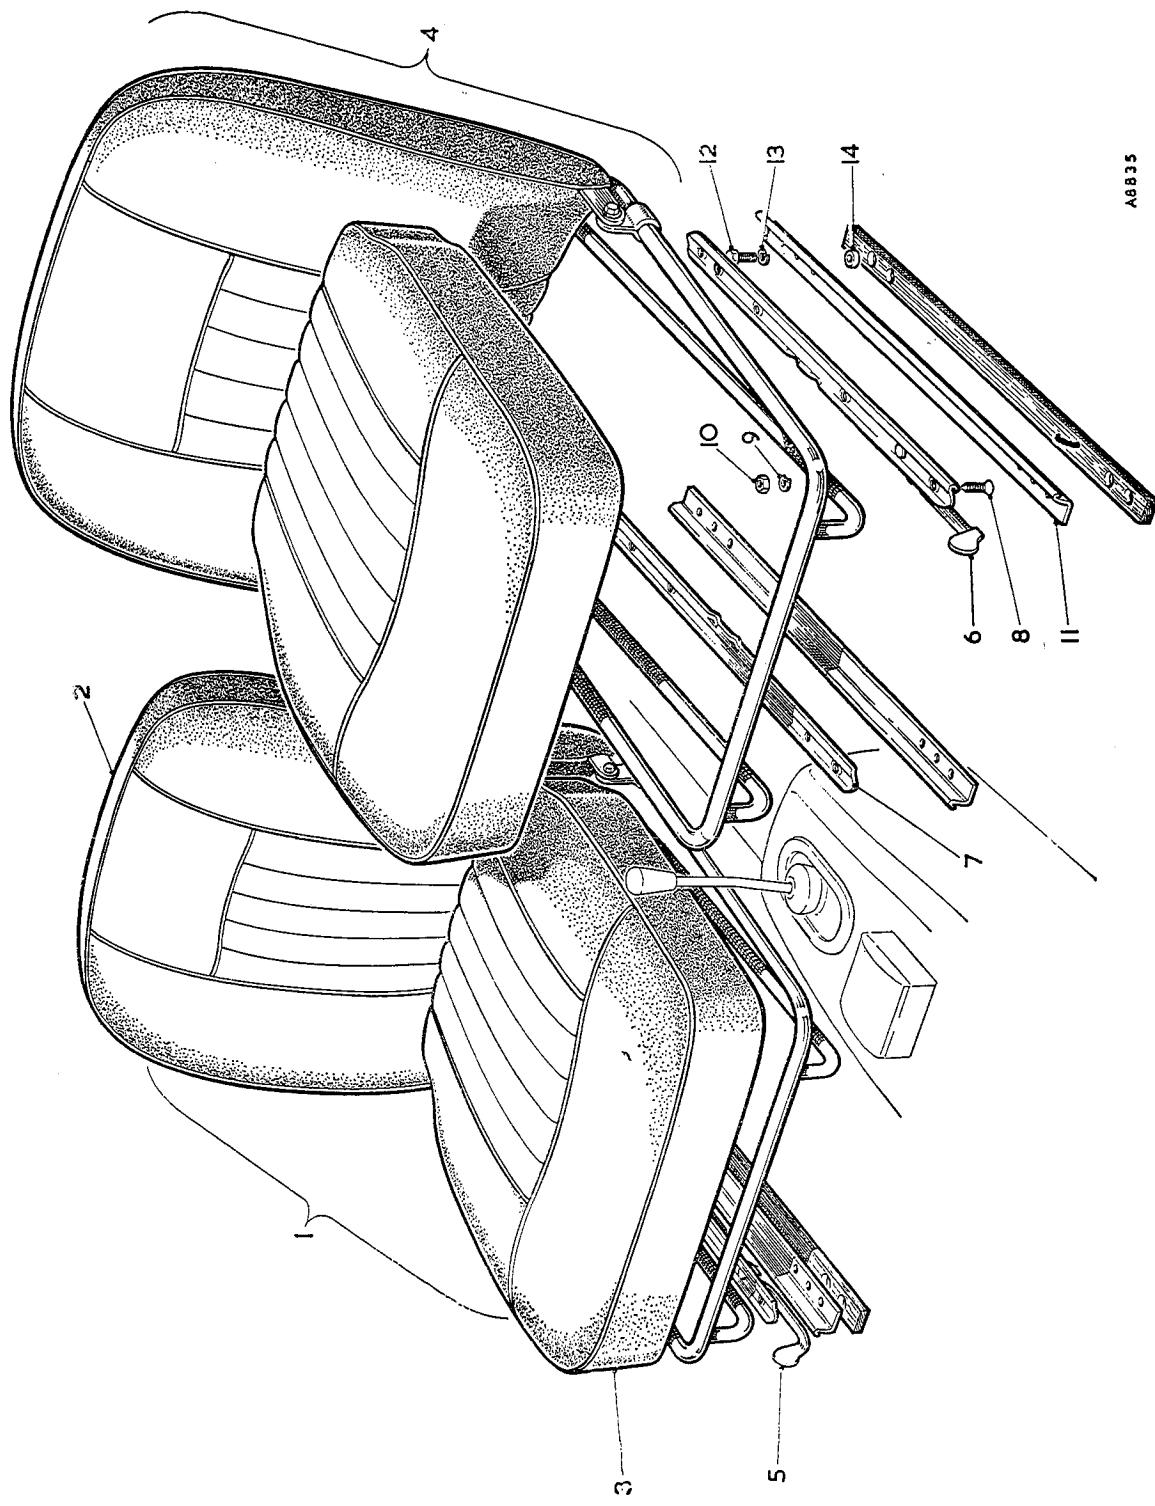


A8835

To face page R.26

SERVICE PARTS LIST

PLATE RP

THE MGB

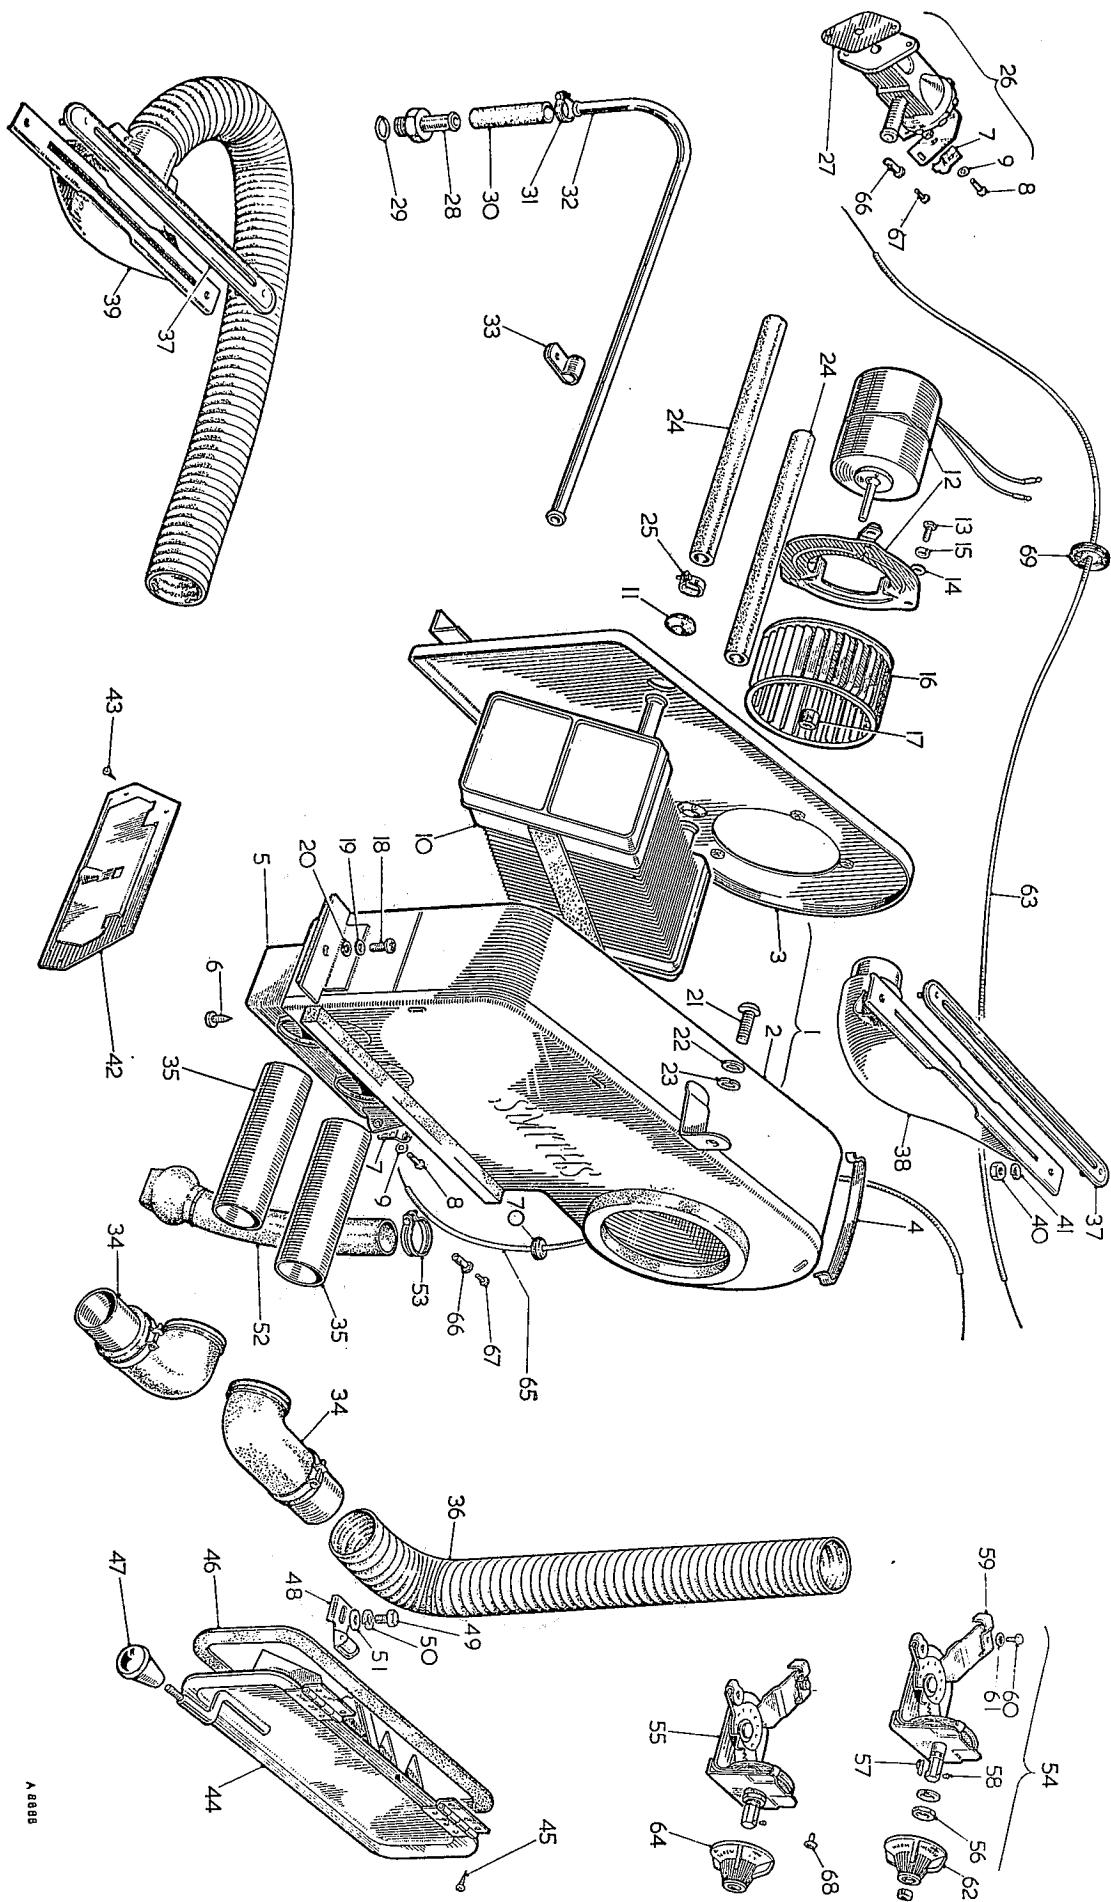

To face page R.27

SERVICE PARTS LIST

THE MGB

DESCRIPTION	COMMENCING (C) GHN3/101	MODIFICATIONS		REMARKS
		NEW PART NUMBER	CHANGE POINT	
HEATER AND VENTILATING EQUIPMENT				
1 Heater assembly	BHA4325	1	1	
2 Cover.....	17H2284	2	1	
3 Cover—motor side	17F12285	3	1	
4 Clip—cover	17H1585	4	5	
5 Duct—outlet	17H2286	5	1	
6 Screw—outlet duct	PTZ602	6	4	
7 Clamp—cable.....	27H11193	7	1	
8 Screw—cable clamp	7H6928	8	1	
9 Washer—shakeproof—screw	LWZ2403	9	1	
10 Radiator	17H2287	10	1	
11 Washer—radiator pipe	7H1993	11	2	
12 Motor and mounting plate assembly	17H2288	12	1	
13 Screw—motor fixing	37H99	13	3	
14 Washer—plain—screw	PWZ203	14	3	
15 Washer—spring—screw	LWZ303	15	3	
16 Runner	17H1801	16	1	
17 Nut—collet	27H602	17	1	
18 Screw—heater unit to bulkhead	PMZ20310	18	4	
19 Washer—plain	PVZ103	19	4	
20 Washer—spring	LWZ203	20	4	
21 Screw—heater unit to bulkhead	PMZ0410	21	1	
22 Washer—plain	PWZ104	22	1	
23 Washer—spring	LWZ204	23	1	
24 Hose—water $8\frac{1}{2}'' \times \frac{1}{2}''$	37H537	24	A/R	
25 Clip—hose	27H1874	25	4	
Valve assembly—water				
26 Gasket—water valve	BHA4132	26	1	
27 Union—water	AHH15433	27	1	
28 Washer—union	AMK884/7	28	1	
29 Hose—water $2\frac{1}{2}'' \times \frac{1}{2}''$	300398	29	1	
30 Clip—nose	37H537	30	A/R	
31 Pipe—water return	27H1874	31	2	
32 Clip—to inlet manifold	AHH15435	32	1	
33 Elbow—demister	PCR0811	33	1	
34 Tube—connector	14G3499	34	2	
35 Hose—air—demister	AHH6527	35	2	
36 Escutcheon assembly—demister RH	AHH6528	36	2	
37 Escutcheon assembly—demister LH	AHH6190	37	2	
38 Nozzle assembly—demister RH	HZA546	38	1	
39 Nozzle assembly—demister LH	HZA547	39	1	
40 Nut—escutcheon and demister nozzle to settle	FNZ103	40	4	
41 Washer—spring	LWZ203	41	4	
42 Door—heater outlet	13H59	42	2	
43 Screw—outlet door to air box	PTZ608	43	8	

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	COMMENCING (C) GHN3/101			MODIFICATIONS	REMARKS
		Part Number	Illus. No.	Oty. per Veh.	New Part Number	
Heater and Ventilating Equipment—continued						
1	Door assembly—fresh-air vent	HZA433	44	1		
2	Screw—door to bulkhead	PTZ608	45	4		
3	Seal—door	AHH6166	46	1		
4	Knob—door	AHH6165	47	1		
5	Spring assembly—fresh-air vent door	AHH6192	48	1		
6	Screw—spring to body bracket	HZS0405	49	1		
7	Washer—spring	LWZ204	50	1		
8	Washer—plain	PWZ104	51	1		
9	Tube—drain and dust valve assembly	AHH6176	52	1		
10	Clip—tube assembly to air box	HCS0709	53	1		
11	Control—rotary—heat	BHA4326	54	1		
12	Control—rotary—air	BHA4327	55	1		
13	Control—rotary—heat	BHA4332	1			
14	Control—rotary—air	BHA4333	1			
15	Nut—locking	27H1249	56	1		
16	Clip—knob	17H1601	57	1		
17	Pin—knob	17H1603	58	1		
18	Clamp—cable	27H1198	59	1		
19	Screw—clamp	27H1187	60	1		
20	Washer—spring	LWZ403	61	1		
21	Knob—heat	BHA4328	62	1		
22	Cable—heat control	BHA4331	63	1		
23	Knob—air	BHA4329	64	1		
24	Cable—air control	BHA4330	65	1		
25	Knob—heat	BHA4334	1			
26	Cable—heat control	BHA4337	1			
27	Knob—air	BHA4335	1			
28	Cable—air control	BHA4336	1			
29	Trunnion	24G1482	66	4		
30	Screw—trunnion	58K1016	67	4		
31	Rivet—heater control	AHH6276	68	2		
32	Grommet—heater control cable	RFR503	69	1		
33	Grommet—air control cable	RFN104	70	1		
34	Switch—heater		1			
					See page N-3	

SERVICE PARTS LIST

PLATE RP

THE MGB

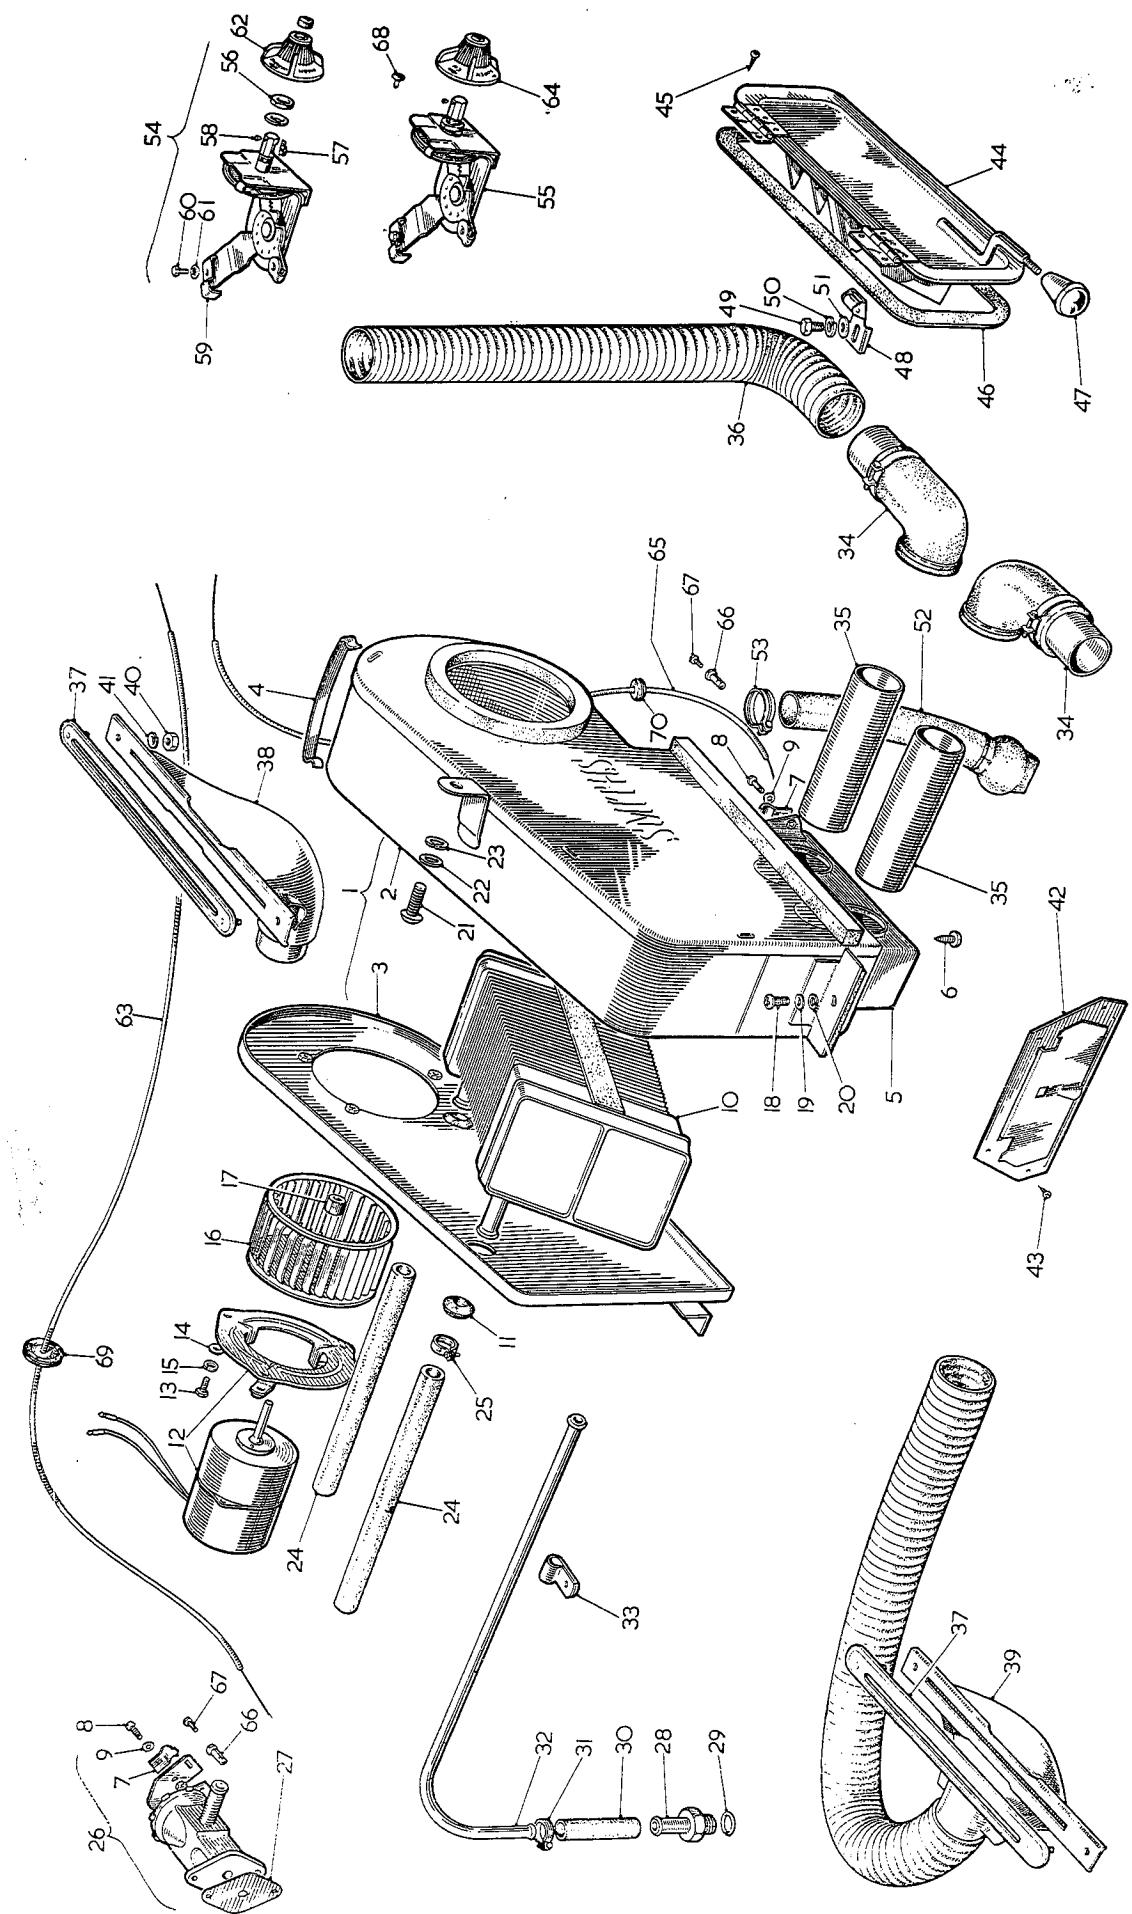


A 8888

To face page R.28

SERVICE PARTS LIST

PLATE RQ

THE MGB

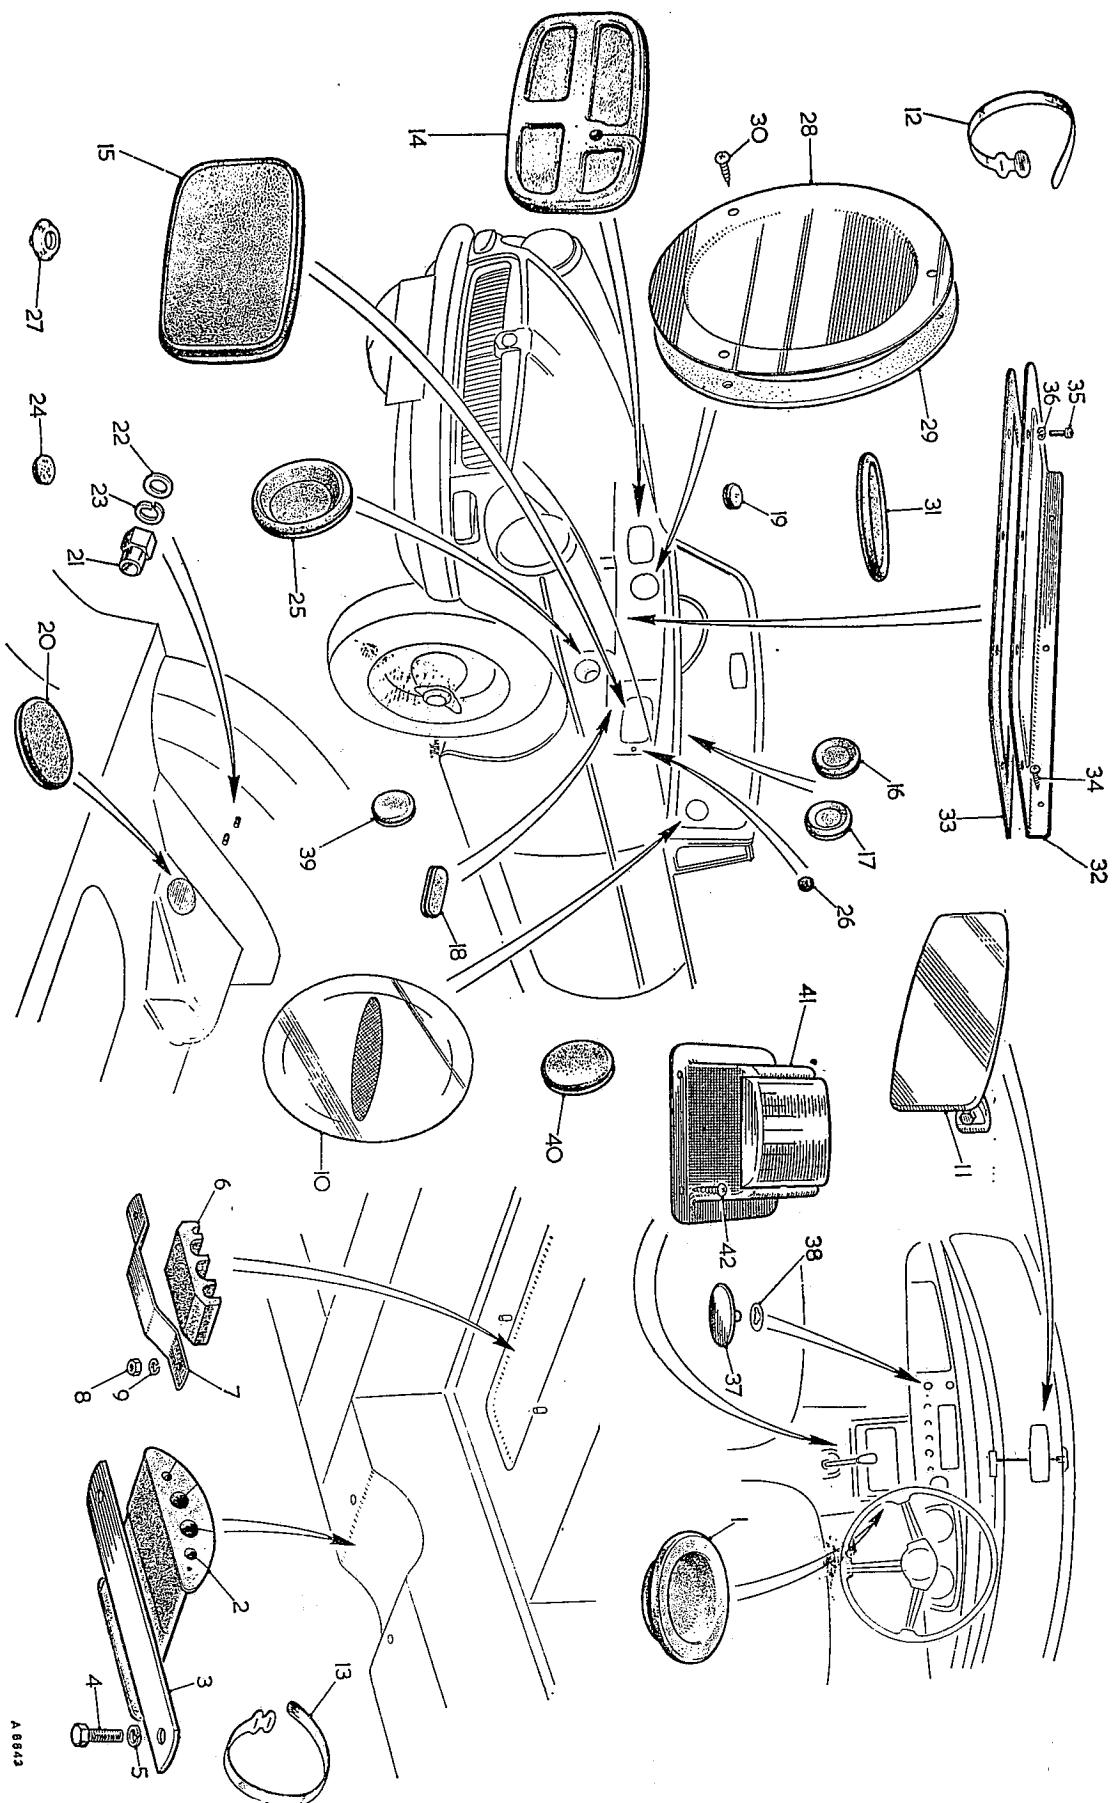

To face page R.29

SERVICE PARTS LIST

THE MGB

Part No.	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Oty. per Veh.	
SUNDRIES						
1	Plug—blanking—gearbox cover	AHH6507			1	
2	Grommet—services	AHH6284			1	
3	Plate—retaining—services grommet	AHH6285			1	
4	Screw—retaining plate to centre cross-member	HZS0506			2	
5	Washer—spring	LWZ205			5	
6	Grommet—services (small)	AHH6286			4	
7	Plate—retaining—services grommet (small)	AHH6287			4	
8	Nut—retaining plate to floor	FNZ104			8	
9	Washer—spring	LWZ204			9	
10	Holder—licence	14A3823			10	
11	Mirror—rear view	AHH6943			1	
12	Clip—pipes and wiring (under main floor)	AHH6728			12	
13	Clip—pipes and wiring (under rear floor)	AHH6728			2	
14	Plug—sealing master cylinder access hole (rubber)	RHD 14B680			14	
15	Plug—sealing master cylinder access hole (rubber)	RHD 14B630			15	
16	Plug—sealing master cylinder access hole (rubber)	LHD 14B630			2	
17	Plug—blanking speedometer cable hole (rubber)	4G2541			16	
18	Plug—blanking LHD revolution counter cable hole (rubber)	RHD AHH6478			17	
19	Plug—blanking LHD steering column mounting holes	R.FN206			18	
20	Plug—blanking cable guide hole	R.FN224			19	
21	Plug—blanking—rear floor shock absorber filler hole	14B2685			20	
22	Nut—domed—safety strap weld on rear wheel arch	PWZ105			21	
23	Washer—plain	LWZ205			22	
24	Washer—spring	R.FR207			23	
25	Plug—blanking—safety strap	AHA5437			24	
26	Plug—blanking master cylinder holes in bulkhead	R.FN204			2	
27	Plug—blanking paint drain holes $\frac{1}{8}$ " (9.52 mm.)	CFP375			25	
28	Plug—sealing paint drain holes $\frac{1}{8}$ " (15.87 mm.)	CFP625			1	
29	Plug—sealing paint drain holes $\frac{1}{8}$ " (19.05 mm.)	CFP750			3	
30	Plug—sealing paint drain holes $\frac{1}{8}$ " (25.4 mm.)	CFP1000			8	
31	Button—blanking—starter and ignition switch hole	BHA4251			1	
32						When steering lock fitted

SERVICE PARTS LIST


THE MGB

Item No.	DESCRIPTION	(C) GHN3/101		MODIFICATIONS		REMARKS
		Part Number	Illus. No.	Qty. per Veh.	New Part Number	
Sundries—continued						
1	Plate—cover—air box	AHH6204	28	1		
2	Gasket—cover-plate—air box	AHH6295	29	1		
3	Screw	PTZ1003	30	3		
4	Grommet—blanking—air box access plate	4C9768	31	1		
5	Plate—cover—heater aperture	AHH6260	32	1		
6	Gasket—cover-plate—heater aperture	AHH6290	33	1		
7	Screw—cover-plate to bulkhead	PTZ1003	34	3		
8	Screw—cover-plate to bulkhead front	PMZ0308	35	5		
9	Washer—spring	LWZ203	36	5		
10	Plug—heater controls—fascia	BDH1750	37	2		
11	Push-on fix—plug	PRF105	38	2		
12	Ferrule—bulkhead panel	RFN210	39	1		
13	Ferrule—centre panel pedal box	RFR216	40	1		
14	Ashtray	AHH5589	41	1		
15	Screw—ashtray to tunnel	PTP606	42	4		
] Optional extra						
Not required when heater is fitted						

SERVICE PARTS LIST

PLATE RQ

THE MGB

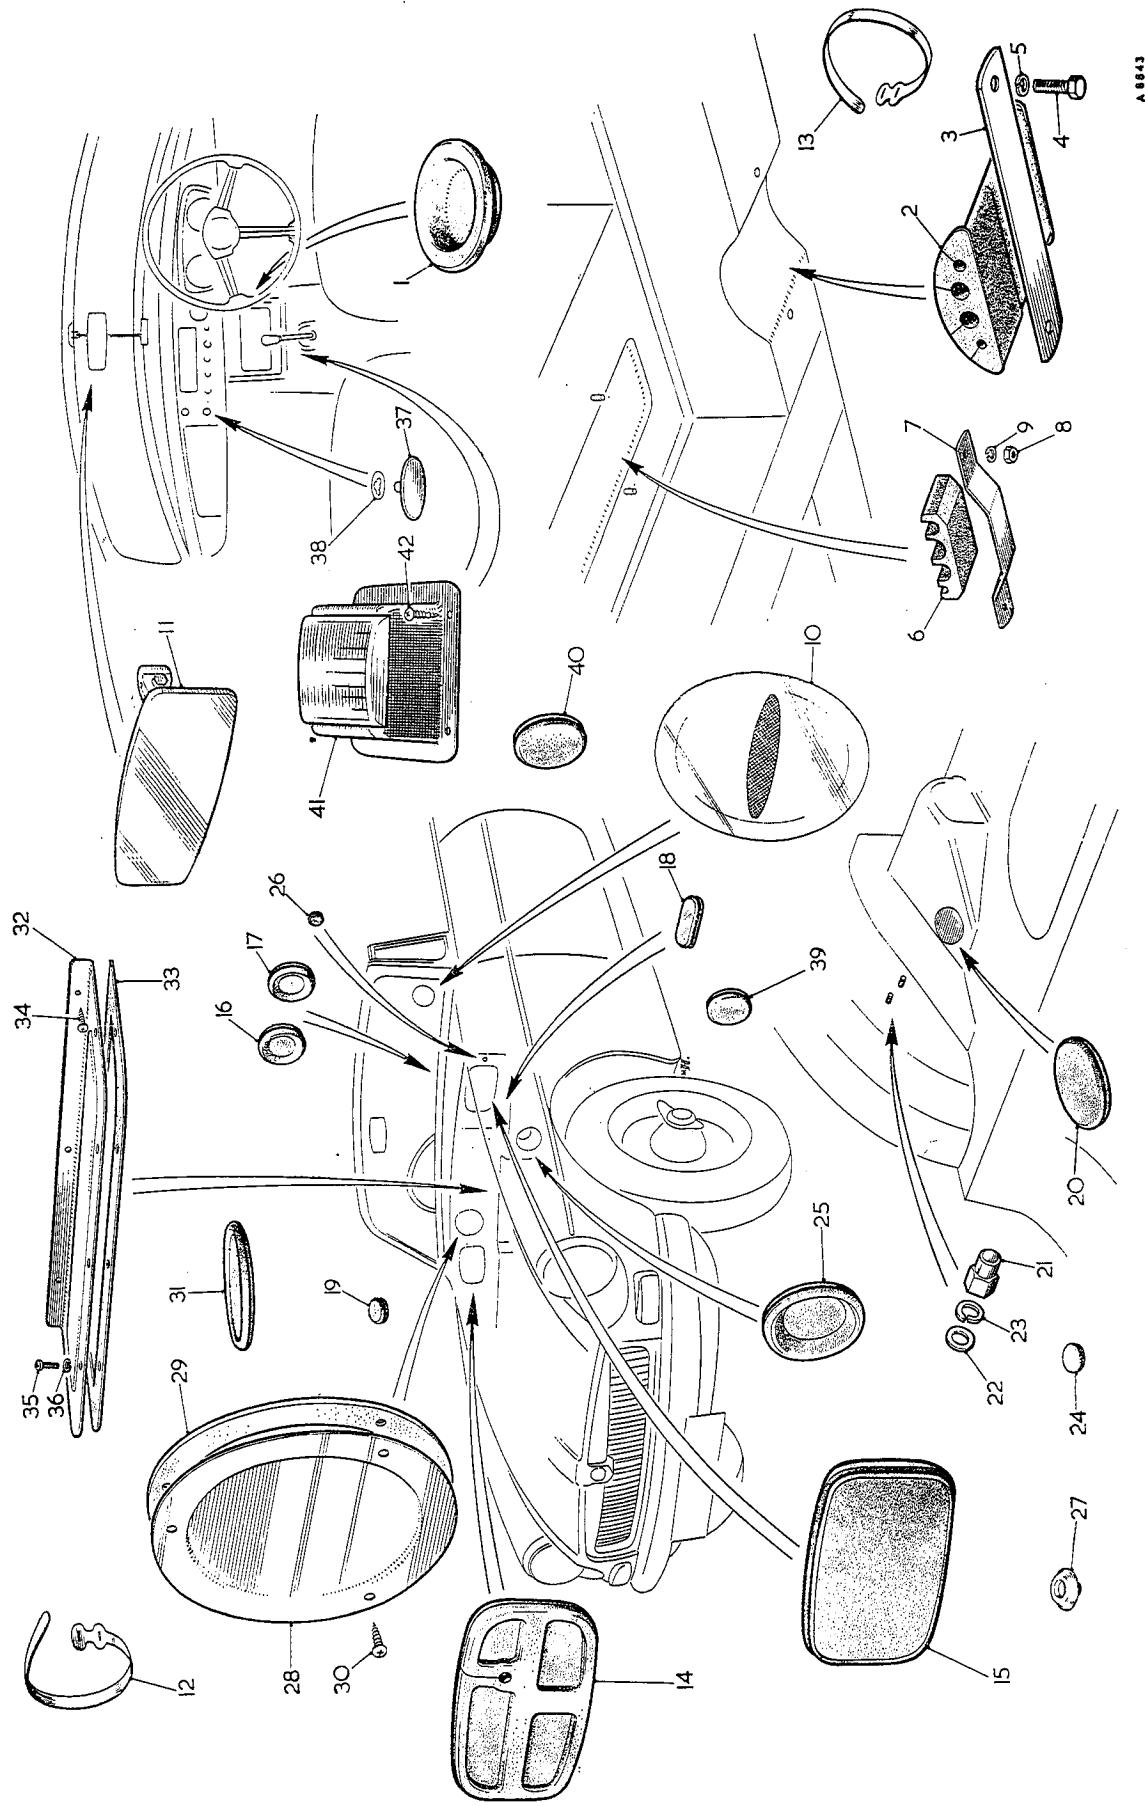

To face page R.30


A 6843



SERVICE PARTS LIST

THE MGB

No. Part Number	DESCRIPTION	Commencing (C) GHN3/101	MODIFICATIONS			REMARKS
			Part Number	Illus. No.	Qty. per Veh.	
TOOLS						
1	Bag—tool	AHH6540				
2	Jack—side lift	AHH6538				
3	Spanner—wheel nut	AHH6539				
4	Lever—hub cap remover	ACA5432				
5	Spanner—box—sparkling plug	1B8995				
6	Tommy-bar—box spanner	ACA5216				
7	Spanner—hub cap	AHH5839				
8	Hammer—copper	11B5166				
SERVICE TOOLS						
Reference must be made to Publication AKD770						
LITERATURE						
Reference must be made to Publication AKD858						
PAINT						
9	Tartan Red (Code RD.9)					
10	Old English White (Code WT.3)					
11	Chester Grey (Code GR.15)					
12	Iris Blue (Code BU.12)					
13	Black (Code BK.1)					
<i>SEE END OF PAGE PHM 732</i>						

 

The illustrations herewith are for insertion in the M.G. M.G.B.
Service Parts List AKD 3227, opposite the text pages to which
they refer.



PRINTED IN ENGLAND BY
THE NUFFIELD PRESS LIMITED
COWLEY, OXFORD
27/21 (42251) 4/62—5,900

